

TOYOTA

LAND CRUISER

REPAIR MANUAL

CHASSIS
&
BODY

 TOYOTA MOTOR SALES CO., LTD.

FOREWORD

This repair manual describes the removal, installation, disassembly, assembly, and adjustment of the various components required for servicing chassis, body and engine of the TOYOTA LAND CRUISER.

For service of the TOYOTA LAND CRUISER engines, refer to the following:

2F Engine Repair Manual (Pub. No. 98429)
B Engine Repair Manual (Pub. No. 98082)

TOYOTA

LAND CRUISER

REPAIR MANUAL

CHASSIS & BODY

TOYOTA MOTOR SALES CO., LTD.

TOYOTA MOTOR SALES CO., LTD.
All rights reserved.
This book may not be reproduced or copied in
whole or in part without the written permission
of Toyota Motor Sales Co., Ltd.

FOREWORD

This repair manual describes the removal, installation, disassembly, assembly, adjustment and maintenance procedures required for servicing chassis, body components and body electrical system of the TOYOTA LAND CRUISER.

For service of the TOYOTA LAND CRUISER engines, refer to the following repair manuals:

2F Engine Repair Manual (Pub. No.98126)

B Engine Repair Manual (Pub. No.98082)

H Engine Repair Manual (Pub. No.98112)

Under DISASSEMBLY and ASSEMBLY, you will find disassembled views which carry numbers indicating the sequence of operation procedure.

The operations can be accomplished by following these numbers.

To facilitate understanding, there are also some figure numbers after operation numbers showing the locations of work details.

The texts have different symbol marks which supersede the figure explanation.

The specifications and repair procedures contained herein are subject to change at any time without previous notice.

TOYOTA MOTOR SALES CO., LTD.

SECTION INDEX

NAME	SECTION
GENERAL	1
CLUTCH	2
TRANSMISSION & TRANSFER	3
PROPELLER SHAFT	4
REAR AXLE	5
FRONT AXLE	6
STEERING	7
BRAKE	8
FRONT WINCH	9
FRAME	10
BODY	11
BODY ELECTRICAL	12
SST & SERVICE SPECIFICATIONS	13

GENERAL

page

GENERAL REPAIR INSTRUCTIONS..... 1-2

ABBREVIATIONS USED IN THIS MANUAL.... 1-3

SYMBOL MARKS 1-4

1

Abbreviation		
RH	Right Hand	
STD	Standard	
G/S	Oversize	
MP	Multipurpose	
W/O	Without	
M/T	Manual Transmission	

GENERAL REPAIR INSTRUCTIONS

1. Use fender, seat, and floor covers to keep the car clean and prevent damage.
2. During disassembly, keep parts in order for reassembly.
3. Before performing electrical work, disconnect the cable to the positive (+) terminal.
4. Always replace cotter pins, gaskets and O-rings with new ones.
5. Always use sealer on gaskets to prevent leaks.
6. Carefully observe all specifications for bolt torques. Always use a torque wrench.
7. Use genuine Toyota parts.
8. If the vehicle is to be jacked up only at the front or rear end, be sure to block the in order to ensure safety.
9. After the vehicle is jacked up, do not fail to support it on stands. It is extremely dangerous to do any work on the vehicle raised on jack alone, even for a small job that can be finished quickly.
10. Use of a special service tool (SST) may be required, depending on the nature of the repair. Be sure to use SST where specified and follow the proper work procedure. The location of the SST is found at the back of this manual.










ABBREVIATIONS USED IN THIS MANUAL

For convenience, the following codes are used in this manual.

Abbreviation	Term	Definition
RH	Right Hand	
LH	Left Hand	
SST	Special Service Tool	This term designates tools that have been manufactured specially for the servicing of this vehicle. Their part numbers are shown in the text enclosed by [].
STD	Standard	This term refers to the dimension of the part when originally manufactured.
O/S	Oversize	Sizes larger than STD are indicated as O/S.
U/S	Undersize	Sizes smaller than STD are indicated as U/S.
MP	Multipurpose	Use in the case of MP grease.
W/	With	
W/O	Without	
M/T	Manual Transmission	

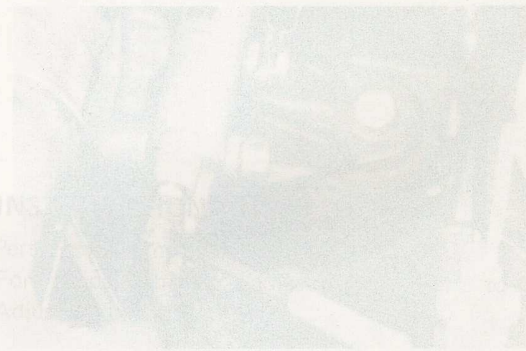
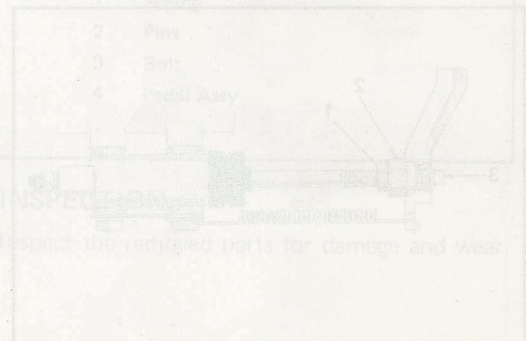
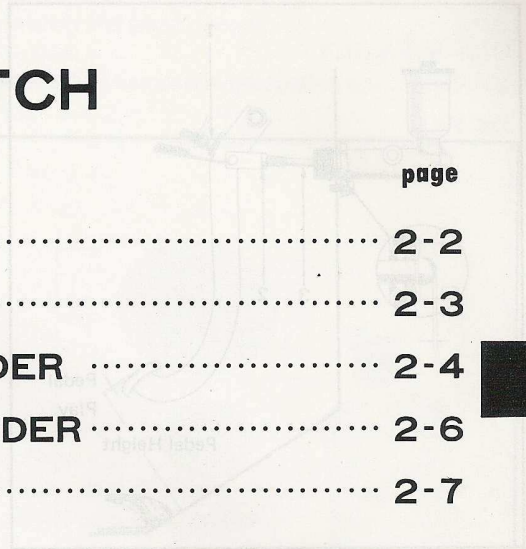
SYMBOL MARKS

The following symbols have been adapted for simplicity and for easy comprehension.

	ASSEMBLY	
	DISASSEMBLY	
	INSTALLATION	
	REMOVAL	
	INSPECTION	
	MEASUREMENT	
	TIGHTENING	
	CLEAN	
	IMPORTANT	

CLUTCH

ADJUSTMENT	2-2
CLUTCH PEDAL	2-3
CLUTCH MASTER CYLINDER	2-4
CLUTCH RELEASE CYLINDER	2-6
CLUTCH UNIT	2-7



4. Depress the clutch pedal several times, and then while holding it depressed, loosen the bleeder plug about one-third to one-half turn. When the fluid pressure in the cylinder is almost depleted, retighten the plug. Repeat this operation until there are no more air bubbles in the system.

1. Jack up the car and support it on stands.
2. Fill the master cylinder reservoir.
3. Attach a vinyl tube to the release cylinder bleeder plug, and insert the other end of tube into a container.
4. When the bubbles stop, depress and hold the clutch pedal and tighten the bleeder plug.
5. After completing the bleeding operation, apply fluid pressure on the pipe line and check for leakage.
6. Replenish the fluid in the reservoir to the specified level.

BLEEDING CLUTCH SYSTEM

It may be necessary to bleed the clutch system if air enters in the clutch line, remove the air by bleeding the system.

—Caution—

1. When bleeding make certain that the brake fluid in the master cylinder reservoir does not become empty.
2. Do not allow brake fluid to remain on painted surfaces.

CLUTCH RELEASE CYLINDER

Adjust the play at release fork tip by loosening the lock nut (1), and turning the push rod (3) tip with a spanner while holding the push rod out (2) with a wrench.

Fork tip play F1, H1 series 3-4 mm (0.12-0.16 in.)
B1 series 2-3 mm (0.08-0.14 in.)

Fig. 2-1

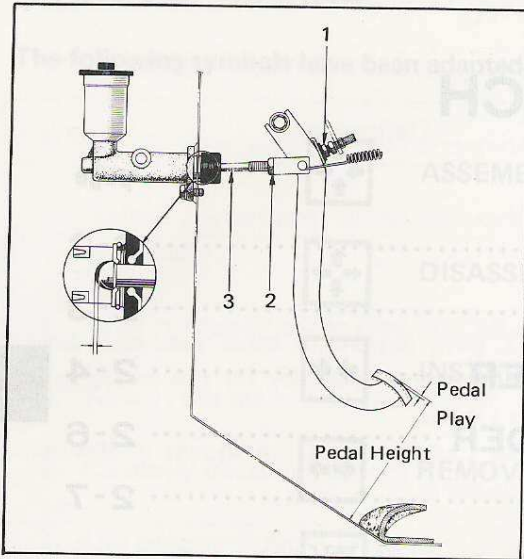


Fig. 2-2


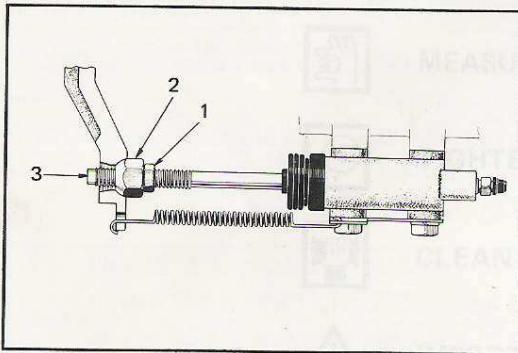


Fig. 2-3

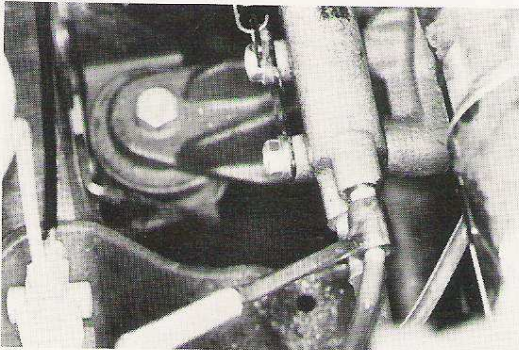

4. Depress the clutch pedal several times, and then while holding it depressed, loosen the bleeder plug about one-third to one-half turn. When the fluid pressure in the cylinder is almost depleted retighten the plug. Repeat this operation until there are no more air bubbles in the system.

ADJUSTMENT



CLUTCH PEDAL

1. Loosen the lock nut (2) and the push rod (3).
2. Adjust the pedal height by turning the stop bolt (1).

Standard pedal height

	w/brake booster mm (in.)	w/o brake booster mm (in.)
FJ, HJ, BJ40 series	215 (8.46)	198 (7.86)
FJ55 series	185 (7.28)	172 (6.77)

(From asphalt sheet top surface)

3. Adjust the pedal play by loosening the lock nut (2) and turning the push rod (3).

**Pedal play 0.5-3.0 mm (0.02-0.12 in.)
at pedal top**

RELEASE CYLINDER



Adjust the play at release fork tip by loosening the lock nut (1), and turning the push rod (3) tip with a spanner while holding the push rod nut (2) with a wrench.

Fork tip play FJ, HJ series 3-4 mm

(0.12-0.16 in.)

BJ series 2-3.5 mm

(0.08-0.14 in.)

BLEEDING CLUTCH SYSTEM

If any work is performed on the clutch system or if any air enters in the clutch line, remove the air by bleeding the system.

— Caution —

1. When bleeding make certain that the brake fluid in the master cylinder reservoir does not become empty.
2. Do not allow brake fluid to remain on painted surfaces.
 1. Jack up the car and support it on stands.
 2. Fill the master cylinder reservoir.
 3. Attach a vinyl tube to the release cylinder bleeder plug, and insert the other end of tube into a container.
5. When the bubbles stop, depress and hold the clutch pedal and tighten the bleeder plug.
6. After completing the bleeding operation, apply fluid pressure on the pipe line and check for leakage.
7. Replenish the fluid in the reservoir to the specified level.

CLUTCH PEDAL

REMOVAL

Remove the parts in the numbered order shown in the figure.

Fig. 2-4


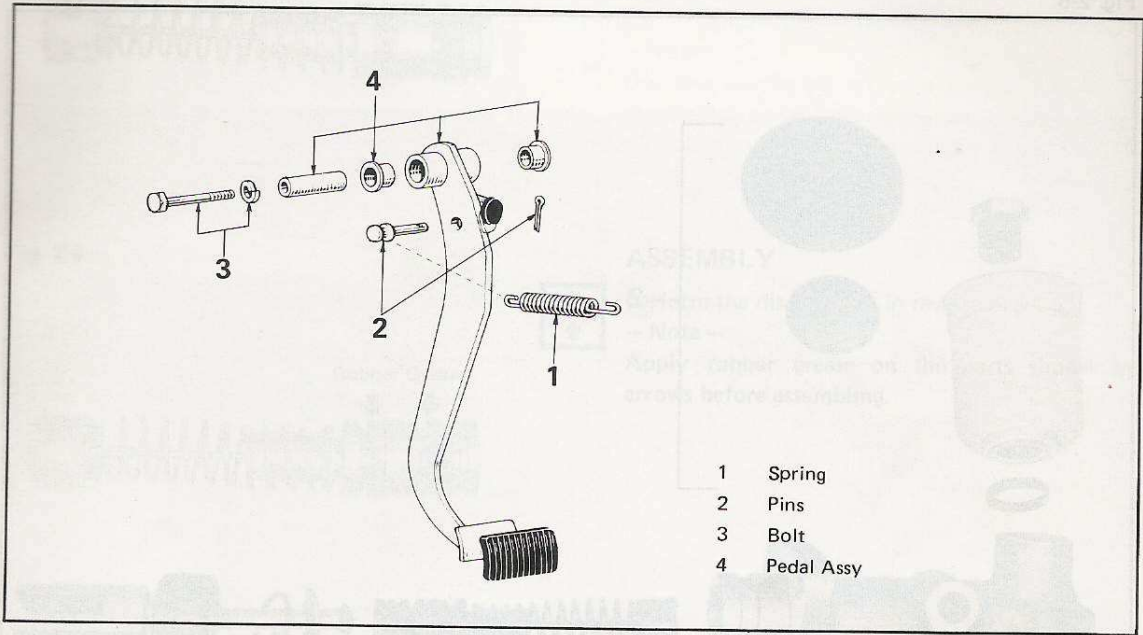


Fig. 2-5

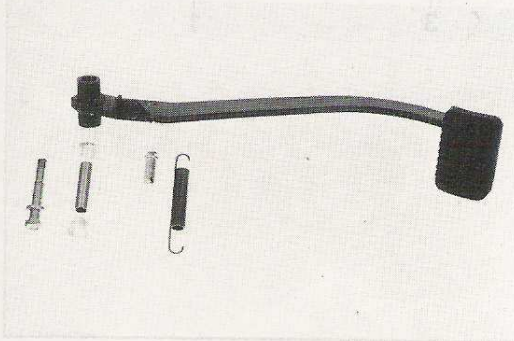INSPECTION



Inspect the removed parts for damage and wear.



INSTALLATION

Perform the removal in reverse order.

For pedal height adjustment, refer to Adjustment.

CLUTCH MASTER CYLINDER

DISASSEMBLY

Disassemble the parts in the numbered order shown in the figure.

Fig. 2-6


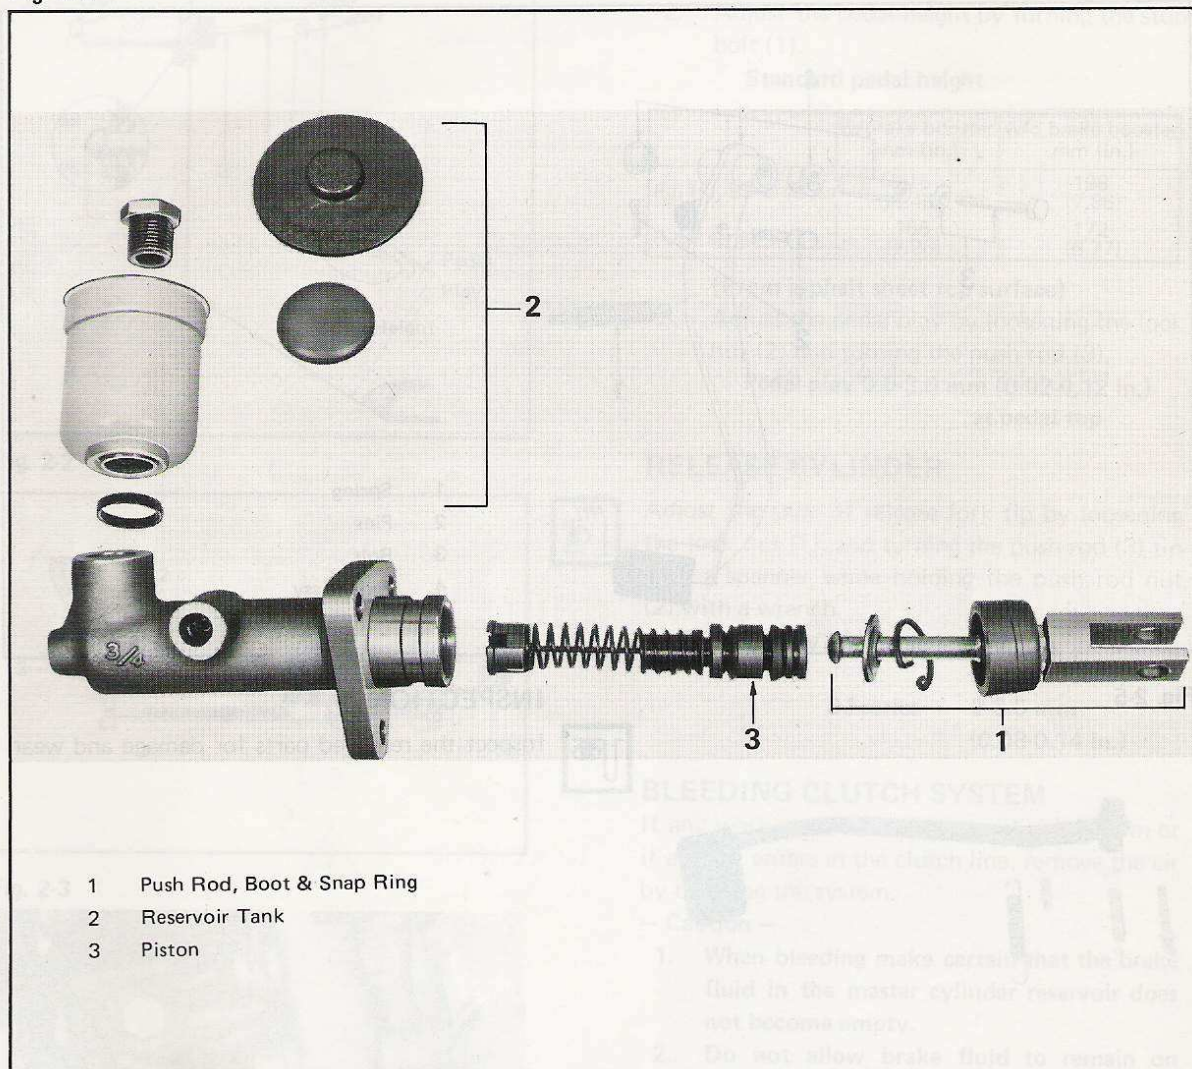


Fig. 2-7

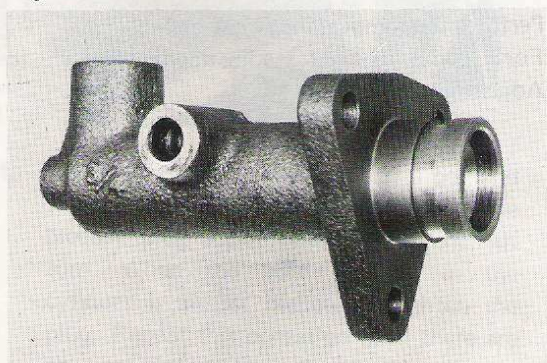


INSPECTION



Inspect the master cylinder bore for wear and scoring.

Fig. 2-8




Inspect the piston assembly for wear and scoring.

— Note —

If the cup requires replacement, use the cylinder kit.

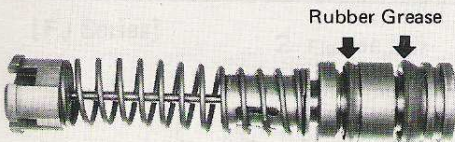Fig. 2-9



Rubber Grease



ASSEMBLY

Perform the disassembly in reverse order.

— Note —

Apply rubber grease on the parts shown by arrows before assembling.

CLUTCH RELEASE CYLINDER

DISASSEMBLY

Disassemble the parts in the numbered order shown in the figure.

Fig. 2-10


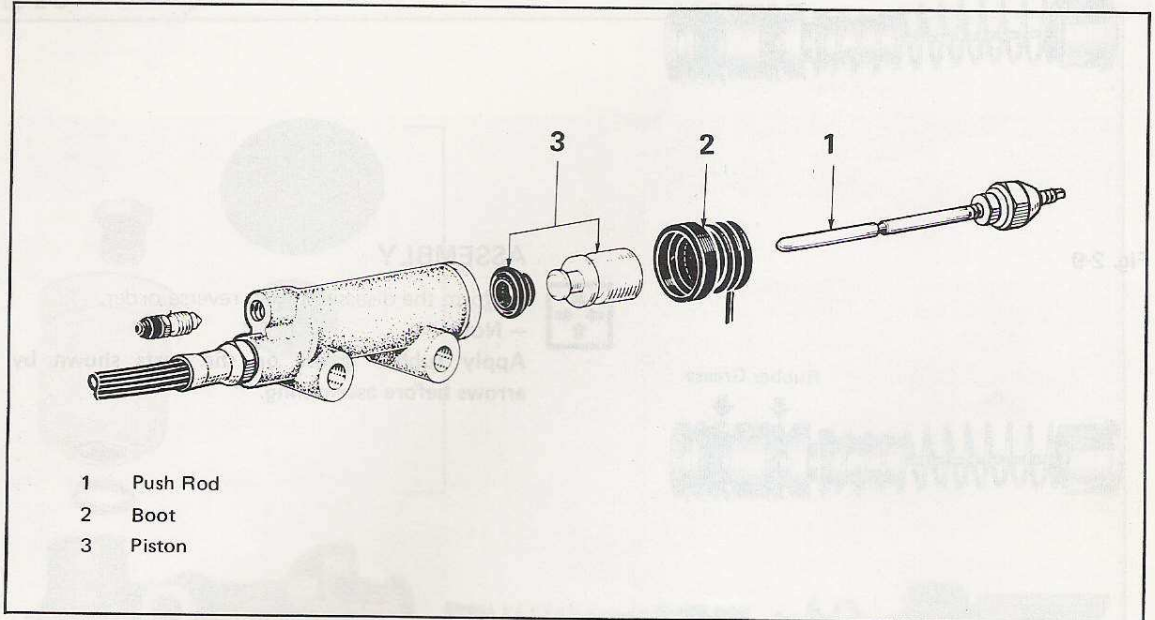


Fig. 2-11

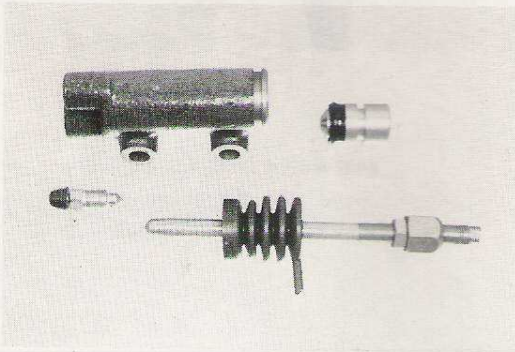


INSPECTION



Inspect the disassembled parts for wear and damage.

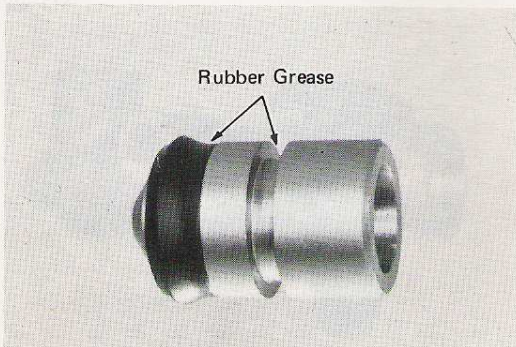Fig. 2-12



ASSEMBLY




Perform the disassembly in reverse order.

— Note —

1. Wash all parts in fresh brake fluid before assembling.
2. Pack rubber grease in the parts shown by arrows.
3. Adjust the release cylinder. (Refer to Adjustment.)

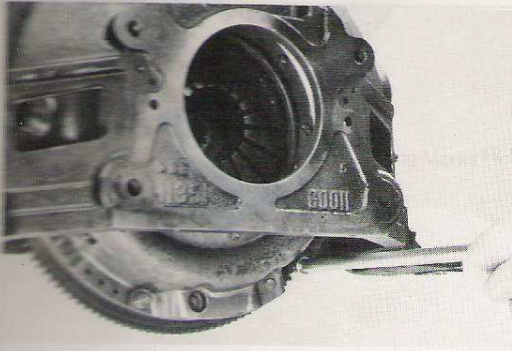Fig. 2-13



CLUTCH UNIT REMOVAL



1. Remove the transmission and transfer.
Refer to transmission removal procedures.
2. Remove the clutch cover and clutch disc.

— Note —


Use care not to get oil or grease on the clutch disc linings, or on the pressure plate and flywheel surfaces that contact on the clutch disc.

DISASSEMBLY

Disassemble the parts in the order numbered in the following illustrations.


Fig. 2-14

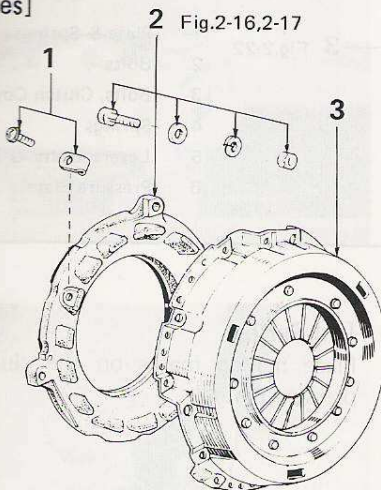[FJ Series]



- 1 Retracting Pin
- 2 Pressure Plate & Bolts
- 3 Clutch Cover

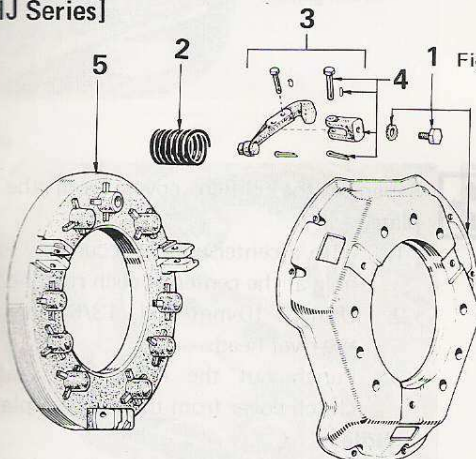[HJ Series]



- 1 Clutch Cover & Bolts
- 2 Springs
- 3 Levers, Yokes, & Pins
- 4 Yokes & Pins
- 5 Pressure Plate

Fig. 2-15


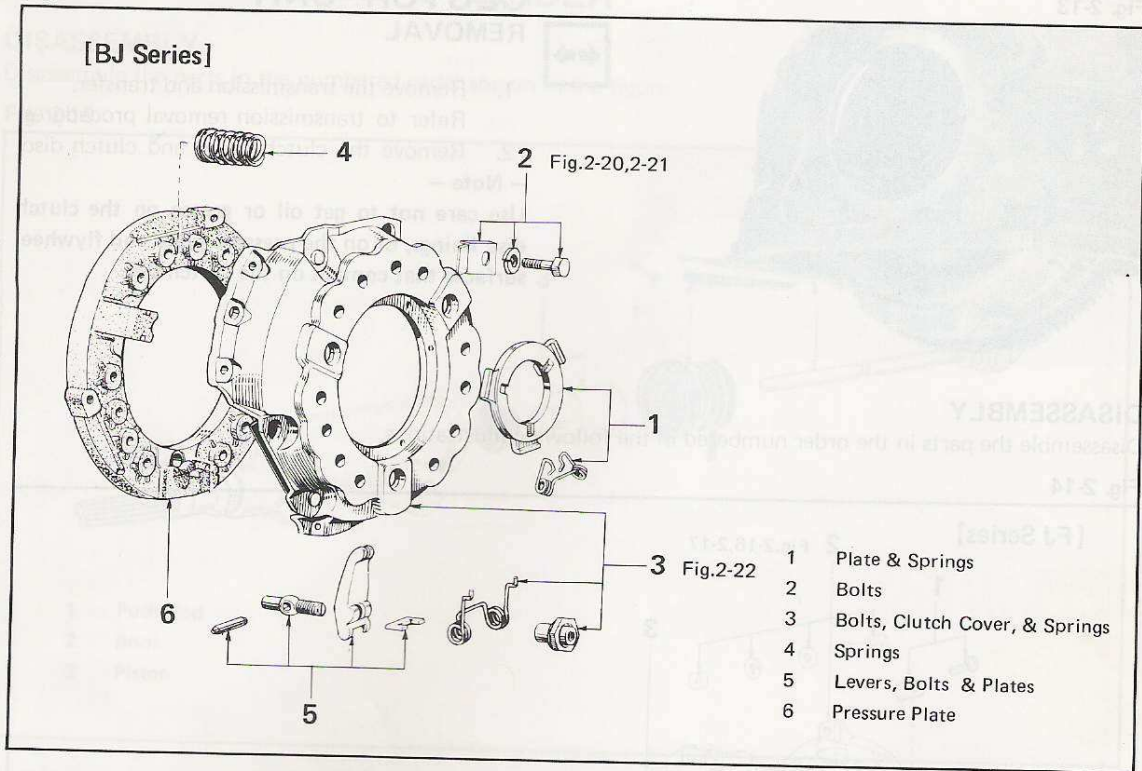



Fig. 2-16

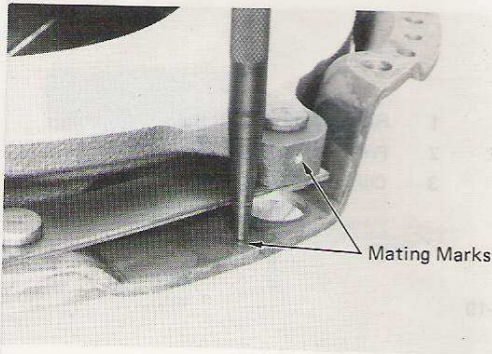

[FJ Series]

Place mating marks on the clutch cover and pressure plate.

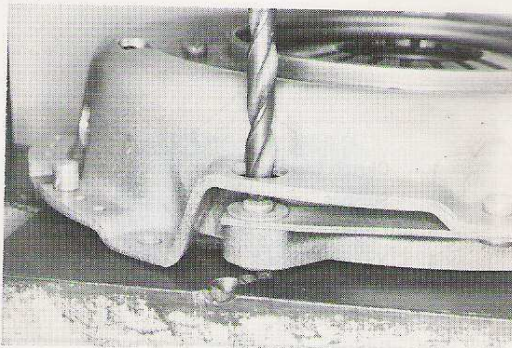Fig. 2-17



Separate the clutch cover from the pressure plate.

1. With a center punch, accurately locate drill hole at the center of each rivet head.
2. Using a 10-mm drill (13/64 in. drill), out the rivet heads.
3. Punch out the rivets and separate the clutch cover from the pressure plate.

— Note —

Make the separation with the rivets at the pressure plate side.

Fig. 2-18

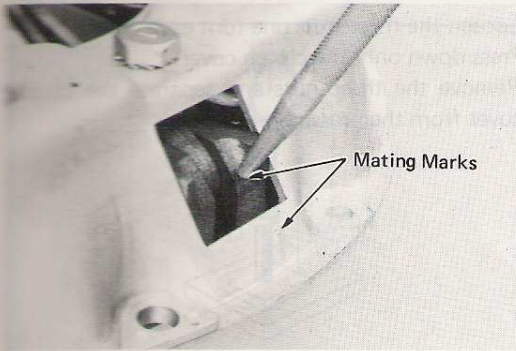


Fig. 2-19

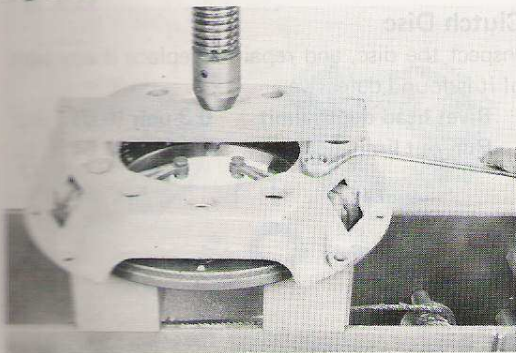


Fig. 2-20


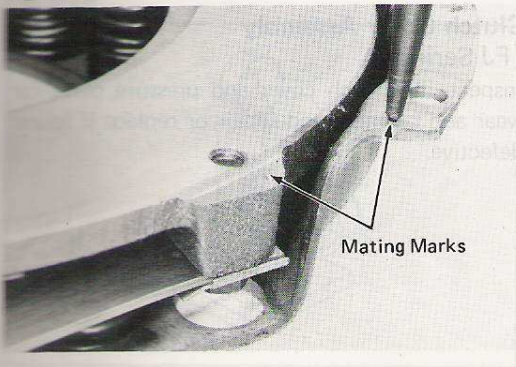


Fig. 2-21

**[HJ Series]**

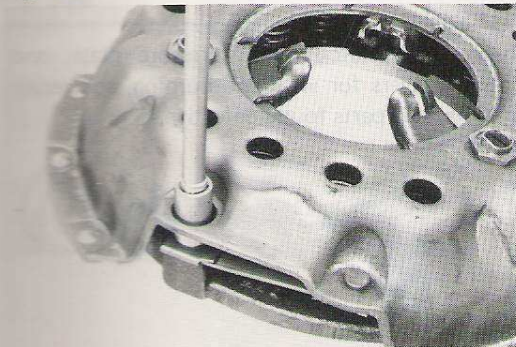Place mating marks on the clutch cover and pressure plate.



Press down only the clutch cover with a press. Remove the three bolts, and separate the clutch cover from the pressure plate.

**[BJ Series]**

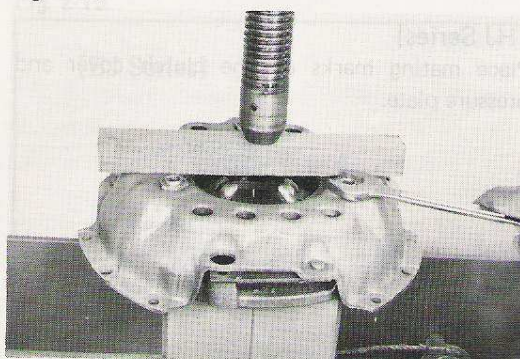
Place mating marks on the clutch cover and pressure plate.



Remove the three bolts attaching the clutch straps.

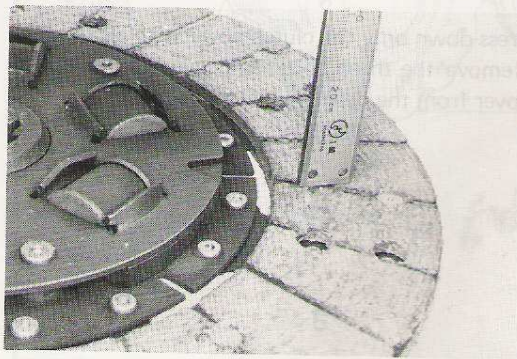


Fig. 2-22



Loosen the three nuts one turn each.
Press down only the clutch cover.
Remove the three nuts and separate the clutch cover from the pressure plate.

Fig. 2-23




INSPECTION

Clutch Disc

Inspect the disc, and repair or replace if any part of it is found defective.

Rivet head depth limit	0.3 mm (0.012 in.)
Run-out limit	1.0 mm (0.04 in.)

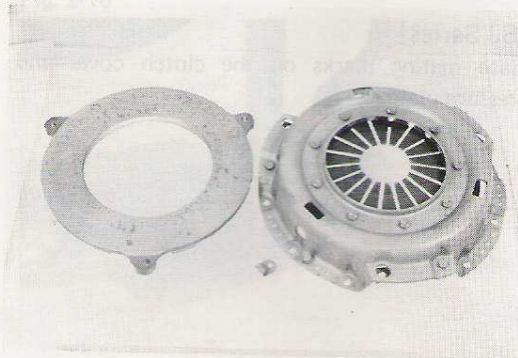
Fig. 2-24



Clutch Cover Assembly [FJ Series]

Inspect the clutch cover and pressure plate for wear and burning, and repair or replace if found defective.

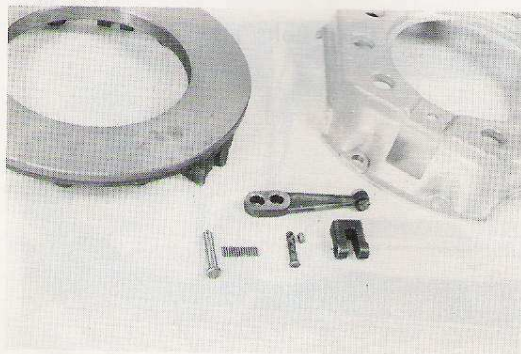Fig. 2-25



[HJ Series]

Inspect the clutch cover, pressure plate, and pressure levers for wear and burning, and repair or replace all parts found defective.

Fig. 2-26

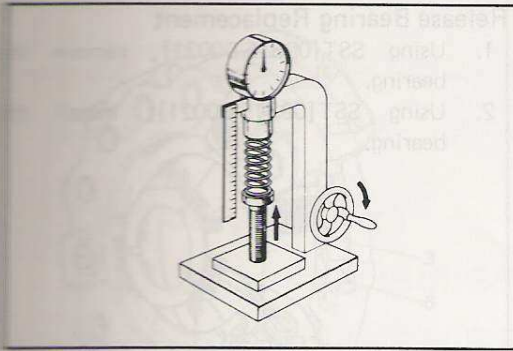


Fig. 2-27

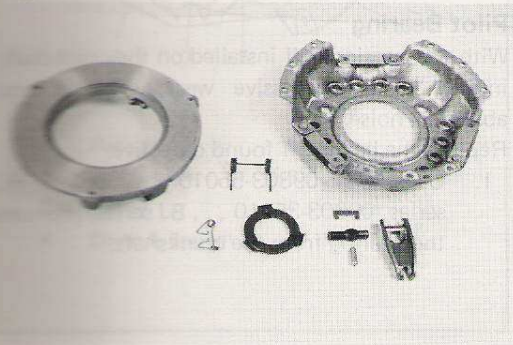


Fig. 2-28


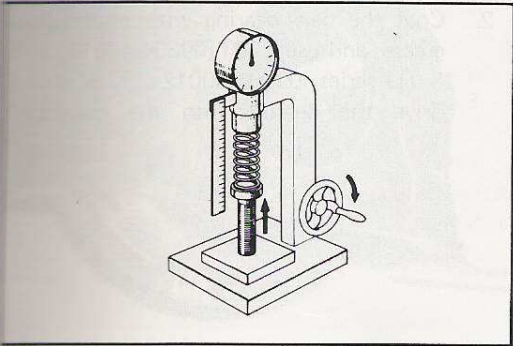


Fig. 2-29

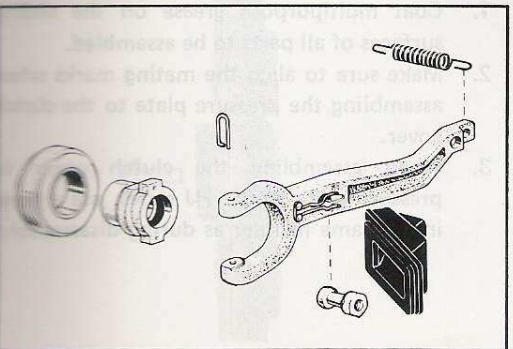

Measure the installed load of each compression spring, and if below the limit, replace the spring.

	Small Spring	Large Spring
Installed Length $\begin{matrix} \text{mm} \\ (\text{in.}) \end{matrix}$	42.9 (1.689)	43.5 (1.713)
Installed Load $\begin{matrix} \text{kg} \\ (\text{lb.}) \end{matrix}$	42.5 (93.5)	62.2 (137)
Installed Load Limit $\begin{matrix} \text{kg} \\ (\text{lb.}) \end{matrix}$	40 (88)	53 (117)



[BJ Series]

Inspect the clutch cover, pressure plate, and pressure levers for wear and burning, and repair or replace all parts found defective.



Measure the install load of each compression spring, and if below the limit, replace the spring.


Installed length	37.1 mm (1.461 in.)
Installed load	44.6 kg (98.3 lb.)
Installed load limit	39 kg (86 lb.)



Fork, Hub And Bearing

Inspect for damage and wear.

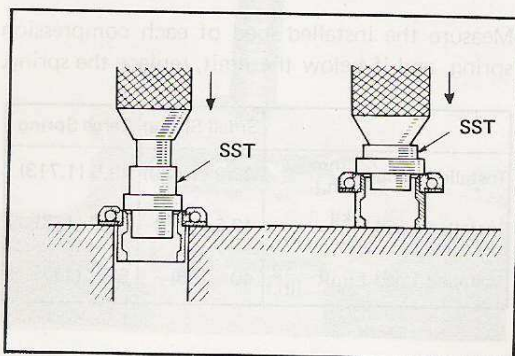
Fig. 2-30

**Release Bearing Replacement**

1. Using SST[09315-00021], remove the bearing.
2. Using SST[09315-00021], install the bearing.



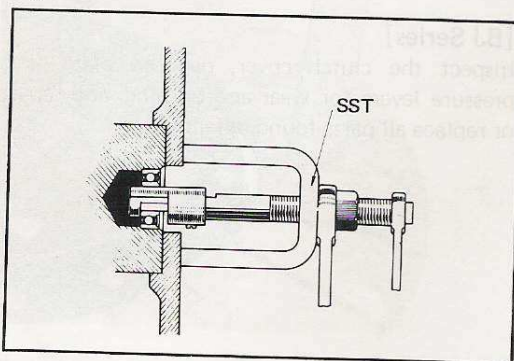Fig. 2-31


**Pilot Bearing**

With the bearing still installed on the crankshaft, inspect it for excessive wear, sticking, and abnormal noise.

Replace the bearing if found defective.

1. Using SST[09303-55010 . . . FJ & HJ series, 09303-35010 . . . BJ series], remove the bearing from the crankshaft.

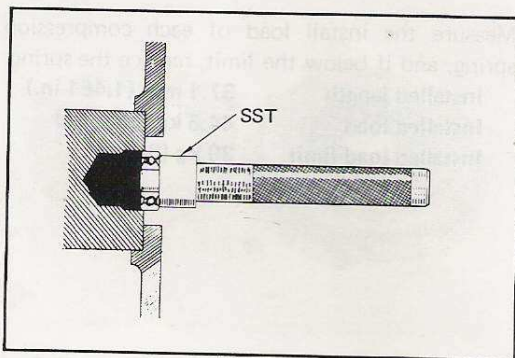Fig. 2-32



2. Coat the new bearing with multipurpose grease, and using SST[09304-47010 . . . FJ & HJ series, 09304-30012 . . . BJ series], drive the bearing into the crankshaft.

ASSEMBLY


[FJ & HJ Series]

Perform the disassembly in reverse order.

– Note –

1. Coat multipurpose grease on the sliding surfaces of all parts to be assembled.
2. Make sure to align the mating marks when assembling the pressure plate to the clutch cover.
3. When assembling the clutch cover to pressure plate in the HJ series, use a press in the same manner as during disassembly.

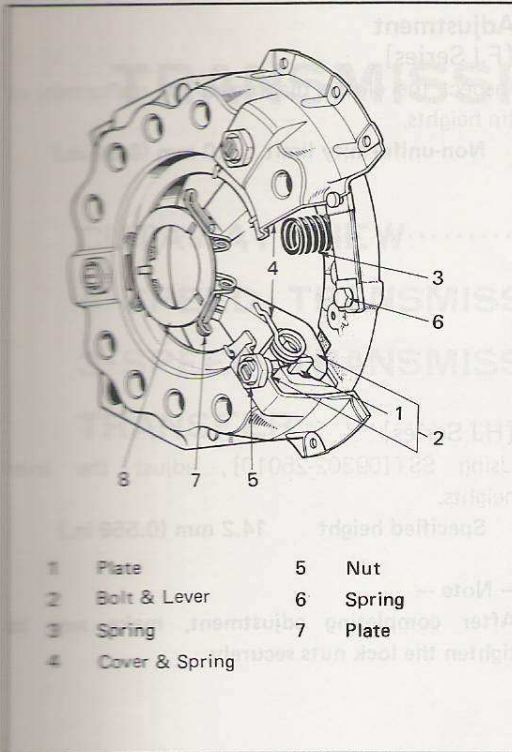Fig. 2-33

**[BJ Series]**

Assemble the parts in the numbered order shown in the figure.

– Note –

1. Apply multipurpose grease on the sliding surfaces of all parts.
2. Have the mating marks aligned when assembling the clutch cover to the pressure plate.
3. When assembling the clutch cover to pressure plate, use a press in the same manner as during disassembly.

Fig. 2-34

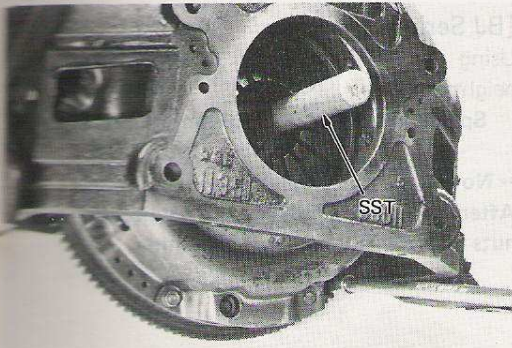
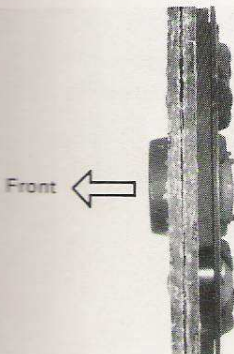


Fig. 2-35

**INSTALLATION****Install the Clutch Cover**


Using SST [09301-55022], install the clutch disc and clutch cover to the flywheel.

– Note –

1. With the cover attaching bolts tightened lightly, carefully move the guide tool up and down and sideways to see that the cover is properly centered before installing.
2. Tighten the bolts back and forth in diagonal order, a little at a time, until tightened to specified torque.
3. Use care to see that the clutch disc is facing in proper direction when installed.
4. Apply light coat of multipurpose grease on the splines in the disc and input shaft.



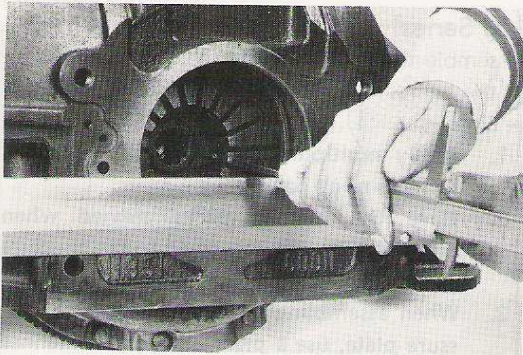Fig. 2-36




Adjustment [FJ Series]

Inspect the clutch diaphragm for uniformity of tip heights.

Non-uniformity limit 1.0 mm (0.04 in.)

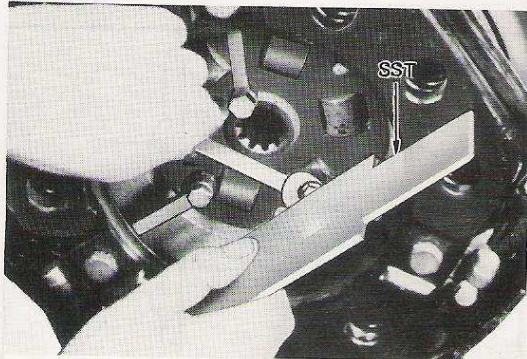Fig. 2-37



[HJ Series]


Using SST[09302-25010], adjust the lever heights.

Specified height 14.2 mm (0.559 in.)

— Note —

After completing adjustment, make sure to tighten the lock nuts securely.

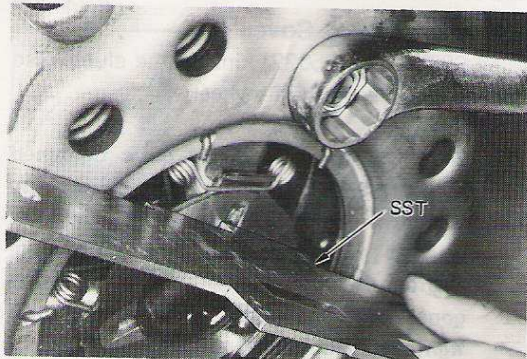Fig. 2-38



[BJ Series]

Using SST[09302-25010], adjust the lever heights.

Specified height 12.0 mm (0.472 in.)

— Note —

After completing adjustment, stake the adjust nuts to prevent them from loosening.


TRANSMISSION & TRANSFER

	page
CUTAWAY VIEW.....	3- 2
4-SPEED TRANSMISSION (H41 & H42)	3- 3
3-SPEED TRANSMISSION (J30).....	3-37
TRANSFER.....	3-52


CUTAWAY VIEW

Fig. 3-1

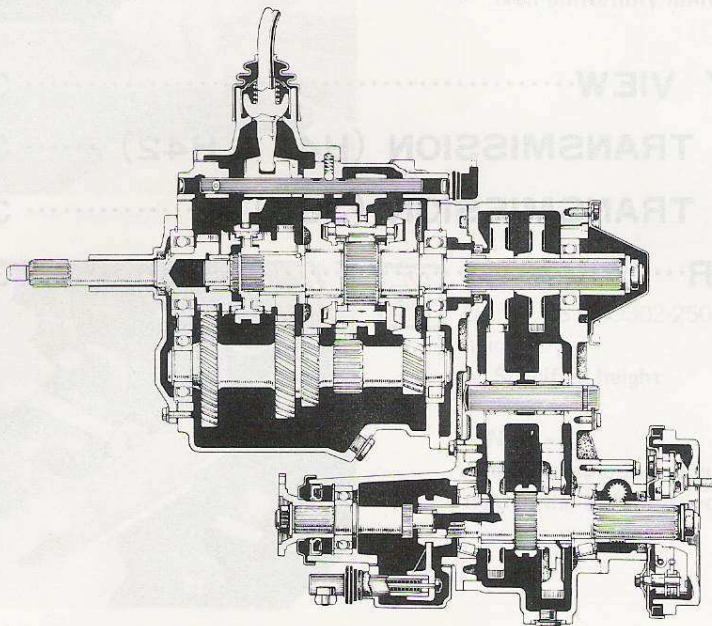4-Speed Manual Transmission (H41, H42) & Transfer



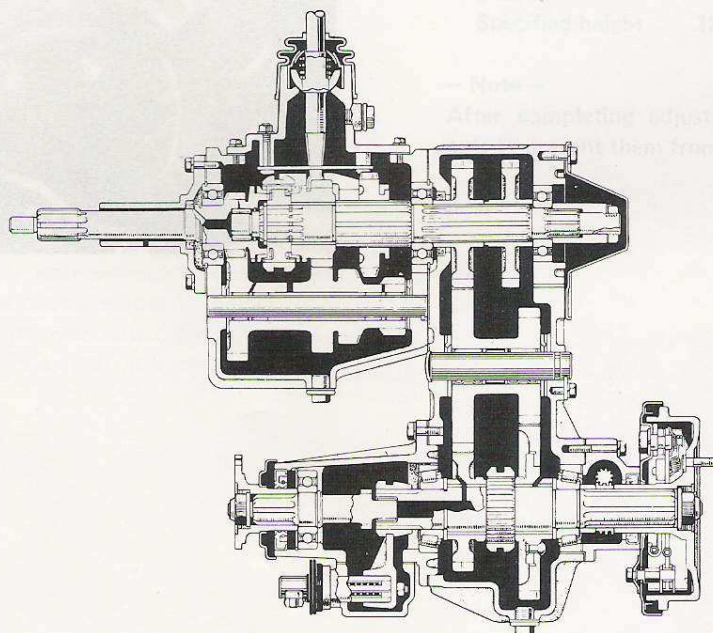3-Speed Manual Transmission (J30) & Transfer




4-SPEED TRANSMISSION (H41 & H42)

REMOVAL

Removal From Vehicle

1. Drain out the transmission oil, transfer oil, and fuel (except FJ55 series.)
2. Remove the parts in the order numbered in following illustrations.

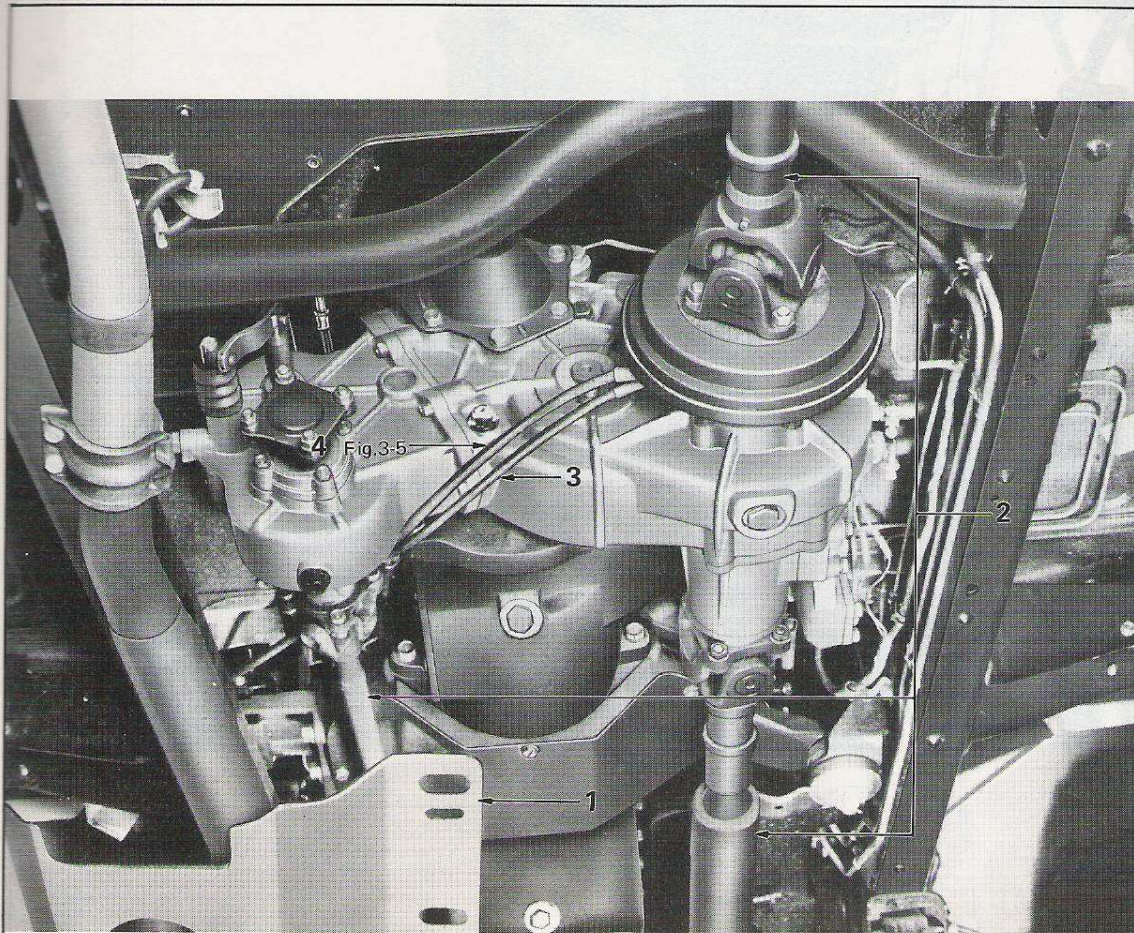
Fig. 3-2



- 1 Undercover
- 2 Propeller Shafts

- 3 Speedometer Cable
- 4 Parking Brake Cable

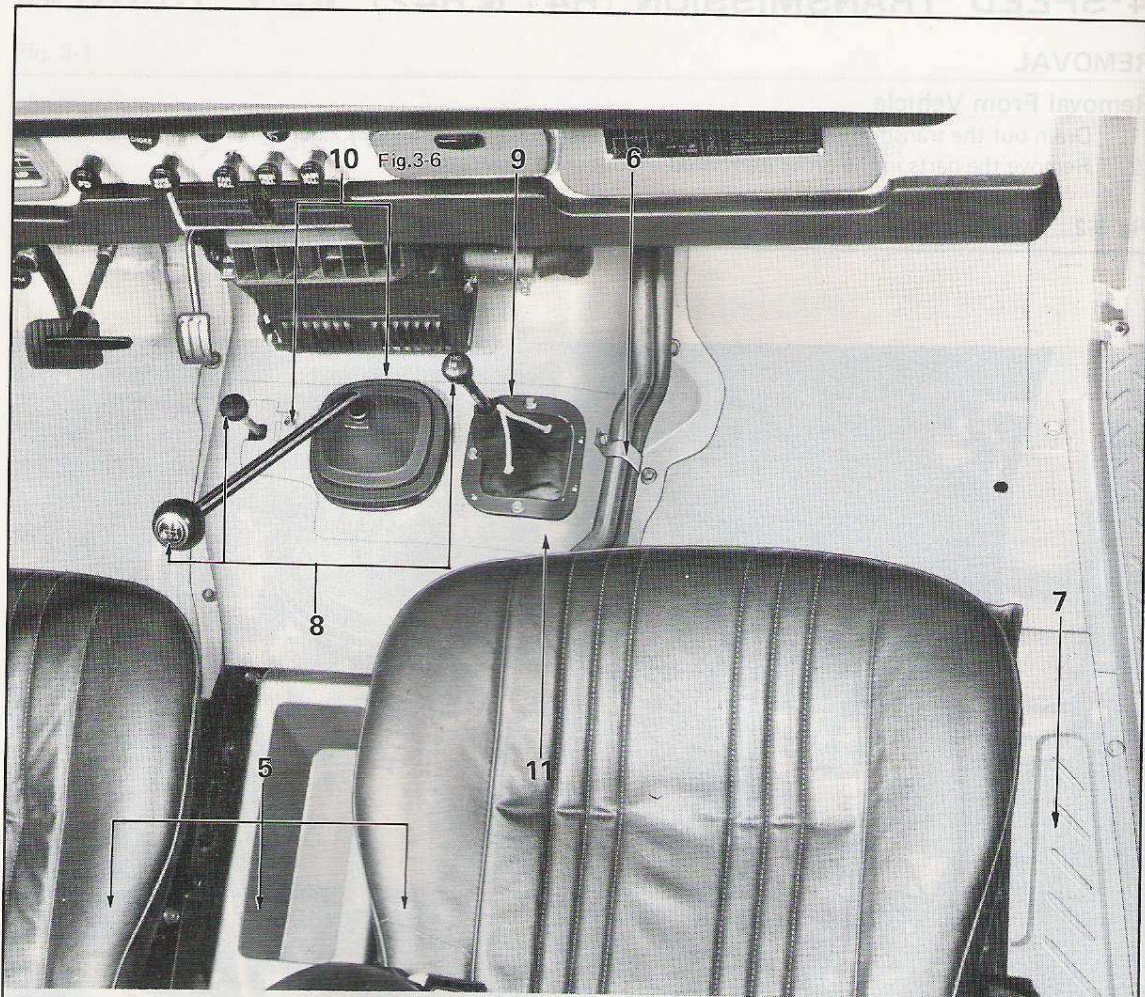
Fig. 3-3



- 5 Front Seats, Seat Frames, & Console Box
(Except FJ55 Series)
- 6 Rear Heater Pipe Clamp (Except FJ55 Series)
- 7 Fuel Tank Cover & Fuel Tank
(Except FJ55 Series)


- 8 Shift Lever Knobs
- 9 Dust Proof
- 10 Boot And Shift Lever
- 11 Transmission Cover

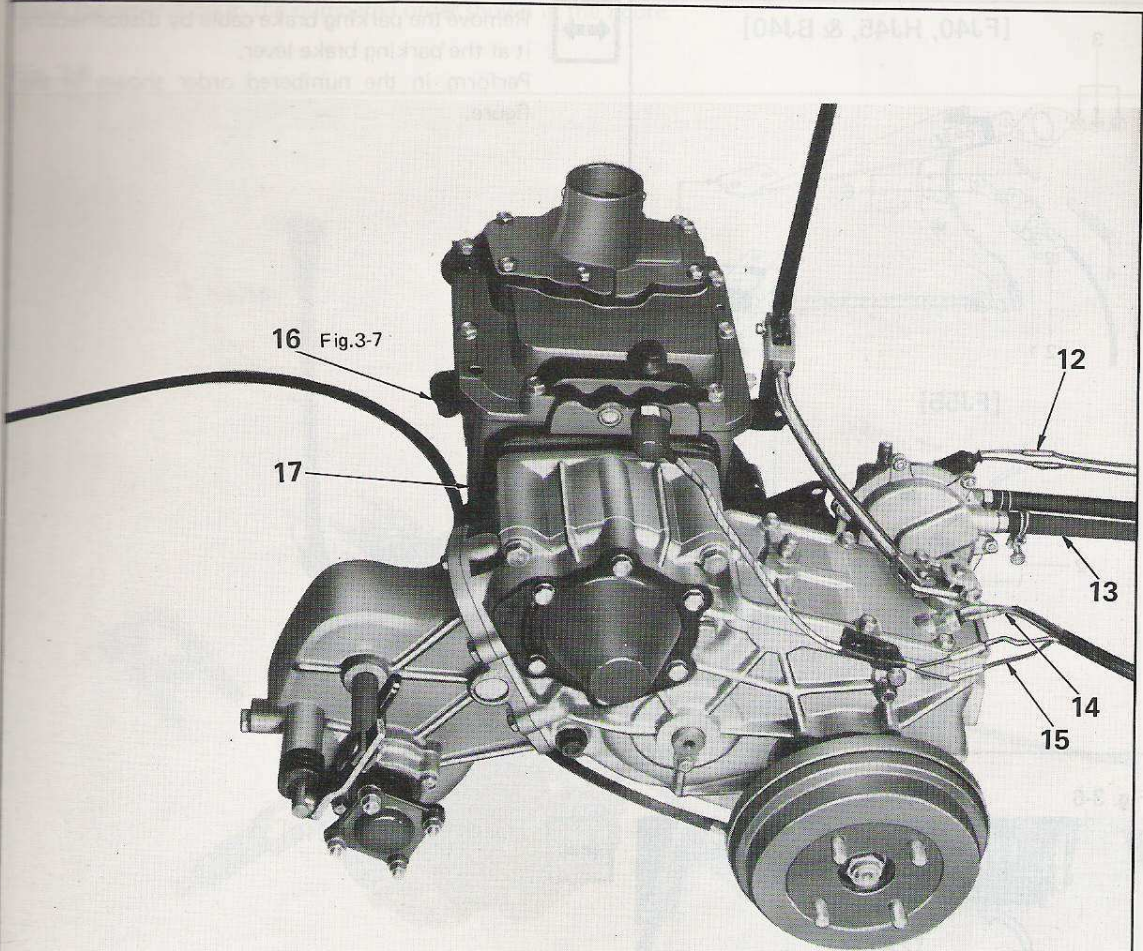Fig. 3-4 The Transfer From The Transmission




- | | | | |
|----|---|----|-----------------------------------|
| 12 | Front Drive Indicator Wire Harness (Magnet Type Only) | 15 | Back Up Light Switch Wire Harness |
| 13 | Vacuum Hoses (Magnet Type Only) | 16 | Bolts |
| 14 | Transfer Switch Wire Harness (Magnet Type Only) | 17 | Transmission With Transfer |

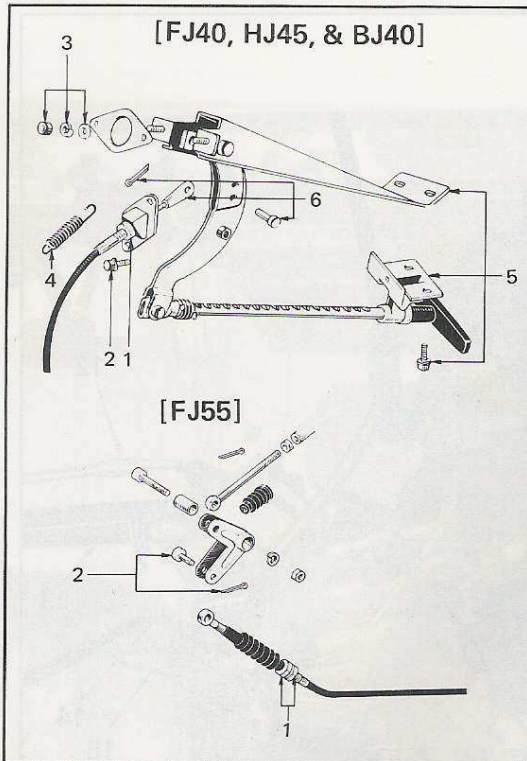Fig. 3-5




Remove the parking brake cable by disconnecting it at the parking brake lever. Perform in the numbered order shown in the figure.

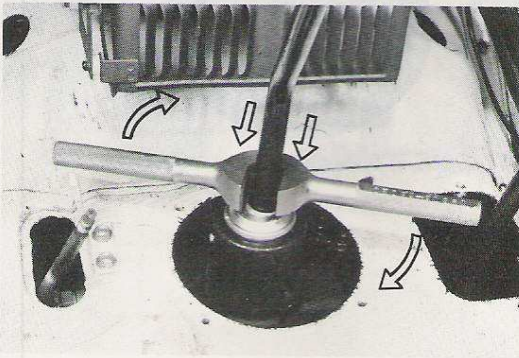Fig. 3-6



Use SST [09305-60010]

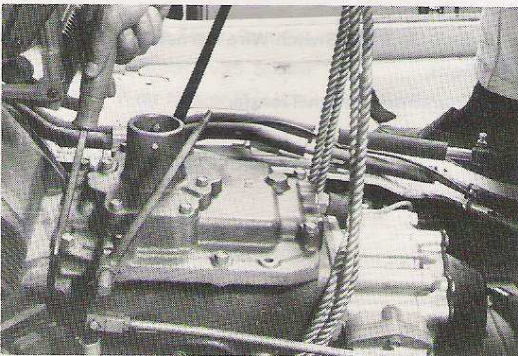Fig. 3-7



Remove the four bolts while using jack and rope to support the transmission with transfer.

Separate The Transfer From The Transmission.

Make the separation in the numbered order shown in the figure.

Fig. 3-8


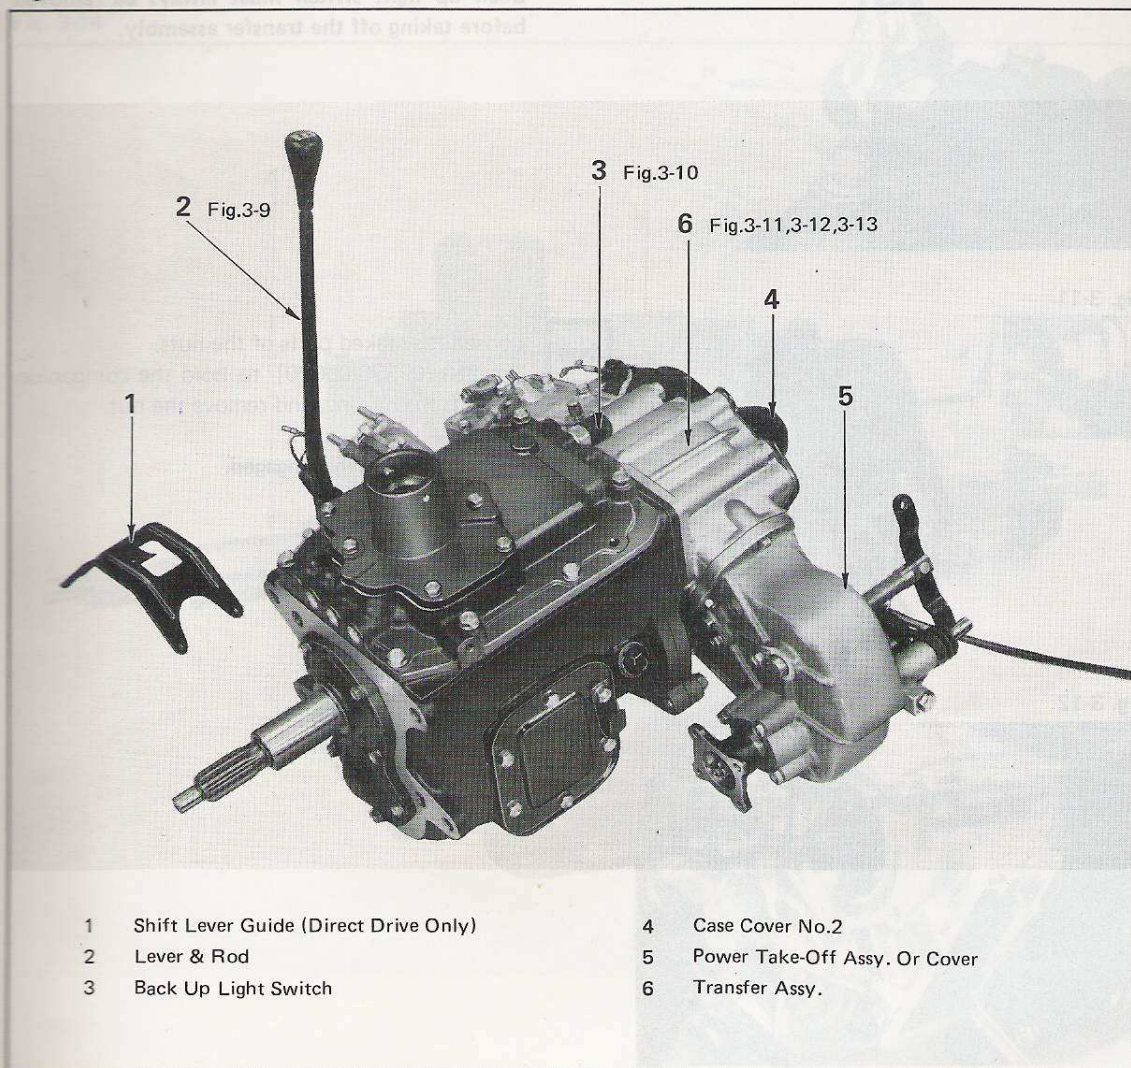


Fig. 3-9

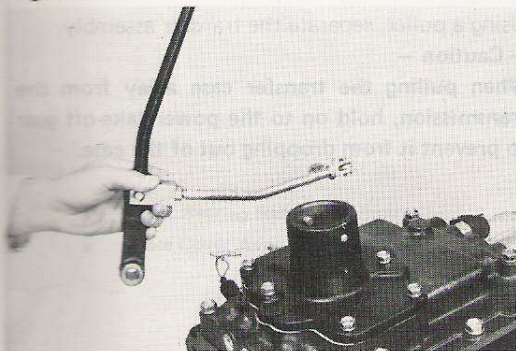

Remove the lever and rod as a set.

Fig. 3-10




Remove the back up light switch

— Caution —

Back up light switch must always be removed before taking off the transfer assembly.

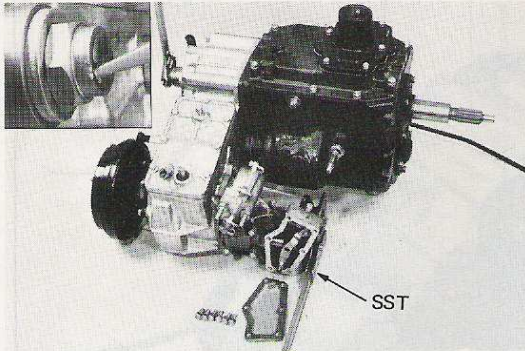Fig. 3-11




Loosen the staked parts of the nuts.

Use SST[09330-00020] to hold the companion flange from turning, and remove the nut.

— Note —


Have the front drive engaged.

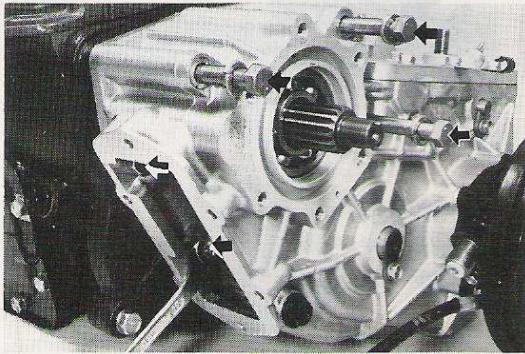Fig. 3-12



Remove the five bolts.

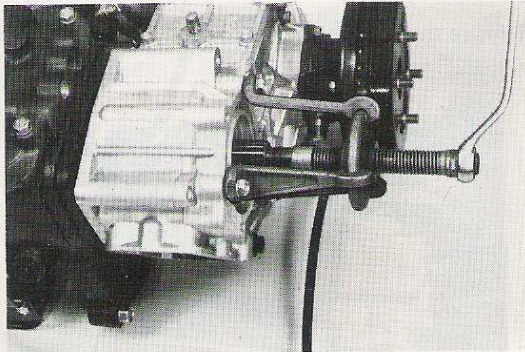Fig. 3-13



Using a puller, separate the transfer assembly.

— Caution —


When pulling the transfer case away from the transmission, hold on to the power take-off gear to prevent it from dropping out of the case.

DISASSEMBLY

Transmission Gear And Case Disassembly

Disassemble in the order numbered in the following illustrations.

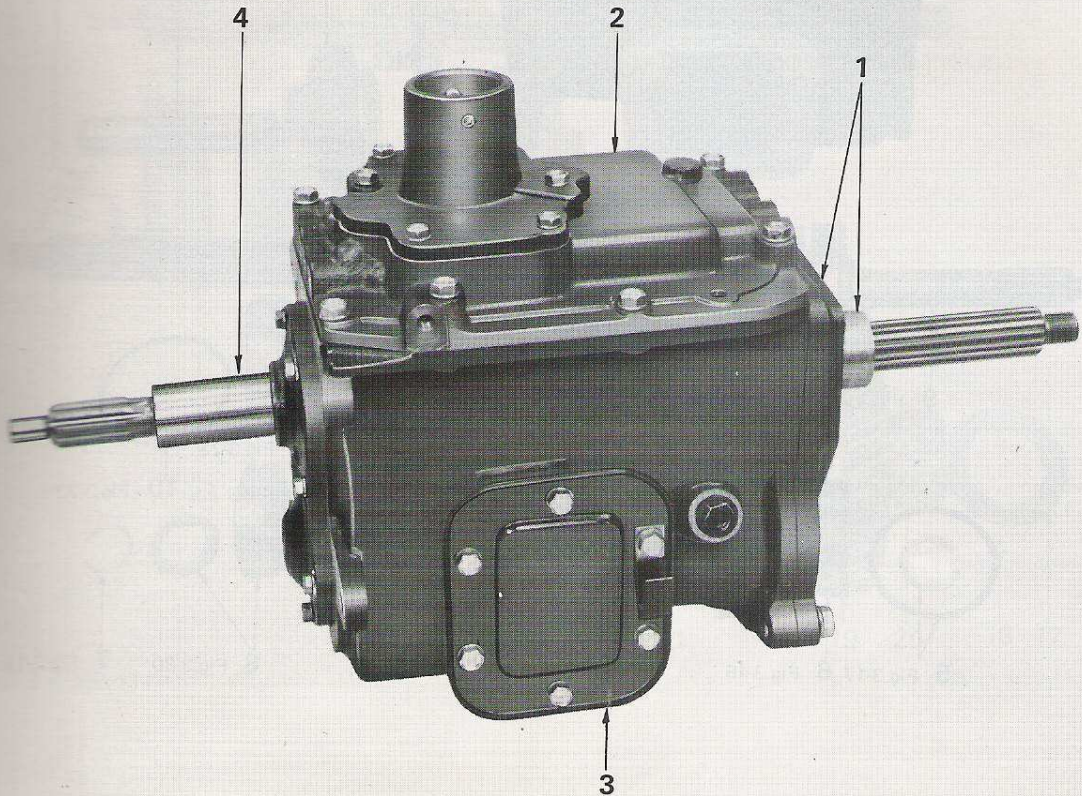
Fig. 3-14



- 1 Rear Bearing Retainer & Spacer
2 Case Cover Assy.

- 3 Cover
4 Front Bearing Retainer

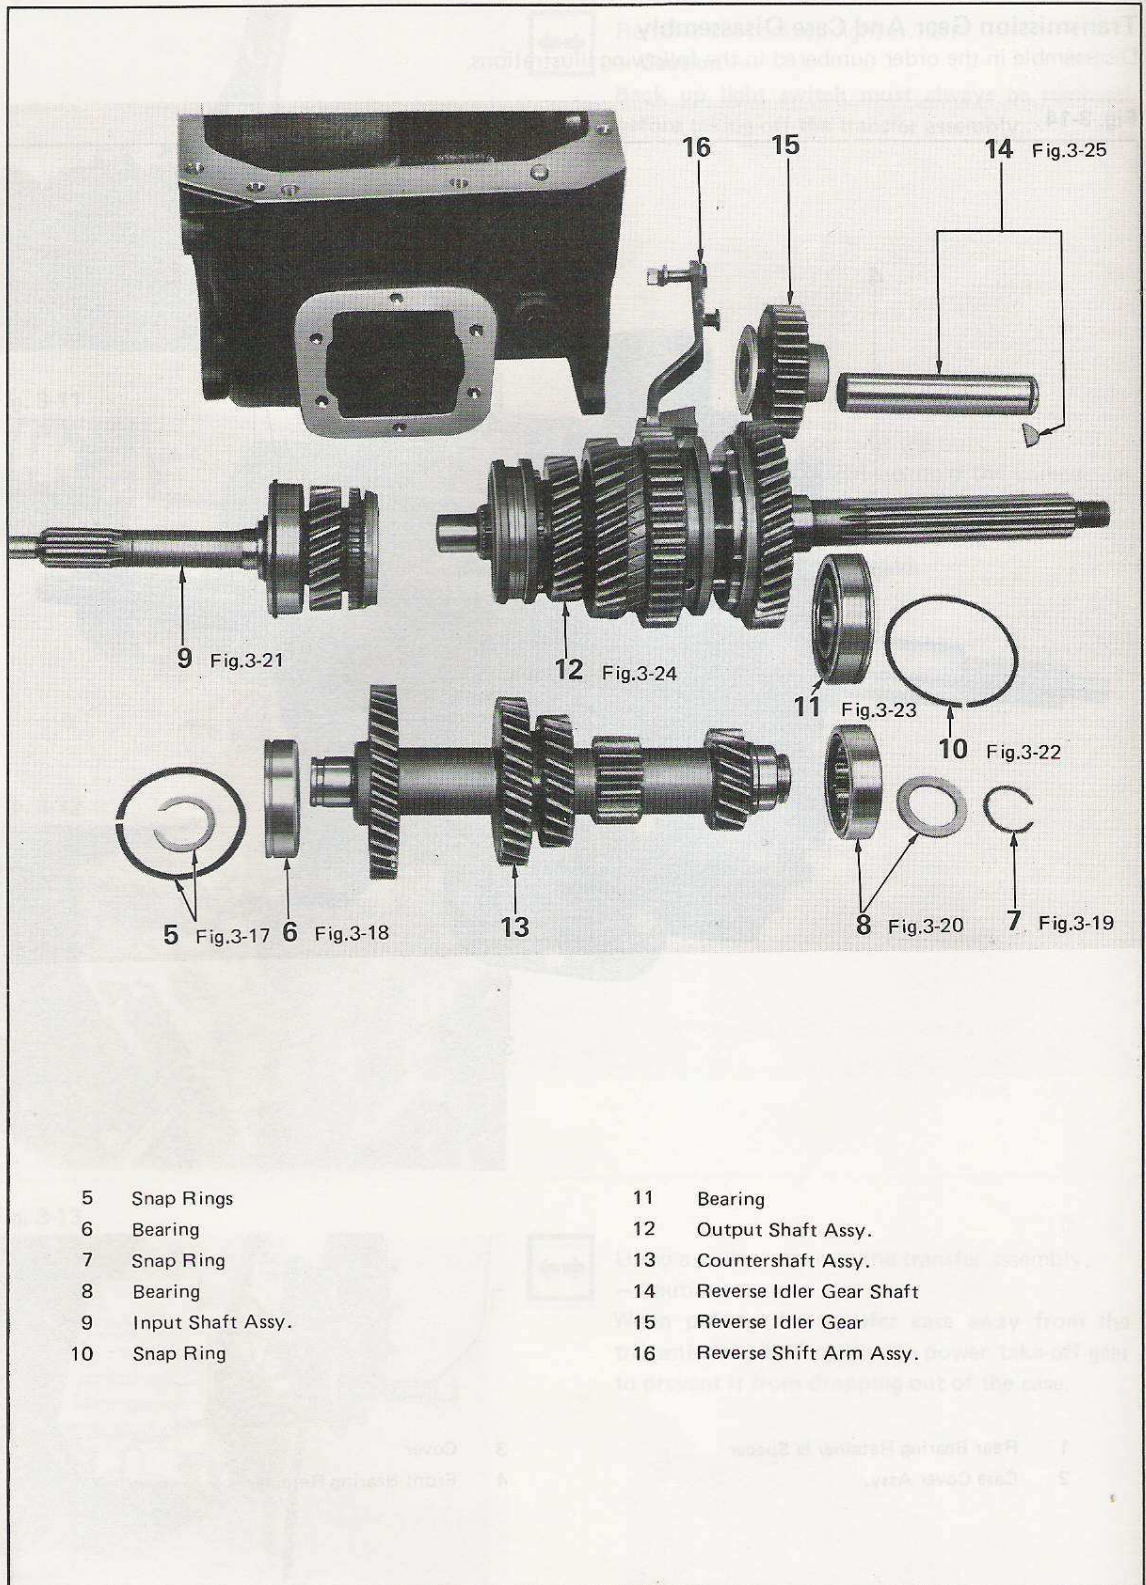Fig. 3-15



- 5 Snap Rings
- 6 Bearing
- 7 Snap Ring
- 8 Bearing
- 9 Input Shaft Assy.
- 10 Snap Ring

- 11 Bearing
- 12 Output Shaft Assy.
- 13 Countershaft Assy.
- 14 Reverse Idler Gear Shaft
- 15 Reverse Idler Gear
- 16 Reverse Shift Arm Assy.

Fig. 3-16


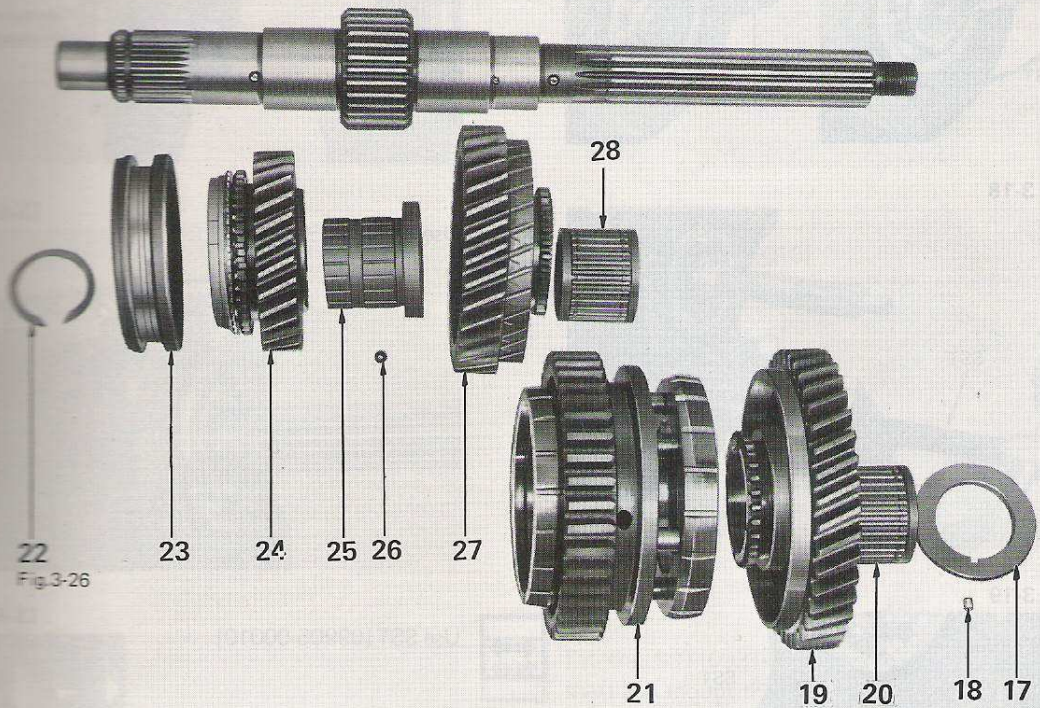


Fig. 3-26


- | | | | |
|----|---------------------------------|----|--|
| 17 | Thrust Washer | 23 | Clutch Hub No.2, Sleeve, & Synchronizer ring |
| 18 | Pin | 24 | Third Gear |
| 19 | First Gear | 25 | Bushing |
| 20 | Bearing | 26 | Ball |
| 21 | Synchronizer Ring No.1 Subassy. | 27 | Second Gear |
| 22 | Snap Ring | 28 | Bearing |

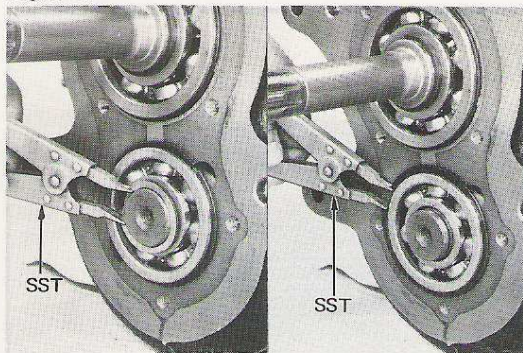Fig. 3-17




Use SST [09905-00010].

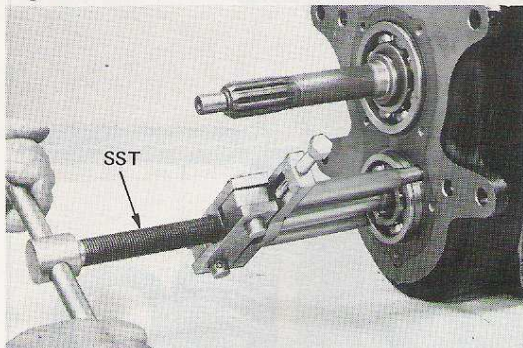Fig. 3-18




Use SST [09950-20010].

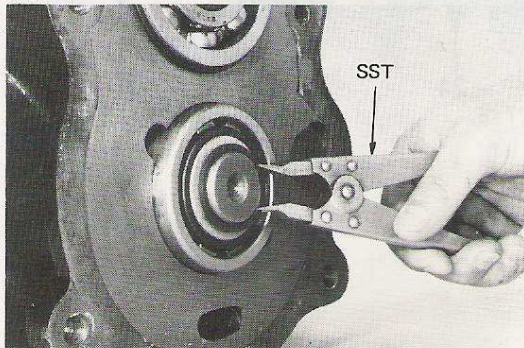Fig. 3-19




Use SST [09905-00010].

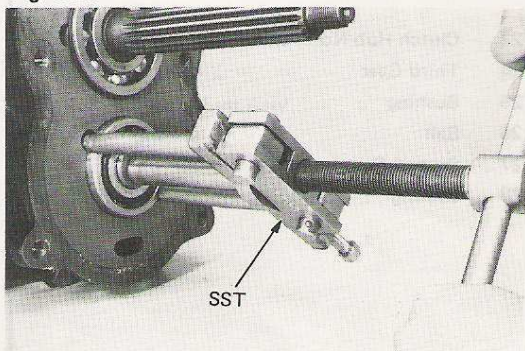Fig. 3-20




Use SST [09950-20010].

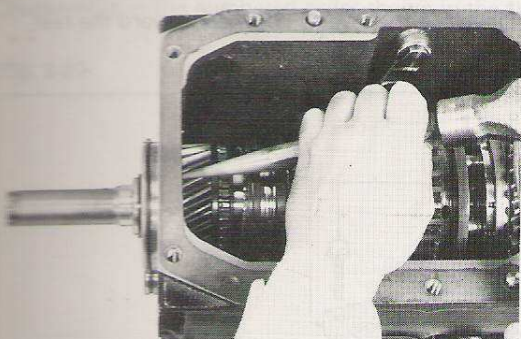Fig. 3-21 Case Cover Disassembly




Drive out the input shaft assembly from the case.

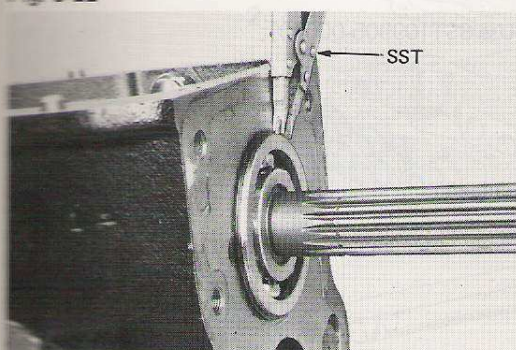Fig. 3-22



Use SST [09905-00010]

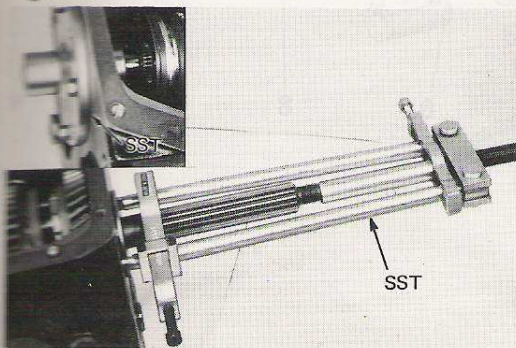
Fig. 3-23



Fit the SST [09314-36010] to the tip of drive shaft and mount the SST to the case.

Using SST [09950-20010] and SST [09956-00010], remove the bearing.

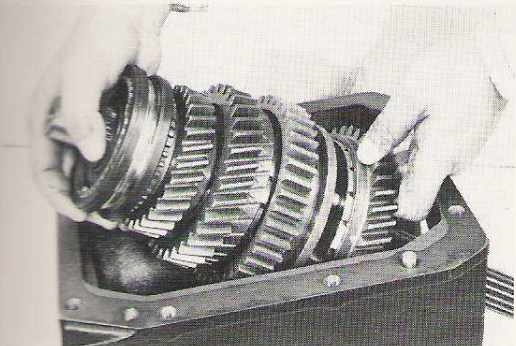Fig. 3-24




Hold the first gear tightly against the other gears and pull out the output shaft assembly from the case.

— Caution —


When pulling out the assembly, hold the gears in place to keep them from sliding off the shaft.

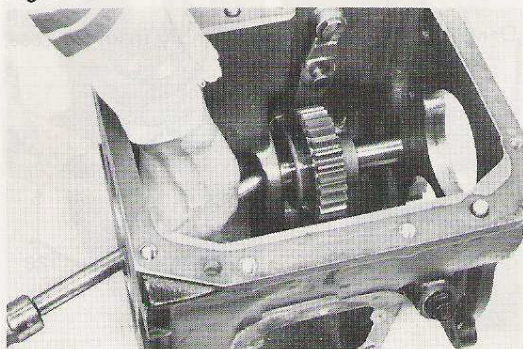Fig. 3-25



Drive out the reverse idler gear toward the rear.

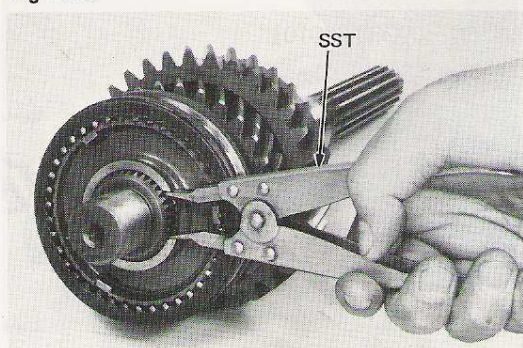Fig. 3-26




Use SST [09905-00010].

Transmission Case Cover Disassembly

Disassemble in the numbered order shown in the figure.

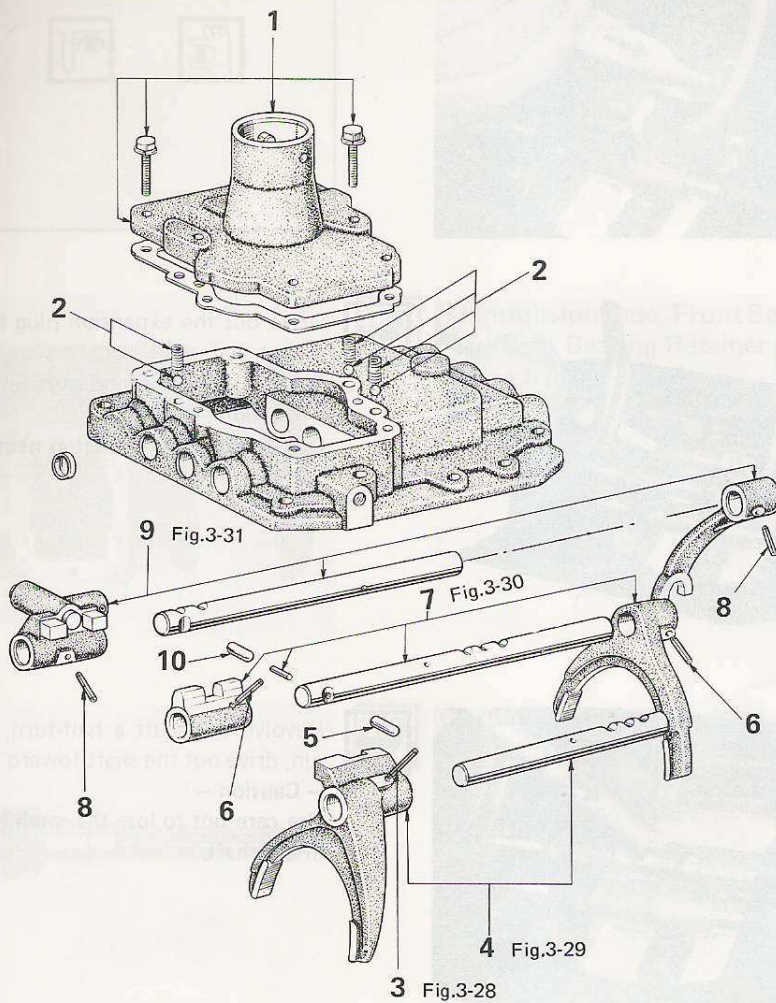
Fig. 3-27



- 1 Shift Lever Retainer & Gasket
- 2 Detent Springs & Balls
- 3 Slotted Spring Pin
- 4 Third-Fourth Shaft & Shift Fork
- 5 Interlock Pin
- 6 Slotted Spring Pins


- 7 First-Second Shaft, Shift Fork, & Shift Head
- 8 Slotted Spring Pins
- 9 Reverse Shift Fork, Head, Shaft & Interlock Pin
- 10 Interlock Pin

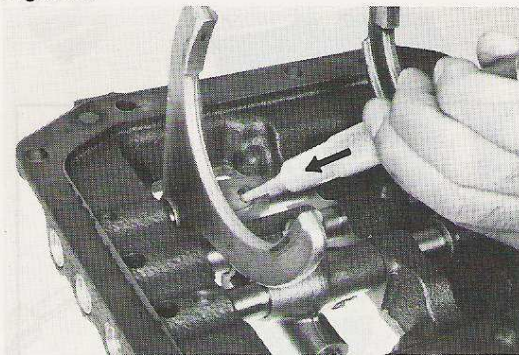Fig. 3-28



Drive out the slotted spring pin.

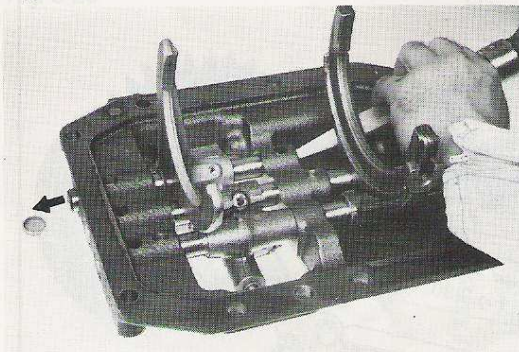Fig. 3-29




Drive out the expansion plug by hammering the end of shaft.

Take out the shaft and shift fork.

— **Caution** —

Other shafts must be set at neutral positions.

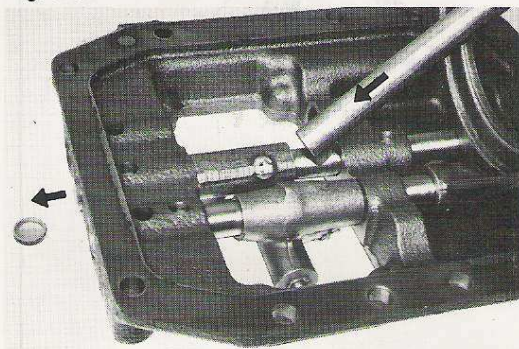Fig. 3-30




Revolve the shaft a half-turn, and using a drift pin, drive out the shaft toward the front.

— **Caution** —

Use care not to lose the small interlock pin fitted in the shaft.

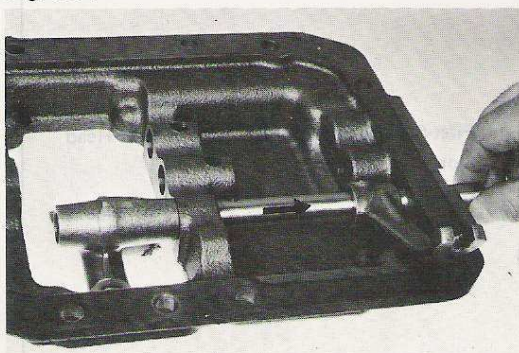Fig. 3-31



Draw out the shaft through the hole for mounting the back up light switch.

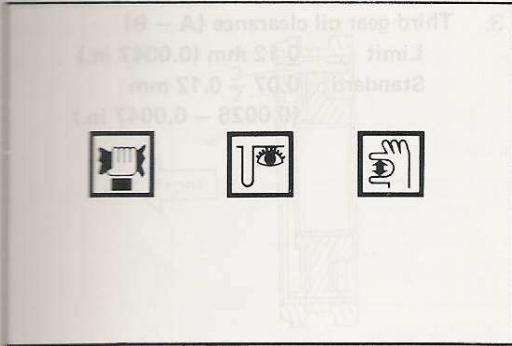


Fig. 3-32

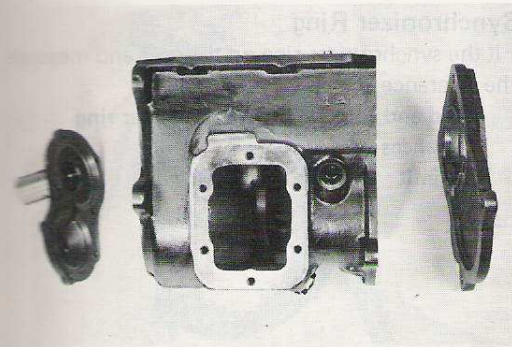


Fig. 3-33

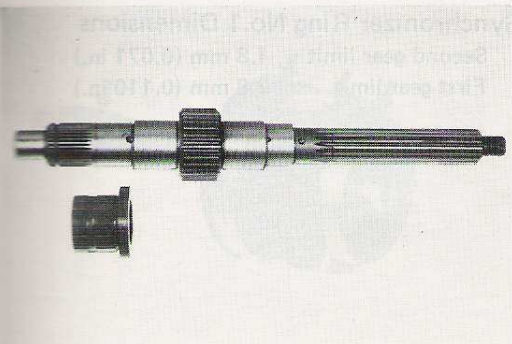
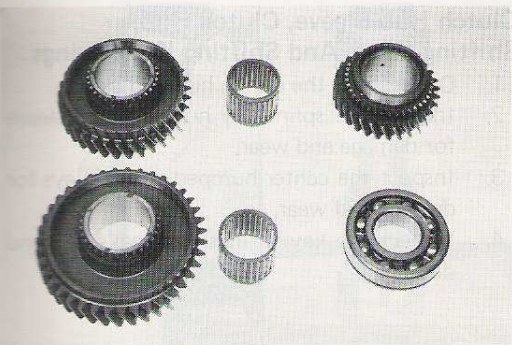


Fig. 3-34

**INSPECTION**

Wash the disassembled parts and inspect them on the following points. Replace any part found defective.

**Transmission Case, Front Bearing Retainer, And Rear Bearing Retainer**

Inspect for damage and wear.


**Output Shaft And Bushing**

1. Inspect the shaft surfaces contacting on the bearings and gears for damage and wear.
2. Inspect the bushing for damage and wear.

**First, Second, And Third Gears And Bearings.**


1. Inspect the gears for damage and wear at the teeth, thrust faces, inside diameter, and coned surfaces.
2. Inspect the output shaft rear bearing and the roller bearings for damage and wear.

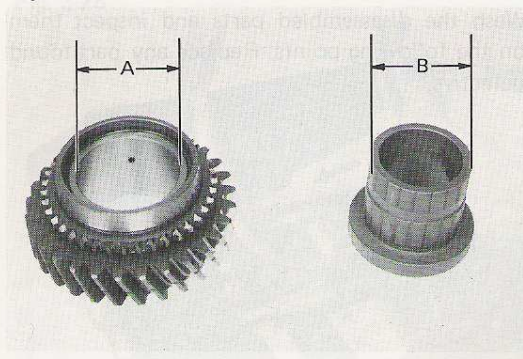Fig. 3-35



3. **Third gear oil clearance (A — B)**
Limit 0.12 mm (0.0047 in.)
Standard 0.07 — 0.12 mm
 (0.0028 — 0.0047 in.)

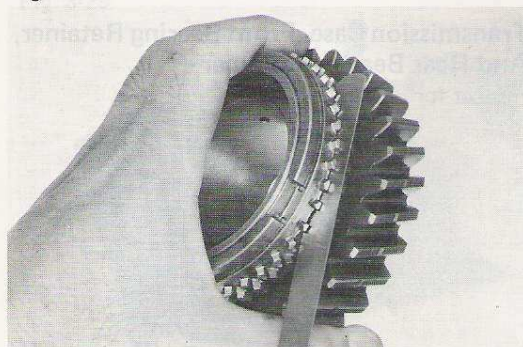Fig. 3-36




Synchronizer Ring

Fit the synchronizer ring on the gear and measure the clearance.

Third and fourth gear synchronizer ring clearances

Limit 0.8 mm (0.031 in.)

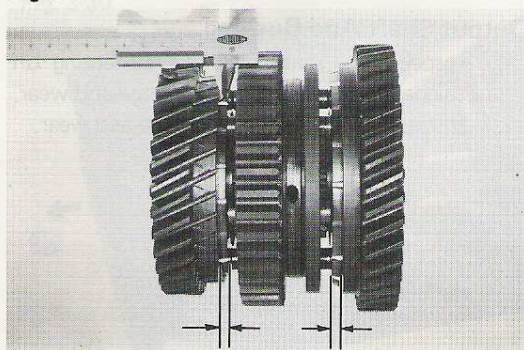Fig. 3-37




Synchronizer Ring No.1 Dimensions

Second gear limit 1.8 mm (0.071 in.)

First gear limit 2.8 mm (0.110 in.)

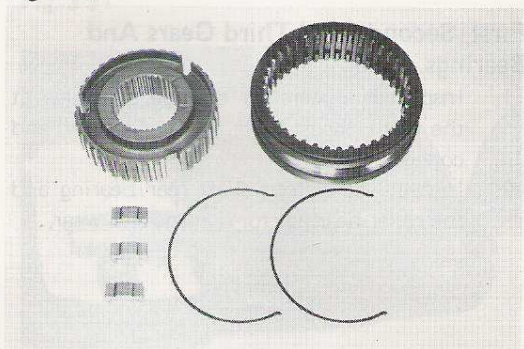Fig. 3-38



Clutch Hub Sleeve, Clutch Hub, Shifting Keys, And Shifting Key Springs

1. Disassemble the clutch hub and sleeve.
2. Inspect the splines of hub and hub sleeve for damage and wear.
3. Inspect the center humped part of keys for damage and wear.
4. Inspect the key springs for weakening and damage.

Fig. 3-39

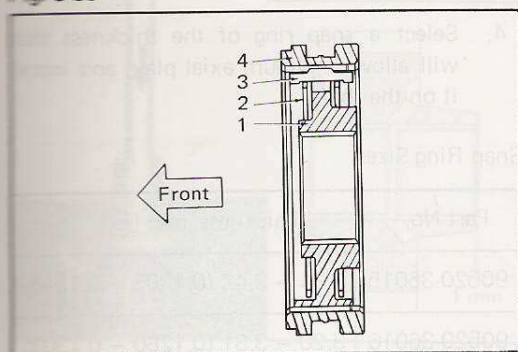


Fig. 3-40

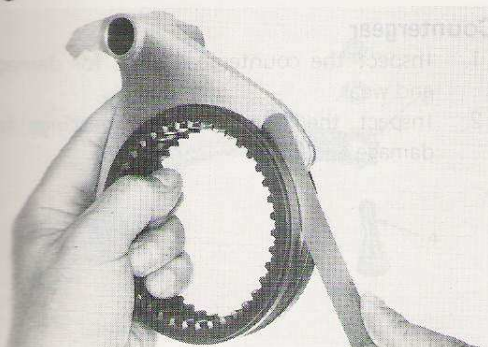


Fig. 3-41


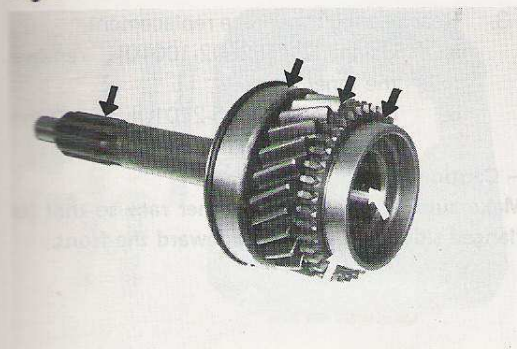


Fig. 3-42

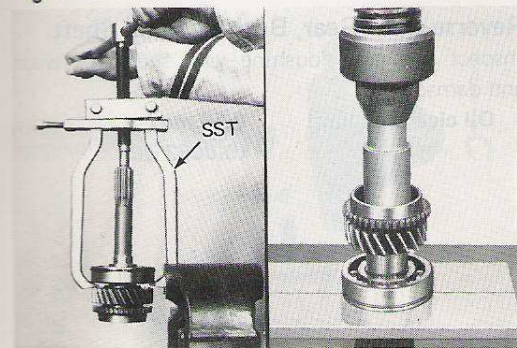

5. Assemble the hub sleeve(2), three shifting keys(3) and two key springs(4) to the clutch hub(1).

— Note —

1. Hub and hub sleeve are parts having directionality.
2. Install the key springs positioned so that their end gaps will not be in line.
3. Check the hub and hub sleeve to see that they slide smoothly together.



6. Check the clearance between the sleeve and shift fork.

**Third-fourth and first-second
Limit 0.8 mm (0.031 in.)**



Input Shaft

1. Inspect the gear teeth, splines, coned surfaces, and bearing for damage and wear.
2. Inspect the shaft inner surface that contact on the needle roller bearing for damage and wear.




Input Shaft Bearing Replacement

1. Remove the snap ring, using SST[09905-00010].
2. Remove the bearing, using SST[09950-20010]
3. Install the new bearing, using a press.



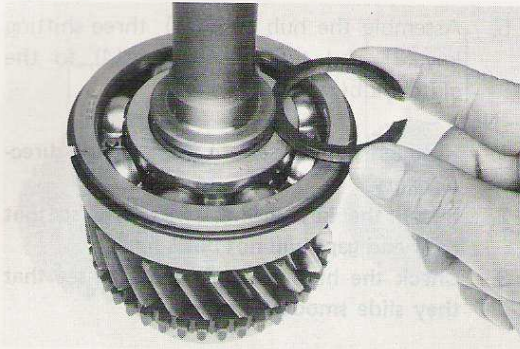Fig. 3-43




4. Select a snap ring of the thickness that will allow minimum axial play, and install it on the shaft.

Snap Ring Sizes

Part No.	Thickness mm (in.)
90520-36015	3.31 – 3.42 (0.1303 – 0.1346)
90520-36016	3.20 – 3.31 (0.1260 – 0.1303)

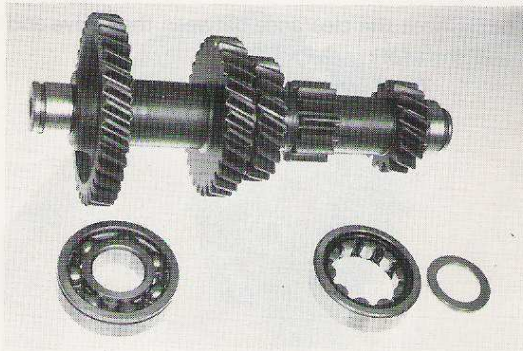
Fig. 3-44



Countergear

1. Inspect the countergear teeth for damage and wear.
2. Inspect the front and rear bearings for damage and wear.

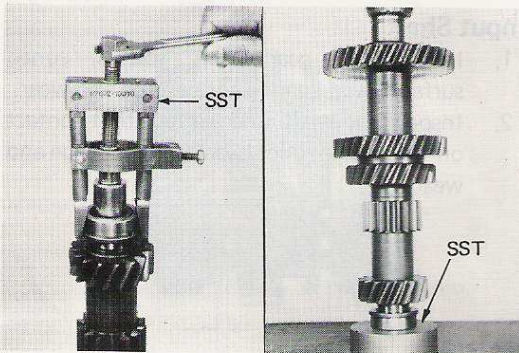Fig. 3-45



3. Rear bearing inner race replacement.


- a. Using SST [09602-10010], remove the inner race.
- b. Using SST [09515-21010], install the new inner race.



— Caution —

Make sure to position the inner race so that its flanged side will be directed toward the front.

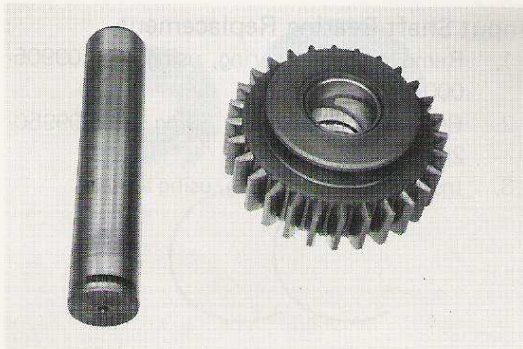Fig. 3-46




Reverse Idler Gear, Bushing, And Shaft

Inspect the gear, bushing, and shaft for wear and damage.

Oil clearance limit 0.16 mm
(0.0063 in.)

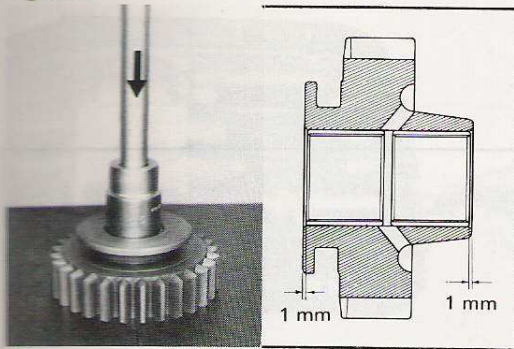Fig. 3-47

**Reverse Idler Gear Bushing Replacement**


1. Using a press and socket wrench (24 mm), force out the old bushings.
2. Using the same press and socket wrench, press in the new bushings respectively from the front and rear ends of the gear.



— Note —

Press in the bushings until 1 mm deep from the gear end faces.

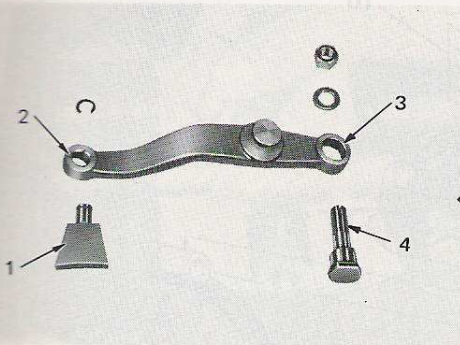Fig. 3-48

**Reverse Shift Arm**

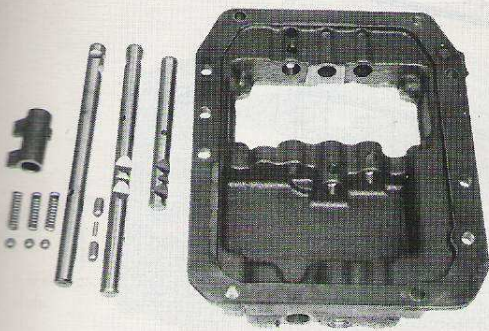
1. Inspect the shift arm shoe(1) for wear and damage.

**Shoe thickness limit 8.0 mm
(0.319 in.)**

2. Inspect the shift arm at shoe mounting part(2) and pivot mounting part(3) for wear and damage.
3. Inspect the pivot(4) for wear and damage.
4. Inspect the clearance between the shoe and reverse idler gear slot.

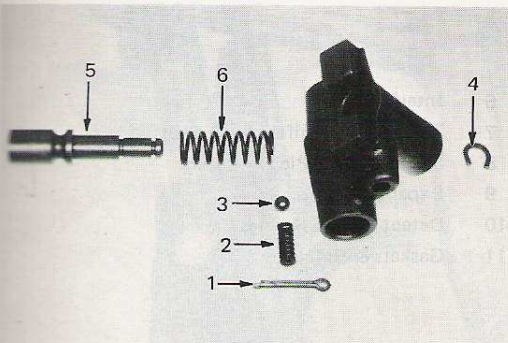
Limit 0.70 mm (0.028 in.)

Fig. 3-49

**Case Cover Parts**

1. Inspect the shafts and shift head for wear and damage at their sliding surfaces. Also, inspect the shafts for bending.
2. Inspect the case cover for wear and damage at the surfaces contacting on the shafts.
3. Inspect the balls for damage and wear.
4. Inspect the springs for weakening.

Fig. 3-50

**Reverse Shift Head**

1. Disassemble the shift head in the numbered order shown in the figure.
2. Reassemble by performing the disassembly in reverse order.

— Note —


1. After installing the "C" washer, bend both ends inward.
2. Verify that the plunger slides smoothly.

ASSEMBLY

Transmission Case Cover Assembly

Assemble in the numbered order shown below.

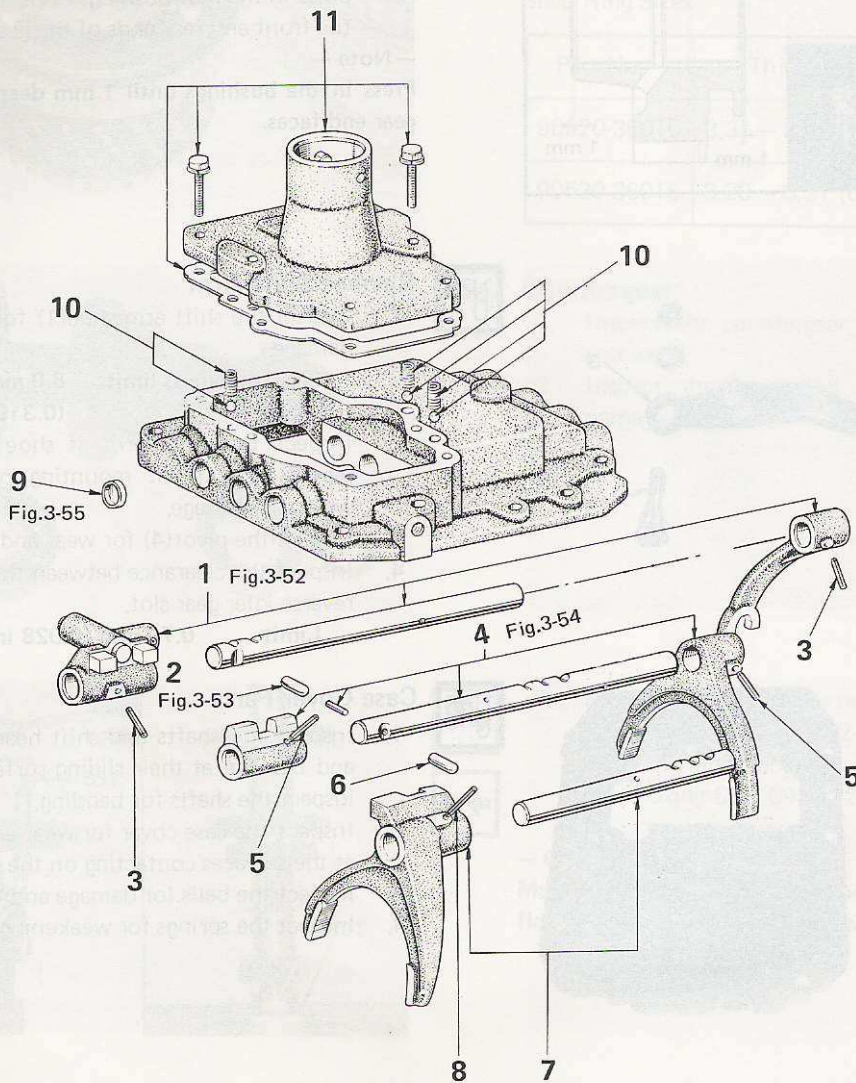
Fig. 3-51



- 1 Reverse Shift Fork, Head, & Shaft
- 2 Interlock Pin
- 3 Slotted Spring Pins
- 4 First-Second Shift Head, Fork, Shaft, & Interlock Pin
- 5 Slotted Spring Pins

- 6 Interlock Pin
- 7 Third-fourth Shift Fork & Shaft
- 8 Slotted Spring Pin
- 9 Expansion Plugs
- 10 Detent Balls & Springs
- 11 Gaskets & Retainer

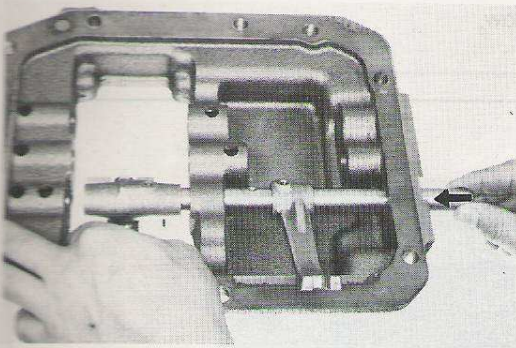Fig. 3-52




Install the shaft to the shift cover after passing it through the head and fork.

— Note —


Make sure that the head, fork, and shaft are positioned in the correct directions.

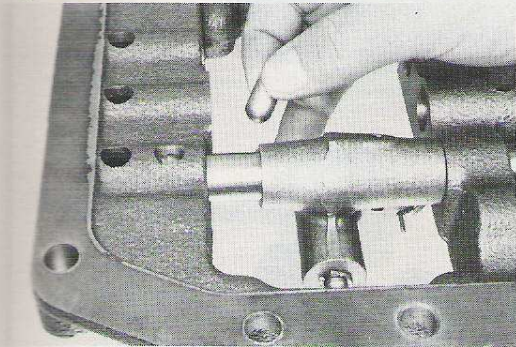Fig. 3-53




Insert the reverse gear interlock pin.

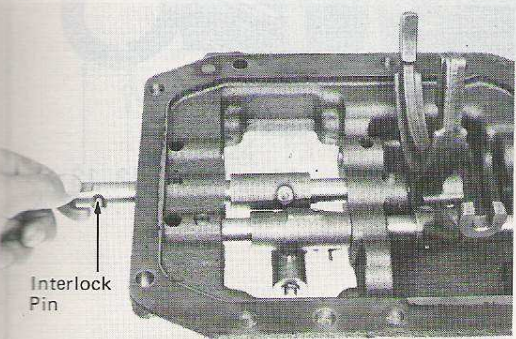Fig. 3-54



Insert the interlock pin (small) into the shaft. Install the shaft to the shift cover after passing it through the head and fork.

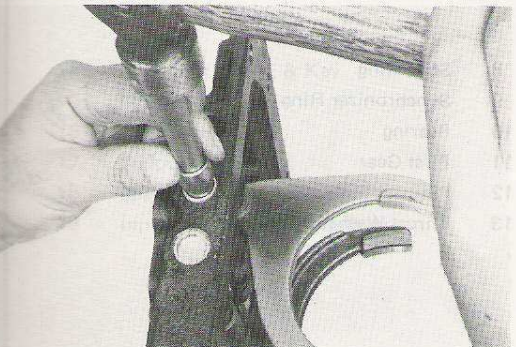Fig. 3-55



Coat liquid seal on the expansion plugs, and drive the plugs into the case cover.


— Note —

Expansion plugs must not be driven in more than 3 mm (0.1 in.) below the case surface.

Transmission Gear And Case Assembly

Assemble the output shaft in the numbered order shown below.

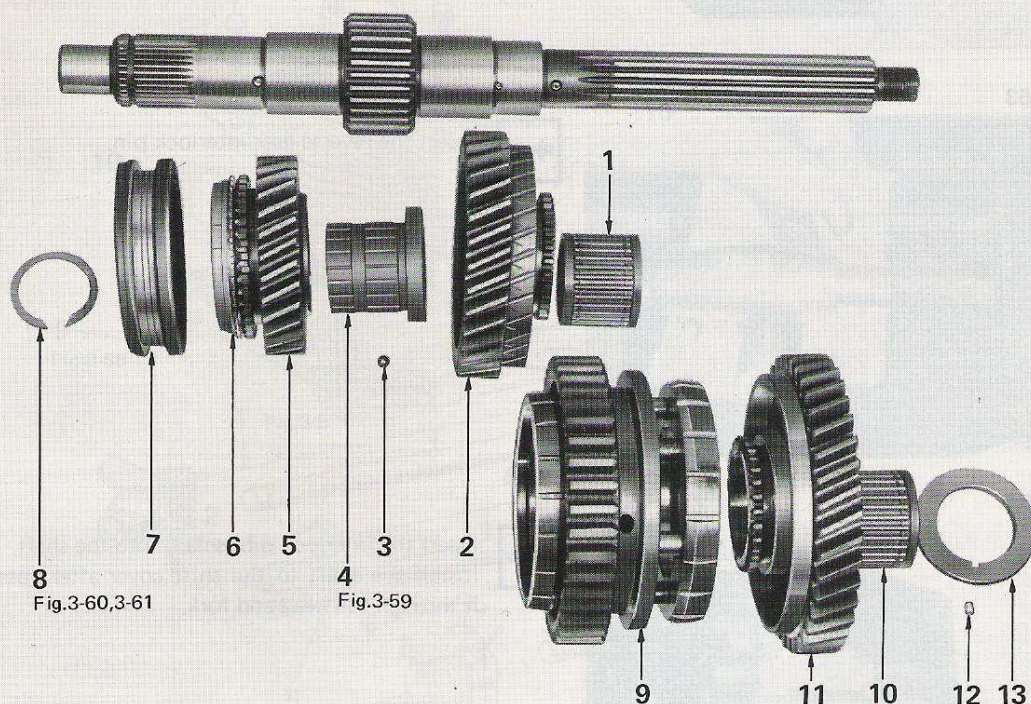Fig. 3-56




- 1 Bearing
- 2 Second Gear
- 3 Locking Ball
- 4 Bushing
- 5 Third Gear
- 6 Synchronizer Ring
- 7 Clutch Hub No.2 & Sleeve

- 8 Snap Ring
- 9 Synchronizer Ring No.1 Assy.
- 10 Bearing
- 11 First Gear
- 12 Pin
- 13 Thrust Washer

Assemble in the numbered order shown below.

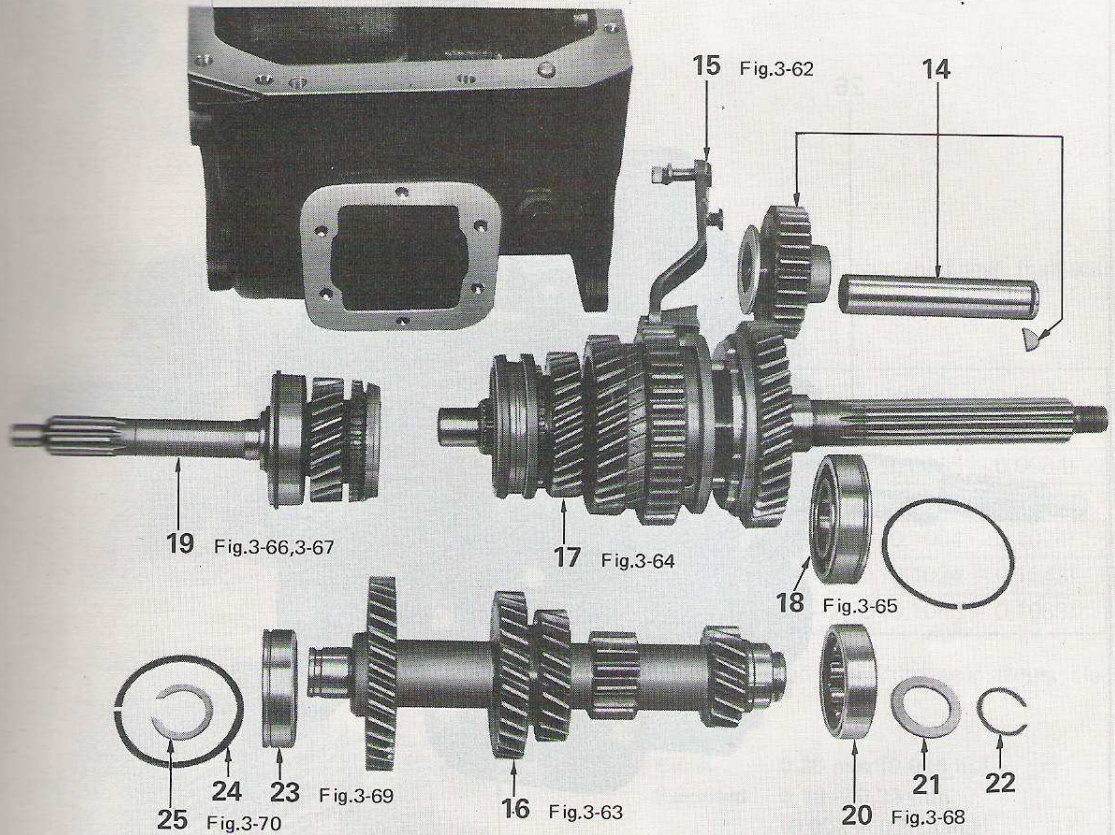Fig. 3-57



- 14 Idler Gear, Shaft, & Key
- 15 Shift Arm Assy.
- 16 Countershaft
- 17 Output Shaft Assy.
- 18 Bearing
- 19 Input Shaft, Bearings, & Ring


- 20 Bearing
- 21 Retainer
- 22 Snap Ring
- 23 Bearing
- 24 Snap Ring
- 25 Snap Ring

Assemble in the numbered order shown below.

— Note —

Coat liquid sealer on the gaskets and through bolts before assembling them.

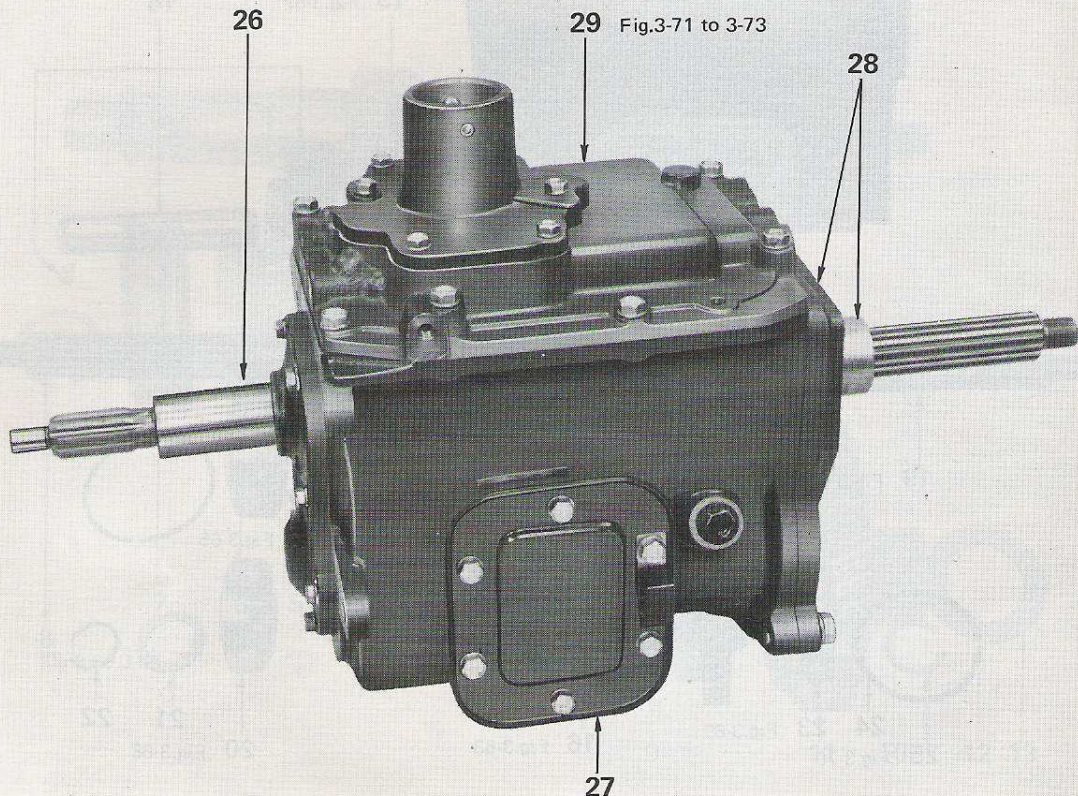Fig. 3-58




26 Front Bearing Retainer

27 Cover

28 Rear Bearing & Spacer


29 Case Cover Assy.

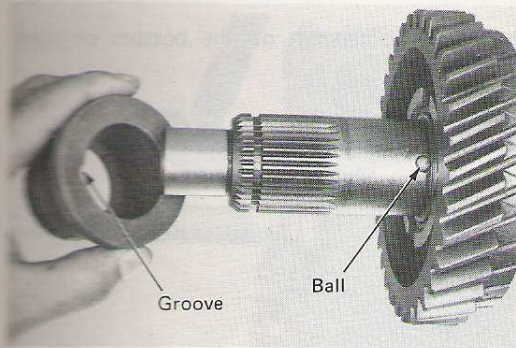Fig. 3-59



Align the bushing groove with the ball, and install the bushing to the output shaft.

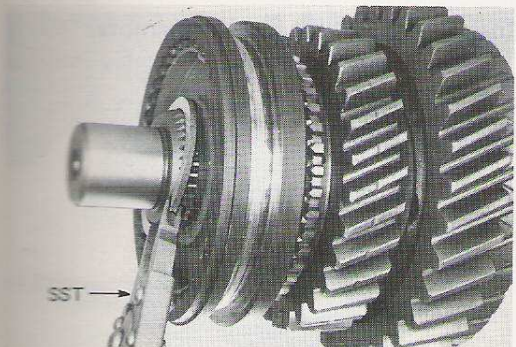Fig. 3-60




Select a snap ring of the thickness that will reduce the clearance to a minimum.

Snap Ring Thickness

Size Mark	Thickness mm (in.)
0	2.40 – 2.45 (0.0945 – 0.0965)
1	2.45 – 2.50 (0.0965 – 0.0984)
2	2.50 – 2.55 (0.0984 – 0.1004)
3	2.55 – 2.60 (0.1004 – 0.1024)
4	2.60 – 2.65 (0.1024 – 0.1043)
5	2.65 – 2.70 (0.1043 – 0.1063)

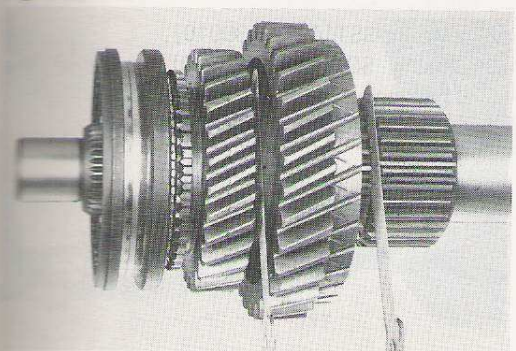Fig. 3-61



Measure the second and third gear thrust clearances.


Second gear

Limit 0.35 mm (0.014 in.)
Standard 0.18 – 0.33 mm
 (0.007 – 0.013 in.)

Third gear


Limit 0.35 mm (0.014 in.)
Standard 0.13 – 0.28 mm
 (0.005 – 0.011 in.)

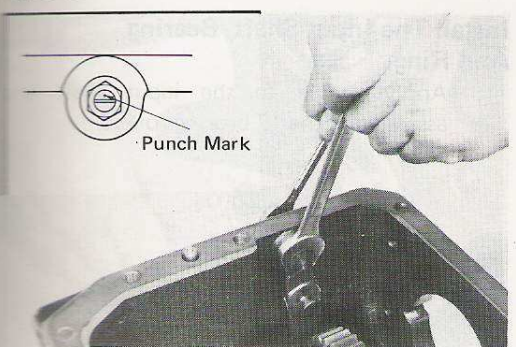Fig. 3-62




Lock the nut when the punch mark on the shift arm pivot is positioned straight up.

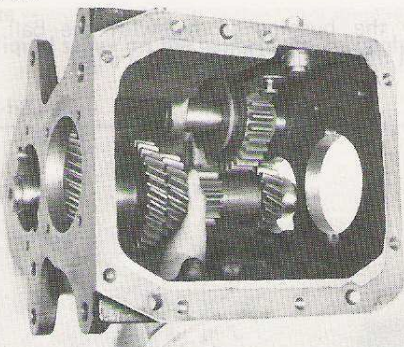Fig. 3-63



Lay the countershaft on the bottom of transmission case.

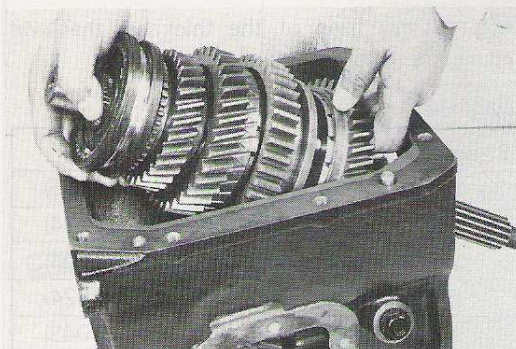
Fig. 3-64



Install The Output Shaft Assembly


1. Insert the output shaft assembly into the case.

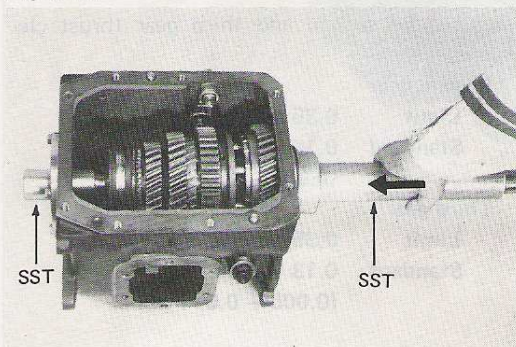Fig. 3-65



2. Mount SST [09314-36010].
3. Using SST [09309-36020], drive in the bearing.
4. Remove SST [09314-36010].

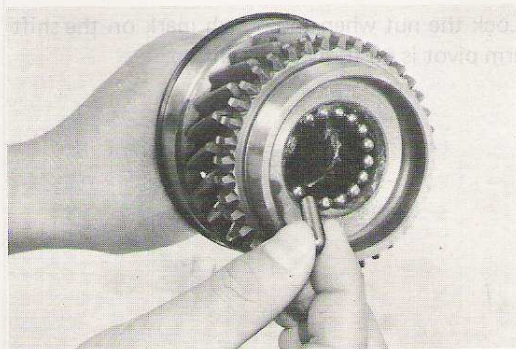
Fig. 3-66



Install The Input Shaft, Bearing, And Ring.

1. Apply grease to the input shaft and assemble in the 17 bearing rollers.

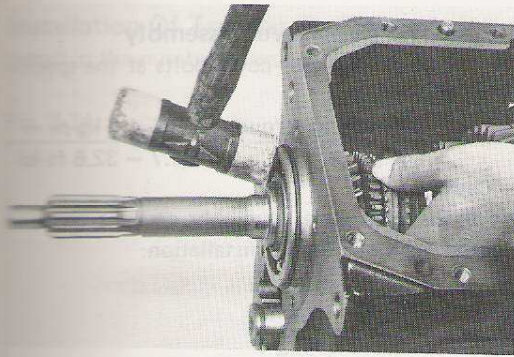Fig. 3-67




2. Assemble the synchronizer ring to the clutch hub No.2.
3. Using a plastic hammer, drive in the input shaft to the case.

— Caution —


Use care not to damage the synchronizer ring.

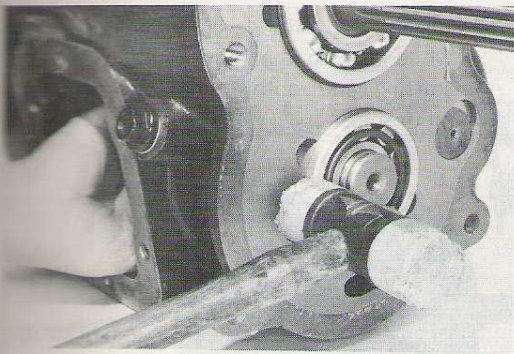Fig. 3-68



Lift up the countershaft to proper position and install the rear bearing with a plastic hammer.

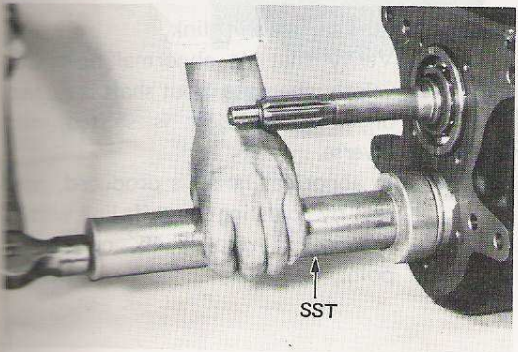Fig. 3-69




Use SST [09309-36020].

— Note —

Install the front and rear bearings by striking them alternately.

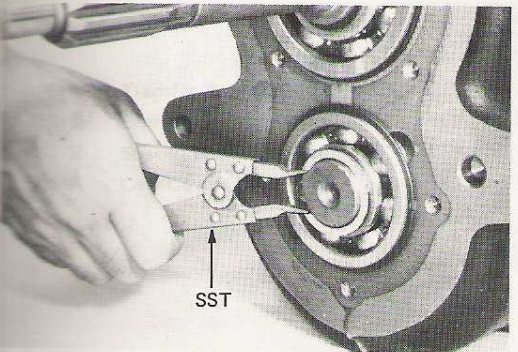Fig. 3-70




From the table below, select the thickest snap ring that will fit properly on the shaft, and install it with SST [09905-00010].

Snap Ring Thickness

Size Mark	Thickness mm (in.)
0	2.05 – 2.10 (0.0807 – 0.0827)
2	2.15 – 2.20 (0.0846 – 0.0866)
4	2.25 – 2.30 (0.0886 – 0.0906)

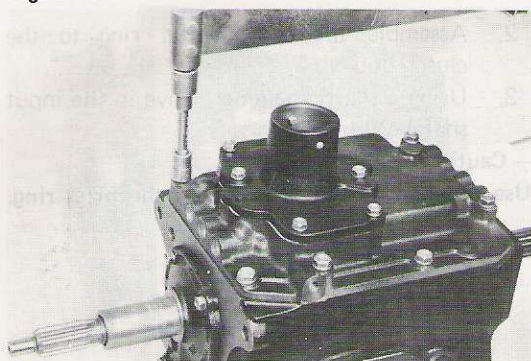Fig. 3-71

**Install The Case Cover Assembly**


1. Tighten the case cover bolts at the specified torque.

Tightening torque 3.0 – 4.5 kg-m
(21.7 – 32.6 ft-lb)

— Caution —


Have the case cover assembly and the gears in neutral positions before installation.

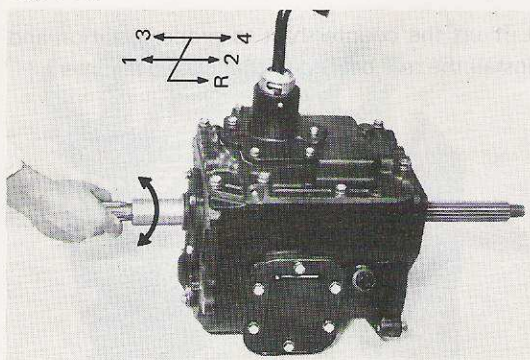Fig. 3-72



2. Install the shift lever temporarily, and while turning the input shaft, check the shifting and output shaft rotational relationship.

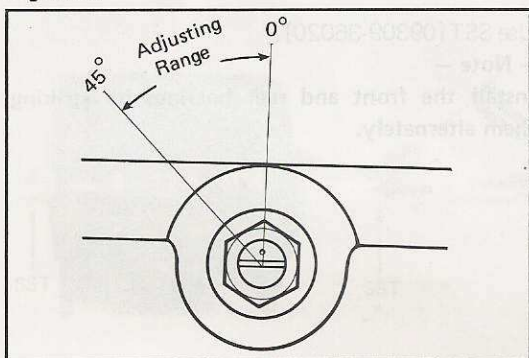Fig. 3-73




3. Adjust the reverse shift link.
 - a. Verify that no abnormal noise develops when the input shaft is turned or when the gear is shifted into reverse.
 - b. If abnormal noise is produced, correct by adjusting the shift link within a range of zero to 45° of marker point.

INSTALLATION**Installation Of Transfer To Transmission**

Install in the numbered order shown below.

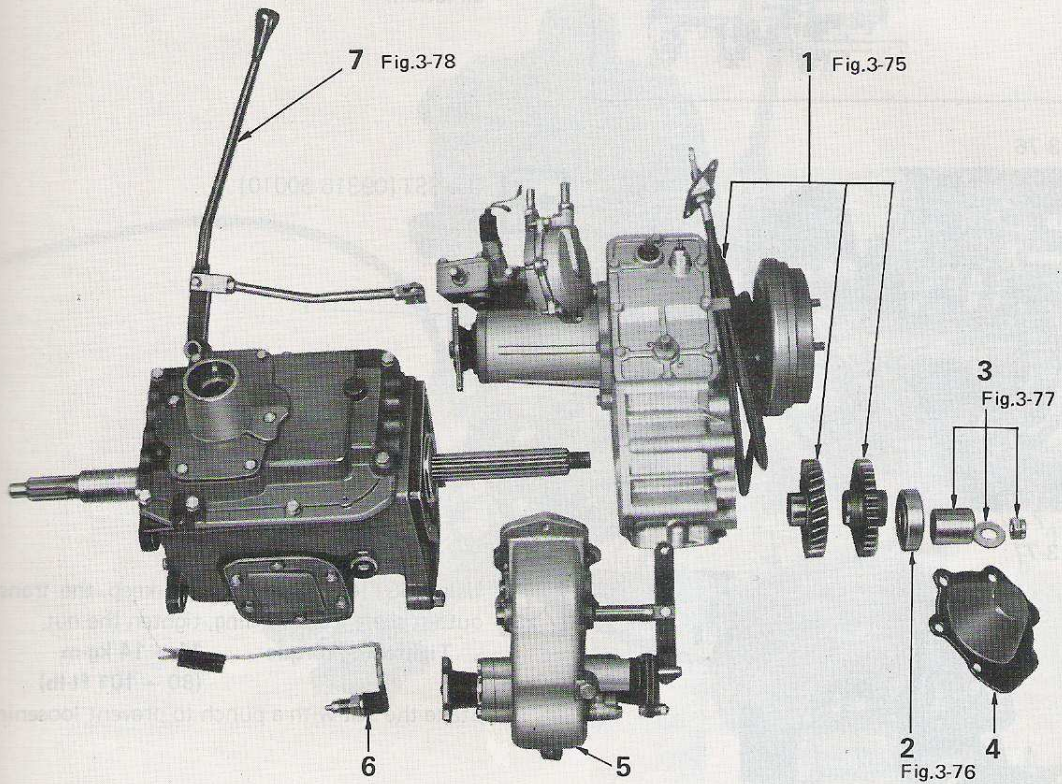
Fig. 3-74



- 1 Transfer Assy. & Gears
- 2 Bearing
- 3 Spacer, Washer, & Nut
- 4 Case Cover No.2

- 5 Power Take-Off Assy. Or Cover
- 6 Back Up Light Switch
- 7 Lever & Rod

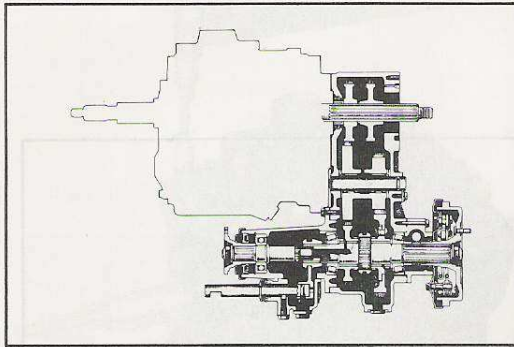Fig. 3-75




While supporting the gears with one hand, install them to the transmission together with the transfer assembly.

Tightening torque **5 – 8 kg-m**
 (36 – 58 ft-lb)

— Caution —


Make sure to position the gears in correct direction.

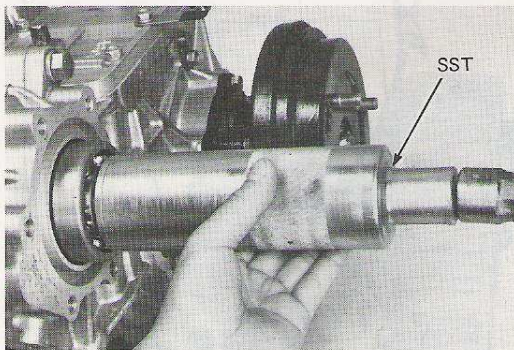Fig. 3-76



Use SST [09316-60010].

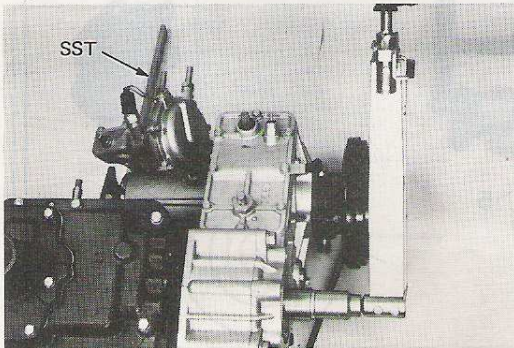Fig. 3-77




Using SST [09330-00020] to keep the transfer output shaft from turning, tighten the nut.

Tightening torque **11 – 14 kg-m**
 (80 – 101 ft-lb)

Stake the nut with a punch to prevent loosening.

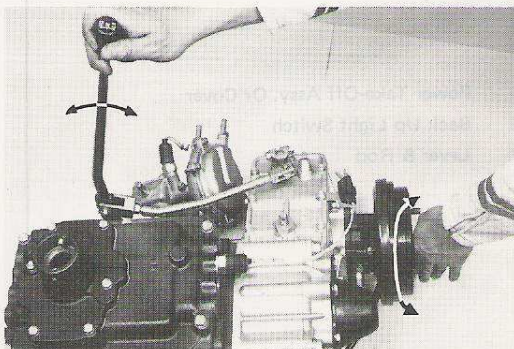Fig. 3-78




Check the shifting conditions of the transfer shift lever and the turning condition of the output shaft.

Installation Of Transmission To Vehicle

Make the installation in the numbered order shown in the figures.

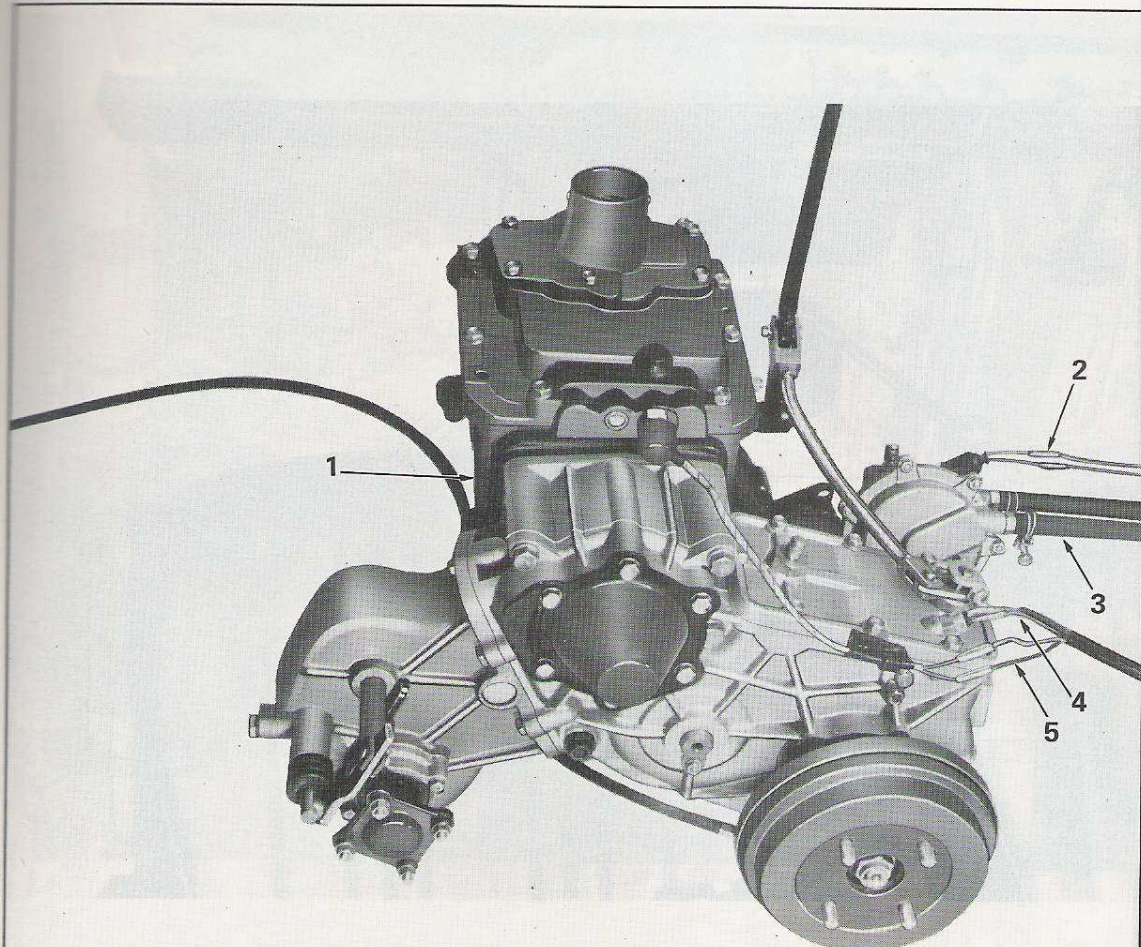Fig. 3-79



1 Transmission With Transfer


2 Front Drive Indicator Wire Harness
(Magnet Type Front Drive Only)

3 Vacuum Hoses (Two) (Magnet Type Front Drive Only)

4 Transfer Switch Wire Harness
(Magnet Type Front Drive Only)

5 Back Up Light Switch Wire Harness

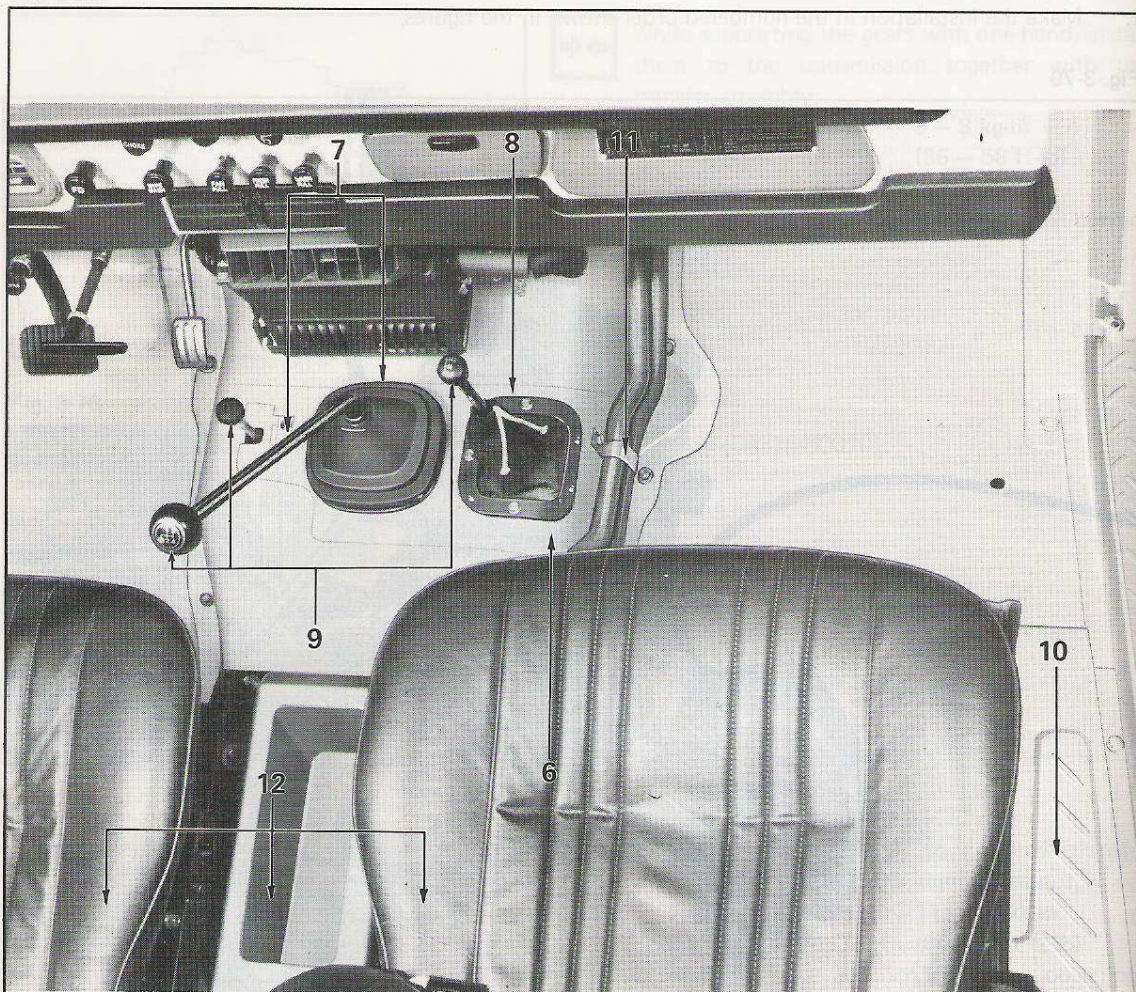
Fig. 3-80



- 6 Transmission Cover
- 7 Shift Lever & Boot
- 8 Dust Proof & Boot
- 9 Shift Lever Knobs

- 10 Fuel Tank Cover & Fuel Tank (Except FJ55)
- 11 Rear Heater Pipe (Except FJ55)
- 12 Front Seats & Seat Frames (Except FJ55)

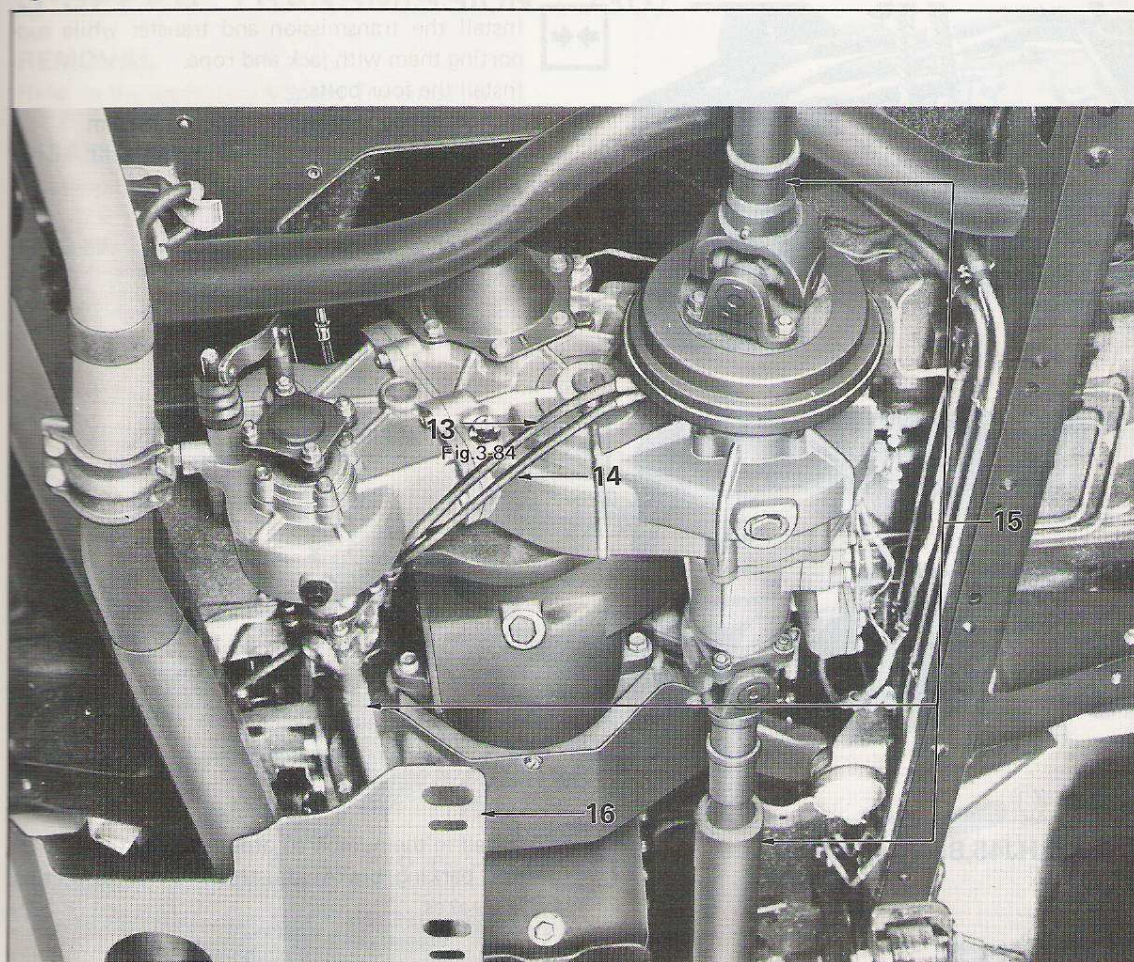Fig. 3-81




- 13 Parking Brake Cable
14 Speedometer Cable

- 15 Propeller Shafts
16 Undercover

2. Fill in coolant, and transmission and transfer oils.

Transmission oil capacity	3.1 liter (3.3 US. qt., 2.7 Imp. qt.)
Transfer oil capacity	1.7 liter (1.8 US. qt., 1.5 Imp. qt.)
Type	SAE90, API GL-4

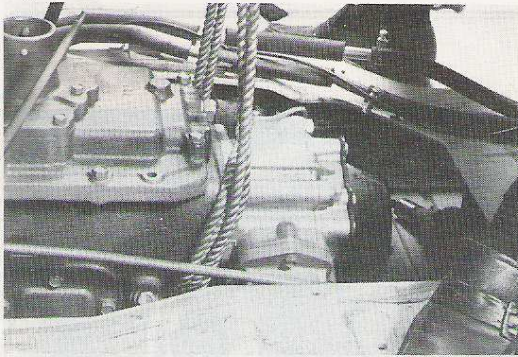Fig. 3-82




Install the transmission and transfer while supporting them with jack and rope.
Install the four bolts.

Tightening torque


**5.0 – 8.0 kg-m
(36 – 58 ft-lb)**

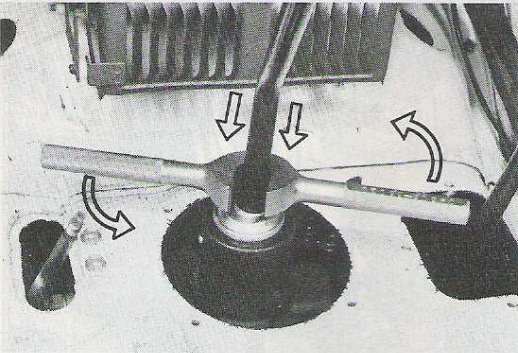Fig. 3-83



Use SST [09305-60010].

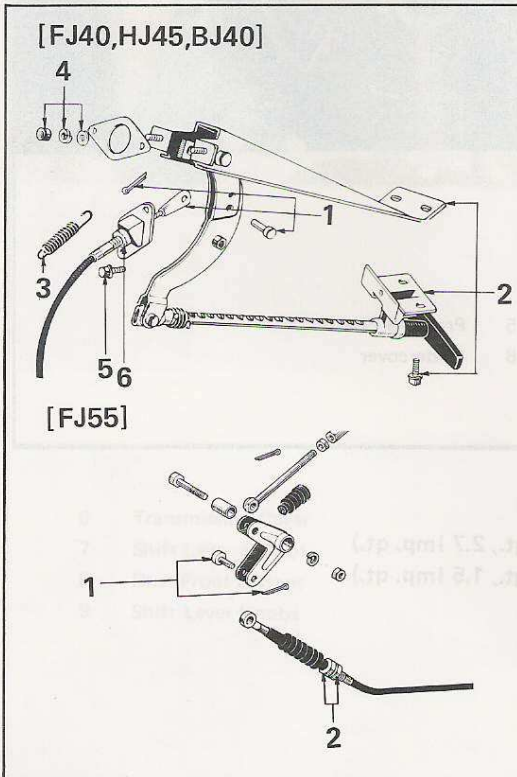Fig. 3-84



Install in the numbered order shown at left.
For parking brake adjustment, refer to section on brakes.

3-SPEED TRANSMISSION (J30)


REMOVAL

Refer to the section on 4-Speed Transmission.

DISASSEMBLY

Disassemble in the numbered order shown in the following figures.

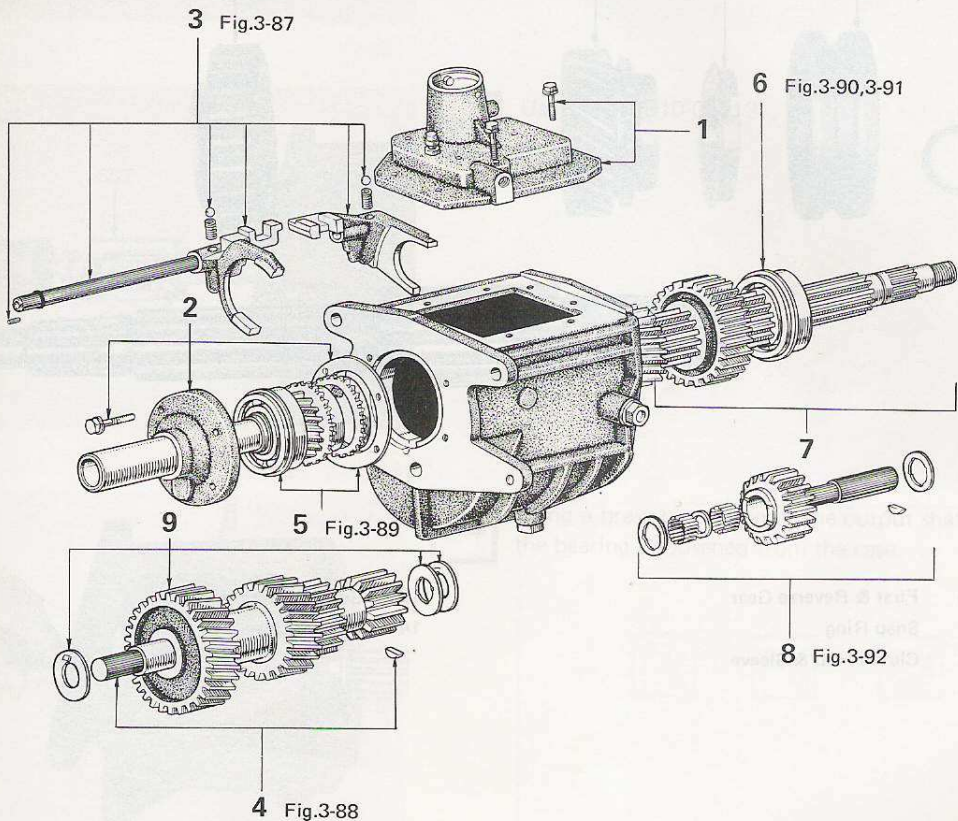Fig. 3-85



- 1 Case Cover
- 2 Front Bearing Retainer
- 3 Shift Forks & Shaft
- 4 Countershaft & Key
- 5 Input Shaft Assy. & Synchronizer Ring

- 6 Bearing
- 7 Output Shaft Assy.
- 8 Reverse Idler Gear Assy.
- 9 Countergear Assy.

Fig. 3-86

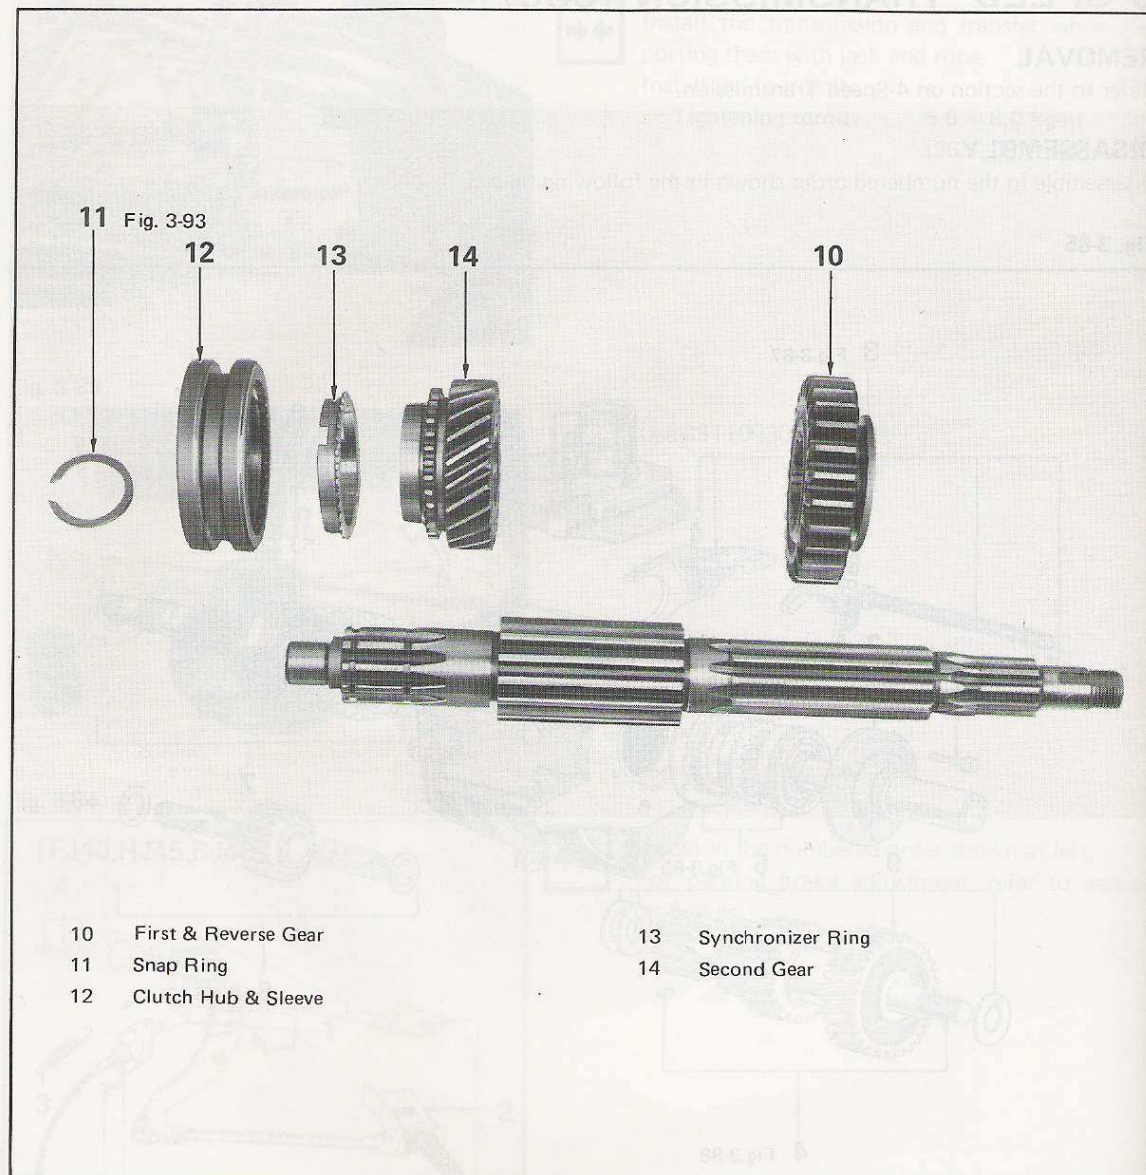


Fig. 3-87




Drive out the shaft toward the front.

— Caution —


Cover the locking ball hole with finger so as to prevent the locking ball from jumping out.

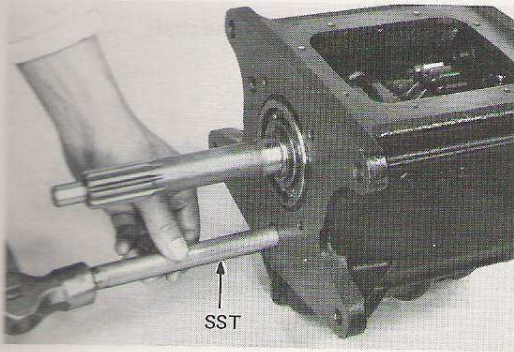Fig. 3-88




Using SST[09311-60010], drive out the shaft toward the rear.

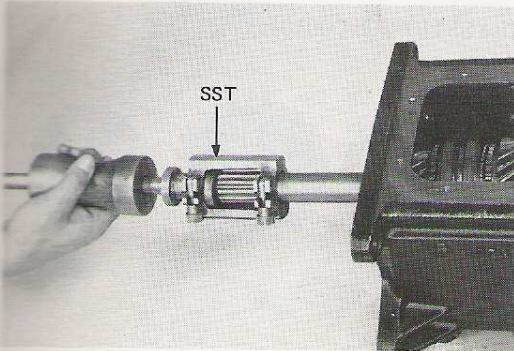Fig. 3-89




Use SST[09910-00013].

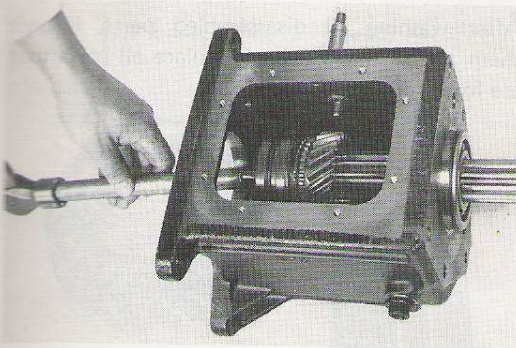Fig. 3-90




Using a brass bar, hammer the output shaft until the bearing is loosened from the case.

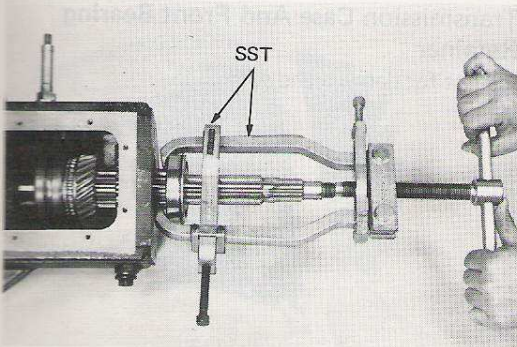Fig. 3-91




Use SST[09950-20010] and [09956-00010].

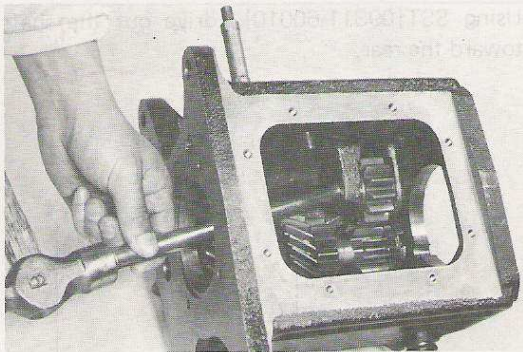Fig. 3-92




Using a drift pin, drive out the shaft.

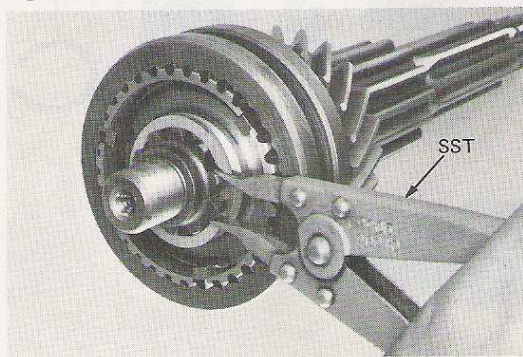Fig. 3-93



Use SST [09905-00010].

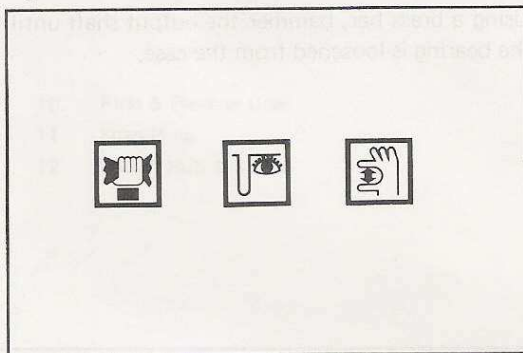
Fig. 3-94



INSPECTION

After washing all disassembled parts, inspect them as instructed below. Replace all parts that are found defective.

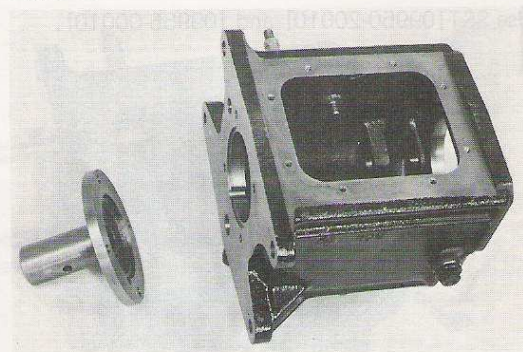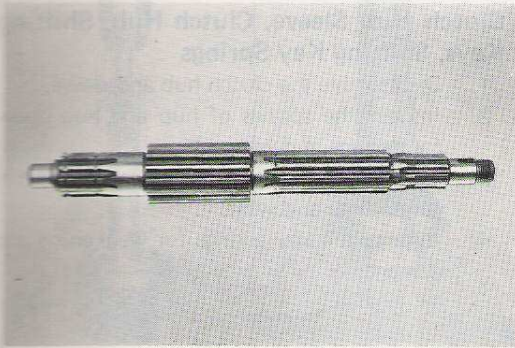
Fig. 3-95



Transmission Case And Front Bearing Retainer

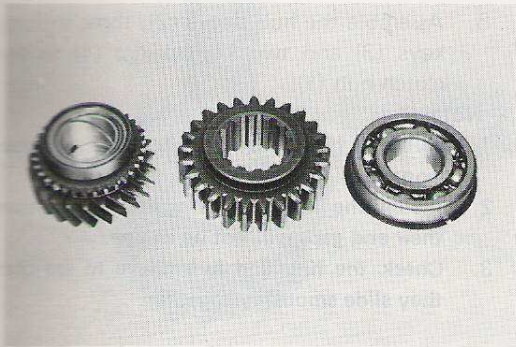
Inspect for damage and wear.

Fig. 3-96

**Output Shaft**


Inspect the shaft for damage and wear at the surfaces where the gears and bearing are installed.

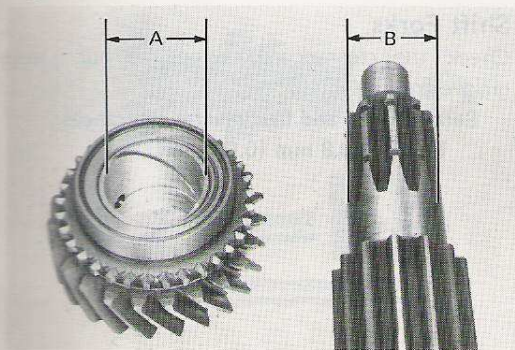Fig. 3-97

**First Gear, Second Gear, and Bearing**

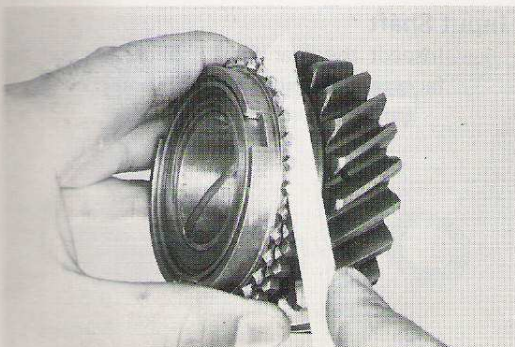
1. Inspect the gears for wear and damage at the teeth, thrust faces, inside diameter surfaces, and coned parts.
2. Inspect the output shaft rear bearing for damage and wear.

Fig. 3-98



3. Second gear bushing oil clearance (A – B)
Limit 0.09 mm (0.0035 in.)

Fig. 3-99


**Synchronizer Rings**

1. Fit the synchronizer ring on the gear and measure the clearance "A".

Second and third gear synchronizer ring clearance

Limit 0.8 mm (0.032 in.)

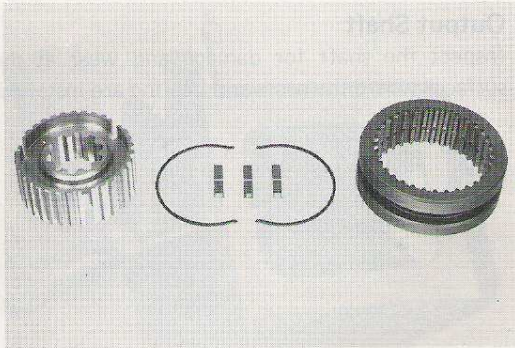
Fig. 3-100



Clutch Hub Sleeve, Clutch Hub, Shifting Keys, Shifting Key Springs

1. Disassemble the clutch hub and sleeve.
2. Inspect the splines of hub and hub sleeve for damage and wear.
3. Inspect the humped part at center of key for damage and wear.
4. Inspect the key springs for weakening and damage.

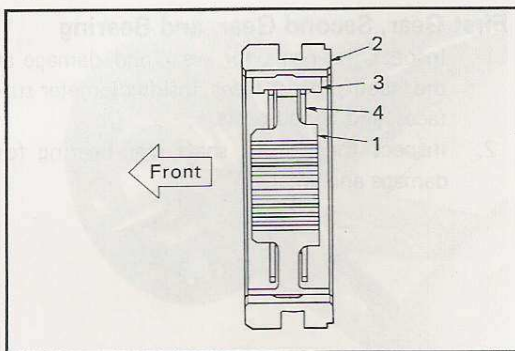Fig. 3-101



5. Assemble the hub sleeve (2), three shifting keys (3) and two key springs (4) to the clutch hub (1).

– Note –

1. Hub and hub sleeve are parts having directionality.
2. Install the key springs positioned so that their end gaps will not be in line.
3. Check the hub and hub sleeve to see that they slide smoothly together.

Fig. 3-102




Shift Forks

Check the clearance between the hub sleeve groove and the shift fork.

Second-third and first-reverse clearances

Limit 0.8 mm (0.032 in.)

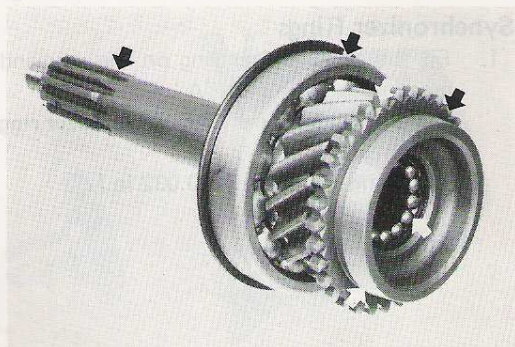
Fig. 3-103



Input Shaft

1. Inspect the gear teeth, splines, coned surfaces, and bearings for wear and damage.

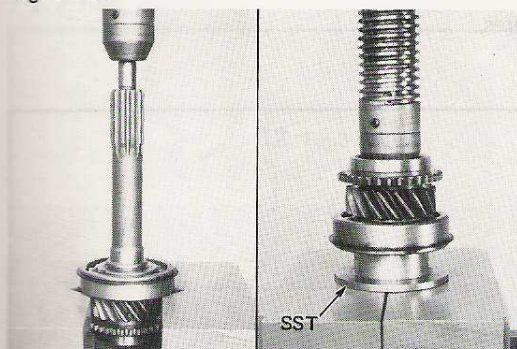Fig. 3-104



2. Input shaft bearing replacement.

- Remove the snap ring, using SST [09905-00010].
- Remove the bearing, using a press.
- Install the new bearing, using SST [09316-60010] and a press.



Fig. 3-105

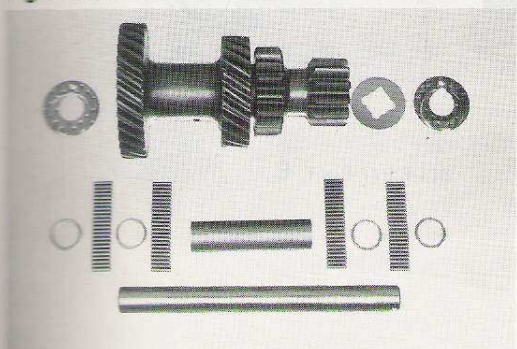


- Select a snap ring of the thickness that will allow minimum axial play, and install it on the shaft.

Snap Ring Sizes

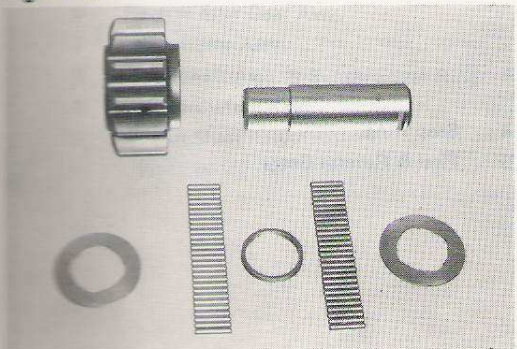
Part No.	Thickness mm (in.)
90520-33010	2.43–2.57 (0.0957–0.1012)
90520-33011	2.30–2.42 (0.0906–0.09523)

Fig. 3-106

**Countergear And Countershaft**

- Inspect the countergear teeth for damage and wear.
- Inspect the bearings and countershaft for damage and wear.
- Inspect the thrust washers for damage and wear.

Fig. 3-107

**Reverse Idler Gear, Bearings, And Shaft**

Inspect the gear, bearings, and shaft for wear and damage.

ASSEMBLY

Assemble in the numbered order shown in the following figures.


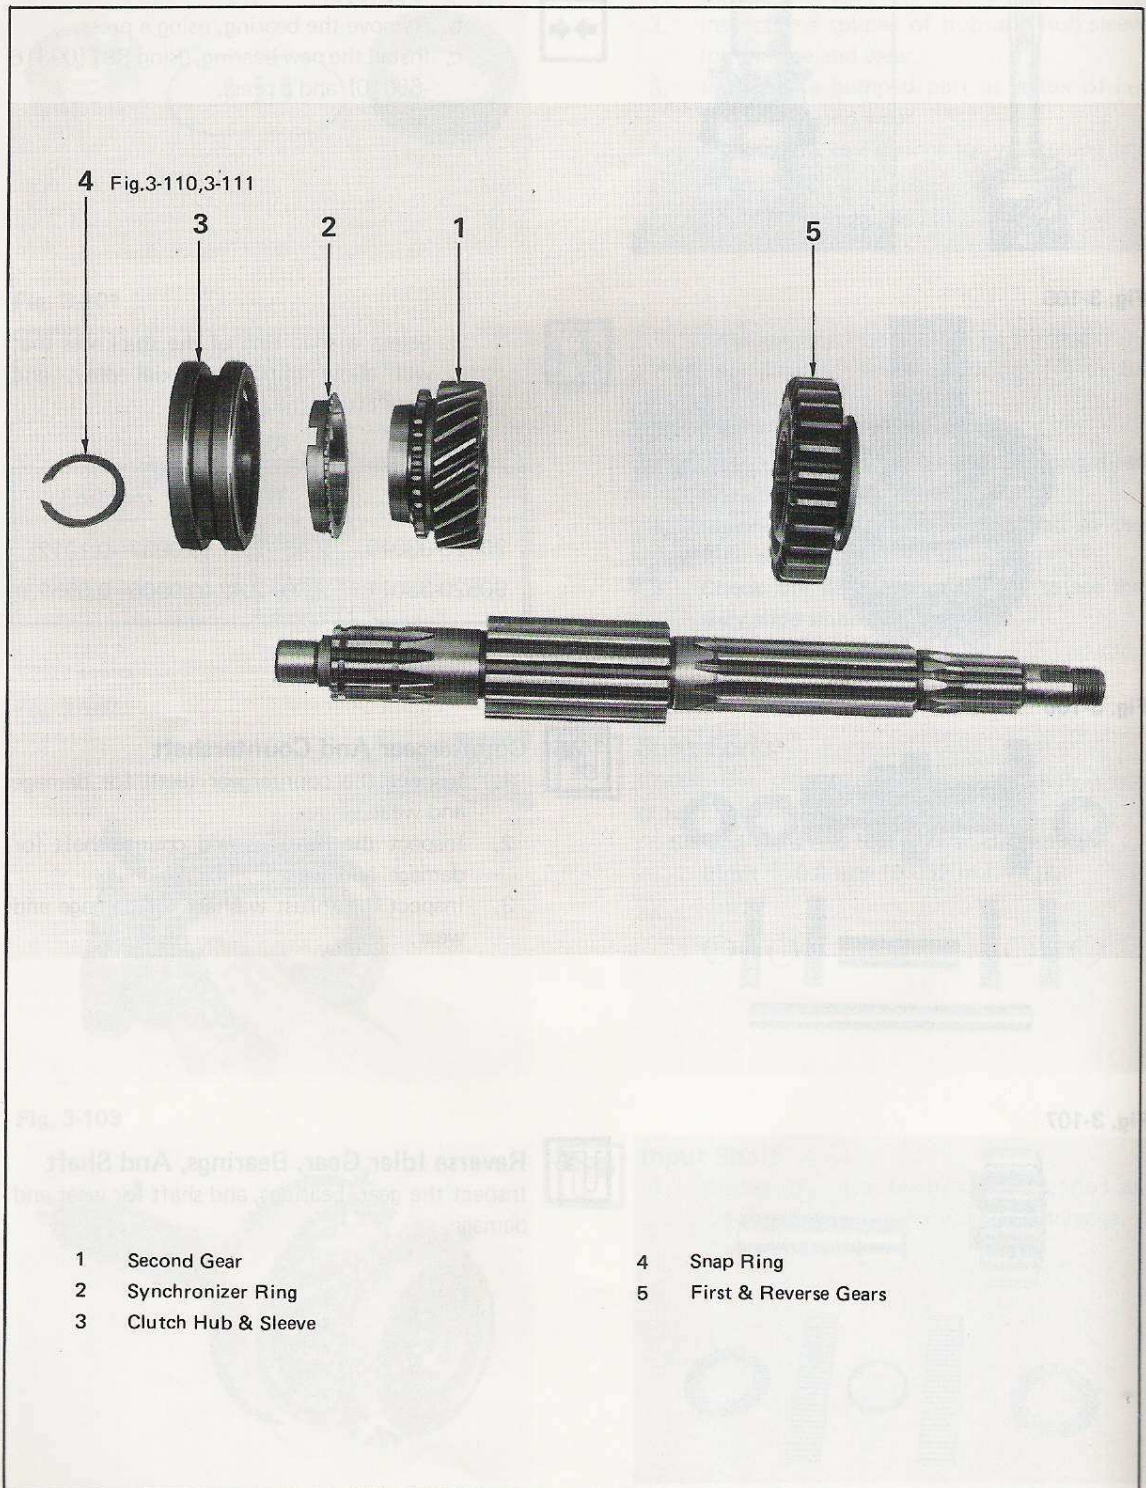
Fig. 3-108

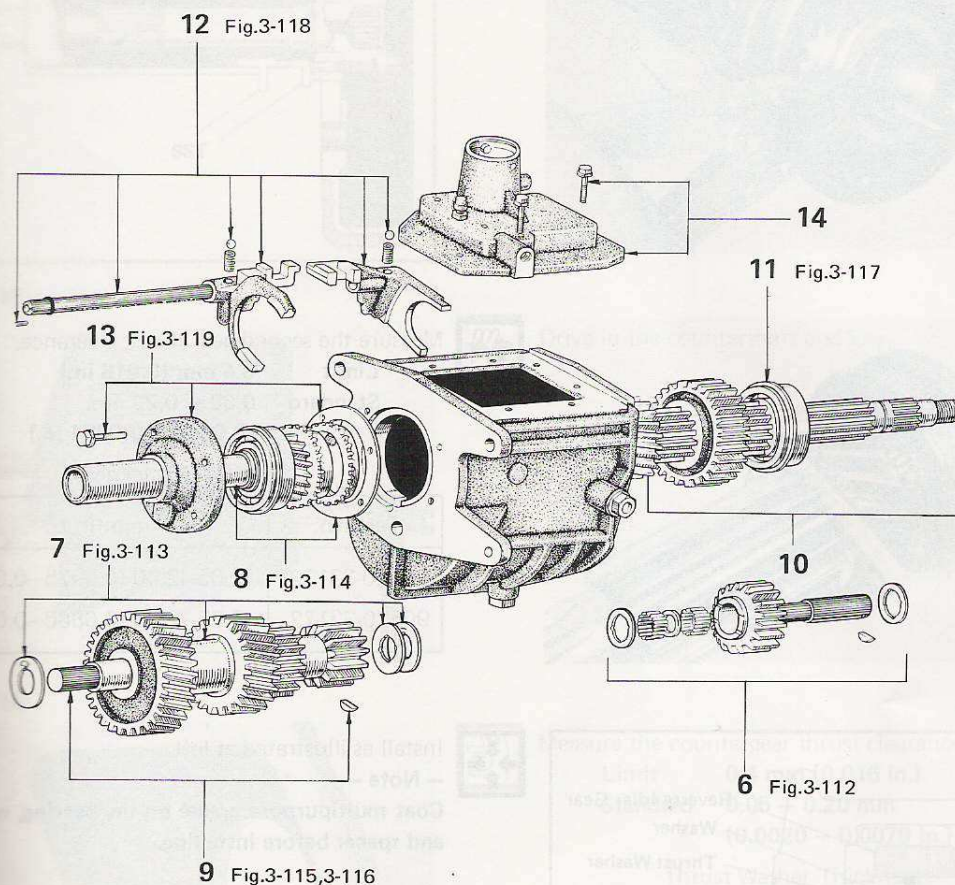
Fig. 3-109



- 6 Reverse Idler Gear Assy.
- 7 Countergear Assy.
- 8 Input Shaft Assy. & Synchronizer Ring
- 9 Countershaft & Key
- 10 Output Shaft Assy.


- 11 Bearing
- 12 Shift Fork & Shaft
- 13 Front Bearing Retainer
- 14 Case Cover

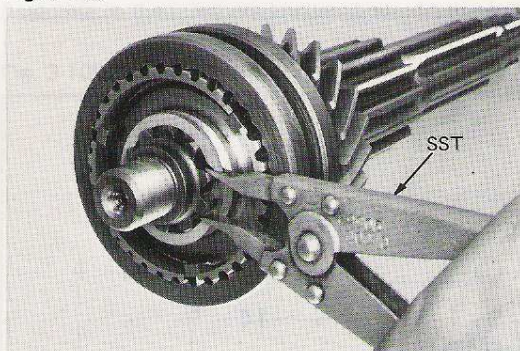Fig. 3-110



Use SST[09905-00010].

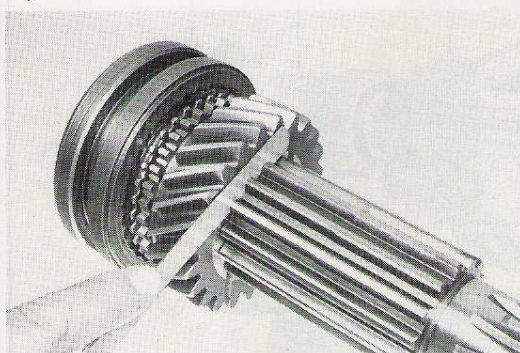Fig. 3-111



Measure the second gear thrust clearance.


Limit 0.4 mm (0.016 in.)

Standard 0.08 – 0.23 mm
(0.0032 – 0.0091 in.)

Snap Ring Thickness

Part No.	mm (in.)
90520-33132	2.35–2.40 (0.0925–0.0945)
90520-33172	2.25–2.30 (0.0886–0.0906)

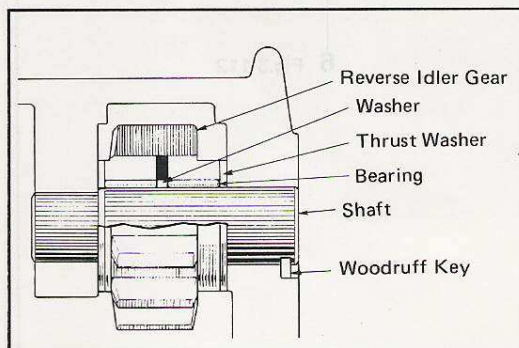Fig. 3-112




Install as illustrated at left.

— Note —

Coat multipurpose grease on the bearing, washer, and spacer before installing.

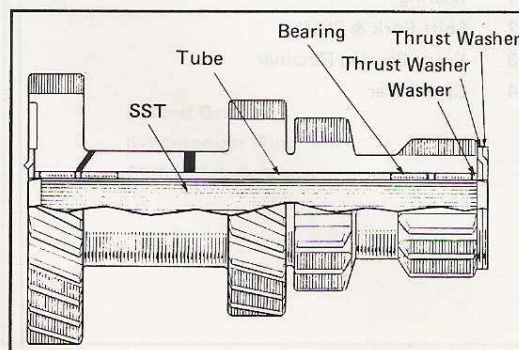Fig. 3-113




Assemble the countergear assembly as illustrated at left, and install in the case, using SST[09311-60010].

— Note —


Coat multipurpose grease on the bearing, washer, and spacer before installing.

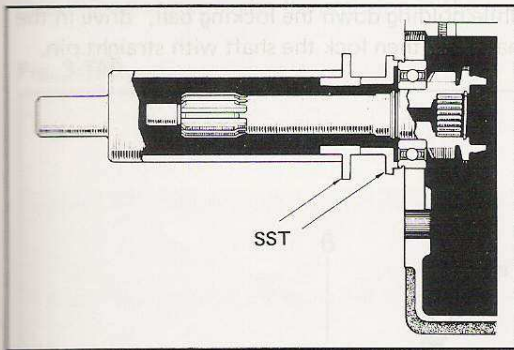Fig. 3-114




Use SST [09316-60010].

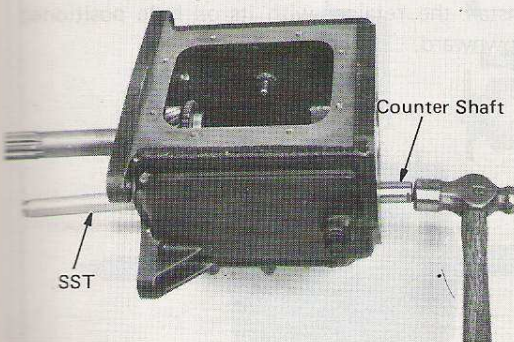Fig. 3-115



Drive in the countershaft and key.

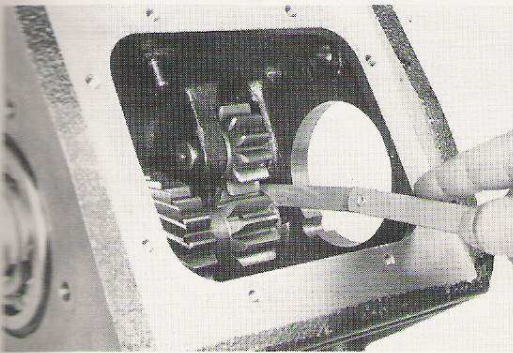Fig. 3-116




Measure the counter gear thrust clearance.

Limit 0.4 mm (0.016 in.)**Standard** 0.05 – 0.20 mm
(0.0020 – 0.0079 in.)

Thrust Washer Thickness

Part No.	mm (in.)
33441-61010	1.45–1.50 (0.0571–0.0591)
33442-61010	1.50–1.55 (0.0591–0.0610)
33443-61010	1.55–1.60 (0.0610–0.0630)

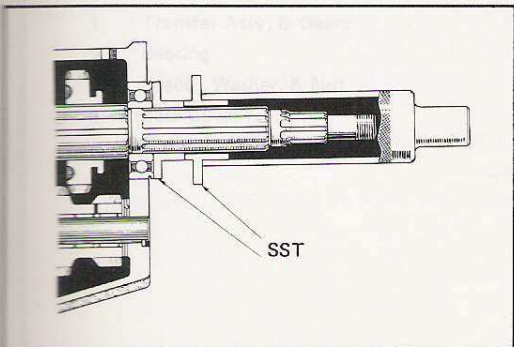Fig. 3-117




Using SST [09316-60010], drive in the bearing.

— Note —


Position the hub sleeve at third speed, and insert the output shaft assembly into the case.

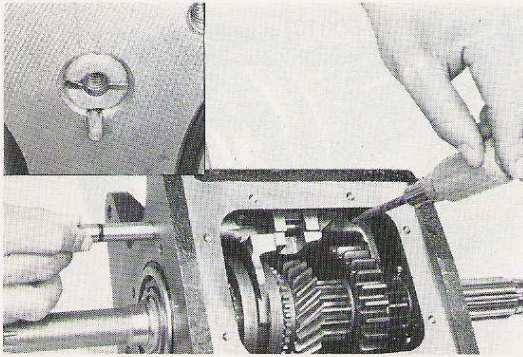Fig. 3-118



While holding down the locking ball, drive in the shaft, and then lock the shaft with straight pin.

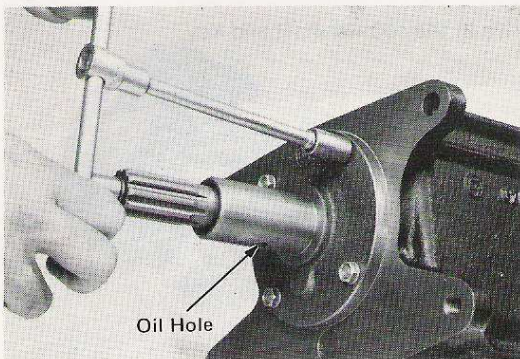
Fig. 3-119



Install the retainer with its oil hole positioned downward.

INSTALLATION

Install the transfer to the transmission in the numbered order shown below.

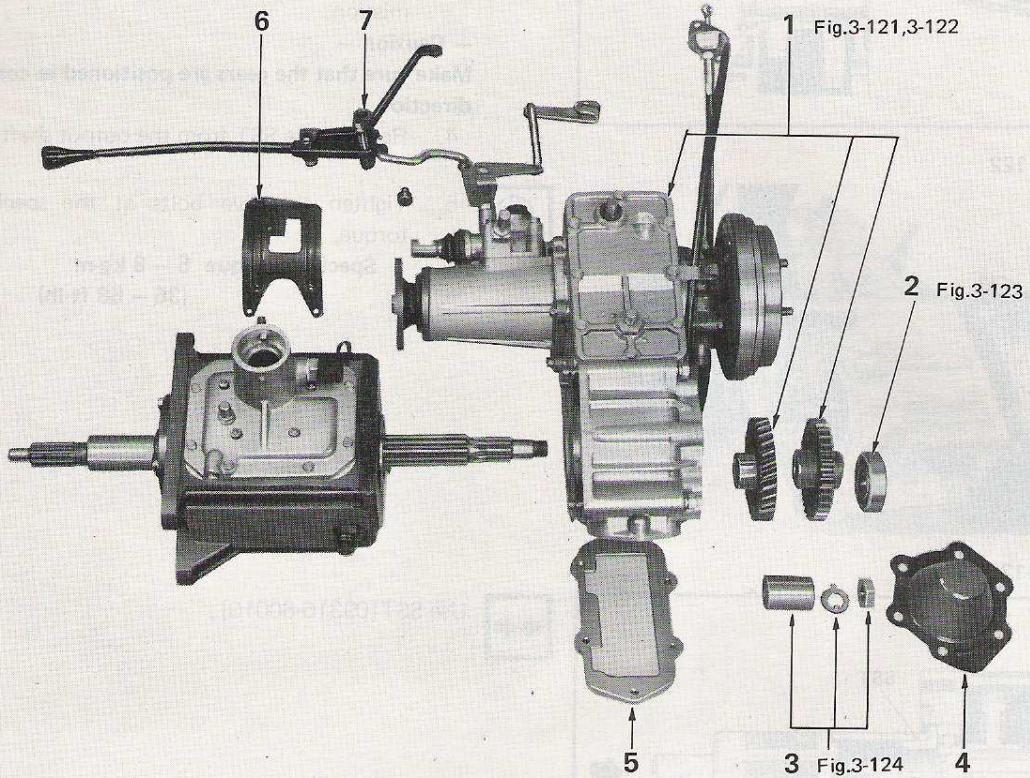Fig. 3-120

1 Transfer Assy. & Gears

2 Bearing

3 Spacer, Washer, & Nut


4 Case Cover No.2

5 Power Take-Off Assy. Or Cover

6 Shaft Lever Guide (For Direct Drive Only)

7 Levers & Rods

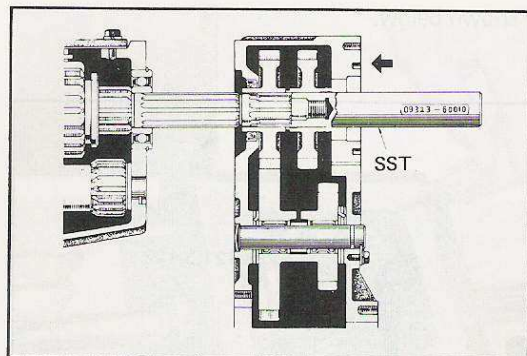Fig. 3-121




1. Mount SST[09323-60010] to the output shaft.
2. While supporting the gears with one hand, install the transfer assembly together with the gears to the SST.
3. Align the splines of the output shaft and gears, and install the transfer to the transmission.

– Caution –

Make sure that the gears are positioned in correct direction.

4. Remove the SST from the output shaft.

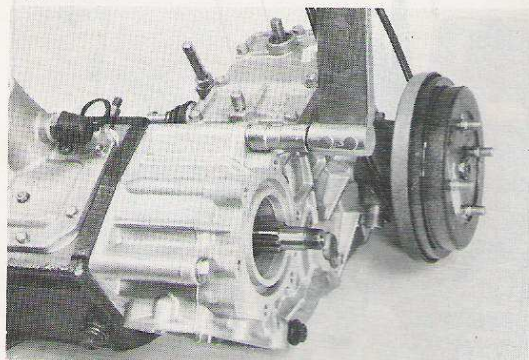
Fig. 3-122



5. Tighten the five bolts at the specified torque.


**Specified torque 5 – 8 kg-m
(36 – 58 ft-lb)**

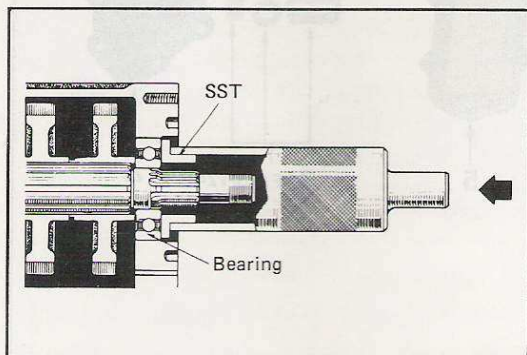Fig. 3-123



Use SST[09316-60010].

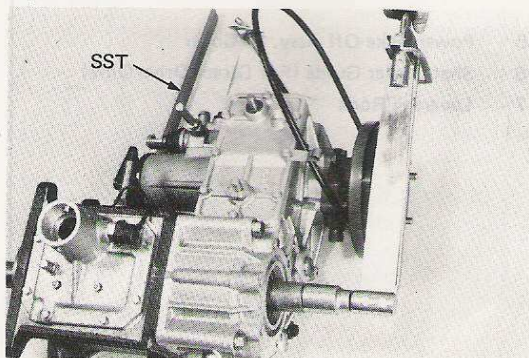Fig. 3-124



Using SST[09330-00020] to keep the transfer output shaft from turning, tighten the nut.

**Specified torque 14 – 15 kg-m
(101 – 109 ft-lb)**

Secure the nut with lock washer.

– Note –

Perform the work at front drive condition.

Install The Transmission With Transfer To The Vehicle.

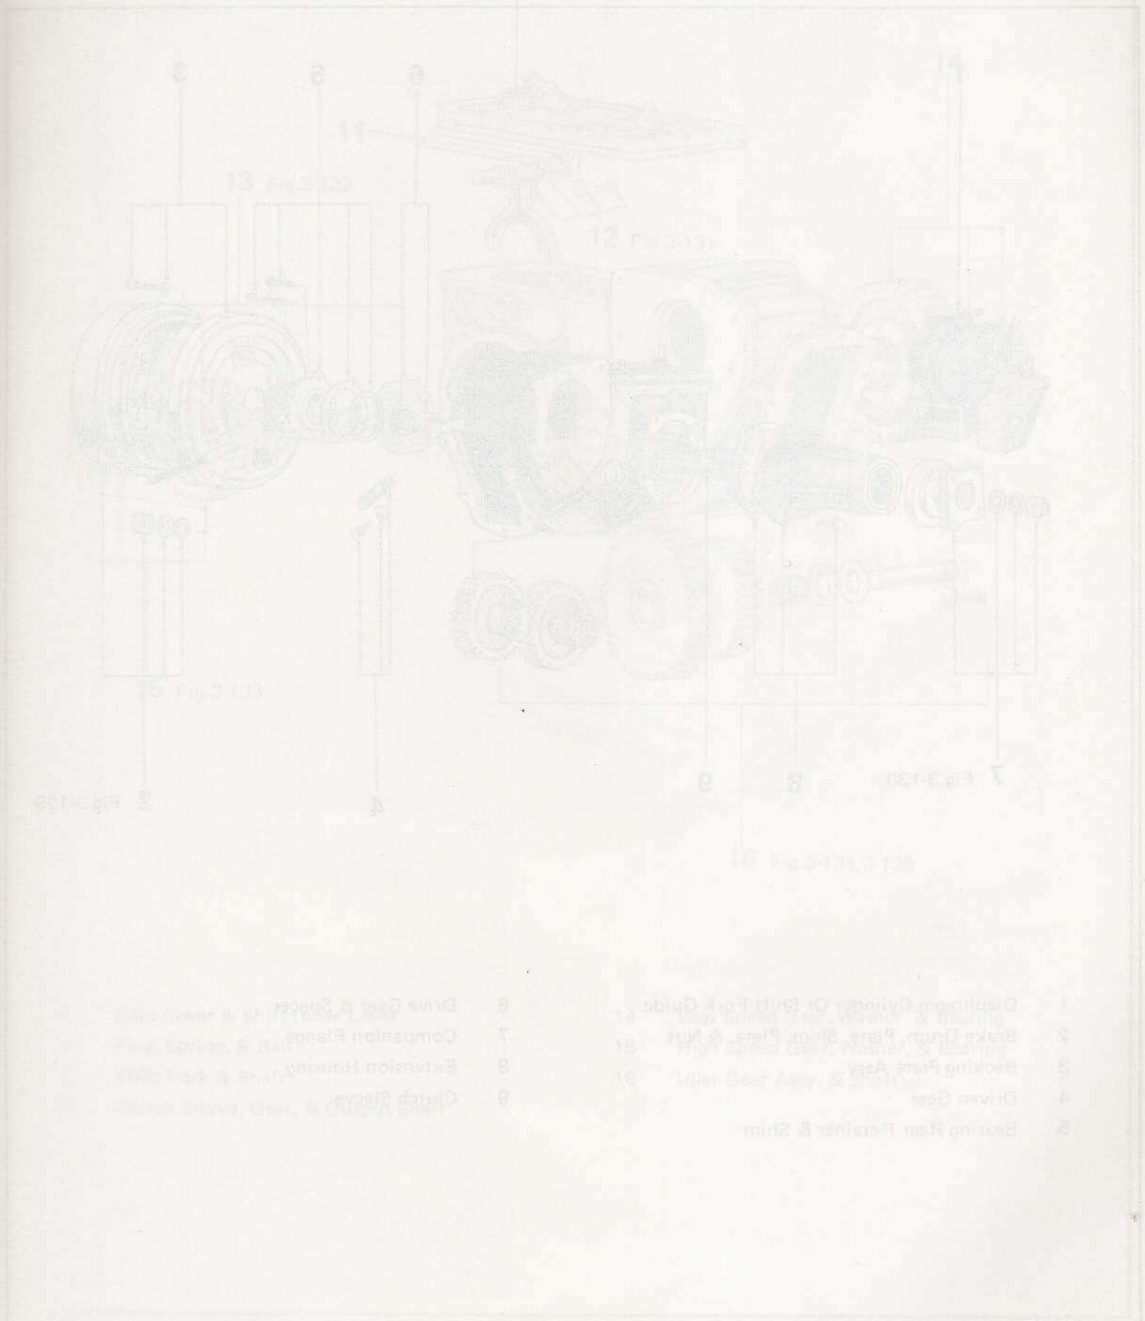
Refer to the section on 4-Speed Transmission.

Fill in the coolant, and the transmission and transfer oils.

Transmission oil capacity 1.7 liter (1.8 US.qt.,1.5 Imp.qt.)

Transfer oil capacity 1.7 liter (1.8 US.qt.,1.5 Imp.qt.)

Type SAE 90,API GL-4



TRANSFER


REMOVAL

Refer to the section on 4-Speed Transmission.

DISASSEMBLY

Disassemble in the order numbered in the following illustrations.

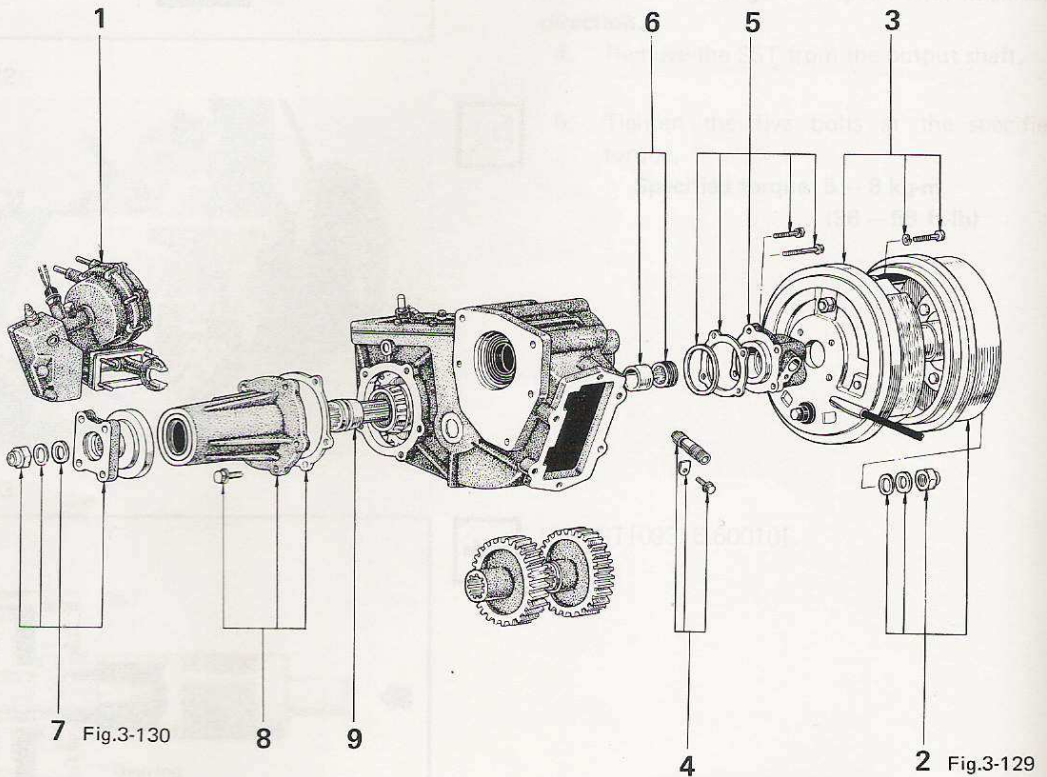
Fig. 3-126



- 1 Diaphragm Cylinder Or Shift Fork Guide
- 2 Brake Drum, Plate, Shim, Plate, & Nut
- 3 Backing Plate Assy.
- 4 Driven Gear
- 5 Bearing Rear Retainer & Shim

- 6 Drive Gear & Spacer
- 7 Companion Flange
- 8 Extension Housing
- 9 Clutch Sleeve

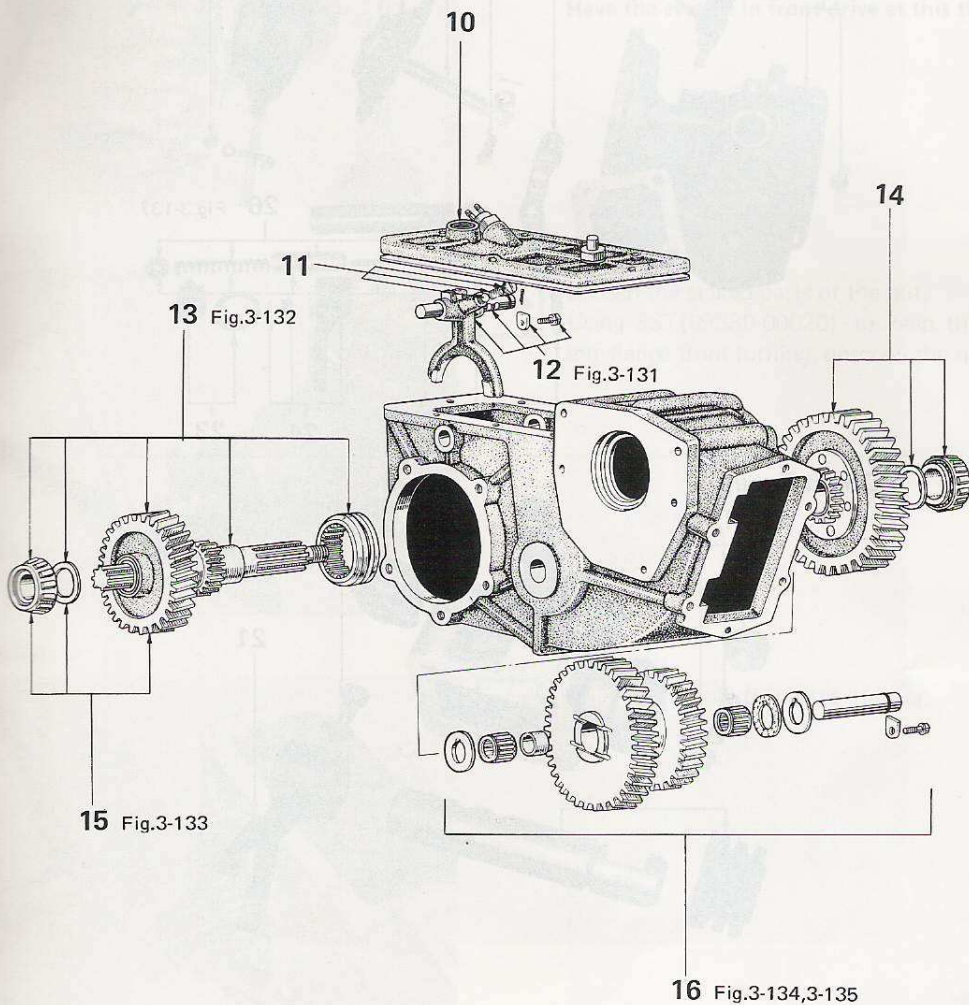Fig. 3-127



- 10 Case Cover & Shift Inner Lever
- 11 Plug, Spring, & Ball
- 12 Shift Fork & Shaft
- 13 Clutch Sleeve, Gear, & Output Shaft

- 14 Low Speed Gear, Washer, & Bearing
- 15 High Speed Gear, Washer, & Bearing
- 16 Idler Gear Assy. & Shaft

Fig. 3-128


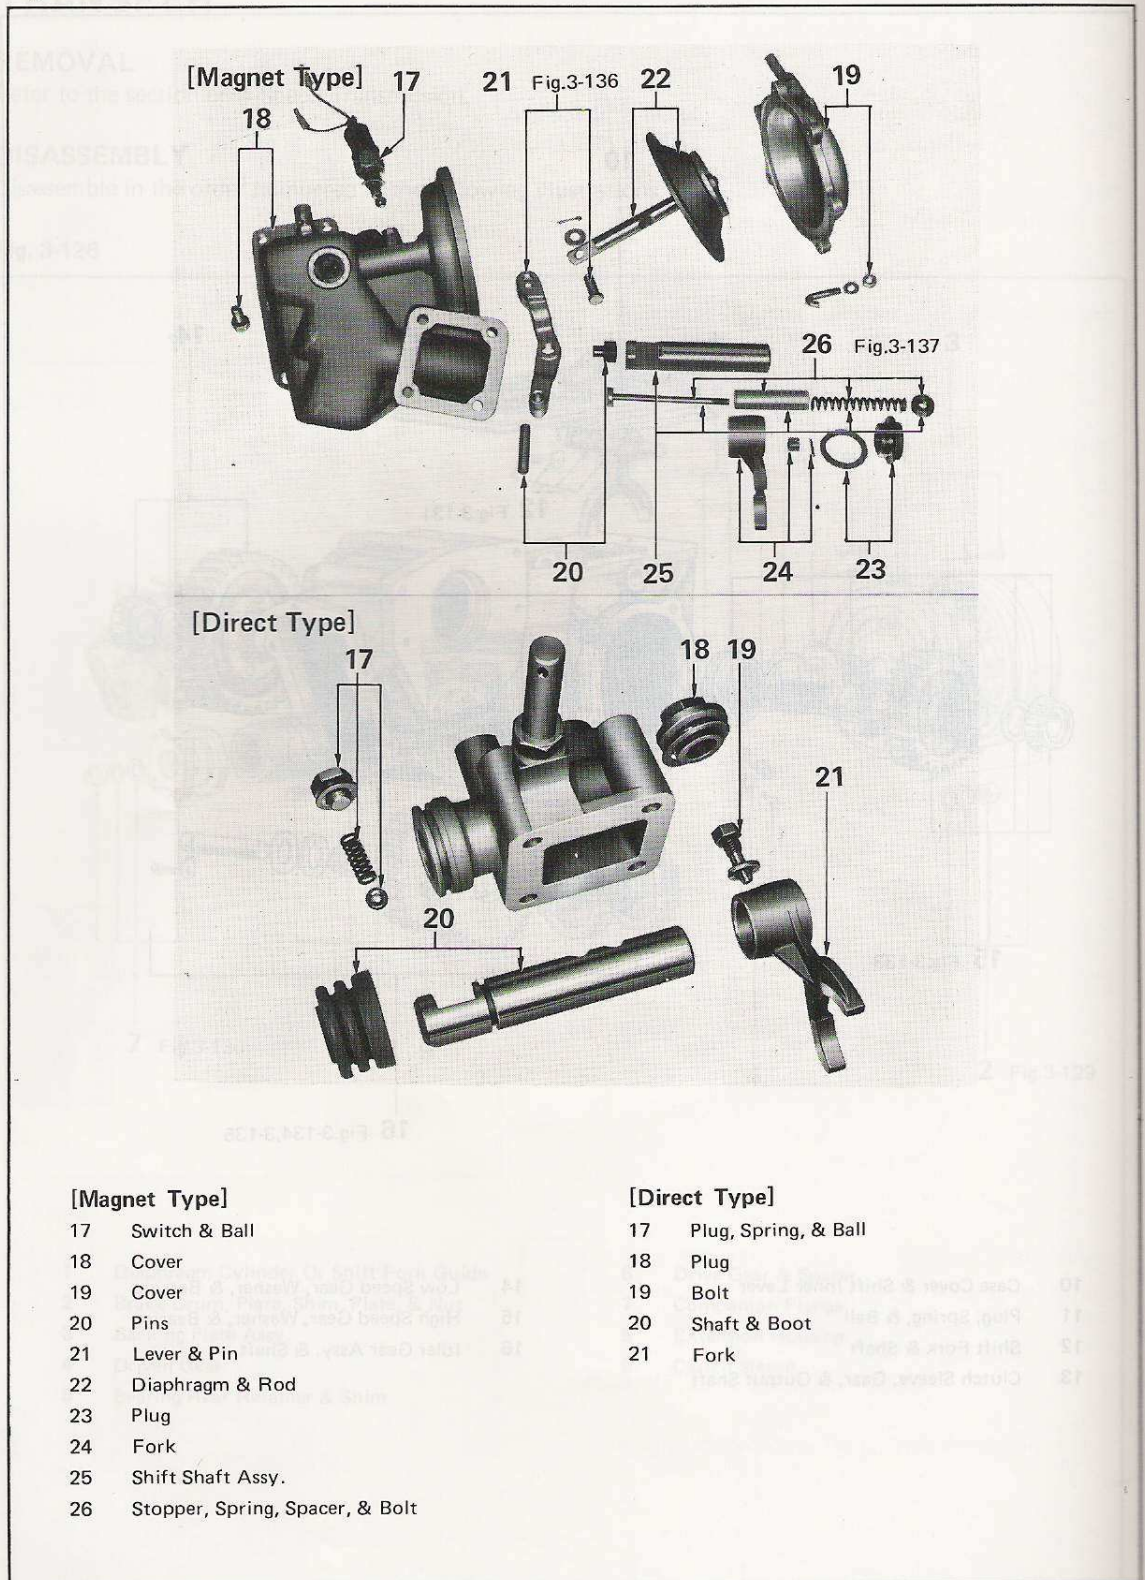


Fig. 3-129

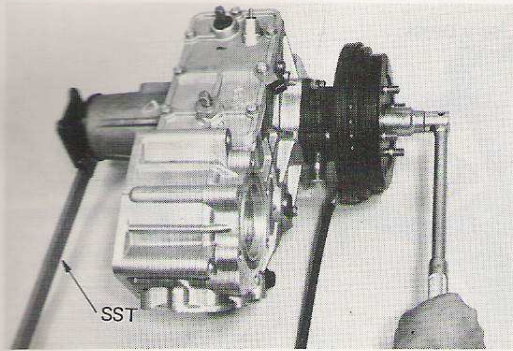


Loosen the staked parts of the nut.
Using SST[09330-00020] to keep the companion flange from turning, unscrew the nut.

— Note —


Have the system in front drive at this time.

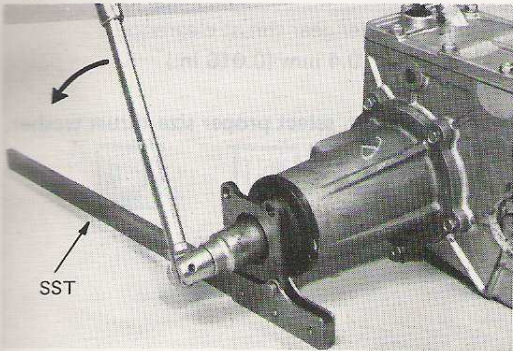Fig. 3-130




Loosen the staked parts of the nut.
Using SST[09330-00020] to keep the companion flange from turning, unscrew the nut.

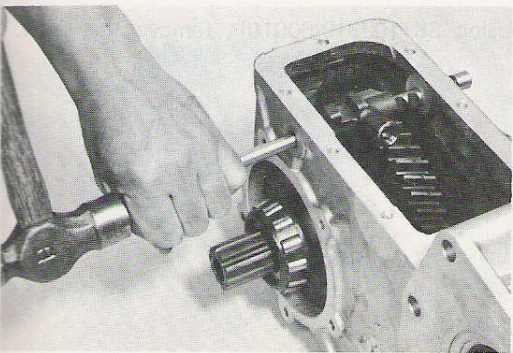Fig. 3-131



Drive out the shaft toward the rear.

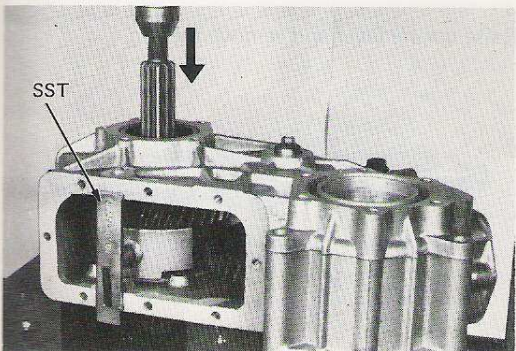
Fig. 3-132



Set the SST[09318-60011] between the low speed gear and case front side.


Force out the output shaft toward the front with a press.

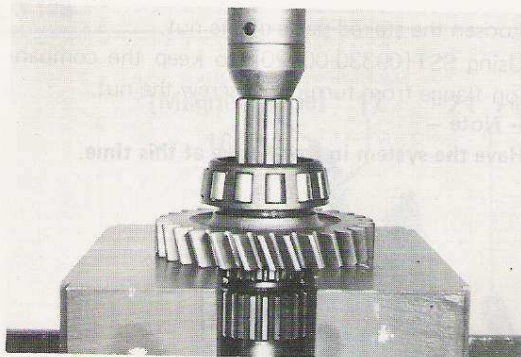Fig. 3-133



Use a press.

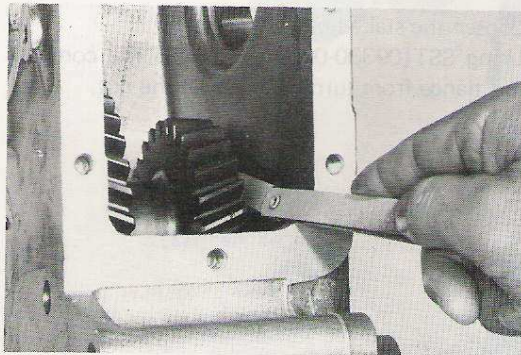Fig. 3-134




Measure the idler gear thrust clearance.

Limit 0.4 mm (0.016 in.)

— Note —


If over the limit, select proper size thrust washer.
(Refer to Fig.3-156)

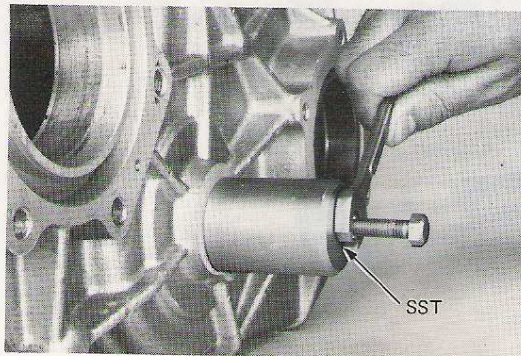Fig. 3-135




Using SST[09319-60010], remove the shaft.

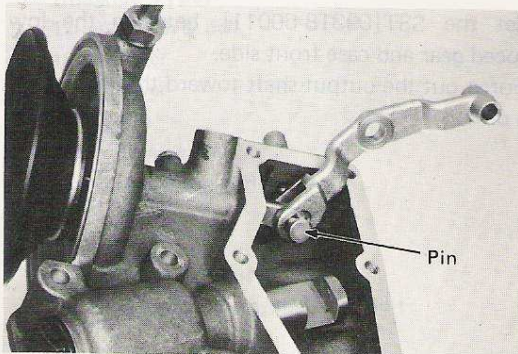Fig. 3-136



Raise up the lever and remove the pin.

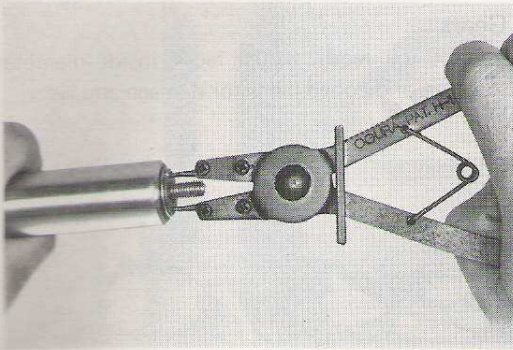Fig. 3-137



Remove the stopper, and take out the spring, spacer, and bolt.

Fig. 3-138


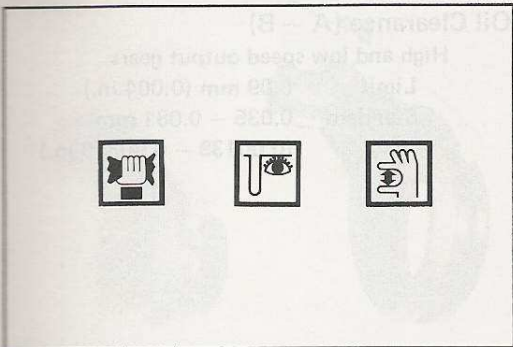



Fig. 3-139

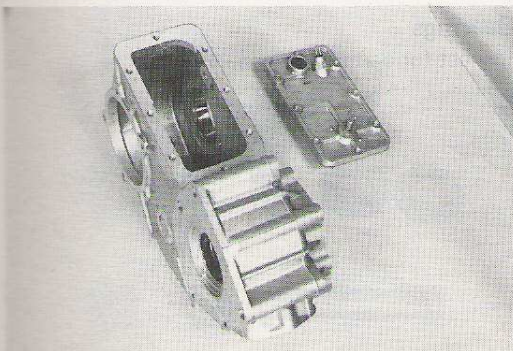

Transfer Case And Cover

Inspect the case and cover for cracks and damage. Inspect the oil seals and bushings for wear and damage.

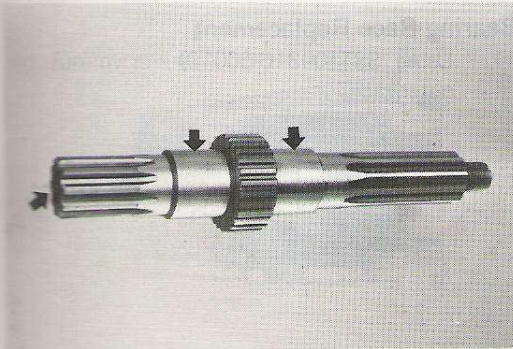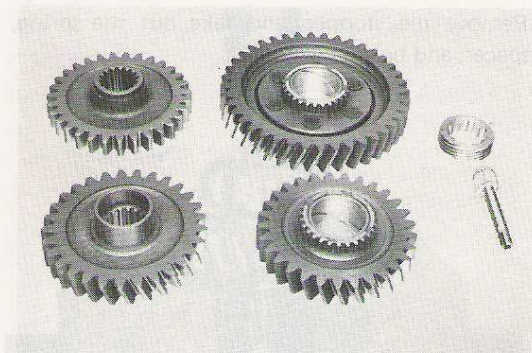
Fig. 3-140



Output Shaft

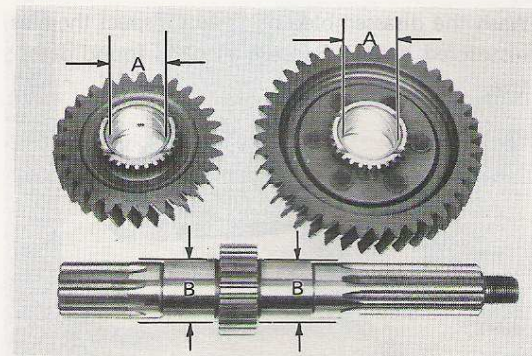
Inspect the parts indicated by arrows for wear and damage.

Fig. 3-141

**Gears**

Inspect the teeth, thrust faces, inside diameter surfaces, and coned parts for damage and wear.

Fig. 3-142

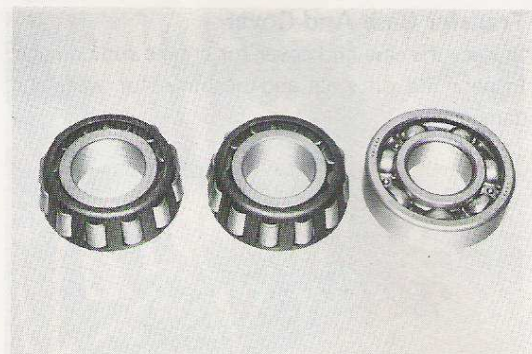
**Oil Clearance (A - B)**

High and low speed output gears

Limit 0.09 mm (0.004 in.)

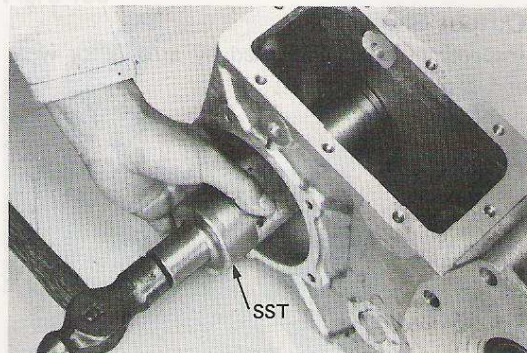
Standard 0.035 - 0.081 mm
(0.00138 - 0.00319 in.)

Fig. 3-143

**Bearings**


Inspect for damage and wear.

Fig. 3-144

**Bearing Race Replacement**


1. Using SST[09316-60010], drive out the outer race.

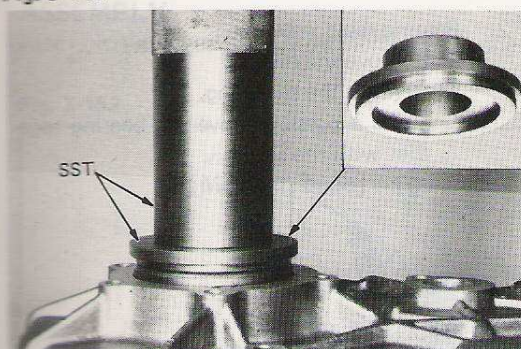Fig. 3-145



2. Using SST [09316-60010], drive in the new outer race.

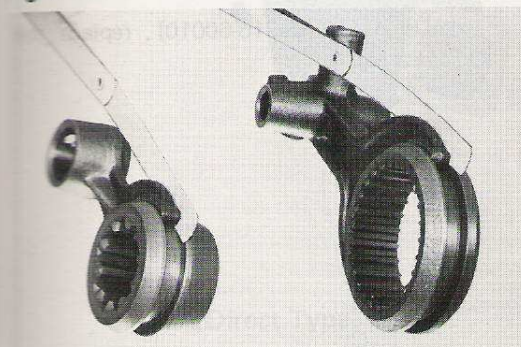Fig. 3-146



Sleeves And Forks


Check the clearance between the sleeves and the shift forks.

High-low clearance

Front drive clearance

Limit 1.0 mm (0.04 in.)

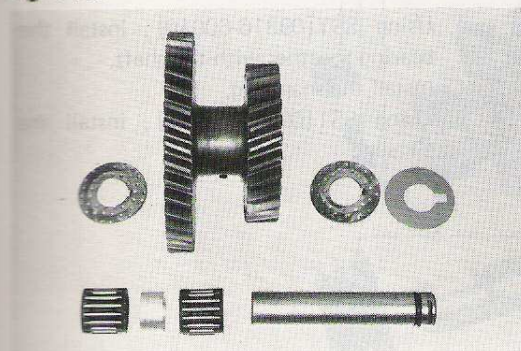
Fig. 3-147



Idler Gear Assembly

Inspect for wear and damage.

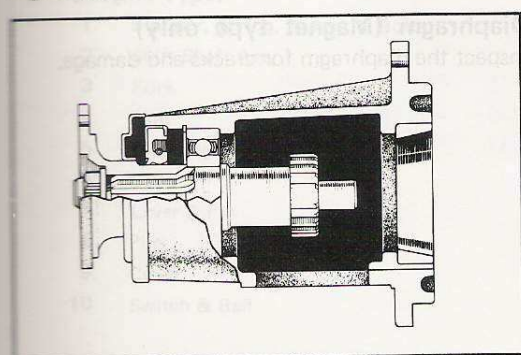
Fig. 3-148



Extension Housing


1. Inspect the shaft, bearing, and oil seal for wear and damage.

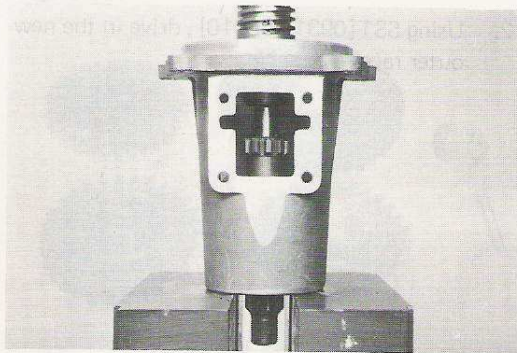Fig. 3-149




2. Bearing replacement
 - a. Remove the oil seal.
 - b. Remove the snap ring.
 - c. Using a press, remove the bearing together with the shaft.

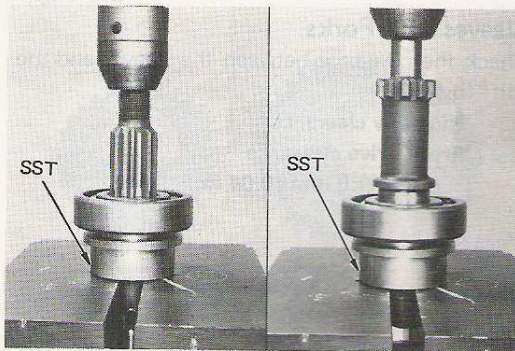Fig. 3-150




- d. Using SST[09316-60010], replace the bearing.

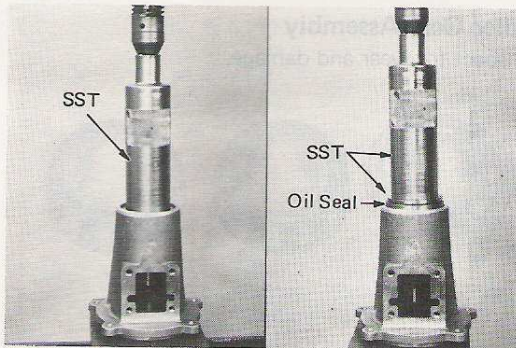Fig. 3-151



- e. Using SST[09316-60010], install the bearing together with the shaft.
- f. Install the snap ring.
- g. Using SST[09316-60010], install the oil seal.

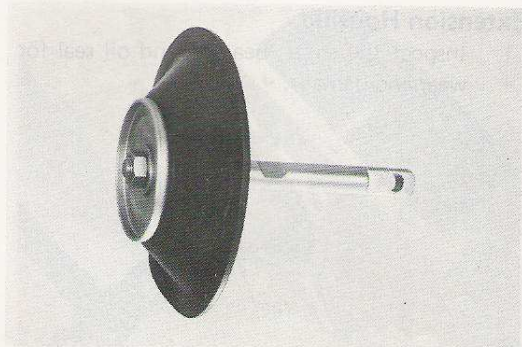Fig. 3-152




Diaphragm (Magnet type only)

Inspect the diaphragm for cracks and damage.

ASSEMBLY

Assemble the parts in the order numbered in the following illustrations.

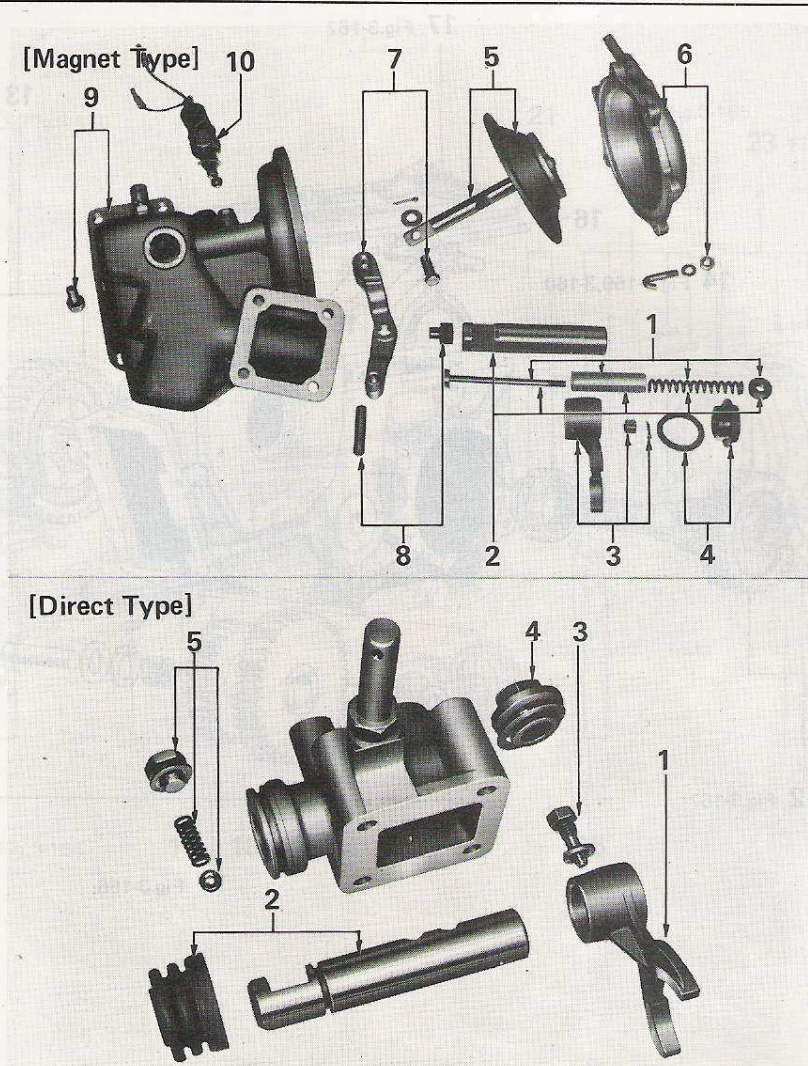Fig. 3-153

**[Magnet Type]**

- 1 Stopper, Spring, Spacer, & Bolt
- 2 Shift Shaft Assy.
- 3 Fork
- 4 Plug
- 5 Diaphragm & Rod
- 6 Cover
- 7 Lever & Pin
- 8 Pins
- 9 Cover
- 10 Switch & Ball

[Direct Drive Type]

- 1 Fork
- 2 Shaft & Boot
- 3 Bolt
- 4 Plug
- 5 Ball, Spring, & Plug
- 6 _____
- 7 _____
- 8 _____
- 9 _____
- 10 _____

Fig. 3-154


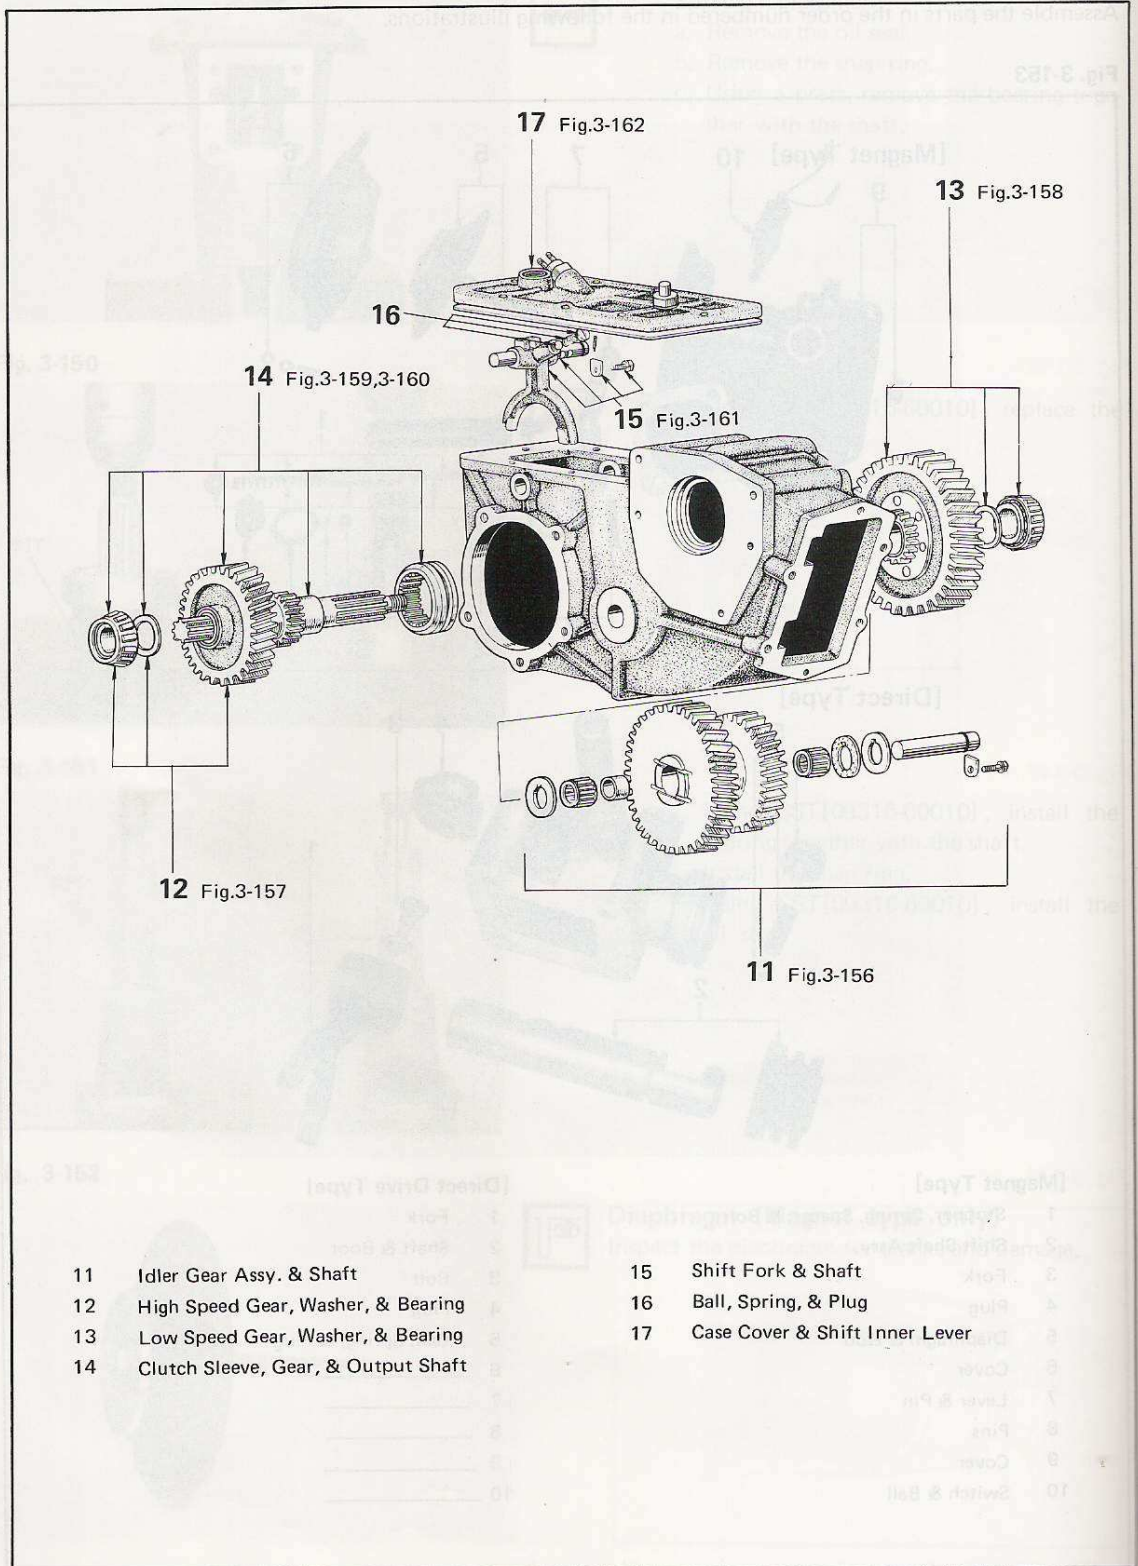



Fig. 3-155

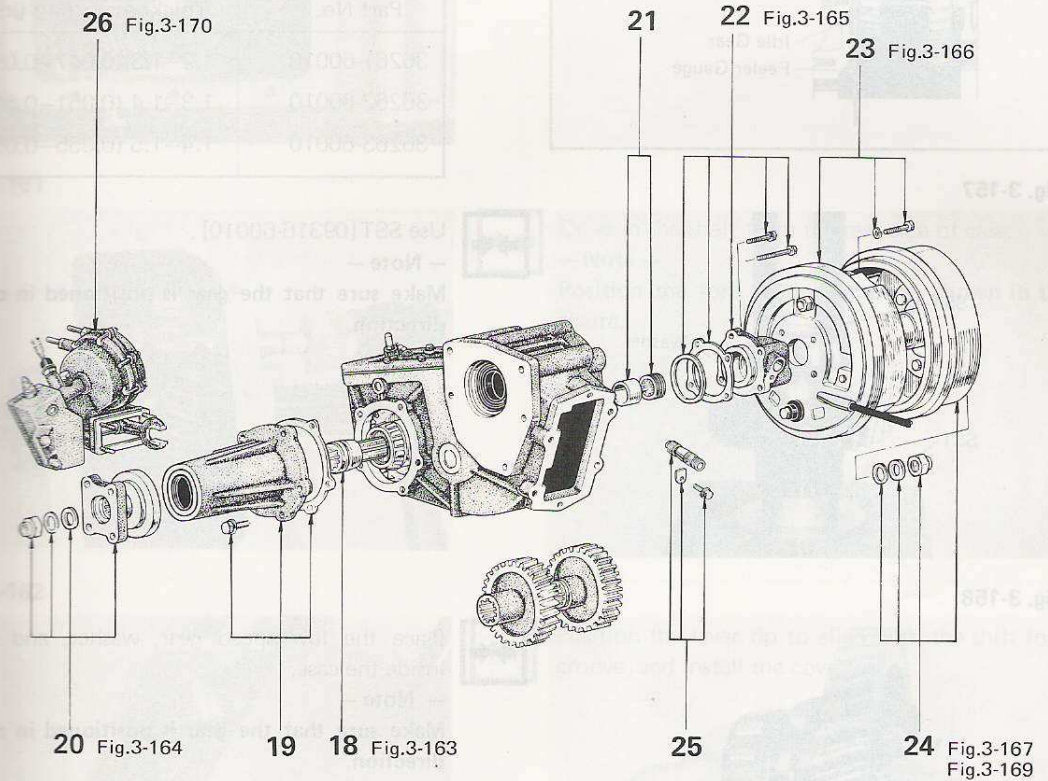

- 18 Clutch Sleeve
- 19 Extension Housing Assy.
- 20 Companion Flange
- 21 Spacer & Drive Gear
- 22 Bearing Retainer & Shim

- 23 Backing Plate Assy.
- 24 Brake Drum, Plate, & Nut
- 25 Drive Gear
- 26 Diaphragm Cylinder Or Shift Fork Guide

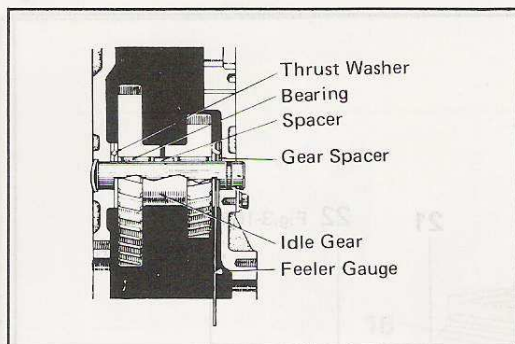Fig. 3-156



Install the idler gear assembly and shaft as illustrated.




Thrust clearance

Standard 0.1 – 0.3 mm (0.004 – 0.012 in.)

Spacer Thickness

Part No.	Thickness mm (in.)
36261-60010	1.2–1.3 (0.047–0.051)
36262-60010	1.3–1.4 (0.051–0.055)
36263-60010	1.4–1.5 (0.055–0.059)

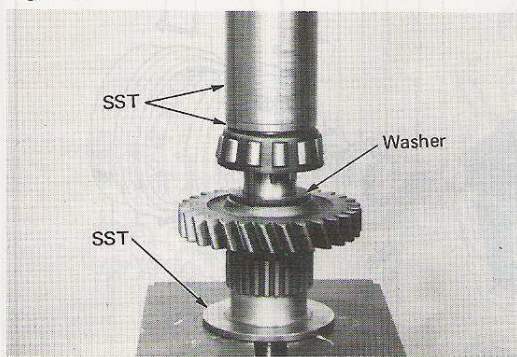Fig. 3-157




Use SST [09316-60010].

— Note —

Make sure that the gear is positioned in correct direction.

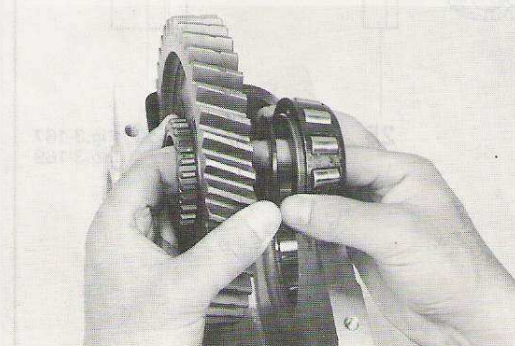Fig. 3-158




Place the low speed gear, washer, and spacer inside the case.

— Note —

Make sure that the gear is positioned in correct direction.

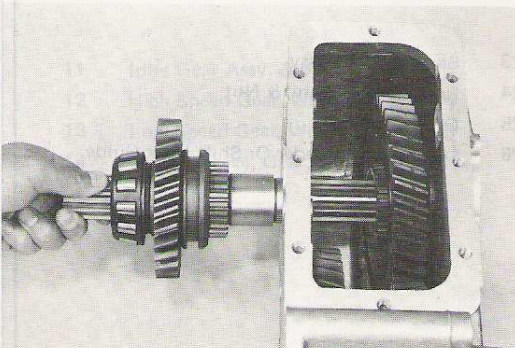
Fig. 3-159



Install the clutch sleeve to the output shaft.


Install the output shaft assembly to the case after inserting it through the low speed gear, washer, and bearing.

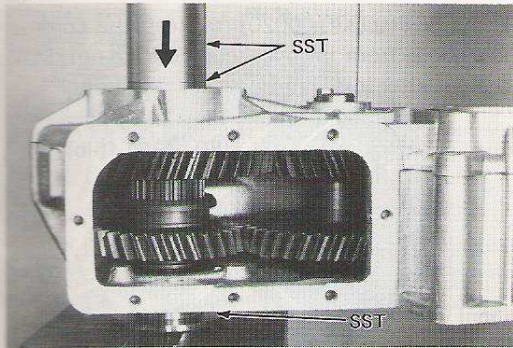Fig. 3-160



Using SST[09316-60010], fit the bearing to the output shaft.

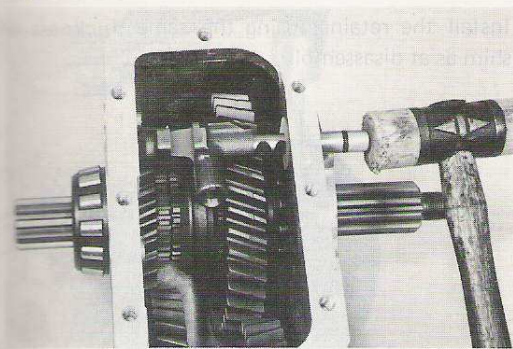Fig. 3-161




Drive in the shaft from the rear side of case.

— Note —


Position the fork in the direction shown in the figure.

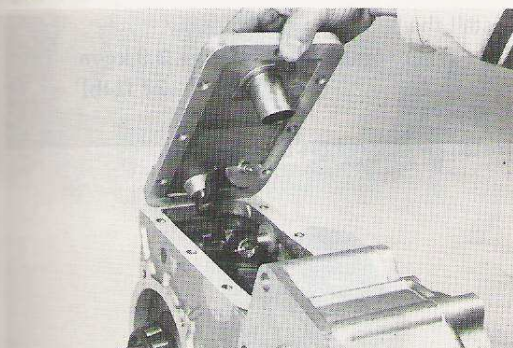Fig. 3-162



Position the lever tip to align with the shift fork groove, and install the cover.

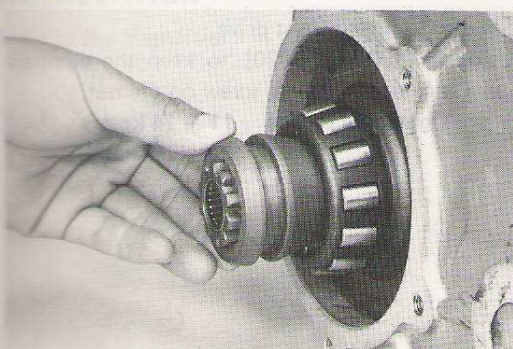Fig. 3-163




Install the clutch sleeve to the output shaft.

— Note —

Make sure that the clutch sleeve is positioned in the correct direction.

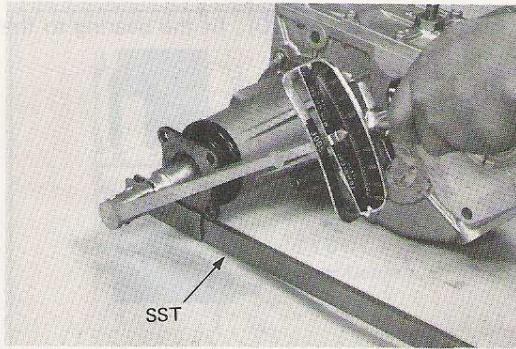
Fig. 3-164



Using SST[09330-00020] to keep the companion flange from turning, screw on the nut. Stake the nut after installation.


Tightening torque 11 – 14 kg-m
(80 – 101 ft-lb)

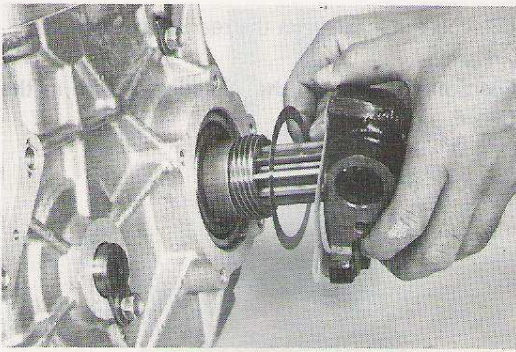Fig. 3-165



Install the retainer using the same thickness of shim as at disassembly.

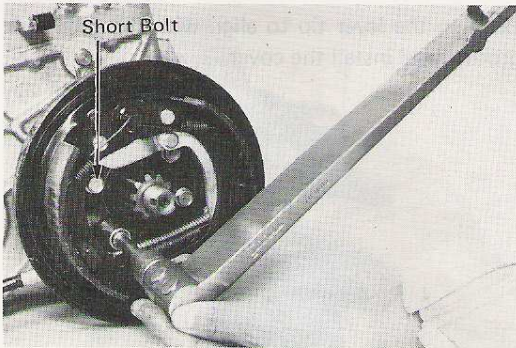Fig. 3-166




Install the backing plate assembly.

Tightening torque 2.0 – 3.9 kg-m
(14 – 22 ft-lb)

– Note –

Install the short bolt at upper left.

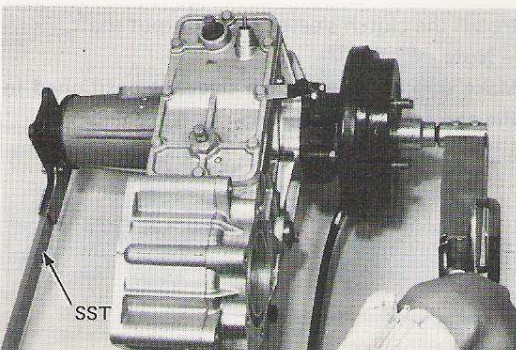Fig. 3-167




Set the system to front drive.

Using SST[09330-00020] to keep the companion flange from turning, screw on the nut.

Tightening torque 11 – 14 kg-m
(80 – 101 ft-lb)

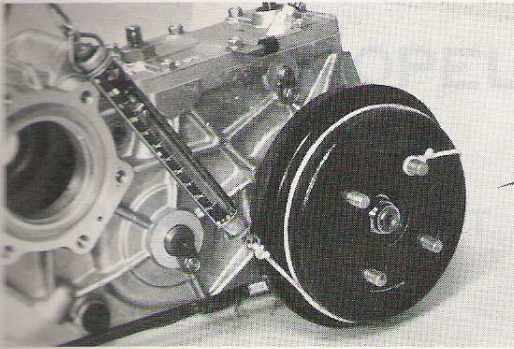Fig. 3-168



Disengage the front drive.


Using spring scale, measure the output shaft bearing preload.

Standard preloads

Bearing replaced 1.2 – 4.1 kg
(2.6 – 9.0 lbs.)

Old bearing reused More than
0.47 kg (1.04 lbs.)

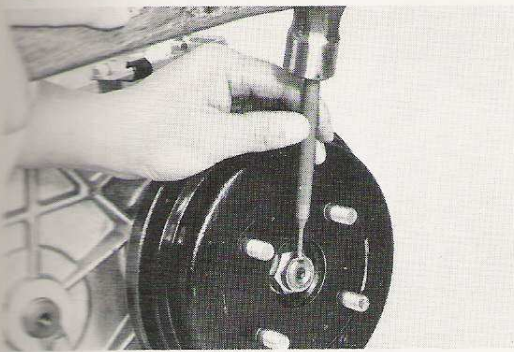Fig. 3-169




If the preload is up to the standard value, stake the nut to lock it in place: If not up to the standard value, adjust by selecting proper thickness shims.

Adjust Shim Thickness

Part No.	Thickness mm (in.)
90564-64017	0.10 (0.0039)
90564-64023	0.15 (0.0059)
90564-64024	0.20 (0.0079)
90564-64025	0.25 (0.0098)

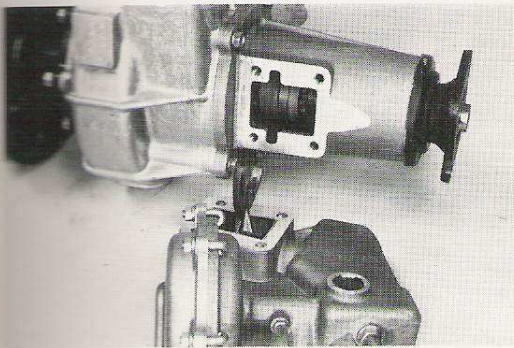Fig. 3-170



Insert the fork properly into the sleeve.

INSTALLATION

Refer to the instructions in the 4-Speed and 3-Speed Transmission Sections.

PROPELLER SHAFT

PROPELLER SHAFT 4-2

page

4


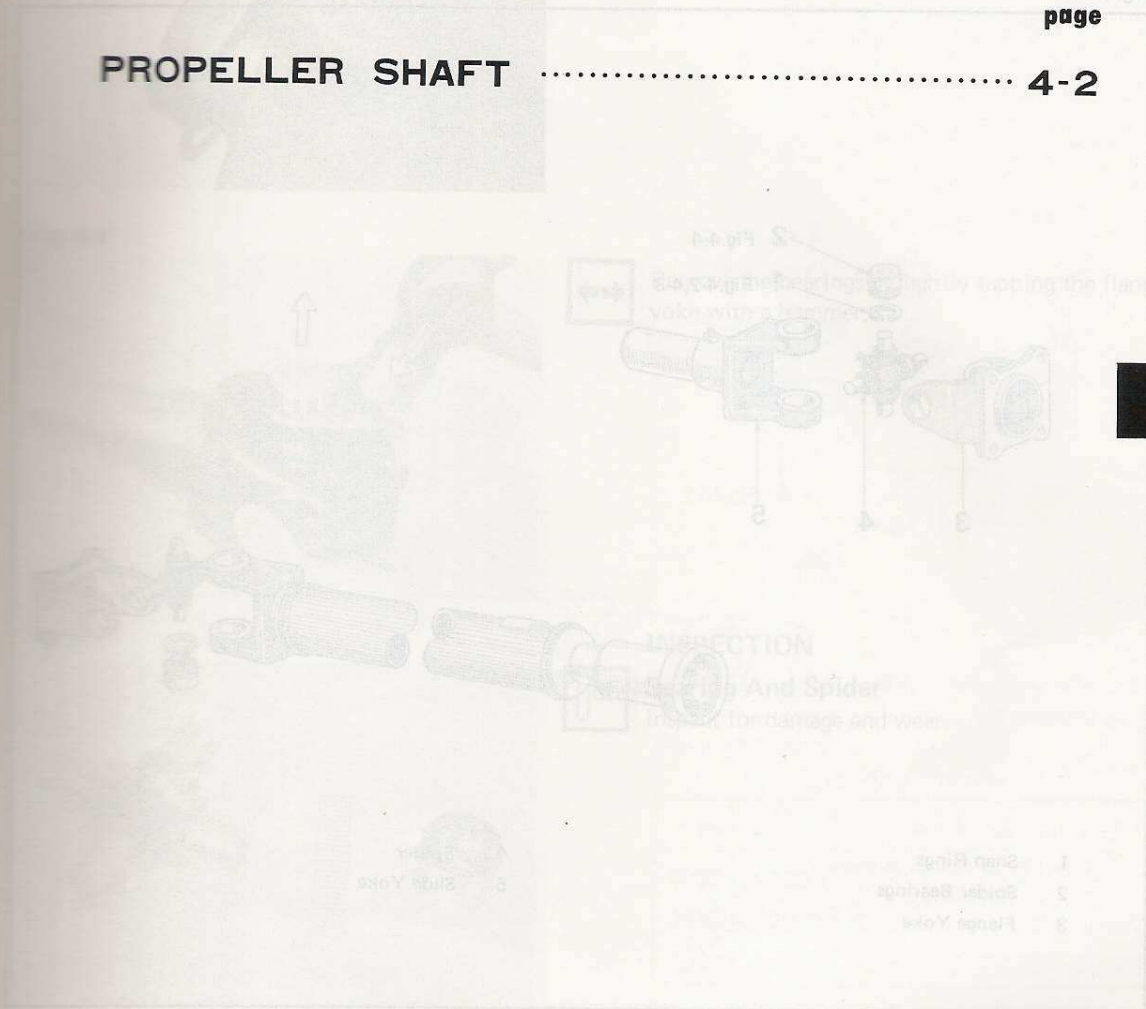


Fig. 4-2

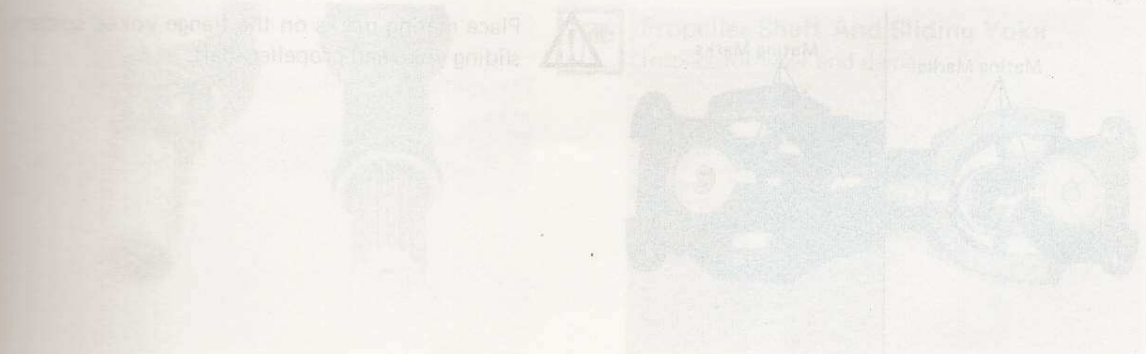

PROPELLER SHAFT

DISASSEMBLY

Disassemble the parts in the order numbered below.

Fig.4-1



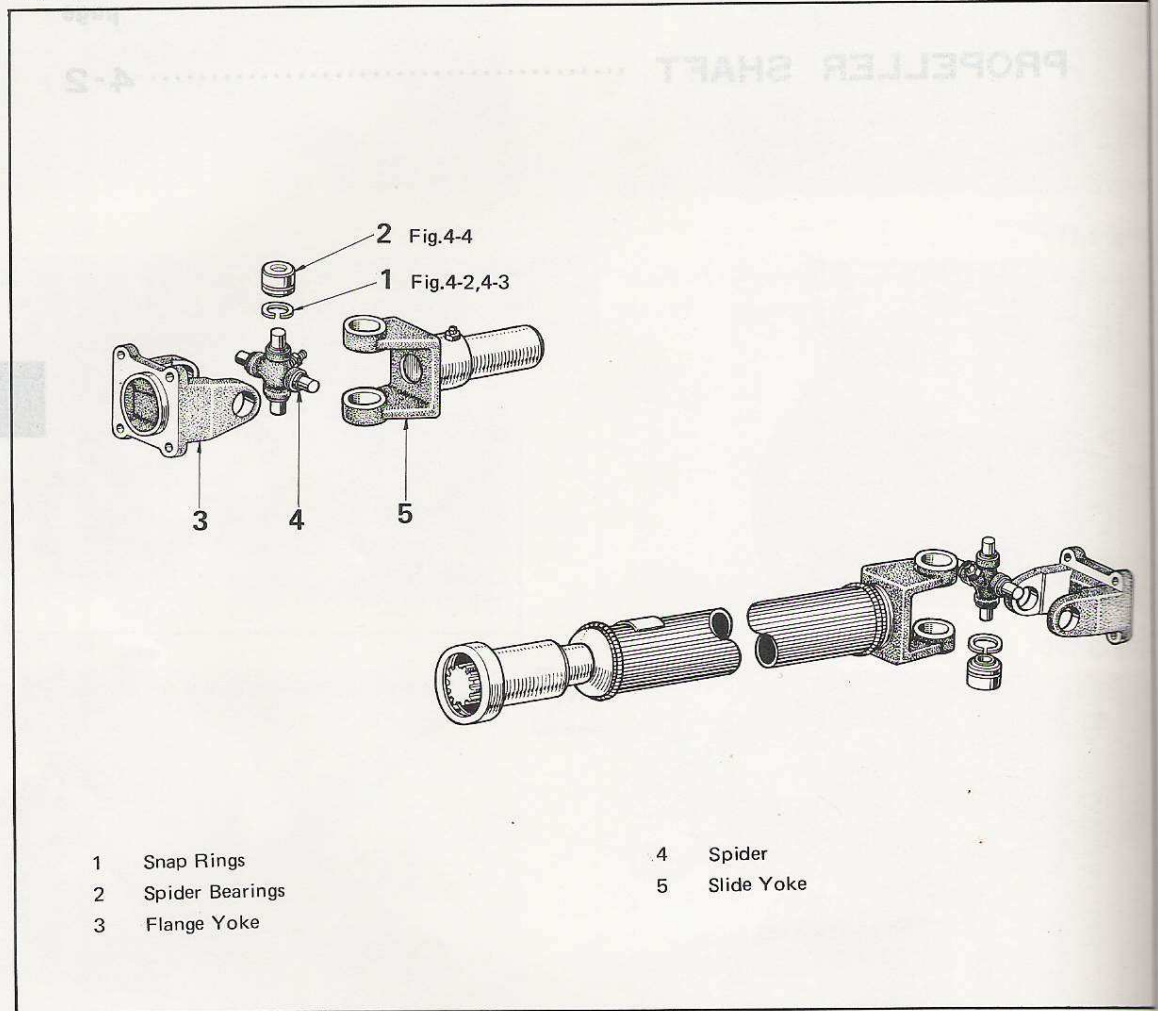


Fig. 4-2

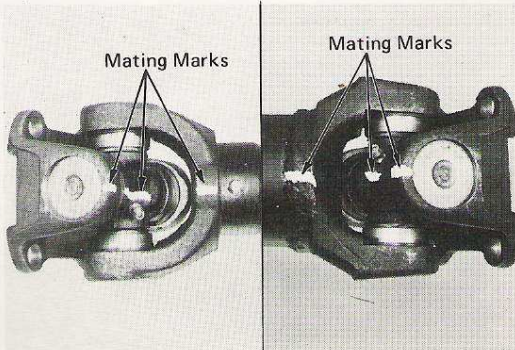


Place mating marks on the flange yokes, spiders, sliding yoke and propeller shaft.

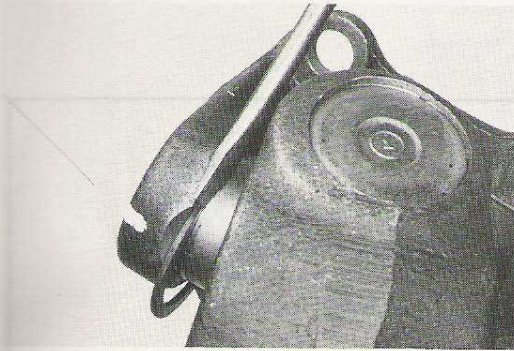Fig. 4-3




Remove the snap ring.

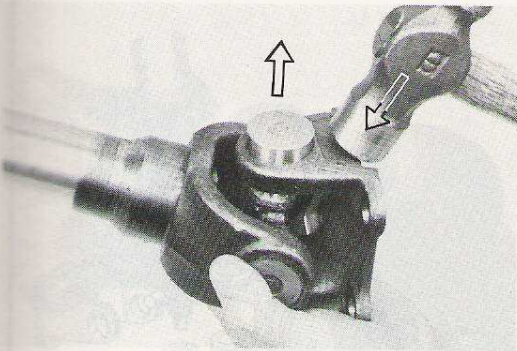Fig. 4-4



Remove the bearings by lightly tapping the flange yoke with a hammer.

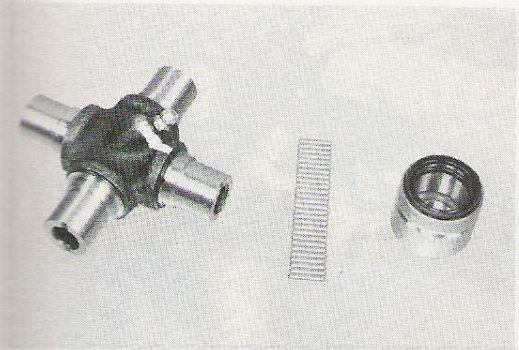Fig. 4-5




INSPECTION



Bearing And Spider

Inspect for damage and wear.

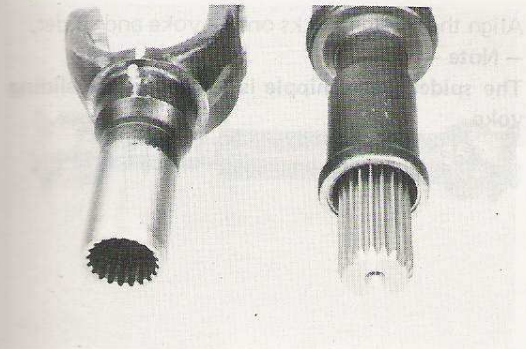Fig. 4-6





Propeller Shaft And Sliding Yoke

Inspect for wear and damage.

ASSEMBLY

Assemble the parts in the order numbered below.

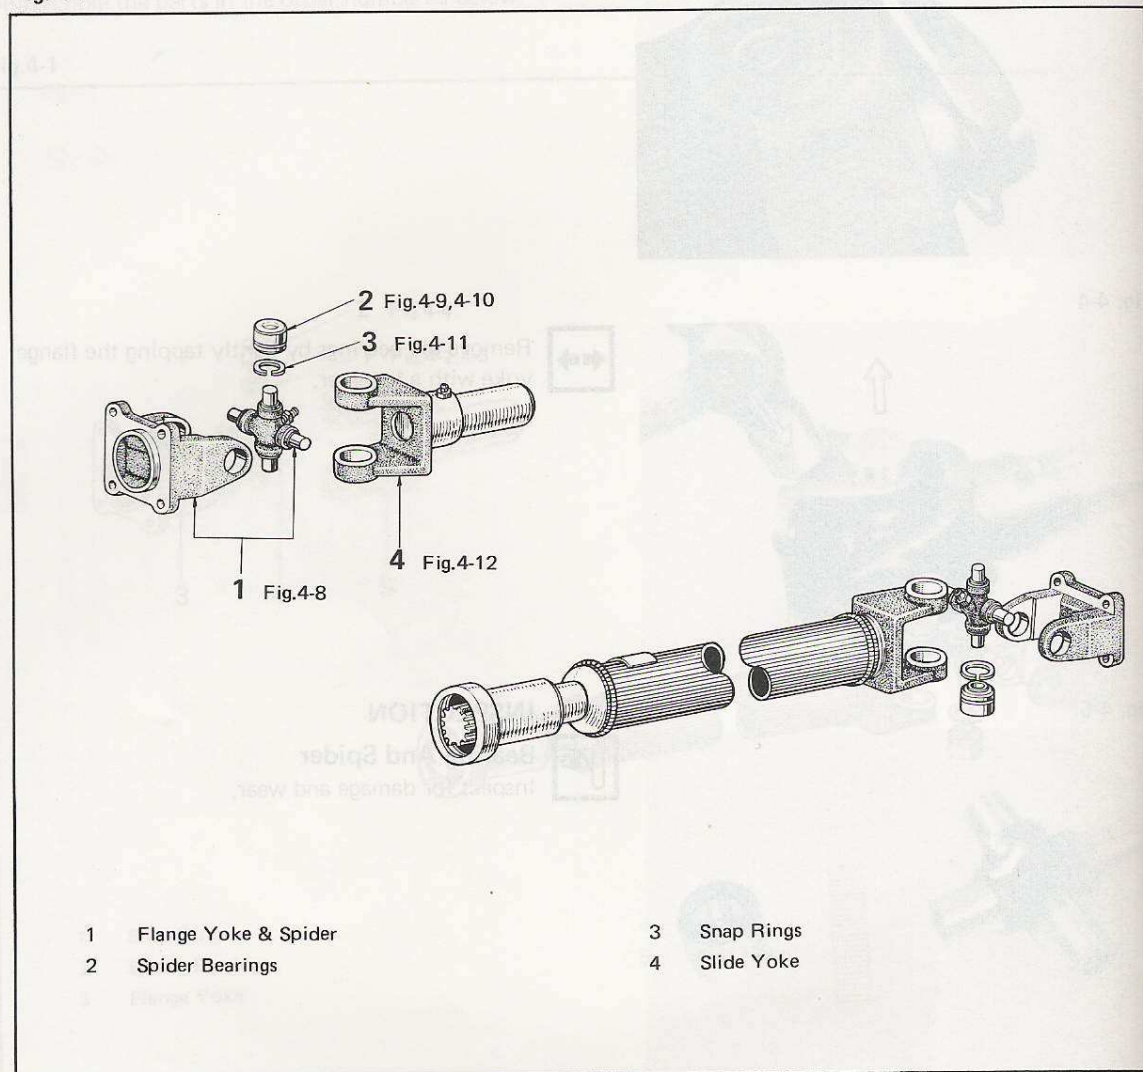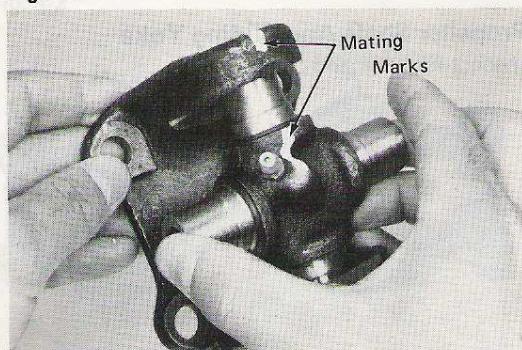Fig. 4-7**Fig. 4-8**

Align the mating marks on the yoke and spider.

— Note —


The spider grease nipple is located at the sliding yoke.

Fig. 4-9




Fit in the bearing rollers by coating them with grease.

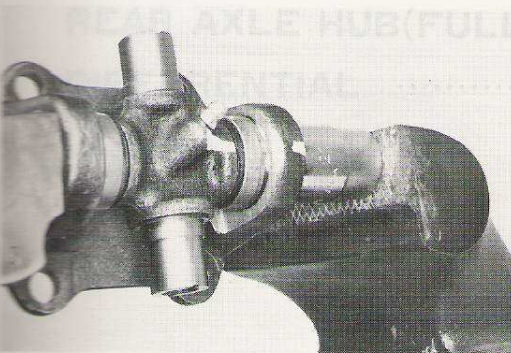Fig. 4-10



Press in the bearing.

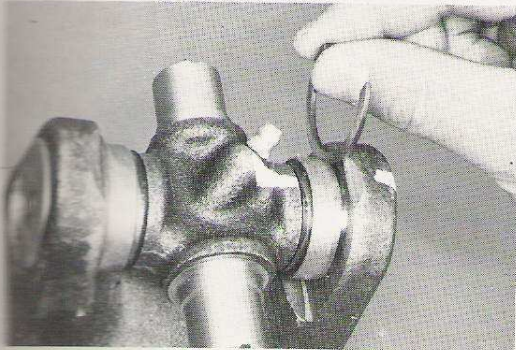Fig. 4-11



Make the assembly with a snap ring selected to provide the spider with a play not exceeding 0.05 mm (0.002 in.)

Snap Ring Thickness

Part No.	Thickness mm (in.)
90520-29286	1.48–1.53 (0.0583–0.0602)
90520-29287	1.53–1.58 (0.0602–0.0622)
90520-29288	1.58–1.63 (0.0622–0.0642)

Fig. 4-12



Assemble the sliding yoke, bearing, and propeller shaft with their mating marks aligned.

— Note —

Have the yoke and grease nipple positioned as shown in figure.

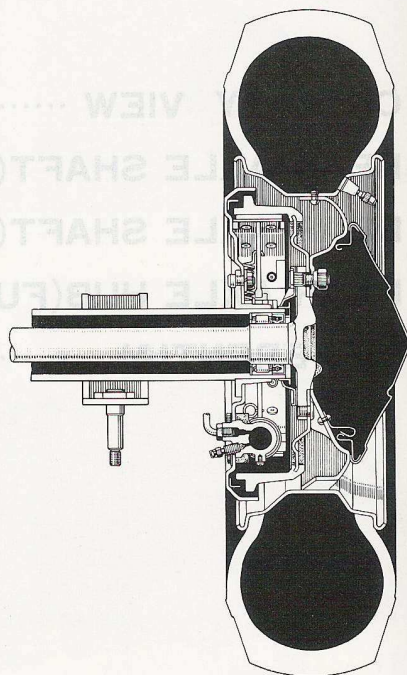
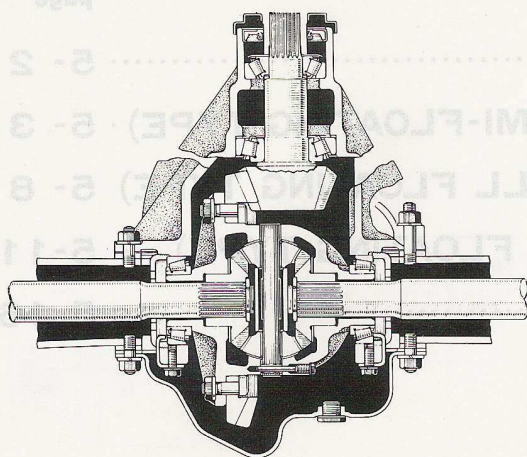
REAR AXLE

	page
CUTAWAY VIEW	5- 2
REAR AXLE SHAFT(SEMI-FLOATING TYPE) ·	5- 3
REAR AXLE SHAFT(FULL FLOATING TYPE)	5- 8
REAR AXLE HUB(FULL FLOATING TYPE) ...	5-11
DIFFERENTIAL	5-16


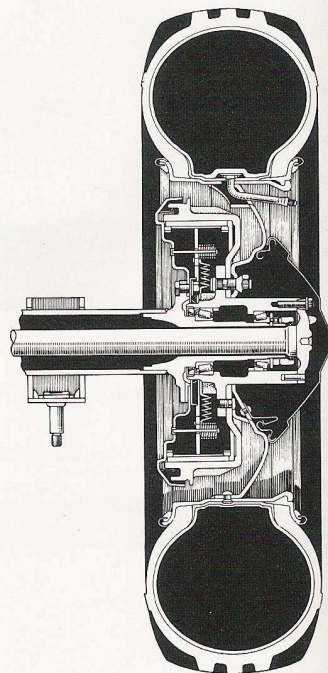
CUTAWAY VIEW

Fig. 5-1

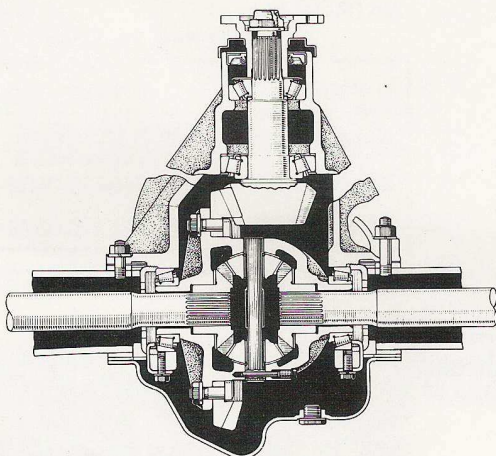Semi-Floating Type



Full Floating Type




REAR AXLE SHAFT(SEMI-FLOATING TYPE)

REMOVAL

Drain out the oil and remove the parts in the order numbered below.

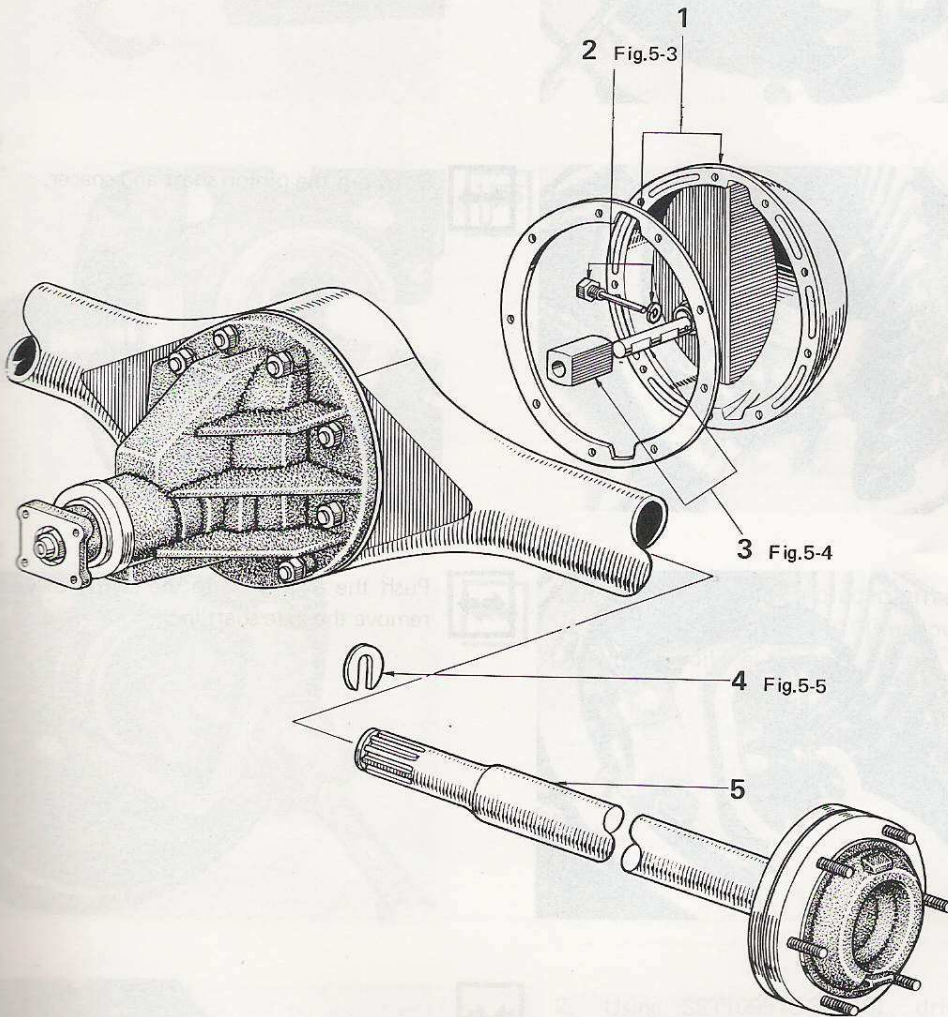
Fig. 5-2



- 1 Housing Cover & Gasket
- 2 Pinion Shaft Pin
- 3 Pinion Shaft & Spacer


- 4 Axle Shaft Lock
- 5 Axle Shaft

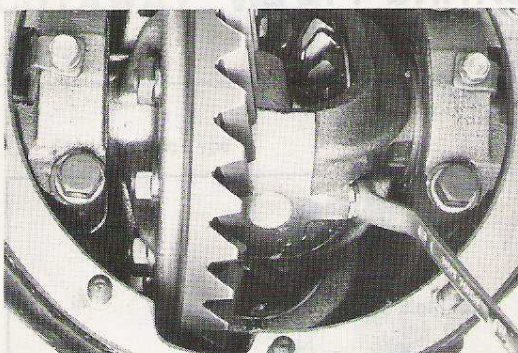Fig. 5-3




Remove the pinion shaft pin.

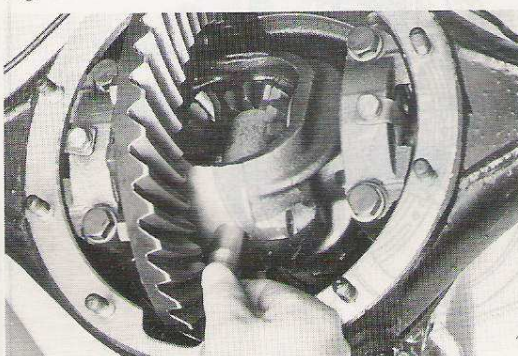Fig. 5-4



Draw out the pinion shaft and spacer.

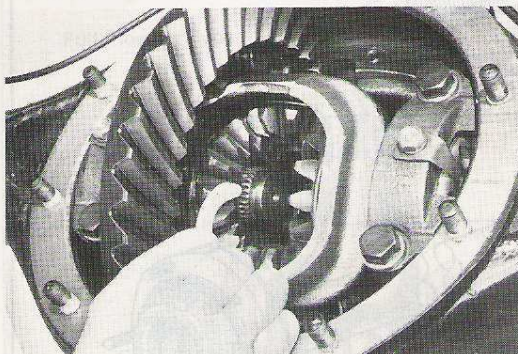Fig. 5-5



Push the axle shaft to the center of vehicle and remove the axle shaft lock.

Fig. 5-6

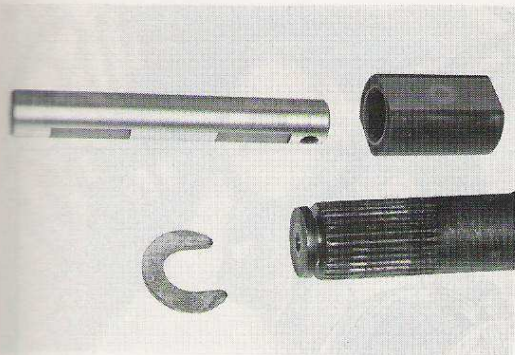


Fig. 5-7

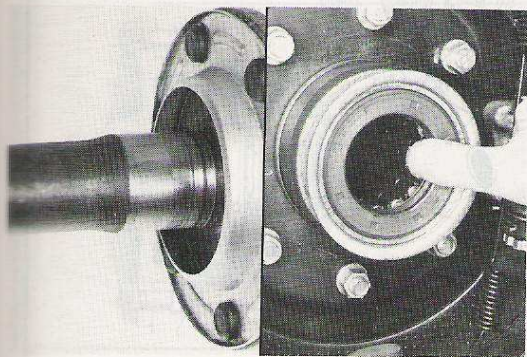


Fig. 5-8


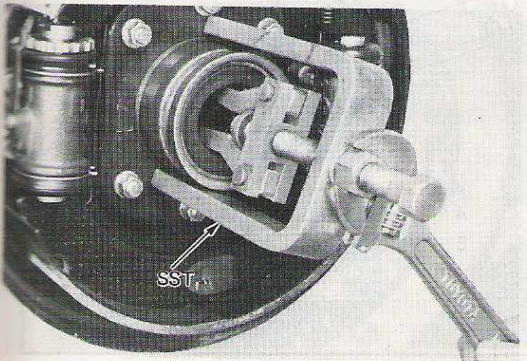


Fig. 5-9

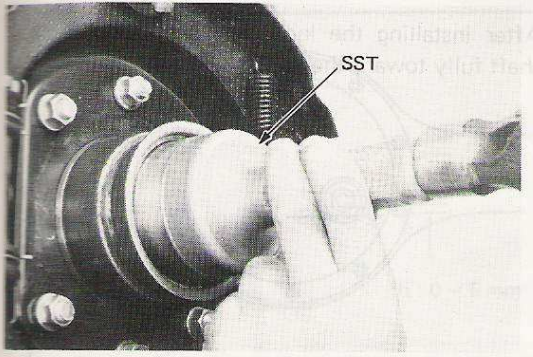

INSPECTION



Axle Shaft And Pinion Shaft Spacer

Inspect for damage and wear.



Axle Shaft Bearing

Inspect for damage and wear.



Axle Shaft Bearing Replacement

1. Using SST [09514-35010], remove the bearing and oil seal together.



2. Using SST [09515-35010], drive in the bearing and oil seal.

INSTALLATION

Install the parts in the order numbered in figure.

Fig. 5-10



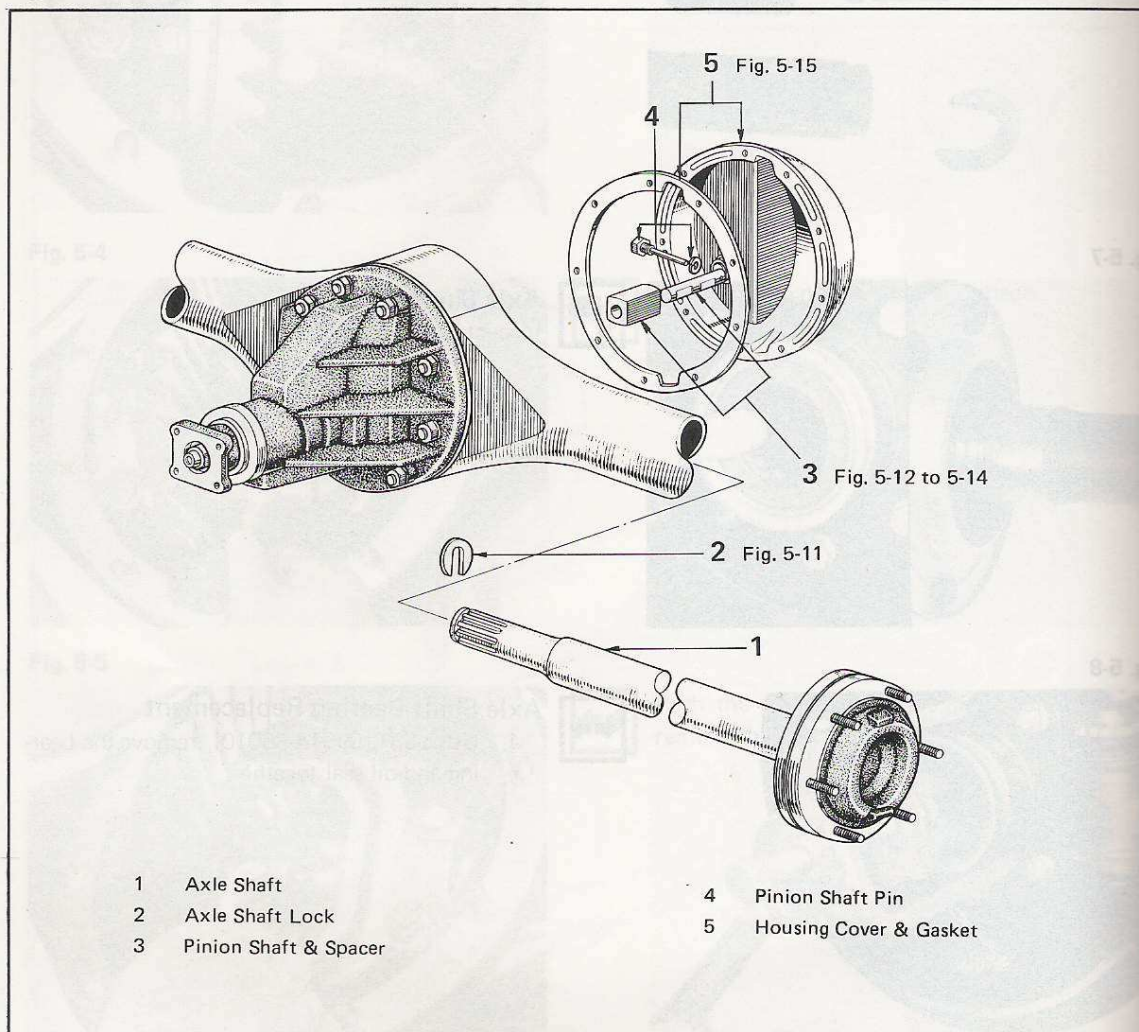


Fig. 5-11

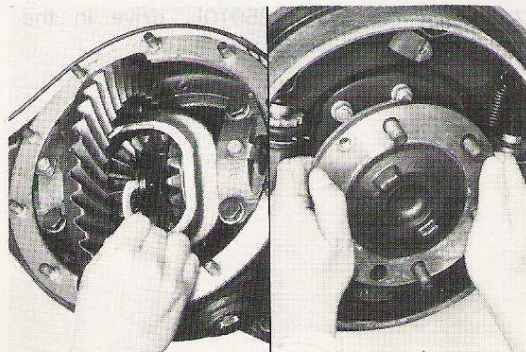

After installing the lock to the shaft, pull the shaft fully toward the outer side of vehicle.

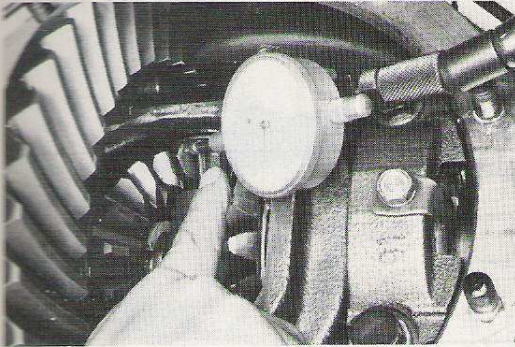Fig. 5-12




Measure the differential gear backlash.

1. Hold the side gear steady and measure the backlash of the pinion.

Standard value **0.02 – 0.20 mm**
(0.0008 – 0.0079 in.)

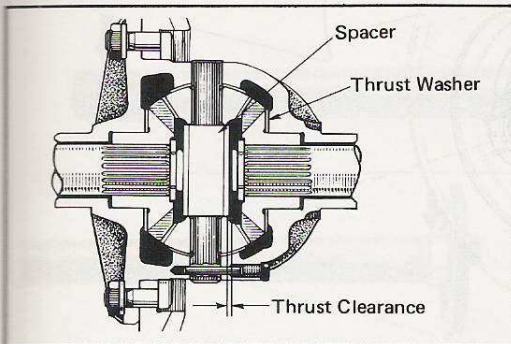Fig. 5-13




2. If outside the standard value range, correct by selecting proper size side gear thrust washers.

Thrust Washer Thickness

Part No.	Thickness mm (in.)
41361-35010	1.6 (0.063)
41362-35010	1.75 (0.069)
41363-35010	1.90 (0.075)
41364-35010	2.05 (0.081)

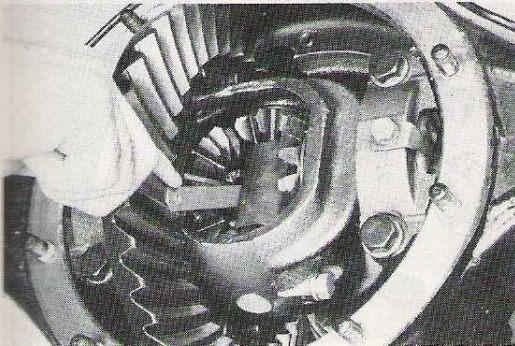Fig. 5-14



Rear axle shaft end thrust clearance.


Select pinion shaft spacer of the thickness that will set the thrust clearance to the standard value.

Standard value **0.06 – 0.46 mm**
(0.0024 – 0.0181 in.)

Spacer Thickness

Part No.	Thickness mm (in.)
41344-35010	29.8 (1.173)
41345-35010	30.2 (1.189)
41346-35010	30.6 (1.204)
41347-35010	29.0 (1.142)
41348-35010	29.4 (1.157)

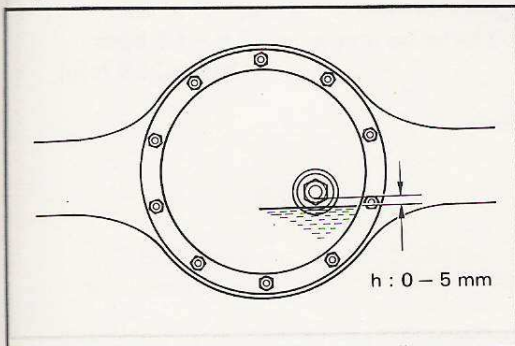Fig. 5-15



After installing the axle shaft, fill in hypoid gear oil SAE90, API GL-5.

Standard capacity

FJ40 & BJ40 **2.4 liter**
(2.6 US.qt., 2.1 Imp.qt.)

FJ43 & BJ43 **2.7 liter**
(2.9 US.qt., 2.4 Imp.qt.)

FJ45, HJ45 & FJ55
2.9 liter
(3.1 US.qt., 2.6 Imp.qt.)

REAR AXLE SHAFT(FULL FLOATING TYPE)

REMOVAL

Remove the parts in the order shown below.

Fig. 5-16



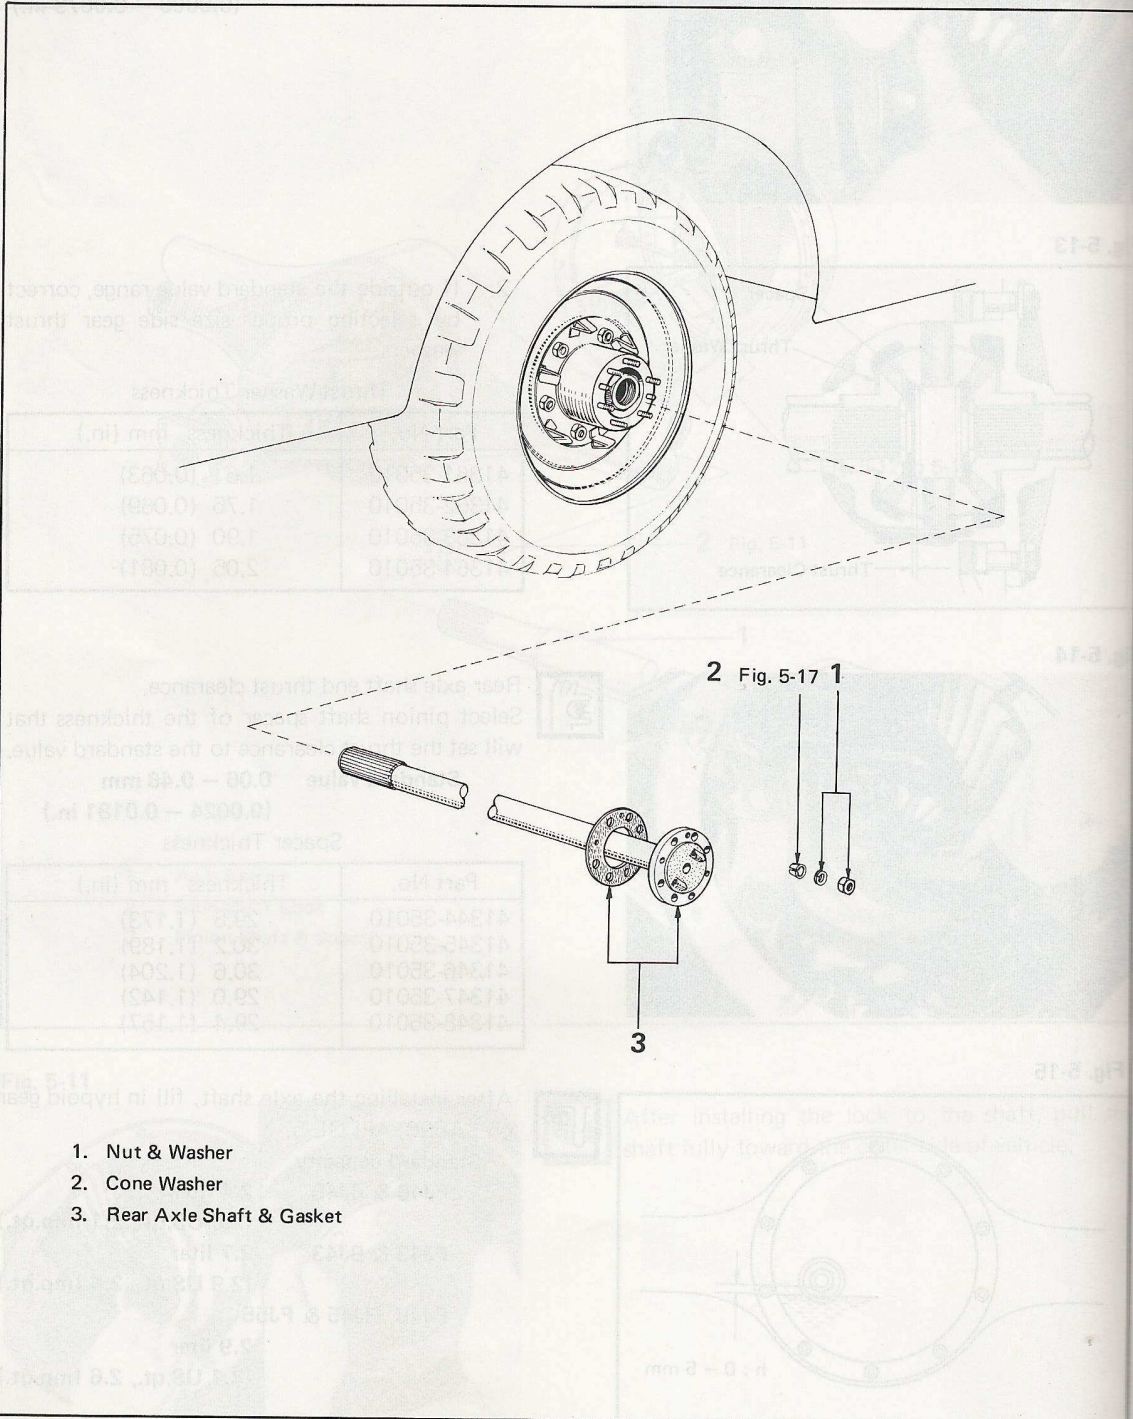


Fig. 5-17

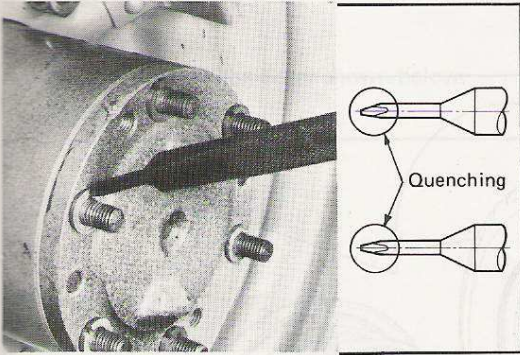

Remove the cone washer.

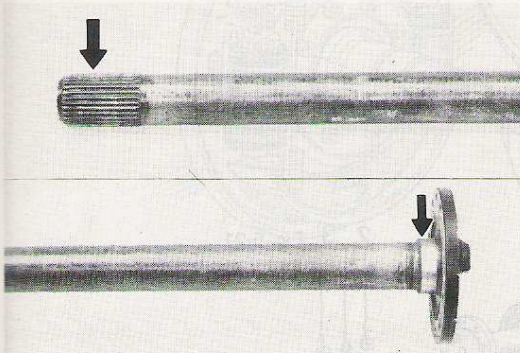Fig. 5-18




INSPECTION



Rear Axle Shaft

Inspect the parts indicated by arrows for wear and cracks.

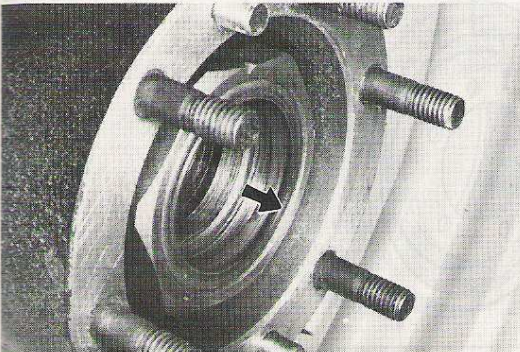Fig. 5-19



Rear Axle Shaft Oil Seal

Inspect the oil seal for wear.

Tighten the nuts to the specified torque.
 Tightening torque 2.8—4.0 kg-m
 (20.3—28.9 ft-lb)

1. Rear Axle Shaft
2. Brake Drum

INSTALLATION

Install the parts in the order shown in the figure below.

Fig. 5-20


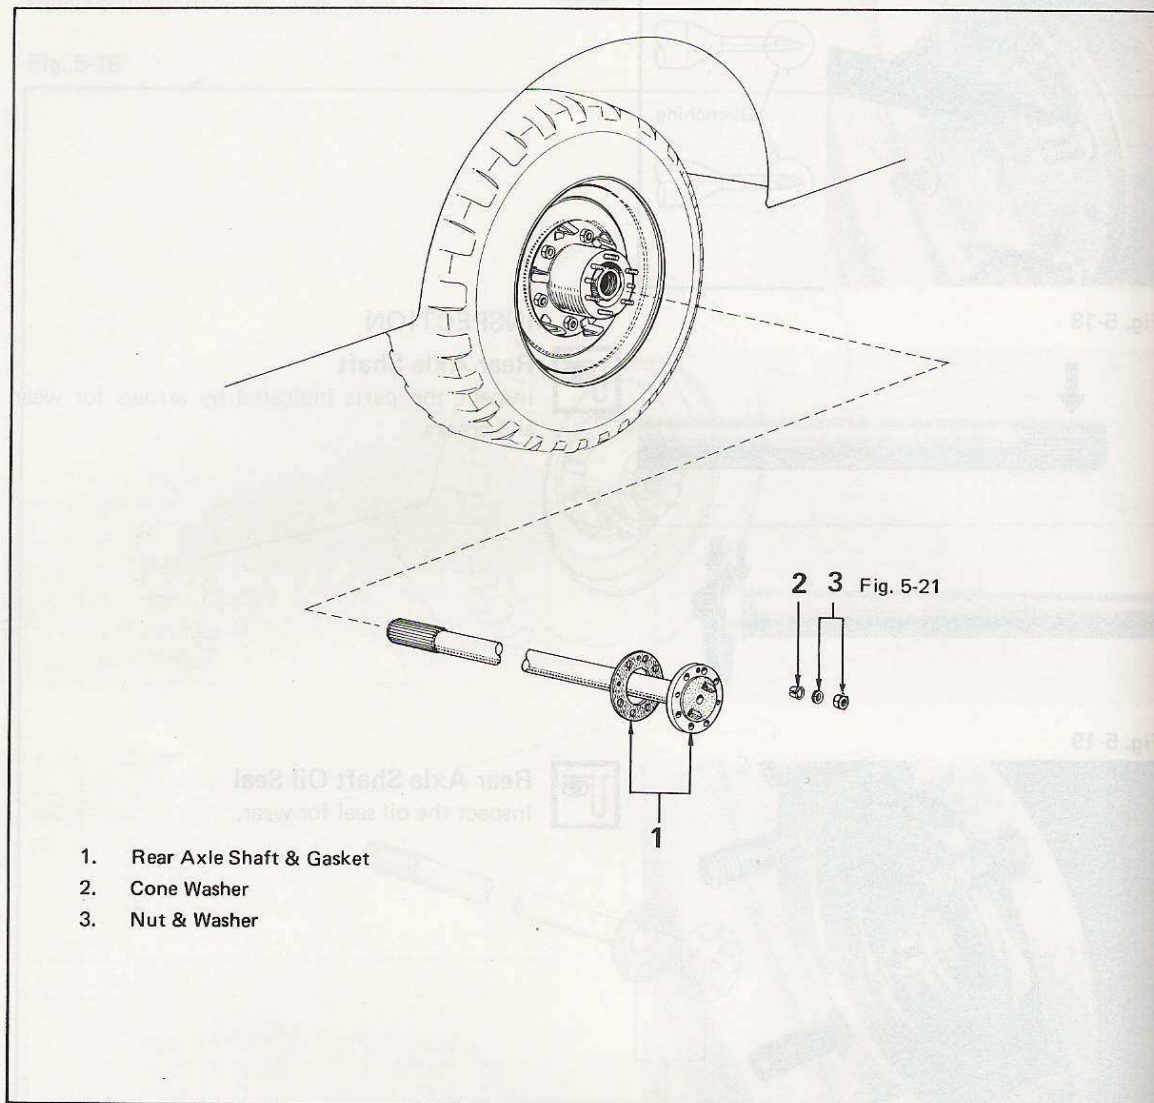


Fig. 5-21

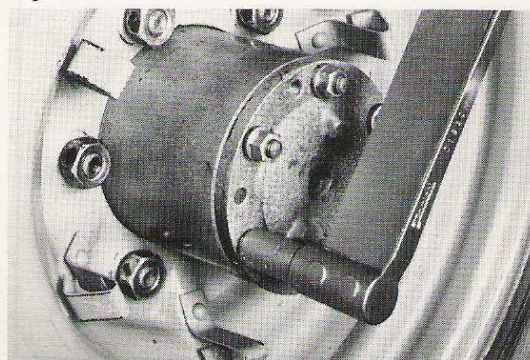

Tighten the nuts to the specified torque.

Tightening torque **2.8 – 4.0 kg-m**
(20.3 – 28.9 ft-lb)

REAR AXLE HUB (FULL FLOATING TYPE)

REMOVAL

Remove the parts in the order shown below.

Fig. 5-22

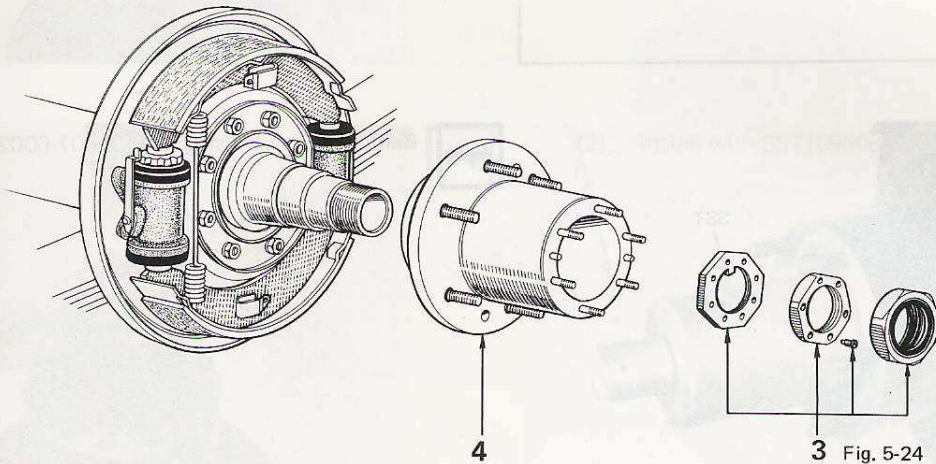


Fig. 5-24


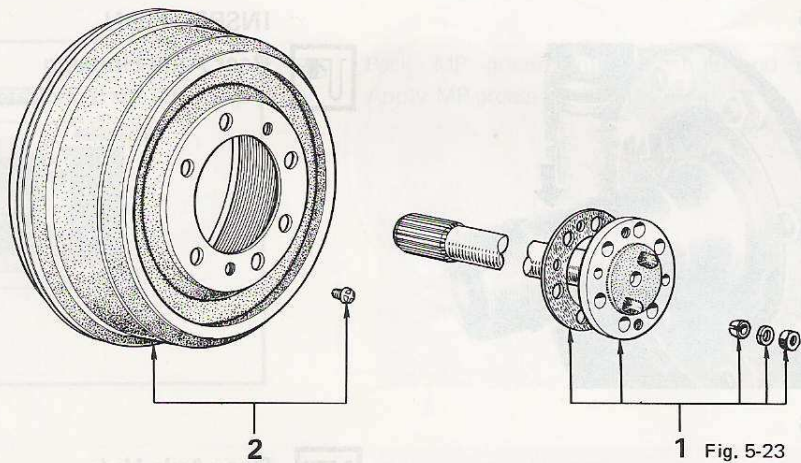


Fig. 5-23

1. Rear Axle Shaft
2. Brake Drum


3. Adjusting Nuts & Washers
4. Axle Hub Assy

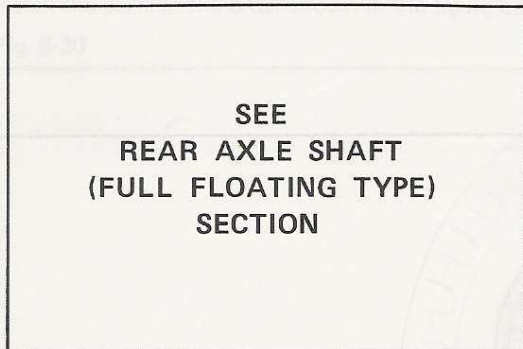Fig. 5-23




Remove the axle shaft.

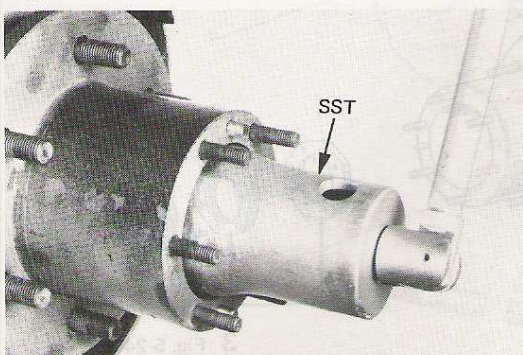Fig. 5-24



Remove the nuts using SST [09607-60020].

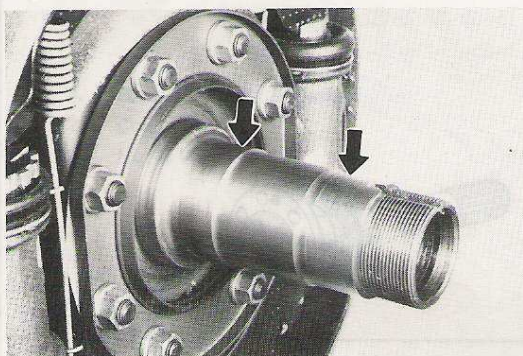Fig. 5-25




INSPECTION



Rear Axle Housing

Inspect the parts indicated for wear or damage.

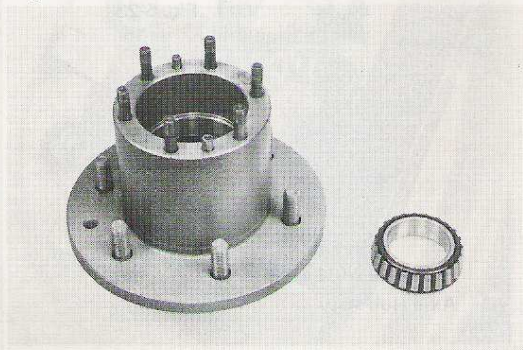
Fig. 5-26



Rear Axle Hub

1. Inspect the bearings and oil seal for wear or damage.

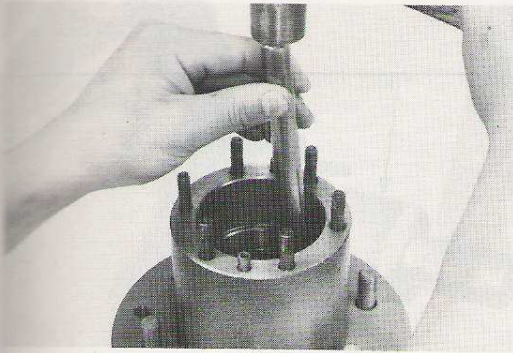
Fig. 5-27



2. Bearing replacement


- (1) Remove the bearing outer race with a drift.

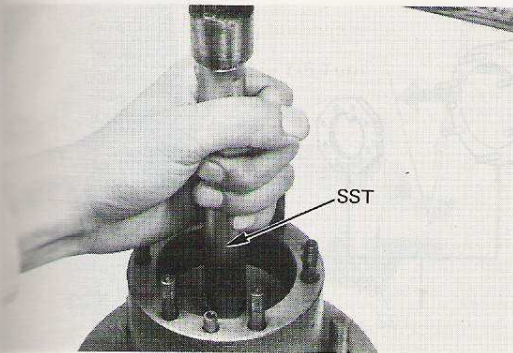Fig. 5-28



- (2) Install with SST [09608-35012].

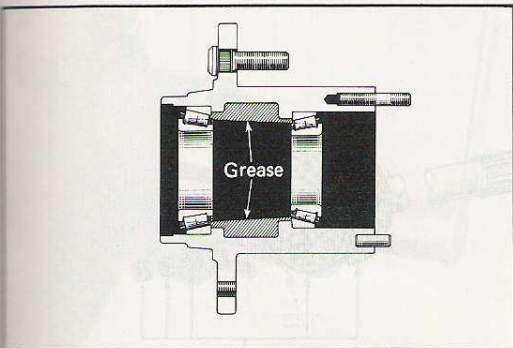Fig. 5-29



Pack MP grease into the hub and bearing.
Apply MP grease to the oil seal lip.

SEE
REAR AXLE SHAFT
(FULL FLOATING TYPE)
SECTION

4. Brake Drum
5. Rear Axle Shaft

1. Axle Hub Assy & Lock Plate
2. Adjusting Nut
3. Lock Nut

INSTALLATION

Install the parts in the order shown below.

Fig. 5-30



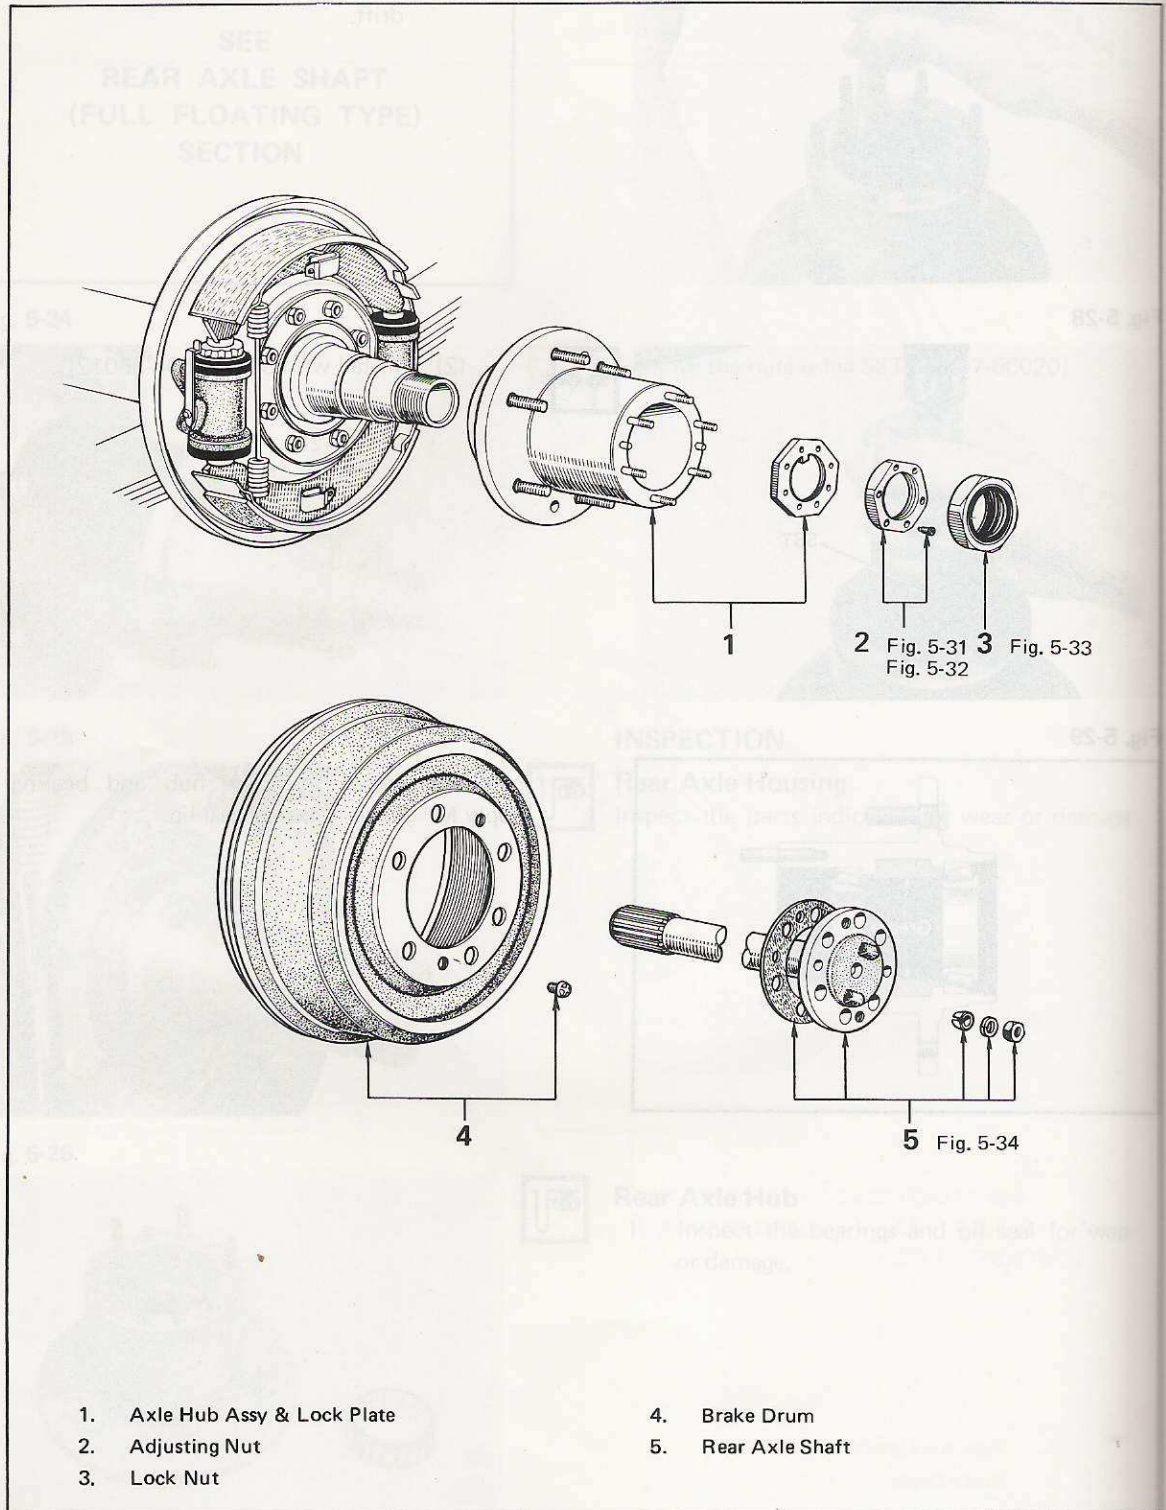


Fig. 5-31

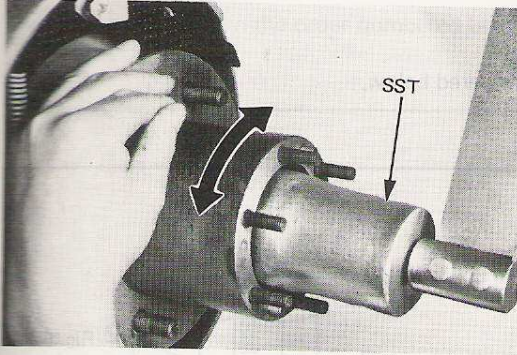


1. Tighten the adjusting nut to 6 kg-m (43 ft-lb).
2. Rotate the hub back and forth about three times to snug down the bearing.

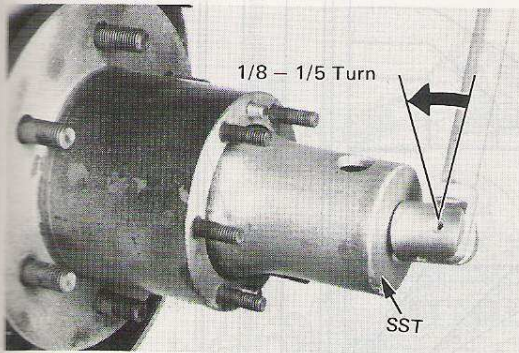Fig. 5-32



3. Retighten the adjusting nut to 6 kg-m (43 ft-lb), then unscrew the adjusting nut 1/8th to 1/5th turn.

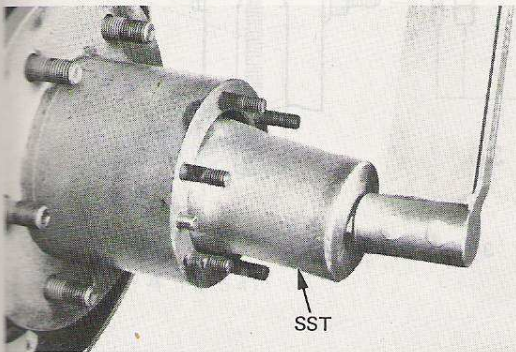Fig. 5-33



Tighten the lock nut to the specified torque.

Tightening torque **8 – 10 kg-m**
(58 – 72 ft-lb)

Fig. 5-34

**SEE
 REAR AXLE SHAFT
 (FULL FLOATING TYPE)
 SECTION**



Install the rear axle shaft.

DIFFERENTIAL

REMOVAL

After draining out the oil, remove the parts in the order numbered below.

Fig. 5-35

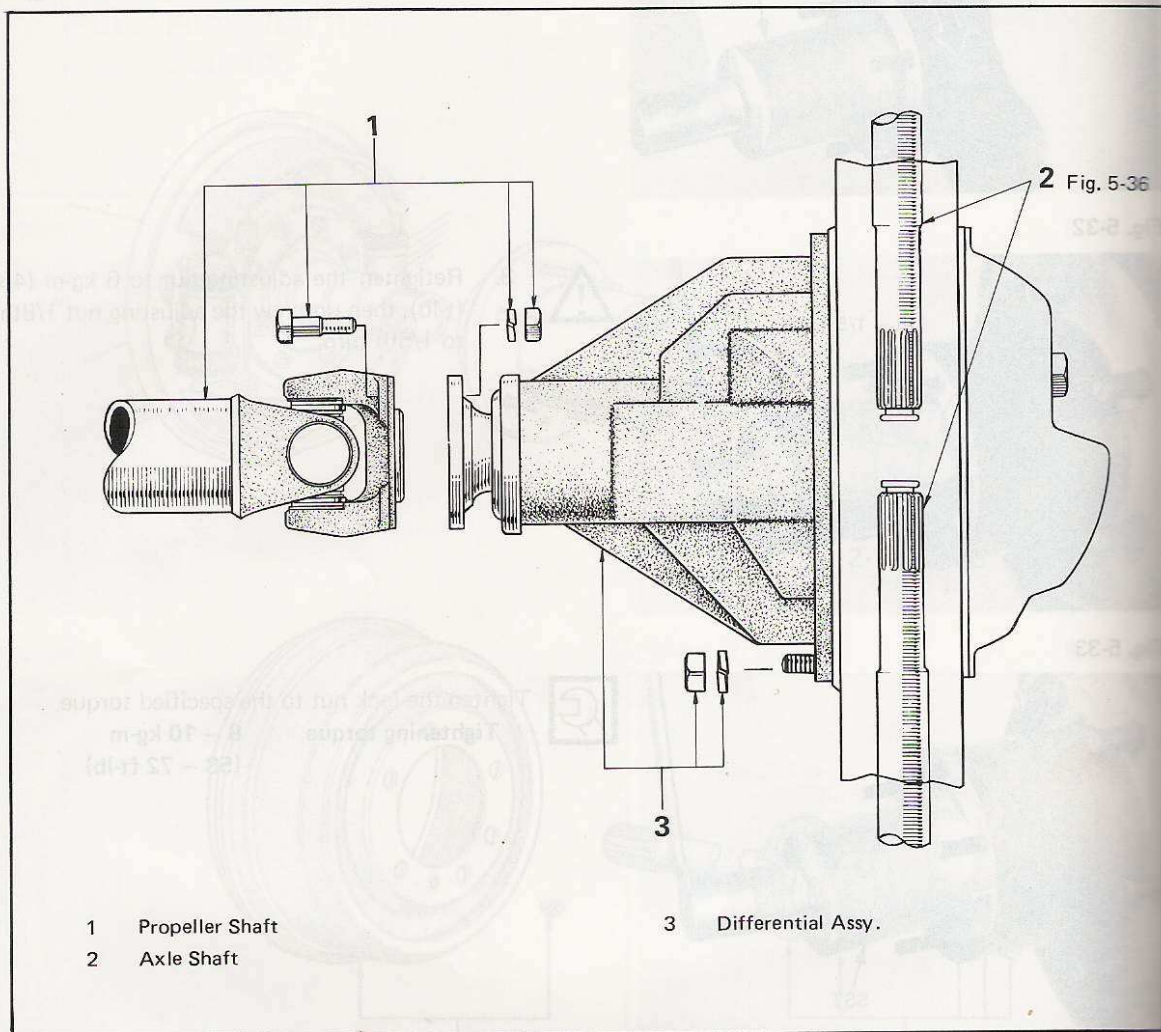


Fig. 5-36

SEE
REAR AXLE SHAFT
SECTION

Remove the axle shafts.


SEE
REAR AXLE SHAFT
(FULL FLOATING TYPE)
SECTION

1. Brake Drum
2. Rear Axle Shaft

DISASSEMBLY

Disassemble the parts in the order numbered below.

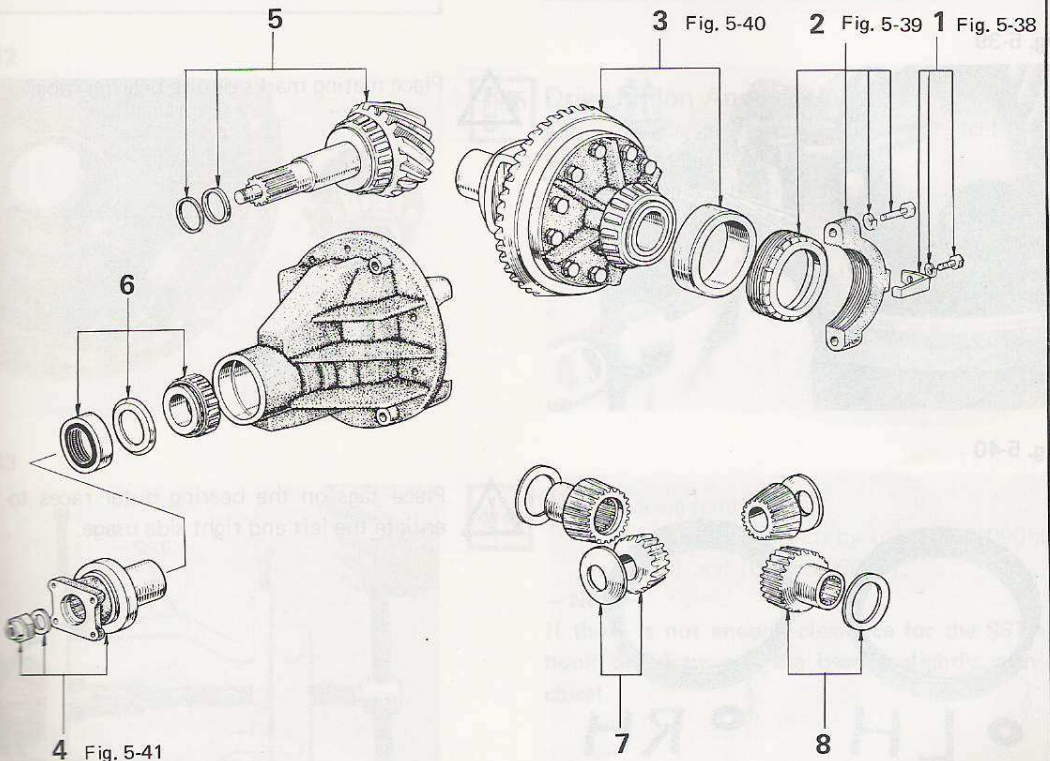Fig. 5-37



1 Adjusting Nut Locks

2 Bearing Caps & Adjusting Nuts

3 Ring Gear, Case, & Bearings

4 Joint Flange


5 Drive Pinion, Bearing, Shim, & Washer

6 Oil Seal, Slinger, & Bearing

7 Pinions & Thrust Washers

8 Side Gears & Thrust Washers

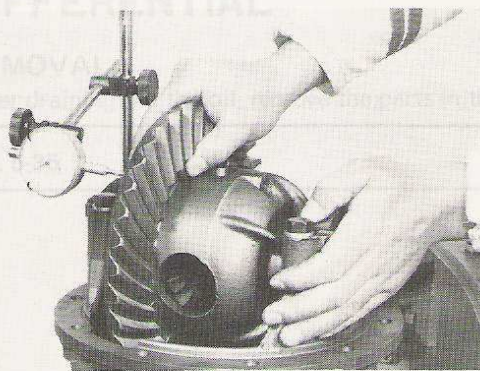Fig. 5-38



Before starting disassembly, measure the runout of the ring gear back face.


Limit 0.1 mm (0.004 in.)

Fig. 5-39




Place mating marks on the bearing caps.

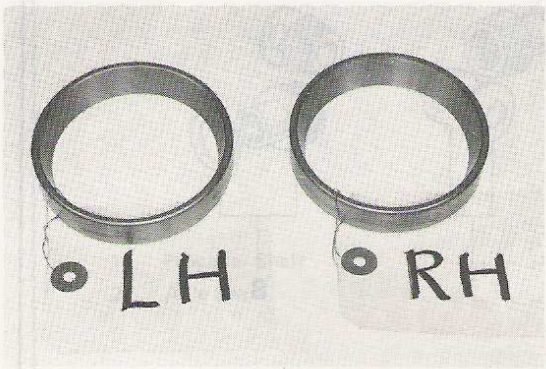Fig. 5-40



Place tags on the bearing outer races to differentiate the left and right side usage.

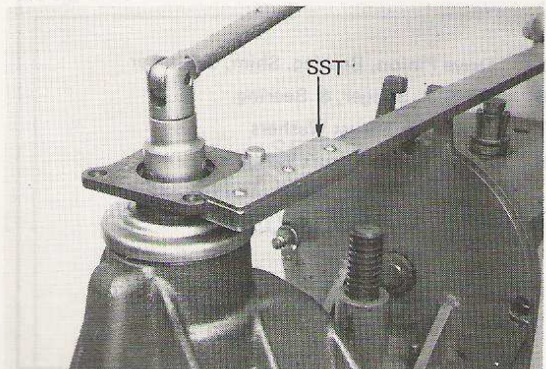Fig. 5-41



Loosen the staked parts of the nut, and using SST [09330-00020], remove the nut.

— Note —

Hold the gear part of the drive pinion with hand, and remove the flange by tapping the pinion gear with a plastic hammer.

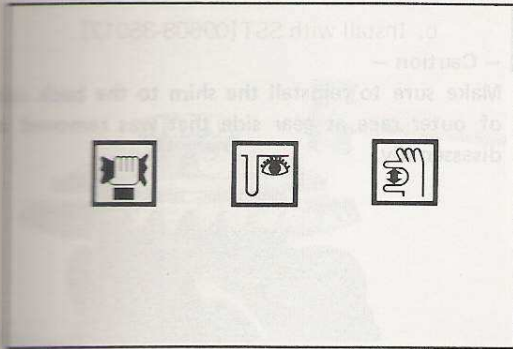


Fig. 5-42

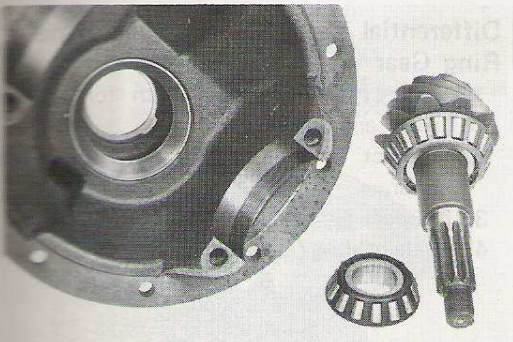


Fig. 5-43


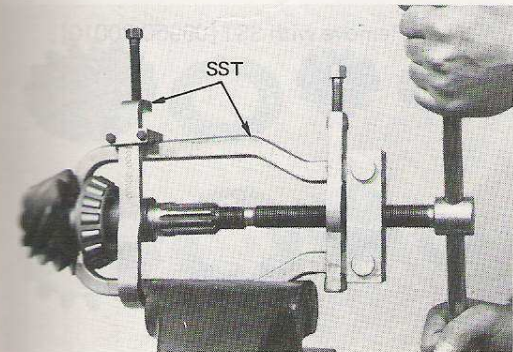


Fig. 5-44

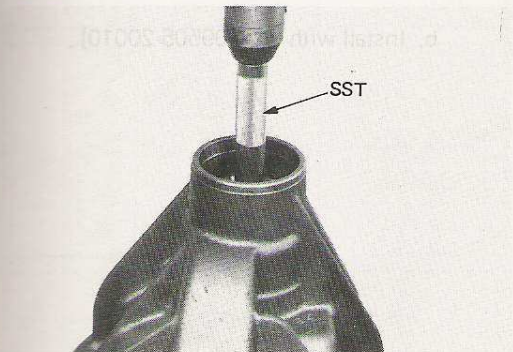

INSPECTION

Wash the disassembled parts and inspect them on the following points.
Replace any part found defective.



Drive Pinion And Bearings

1. Inspect the drive pinion gear teeth for damage, wear, and burning.
2. Inspect the bearings for damage and wear.



3. Bearing removal
Remove the bearings by using SST [09950-20010] and [09956-00010].


– Note –

If there is not enough clearance for the SST to hook on, draw out the bearing slightly with a chisel.



4. Bearing outer race replacement
 - a. Remove with SST [09608-35011].

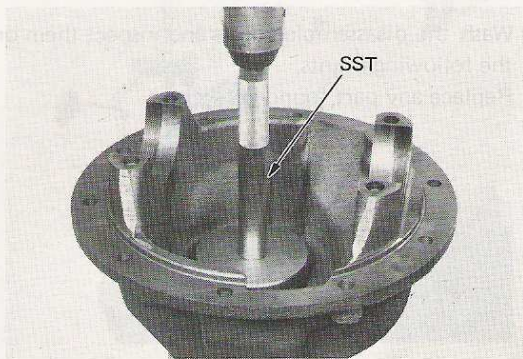Fig. 5-45




b. Install with SST [09608-35012].

– Caution –

Make sure to reinstall the shim to the back side of outer race at gear side that was removed at disassembly.

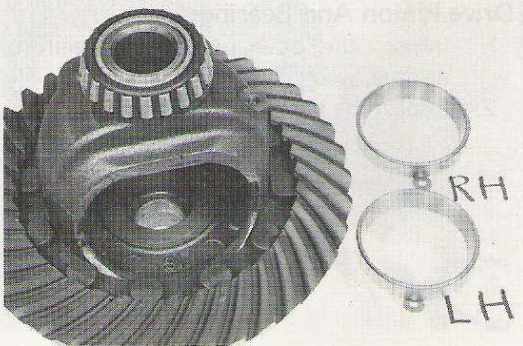Fig. 5-46



Differential Case, Side Bearings, And Ring Gear


1. Inspect the ring gear teeth for damage, wear, and burning.
2. Inspect the side bearings for damage and wear.
3. Inspect the case for cracks.
4. Side bearing replacement.

Fig. 5-47




a. Remove with SST [09950-20010].

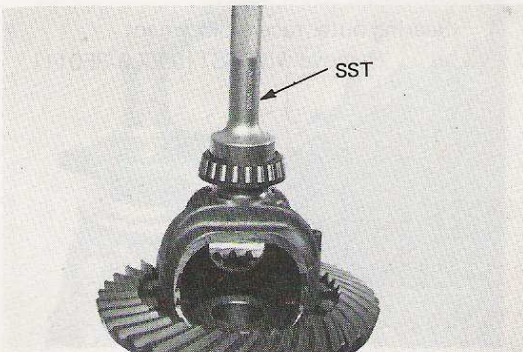Fig. 5-48




b. Install with SST [09505-20010].

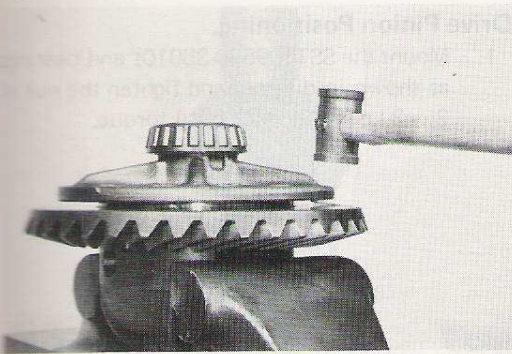Fig. 5-49




5. Ring gear replacement.
 - a. Loosen the attaching bolts uniformly, and remove the ring gear by tapping it with a plastic hammer.

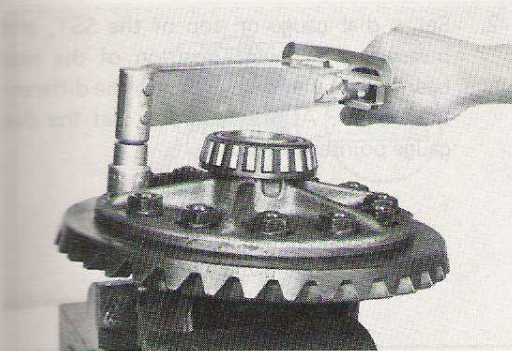Fig. 5-50



- b. Heat the ring gear to $90 - 110^{\circ}\text{C}$ ($194 - 230^{\circ}\text{F}$) and quickly fit it into the case. Tighten the nuts at the specified torque.
Tightening torque 10.5 – 12 kg-m (75.9 – 86.8 ft-lb)

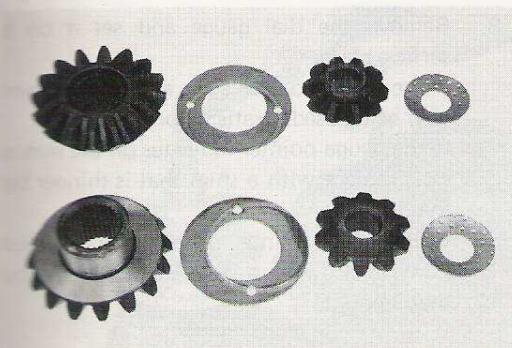Fig. 5-51



Pinions, Side Gears, And Washers

Inspect for damage and wear.

Part No.	Thickness (mm)
90564-70101	0.35 (0.0087)
90564-70102	0.30 (0.0075)
90564-70103	0.35 (0.0087)
90564-70104	0.45 (0.0112)
90564-70105	0.40 (0.0101)
90564-70106	0.40 (0.0101)

Part No.	Thickness (mm)
90564-70101	0.35 (0.0087)
90564-70102	0.30 (0.0075)
90564-70103	0.35 (0.0087)
90564-70104	0.45 (0.0112)
90564-70105	0.40 (0.0101)
90564-70106	0.40 (0.0101)

Fig. 5-52

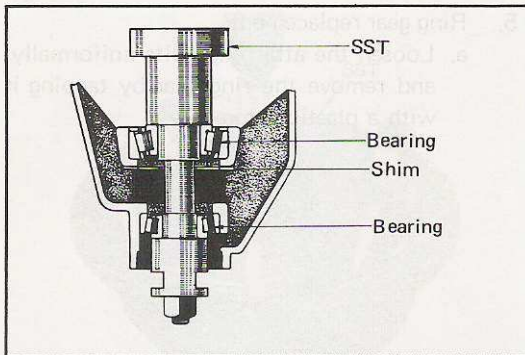


Fig. 5-53

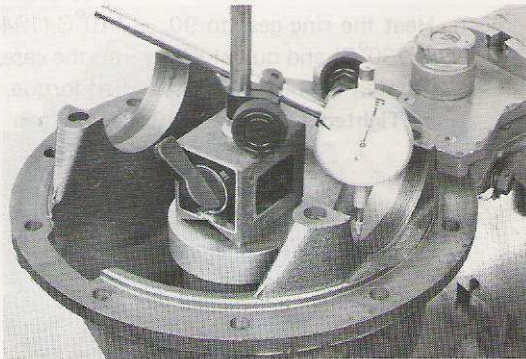


Fig. 5-54


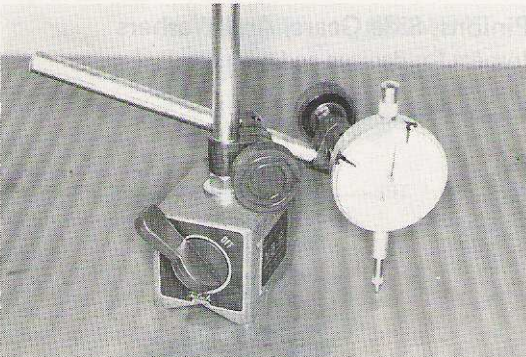


Fig. 5-55

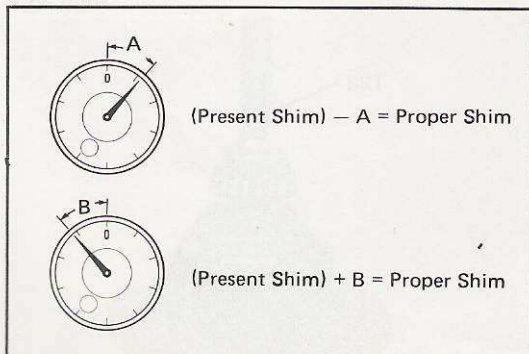

SELECTION OF SHIMS AND SPACER



Drive Pinion Positioning.

1. Mount the SST [09530-35010] and bearings as shown in diagram and tighten the nut at 2 – 3 kg-m (14 – 22 ft-lb) torque.



2. Set a dial gauge on top of the SST, and measure the lowest position of the side bearing installation surface on the differential carrier. At this position, set the dial gauge pointer to zero.



3. Remove the dial gauge and set it on a surface plate.
If the gauge pointer stays at zero, the shim now being used is satisfactory.
If the gauge pointer indicates on the minus side, replace with a shim that is thinner by that amount.
If the gauge pointer registers on the plus side, replace with a shim that is thicker by that amount.

Adjusting Shim Thickness



Part No.	Thickness mm (in.)
90564-70101	0.25 (0.0098)
90564-70102	0.30 (0.0118)
90564-70103	0.35 (0.0138)
90564-70104	0.45 (0.0177)
90564-70121	0.40 (0.0158)


Fig. 5-56



Drive Pinion Preload

1. Using SST [09506-35010], install the bearing to the drive pinion.

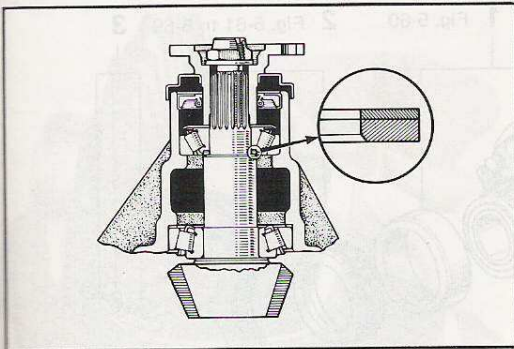Fig. 5-57




2. Install the drive pinion assembly to the differential carrier as shown in figure, and tighten the nut at the specified torque.

Tightening torque 20 – 24 kg-m
(144 – 173 ft-lb)

– Note –

1. Have the bearings lubricated with hypoid gear oil.
2. Install the same size shims and washer that were used before disassembly.

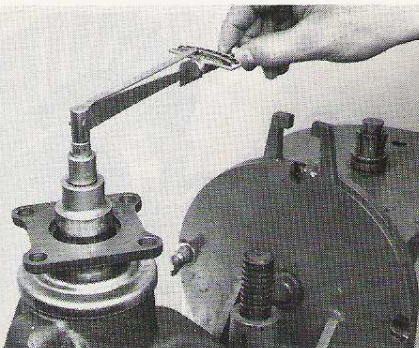Fig. 5-58



3. Measure the preload.

Specified preload (starting)

New bearing 19 – 26 kg-cm
(16.5 – 22.6 in-lb)

Old bearing 9 – 13 kg-cm
(7.8 – 11.3 in-lb)

4. If the preload is not within the specified limits, correct by selecting suitable adjusting washer and increasing or decreasing the number of adjusting shims (limited to 4 shims).

Adjusting Shim and Washer Thickness

Part No.	Thickness mm (in.)	Part No.	Thickness mm (in.)
90564-30035	0.25 (0.0098)	90560-30188	2.87 (0.1130)
90560-30184	2.75 (0.1083)	90560-30190	2.90 (0.1142)
90560-30185	2.78 (0.1094)	90560-30191	2.93 (0.1154)
90560-30186	2.81 (0.1106)	90560-30192	2.96 (0.1165)
90560-30187	2.84 (0.1118)	90560-30199	2.99 (0.1177)


ASSEMBLY AND ADJUSTMENT

Assemble the parts in the order numbered below.

— Note —

Coat hypoid gear oil on the bearings, thrust washers, and similar parts before assembling them.

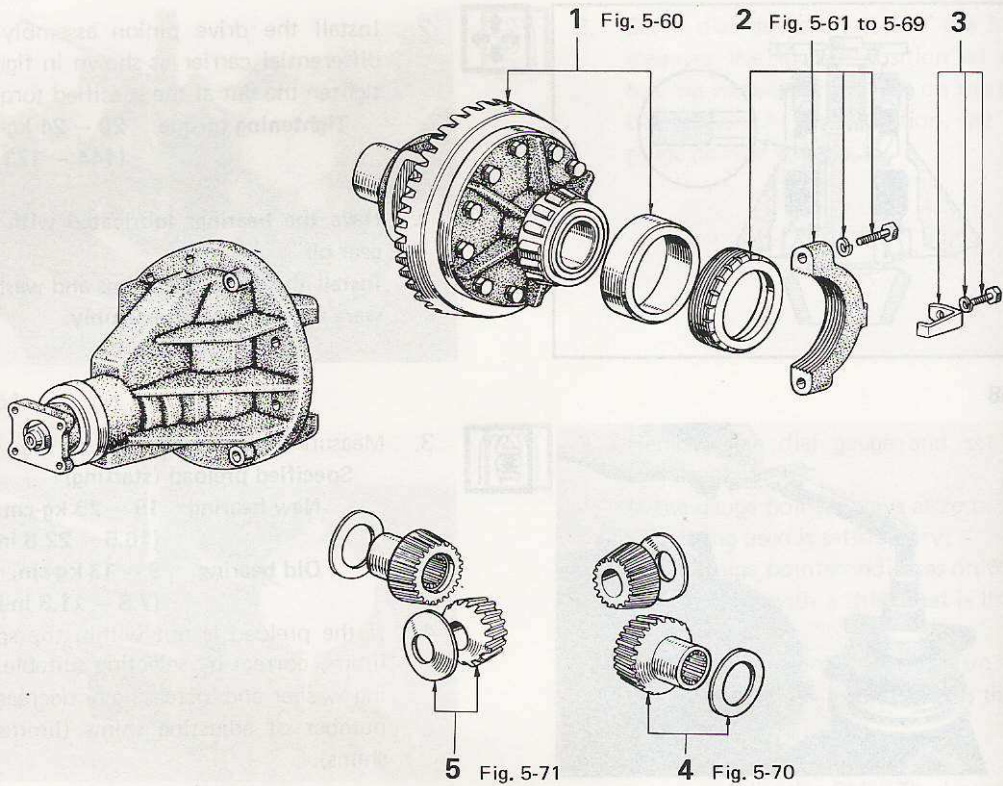
Fig. 5-59



- 1 Ring Gear, Case, & Bearing
- 2 Bearing Caps & Adjusting Nuts
- 3 Adjusting Nut Locks

- 4 Thrust Washers & Side Gears
- 5 Thrust Washers & Pinions

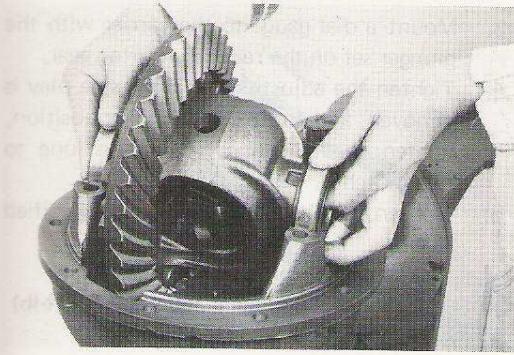Fig. 5-60




Assemble the bearing cups to the side bearings and install the differential case to the carrier.

— Caution —


1. Use care not to intermix the left and right bearing cups.
2. Make sure that backlash has been provided between the ring gear and drive pinion.

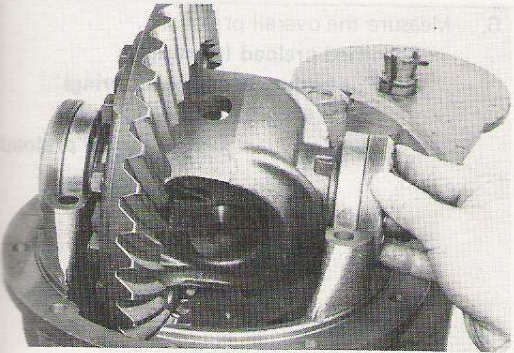Fig. 5-61



1. Assemble the adjusting nuts to their respective carriers with the threads fitted on properly.

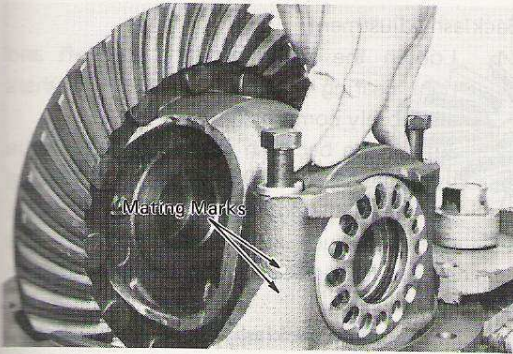Fig. 5-62




2. Screw in the two bearing cap bolts two or three turns and press down the bearing cap with hand.

— Caution —

1. If the bearing cap does not fit tightly on the carrier, the adjusting nut threads are not fitting properly so that operations 1 and 2 above must be repeated.
2. Make sure that the bearing cap mating mark is aligned with that on the carrier.

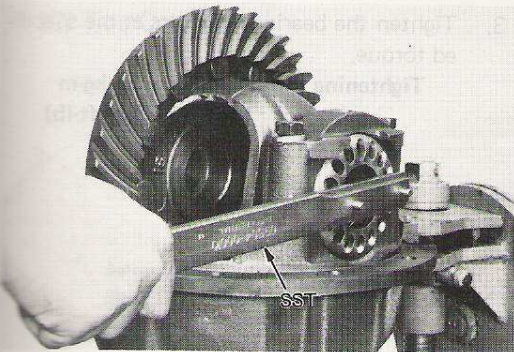
Fig. 5-63



Side bearing preload adjustment

1. Tighten the bearing cap bolts until the spring washers are slightly compressed.
2. Using SST[09504-00010] tighten both the left and right adjusting nuts to seat the bearing cups in the carrier.

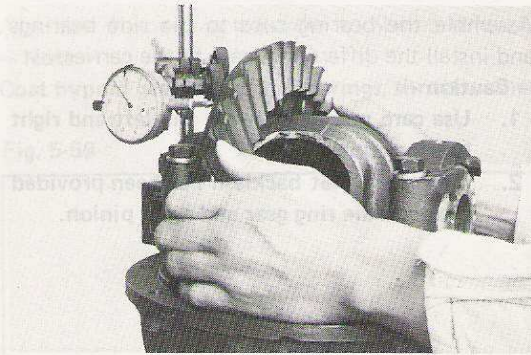
Fig. 5-64



3. Mount a dial gauge to the carrier with the plunger set on the rear face of ring gear.
4. Tighten the adjusting nut until side play is removed, and from this zero-play position, tighten the adjusting nut further one to two notches.
5. Tighten the bearing caps at the specified torque.

Tightening torque 9.0 – 11 kg-m
(65.1 – 79.6 ft-lb)

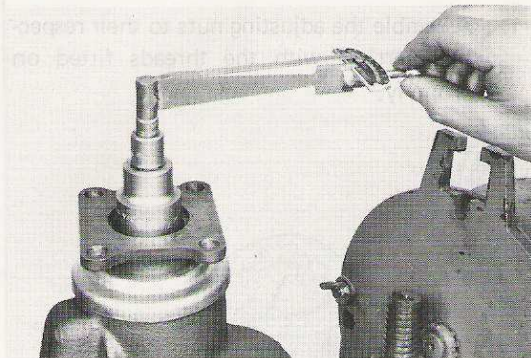Fig. 5-65



6. Measure the overall preload.


Specified preload (starting)

(For both new and old bearing)

4 – 6 kg-cm (3.5 – 5.2 in-lb)

+ Drive pinion preload

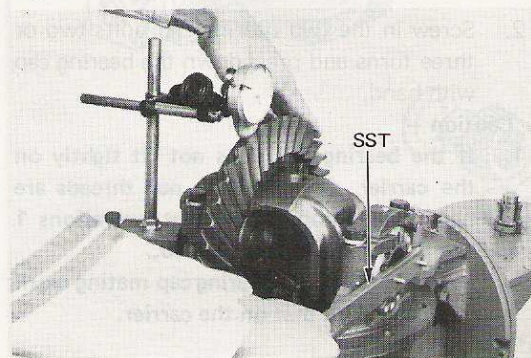Fig. 5-66




Backlash adjustment

1. Loosen the bolts installing the left and right bearing caps until the spring washers are loosely compressed.
2. Adjust the backlash to the specified value by using SST[09504-00010] and turning the left and right adjusting nuts by equal amounts (such as loosening the left side one notch and tightening the right side one notch).

Specified backlash 0.15 – 0.20 mm
(0.0059 – 0.0079 in.)

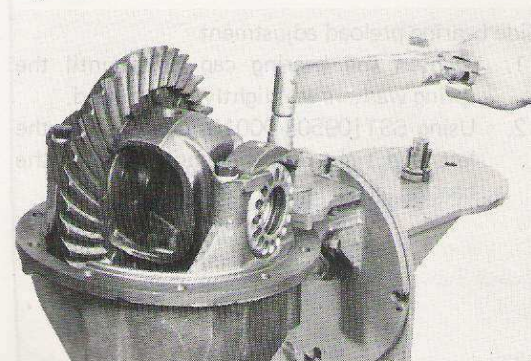Fig. 5-67



3. Tighten the bearing cap bolts at the specified torque.

Tightening torque 9.0 – 11 kg-m
(65.1 – 79.6 ft-lb)

Fig. 5-68

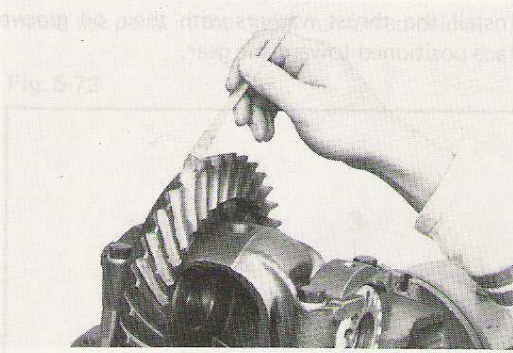


Fig. 5-69



Tooth Contact Inspection

1. Inspect the contact between the ring gear and drive pinion teeth by coating red lead on the ring gear teeth.

— Note —


1. Hold the companion flange steady with hand and rotate the ring gear, and inspect the contact pattern formed.
2. If the teeth are not contacting properly, correct by method shown in figure.
2. Install the adjusting lock nut on each bearing cap, and stake the companion flange nut.

(1) Heel Contact




Select Adjusting Shim That Will Bring Drive Pinion Closer To Ring Gear

(3) Face Contact





Adjust By Same Method As In (1)

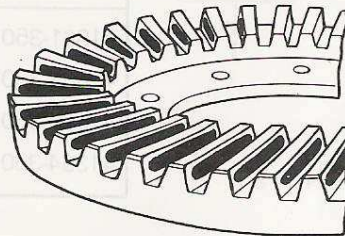



Proper Contact

(2) Toe Contact




Select Adjusting Shim That Will Shift Drive Pinion Away From Ring Gear

(4) Flank Contact



Adjust By Same Method As In (2)

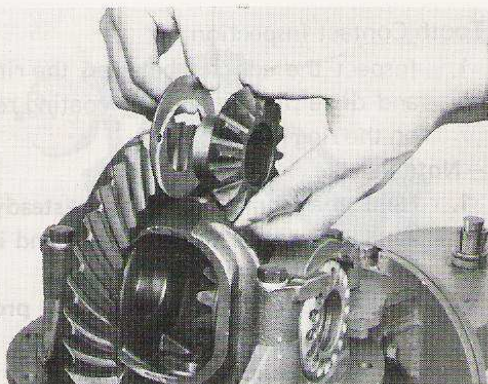Fig. 5-70



Install the thrust washers with their oil groove face positioned toward the gear.

Fig. 5-71



Differential Gear Backlash Measurement

1. Hold the pinion gear steady with hand, and measure the side gear backlash.

Standard backlash 0.02 – 0.20 mm
(0.0008 – 0.0079 in.)

2. If outside the specified limit, correct by selecting proper thickness side gear thrust washers.

– Note –

All efforts should be taken to use same thickness thrust washers at the left and right sides.

Thrust Washer Thickness

Part No.	Thickness mm (in.)
41361-35010	1.6 (0.063)
41362-35010	1.75 (0.069)
41363-35010	1.90 (0.075)
41364-35010	2.05 (0.081)

INSTALLATION

Install the parts in the order numbered below.

Fig. 5-72

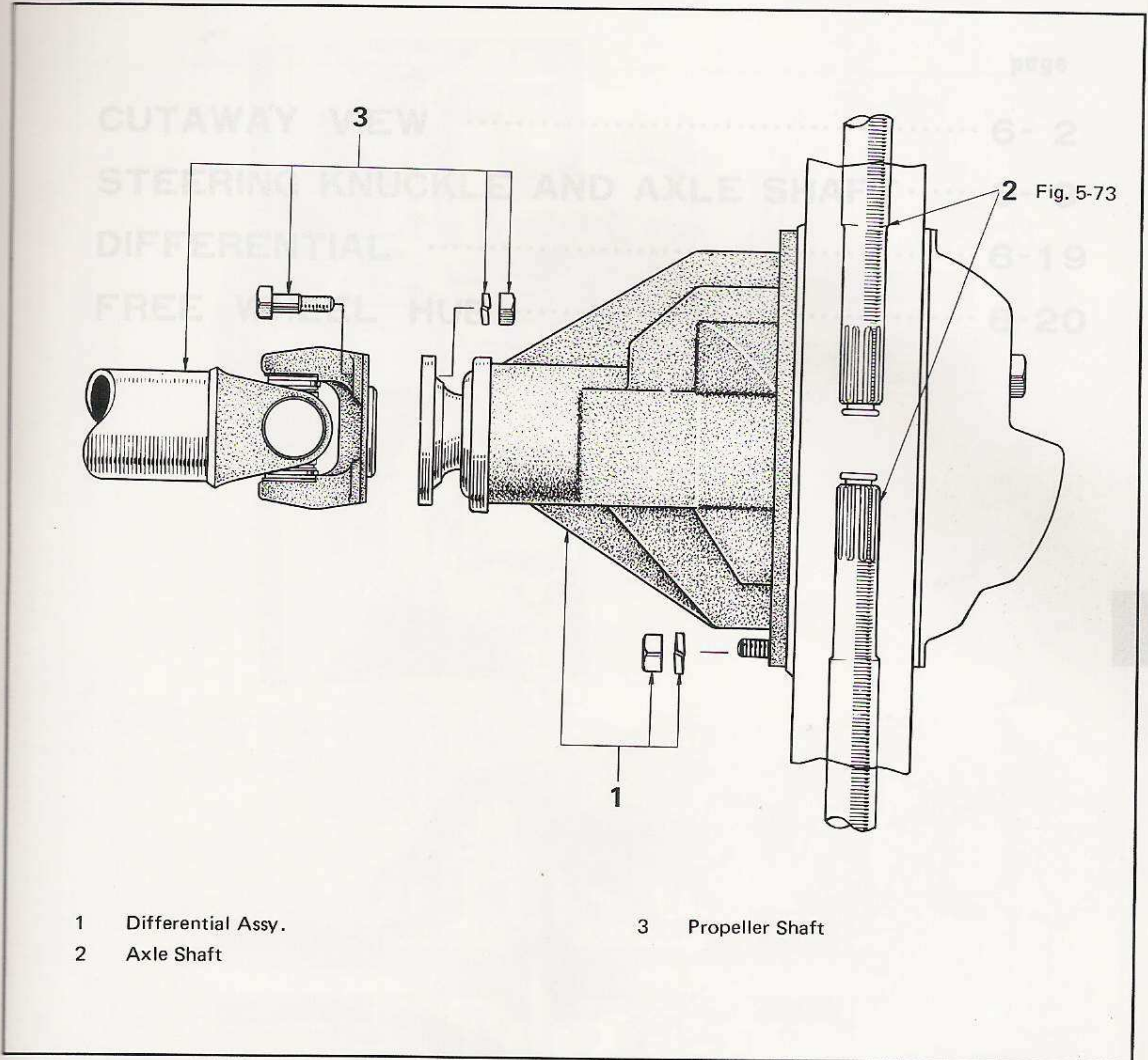


Fig. 5-73

SEE
REAR AXLE SHAFT
SECTION

Install the axle shafts.

— Note —


Measurement of differential gear backlash shall be excluded.

FRONT AXLE

	page
CUTAWAY VIEW	6- 2
STEERING KNUCKLE AND AXLE SHAFT	6- 3
DIFFERENTIAL	6-19
FREE WHEEL HUB	6-20

CUTAWAY VIEW

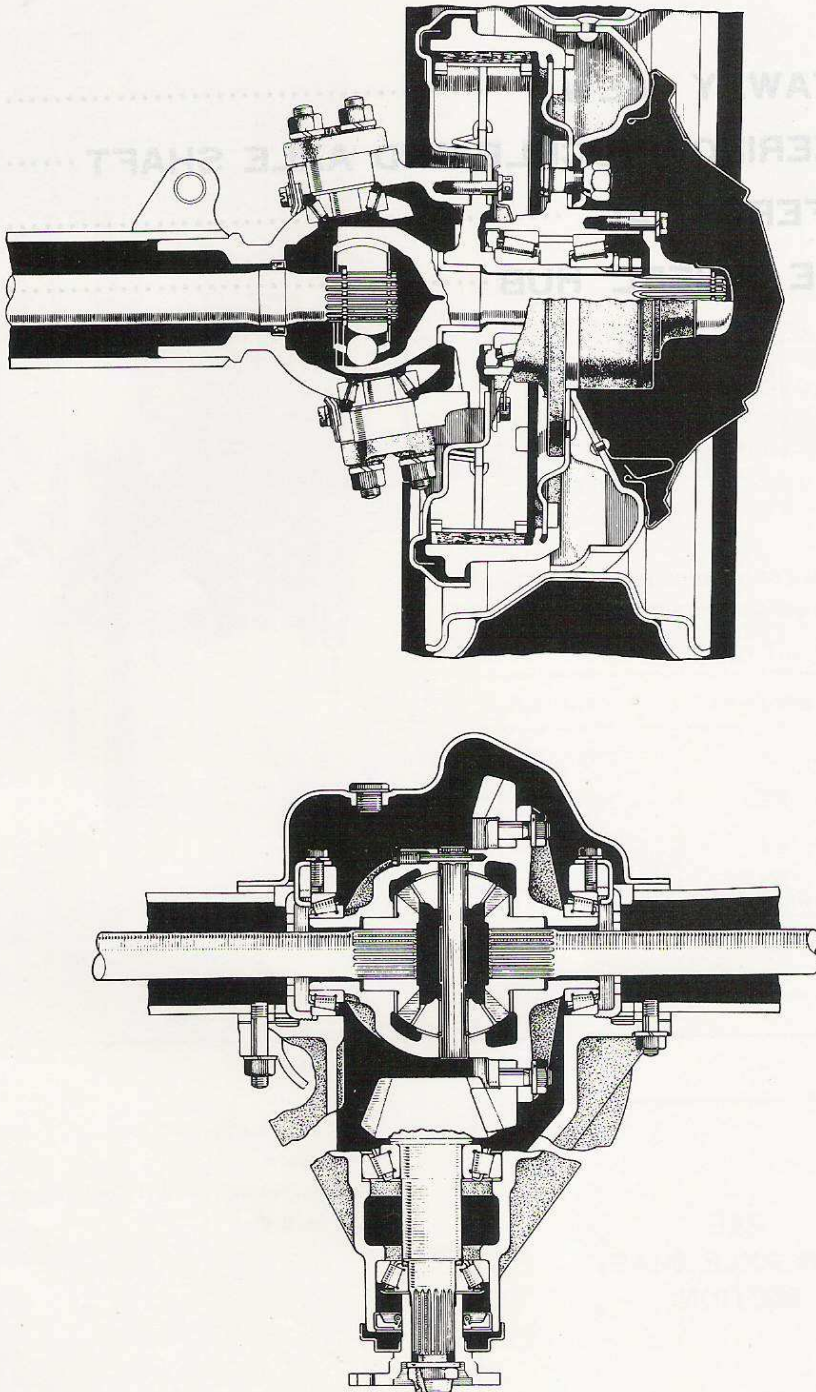Fig. 6-1




STEERING KNUCKLE AND SHAFT

REMOVAL


Remove the parts in the order numbered below.

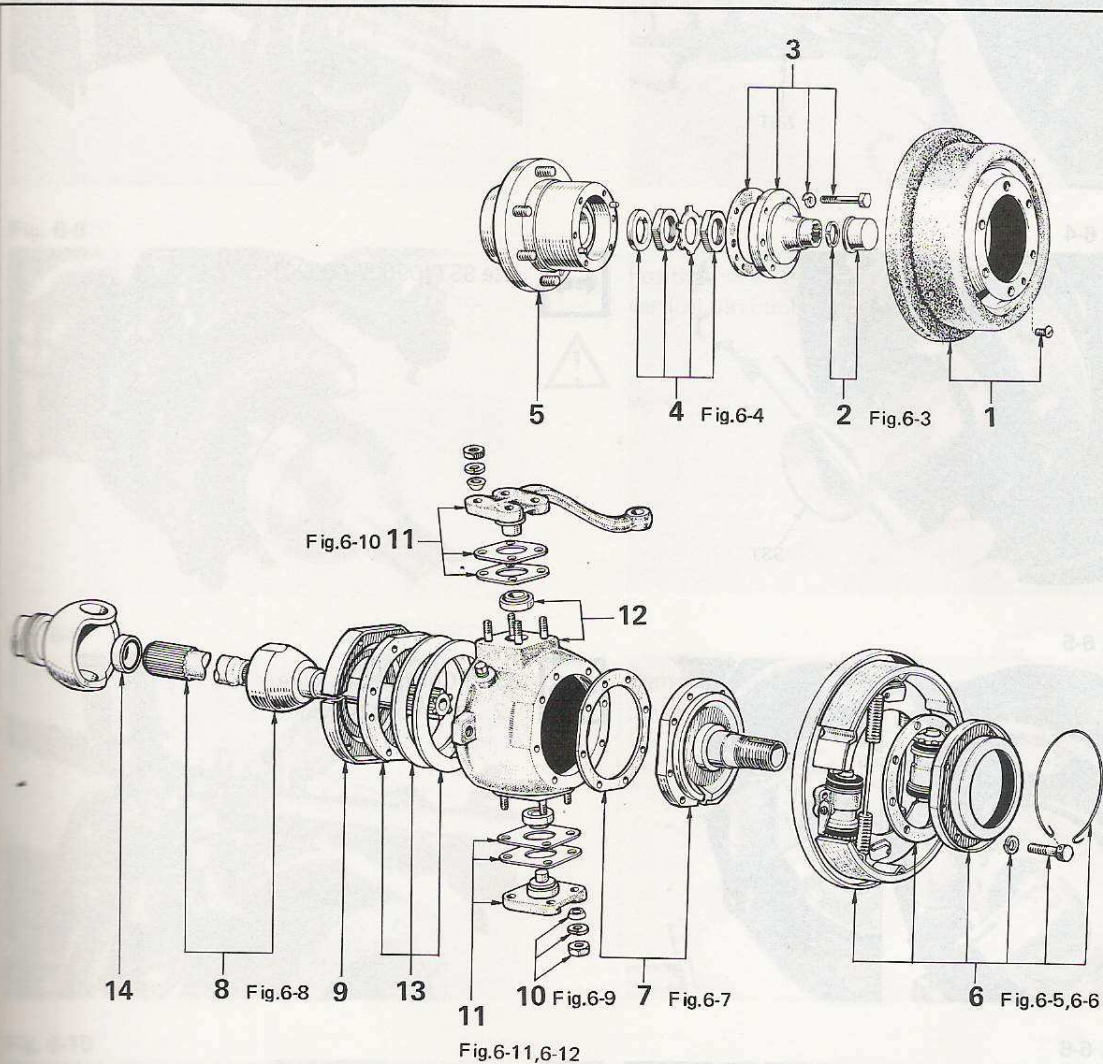Fig. 6-2




- | | | | |
|---|--------------------------|----|-----------------------------------|
| 1 | Brake Drum | 8 | Drive Shaft Assy. |
| 2 | Cap & Snap Ring | 9 | Bolts & Covers |
| 3 | Flange | 10 | Nuts & Dowels |
| 4 | Adjusting Nuts & Washers | 11 | Bearing Cap, Knuckle Arm, & Shims |
| 5 | Axle Hub Assy. | 12 | Steering Knuckle & Bearing |
| 6 | Backing Plate Assy. | 13 | Oil Seal Set |
| 7 | Knuckle Spindle | 14 | Oil Seal |

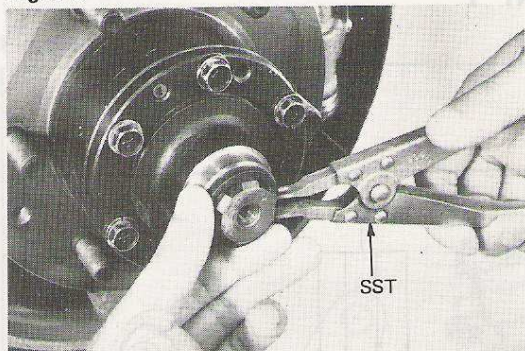Fig. 6-3




Use SST [09905-00010]

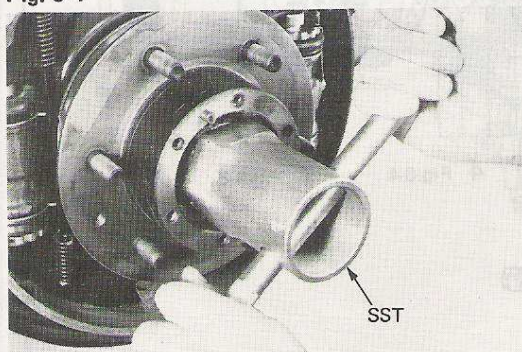Fig. 6-4




Use SST [09607-60020]

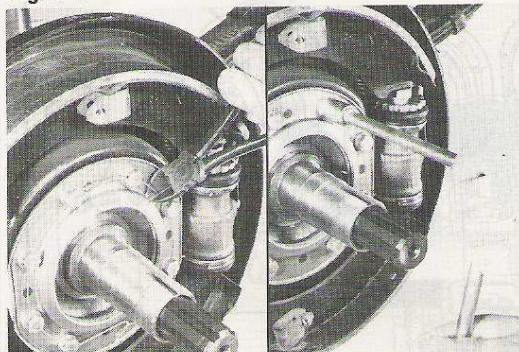Fig. 6-5



1. Cut the lock wire.
2. Remove the bolts.

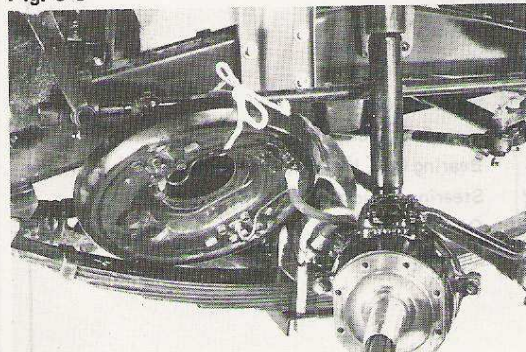Fig. 6-6




Remove the backing plate assembly and keep the parts tied together with a cord as shown in the photo.

— Note —


1. Have the steering wheel turned fully to one side when removing the backing plate.
2. In removing the backing plate, do not disconnect the brake flexible hose.

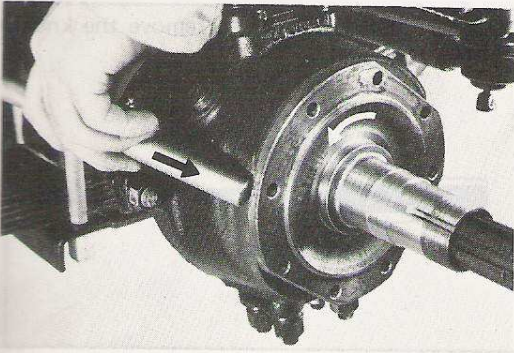Fig. 6-7



If the spindle does not come off easily, tap it off with a drift and hammer as shown in the photo.

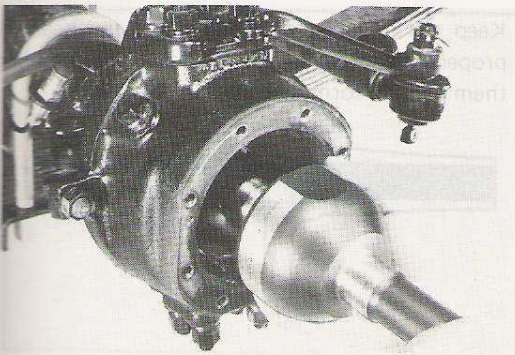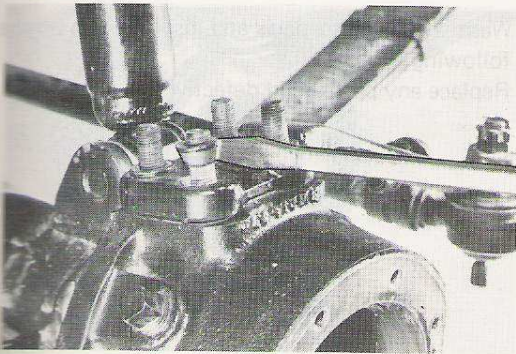
Fig. 6-8



Position the flat part of the outer shaft in vertical direction, and pull out the drive shaft.

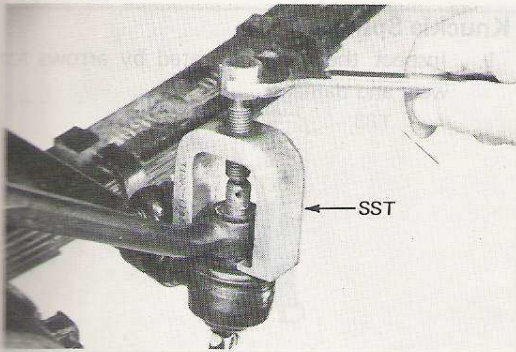


Fig. 6-9




Remove the dowel by hammering in a screwdriver into the slotted part of the dowel.

Fig. 6-10




Use SST[09611-20014] or SST[09628-62010].

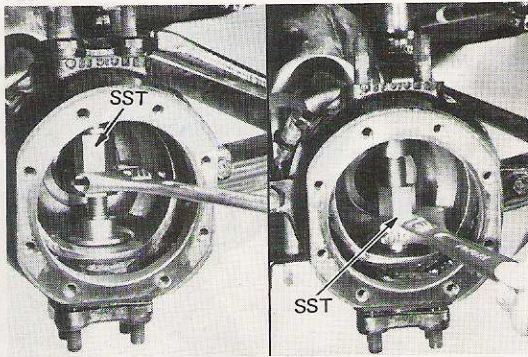Fig. 6-11



Use SST [09606-60010] to remove the knuckle and bearing cap.

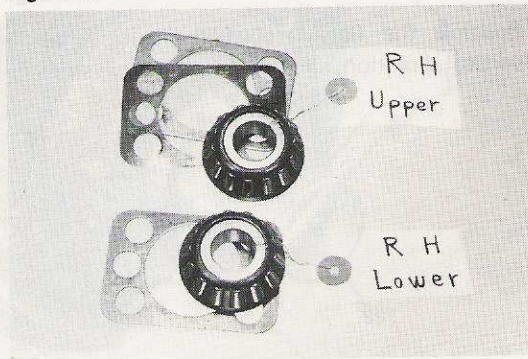Fig. 6-12



Keep the removed adjusting shims and bearings properly marked so as to enable reassembling them back to former position.

INSPECTION

Wash the removed parts and inspect them on the following points.

Replace any part found defective.


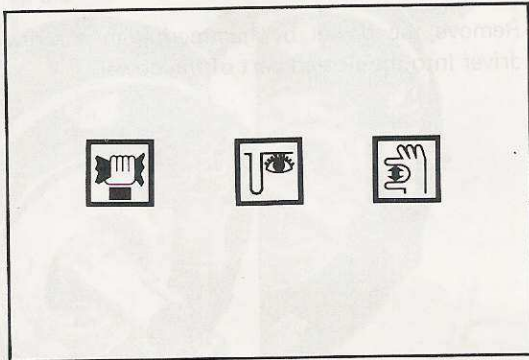



Fig. 6-13

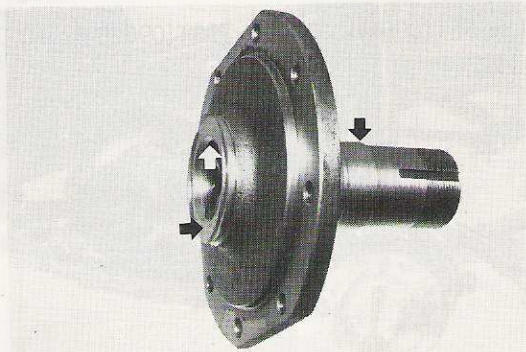

Knuckle Spindle


1. Inspect the parts indicated by arrows for wear and damage.

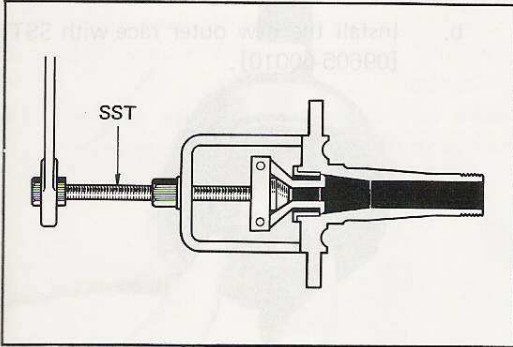Fig. 6-14




2. Bushing replacement
 - a. Remove the bushing with SST[09612-65012].

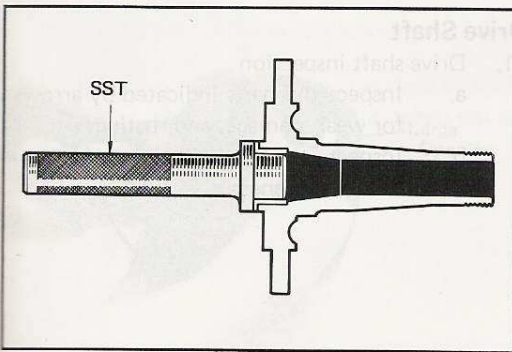Fig. 6-15



- b. Install the new bushing with SST [09618-60010].

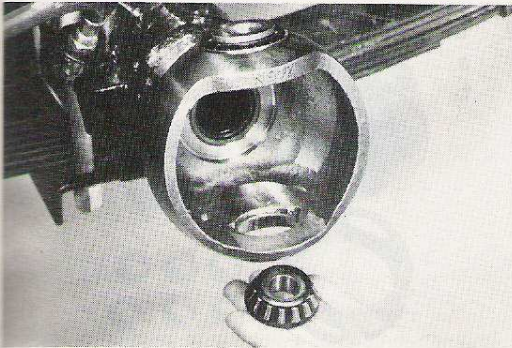
Fig. 6-16



Steering Knuckle Bearing


1. Inspect for wear, damage, and rusting.

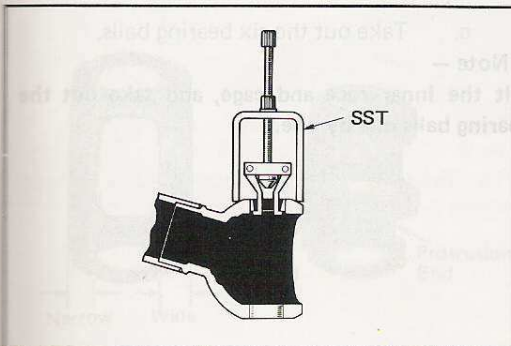Fig. 6-17




2. Outer race replacement
 - a. Remove the bearing outer race with SST[09612-65012].

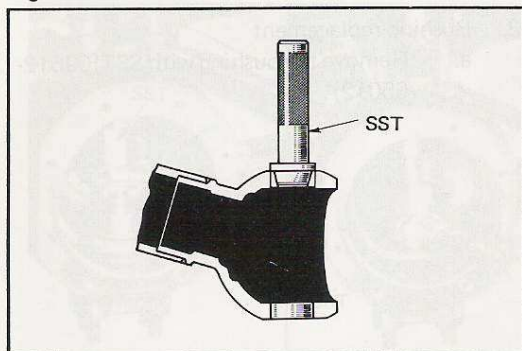Fig. 6-18



- b. Install the new outer race with SST [09605-60010].

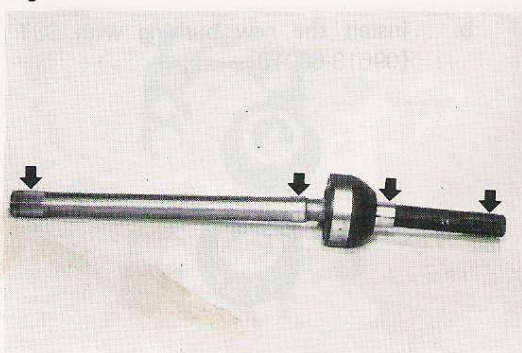
Fig. 6-19



Drive Shaft


1. Drive shaft inspection
 - a. Inspect the parts indicated by arrows for wear, damage, and rusting.
 - b. Inspect the Birfield joint for excessive looseness.

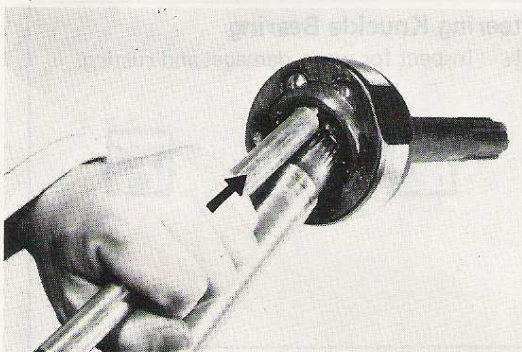Fig. 6-20



2. Drive shaft disassembly
 - a. Hold the inner shaft in a vise.
 - b. Place a drift against the inner race and drive out the outer shaft.

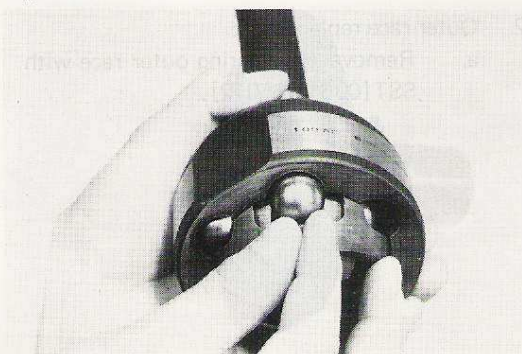Fig. 6-21



- c. Take out the six bearing balls.
- Note —
Tilt the inner race and cage, and take out the bearing balls one by one.

Fig. 6-22




- d. Remove the cage and inner race from the outer shaft.

— Note —

Fit the two large openings in the cage against the protruded parts of the outer shaft, and pull out the cage and inner race.

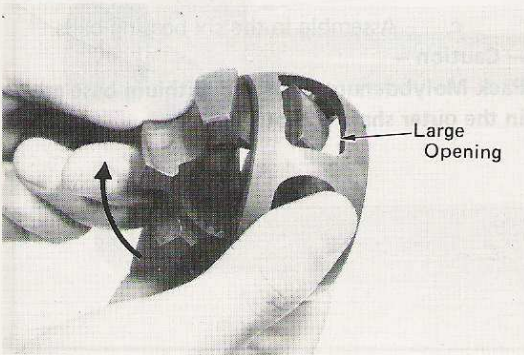Fig. 6-23




- e. Take out the inner race from the cage through the large opening in the cage.

Fig. 6-24



3. Drive shaft inner parts inspection. Inspect for wear, damage, and rusting.

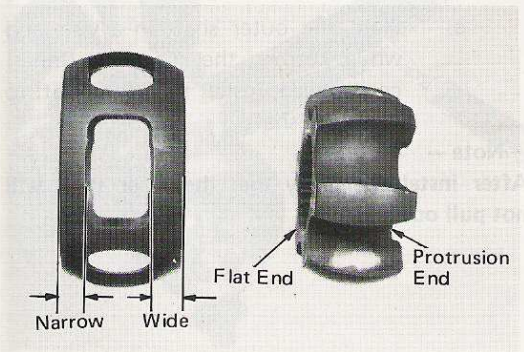Fig. 6-25




4. Drive shaft reassembly
a. Assemble the inner race to the cage by inserting it through the large opening in the cage.

— Caution —

Make sure to position the protrusion end of the race toward the wide side of cage.

Coat with Molybdenum disulphide lithium base grease before assembling.

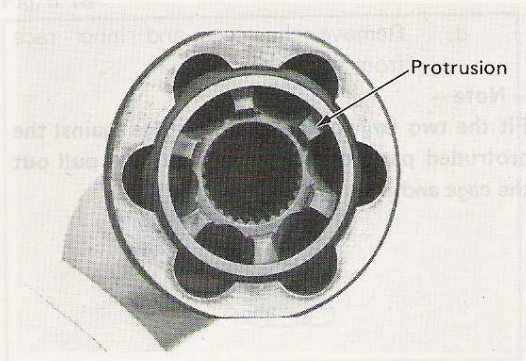Fig. 6-26




- b. Assemble the cage and inner race to the outer shaft.

— Caution —

Make sure to position the cage wide side and race protrusion end toward the outside.

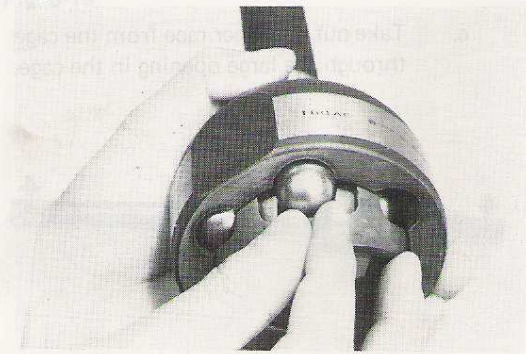Fig. 6-27




- c. Assemble in the six bearing balls.

— Caution —


Pack Molybdenum disulphide lithium base grease in the outer shaft without fail.

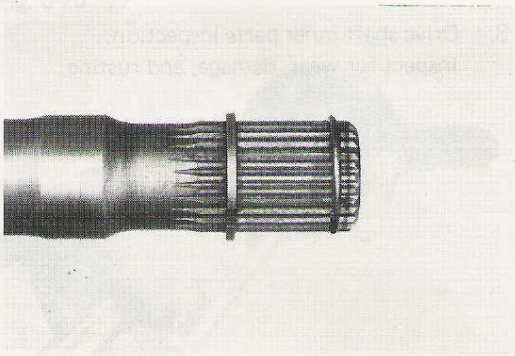Fig. 6-28



- d. Install new snap rings on the inner shaft.

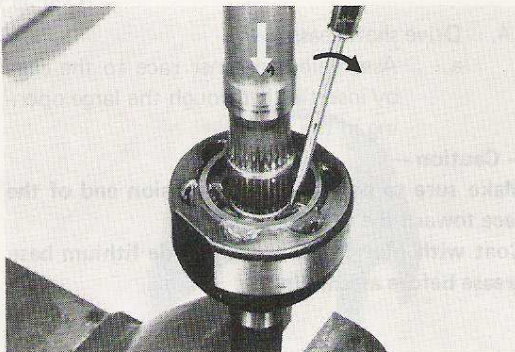Fig. 6-29



- e. Hold the outer shaft in a vise, and while keeping the snap ring (inner) compressed, install the inner shaft to the outer shaft.

— Note —

After installing, verify that the inner shaft will not pull out.

ADJUSTMENT

Whenever the axle housing or the steering knuckle is replaced, the front drive shaft alignment and knuckle bearing preload are adjusted with SST [09634-60012].

Fig. 6-30


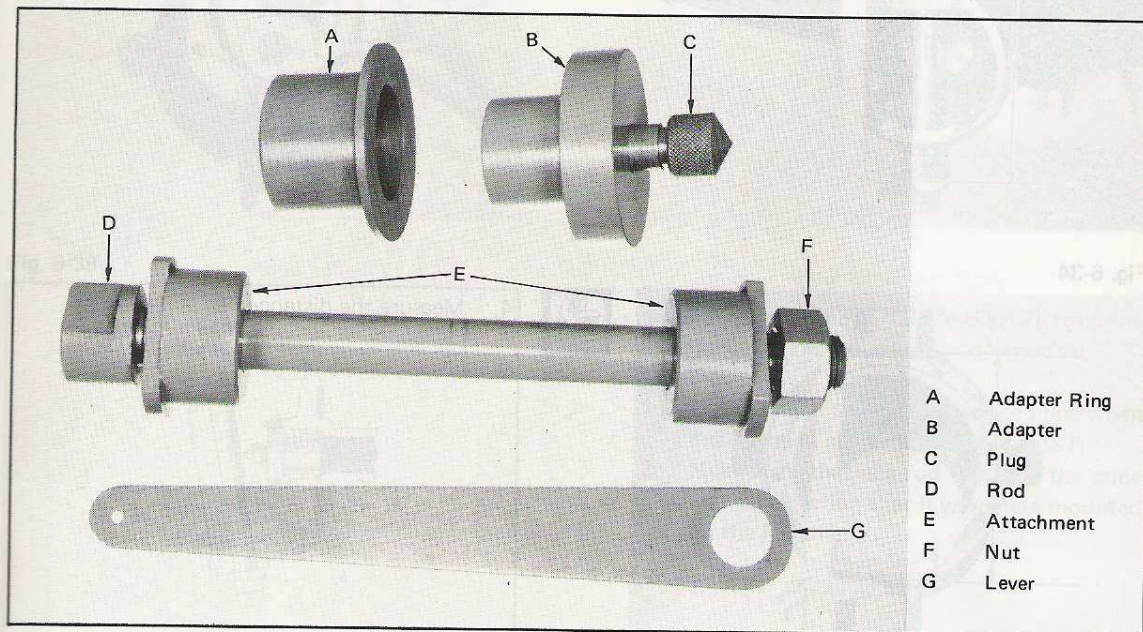


Fig. 6-31

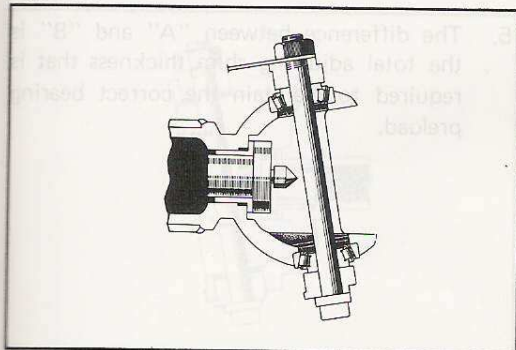


1. Mount the SST [09634-60012] on the housing.

– Note –


Have the knuckle bearings coated lightly with Molybdenum disulphide lithium base grease.

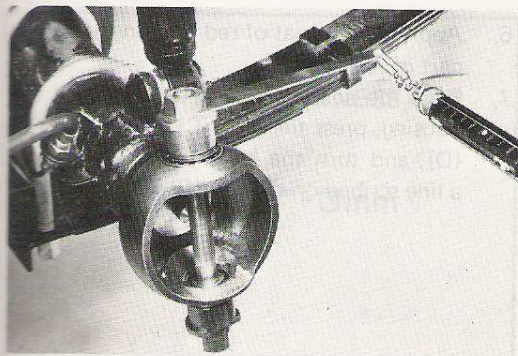Fig. 6-32




2. Tighten the nut (F) until the spring scale indicates about 2.0 – 2.5 kg (4.4 – 5.5 lb.)

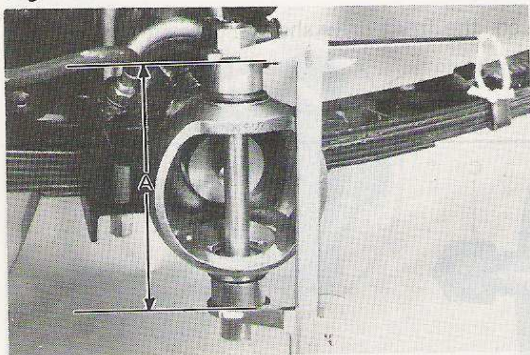Fig. 6-33



3. Measure the distance "A".

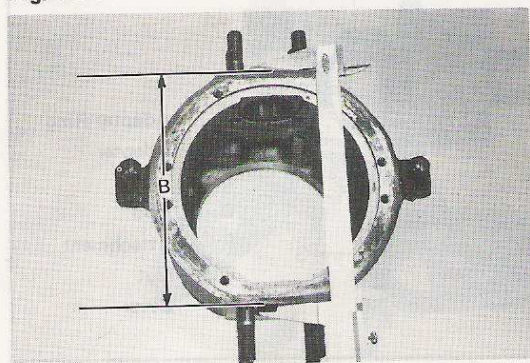Fig. 6-34



4. Measure the distance "B".


Fig. 6-35

TOTAL SHIM THICKNESS "C"

$$\text{"C"} = \text{"A"} - \text{"B"}$$


5. The difference between "A" and "B" is the total adjusting shim thickness that is required to maintain the correct bearing preload.

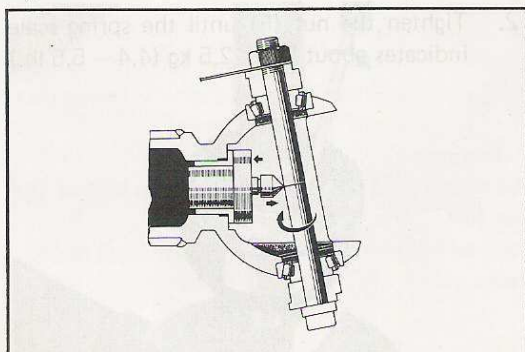Fig. 6-36




6. Apply a light coat of red lead on the center part of rod (D)
7. Press the adapters (A) and (B) against the housing, press the plug (C) against the rod (D), and turn the lever (G) so as to have a line scribed on the rod (D).

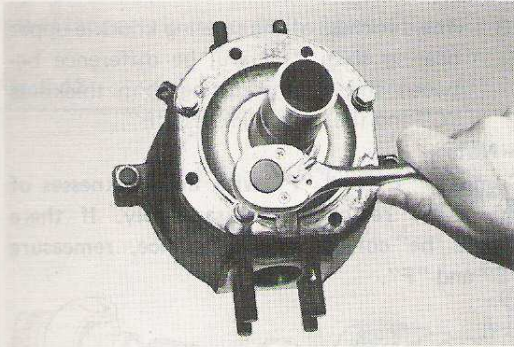Fig. 6-37




8. Bolt on the knuckle spindle to the knuckle.
- Note –
Install the bolt over two washers.

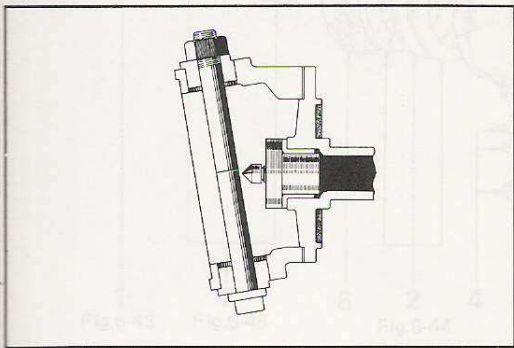Fig. 6-38




9. Dismount the SST [09634-60012] from the housing, and mount it on the knuckle.
- Caution –
1. Use care not to erase the scribed line when dismounting and remounting the SST.
 2. Make sure that the rod (D) is in the same vertical direction that it was when mounted on the housing.

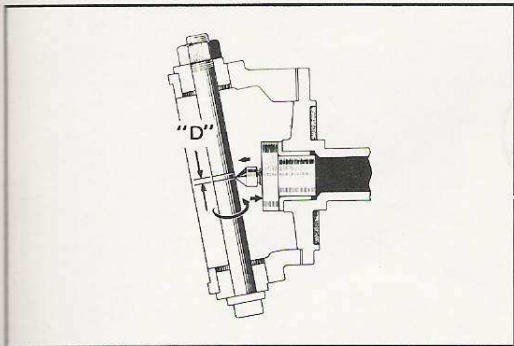Fig. 6-39



10. Turn the rod (D) and scribe another line on it.
11. Measure the distance "D" between the two scribed lines.

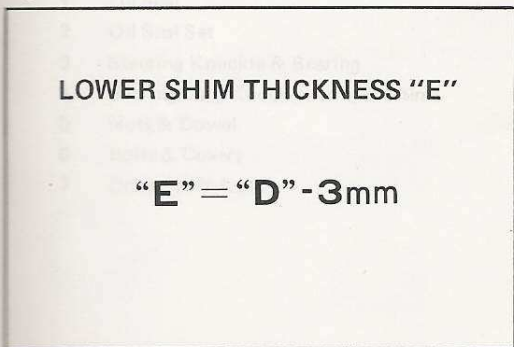Fig. 6-40



12. The thickness of the steering knuckle lower bearing shim "E" will be the distance "D" less 3 mm (0.12 in.)

Fig. 6-41

UPPER SHIM THICKNESS "F"

$$\text{"F"} = \text{"C"} - \text{"E"}$$

13. The thickness of the steering knuckle upper bearing shim "F" will be difference between the total adjusting shim thickness "C" and the shim thickness "E".

— Note —

Compare "E" and "F" with the thicknesses of the shims removed at disassembly. If there should be considerable difference, remeasure "E" and "F".


Fig. 6-31 Adjusting Shim Sizes

Part No.	Thickness mm (in)
43233-60010	0.2 (0.008)
43234-60010	0.5 (0.020)
43233-60020	1.0 (0.04)

INSTALLATION


Install the parts in the order numbered below.

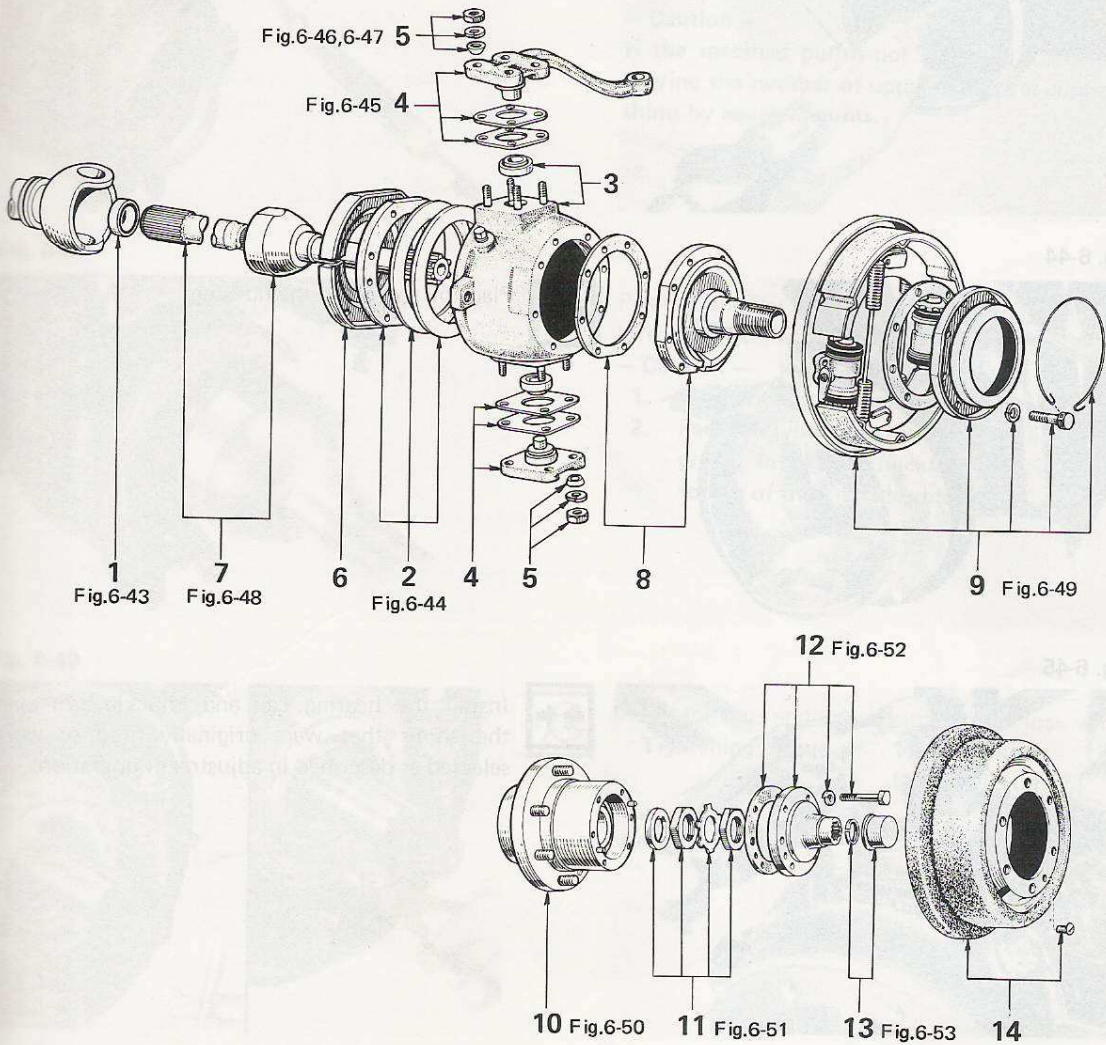Fig. 6-42



- | | | | |
|---|-----------------------------------|----|--------------------------|
| 1 | Oil Seal | 8 | Knuckle Spindle |
| 2 | Oil Seal Set | 9 | Backing Plate Assy. |
| 3 | Steering Knuckle & Bearing | 10 | Axle Hub Assy. |
| 4 | Bearing Cap, Knuckle Arm, & Shims | 11 | Adjusting Nuts & Washers |
| 5 | Nuts & Dowel | 12 | Flange |
| 6 | Bolts & Covers | 13 | Cap & Snap Ring |
| 7 | Drive Shaft Assy. | 14 | Brake Drum |

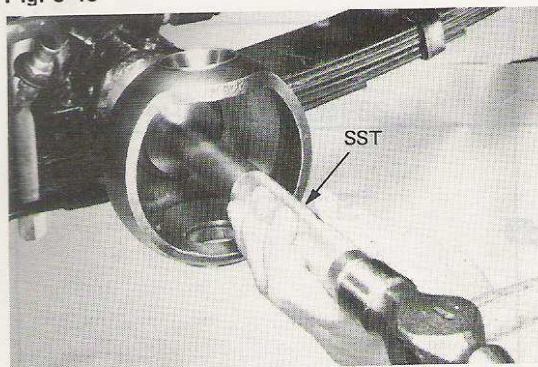Fig. 6-43




Use SST [09618-60010].

— Note —


Apply multipurpose grease to the seal lip.

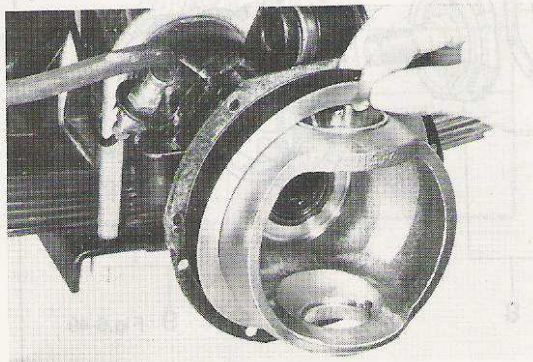Fig. 6-44




Place oil seal set in the housing.

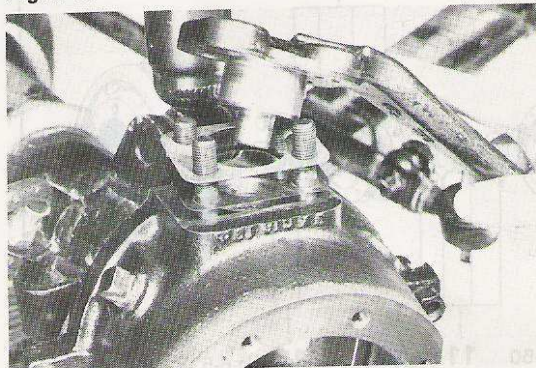Fig. 6-45



Install the bearing cap and knuckle arm over the shims that were originally used or were selected as described in adjustment operations.

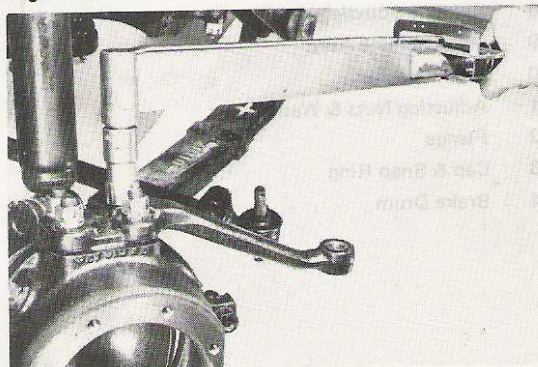Fig. 6-46




Tighten the nut.

Specified torque

**6 – 7.5 kg-m
(43 – 54.3 ft-lb)**

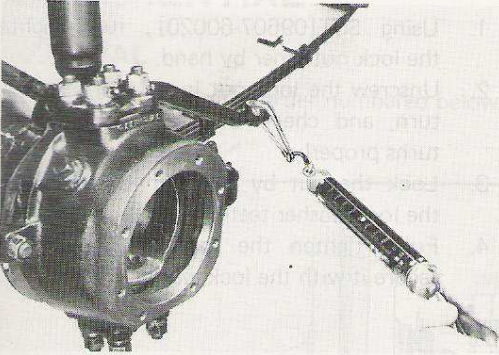Fig. 6-47



1. Measure the knuckle bearing preload.


Specified pull 1.8 – 2.3 kg
(3.9 – 5.0 lb)

2. Install the tie rod end to the knuckle arm.

– Caution –

If the specified pull is not indicated, correct by varying the number of upper and lower adjusting shims by equal amounts.

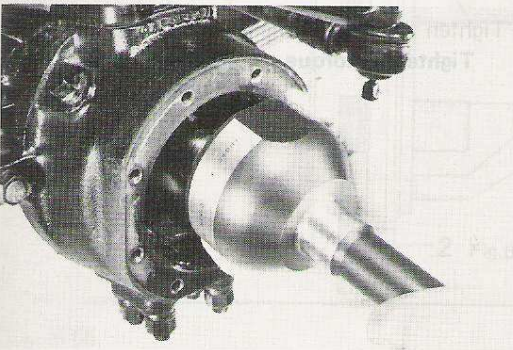Fig. 6-48




Position the flat part of the outer shaft in vertical direction and install the drive shaft assembly.

– Caution –

1. Use care not to damage the oil seal lip.
2. Pack Molybdenum disulphide lithium base grease into the knuckle to about three-fourth of the knuckle volume.

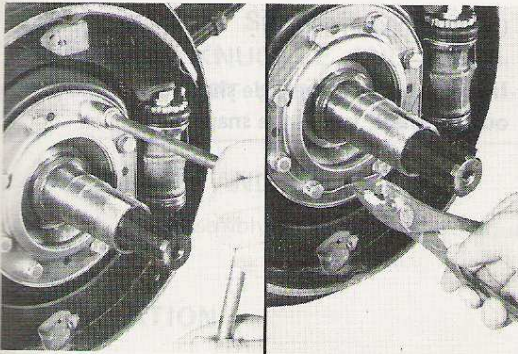Fig. 6-49



Install the nuts and lock them with the lock wire.

Tightening torque 1.5 – 2.2 kg-m
(10.9 – 16.0 ft-lb)


Fig. 6-50



Pack multipurpose grease into the hub and bearing.


Apply multipurpose grease to the oil seal lip.

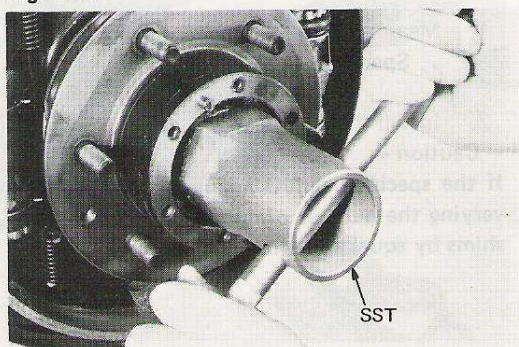Fig. 6-51



1. Using SST[09607-60020], fully tighten the lock nut inner by hand.
2. Unscrew the lock nut inner 1/8th to 1/6th turn, and check the hub to see that it turns properly.
3. Lock the nut by bending inward one of the lock washer teeth.
4. Fully tighten the lock nut outer, and secure it with the lock washer.

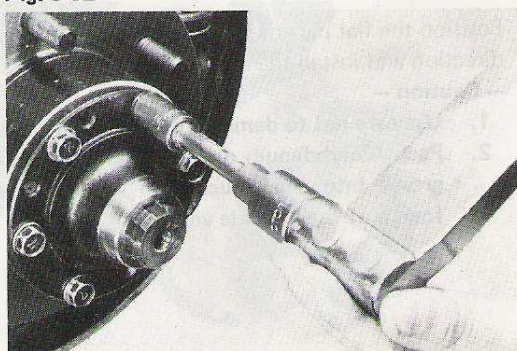
Fig. 6-52



Tighten the bolts at the specified torque.

Tightening torque **1.5 – 2.2 kg-m**
 (10.9 – 16.0 ft-lb)

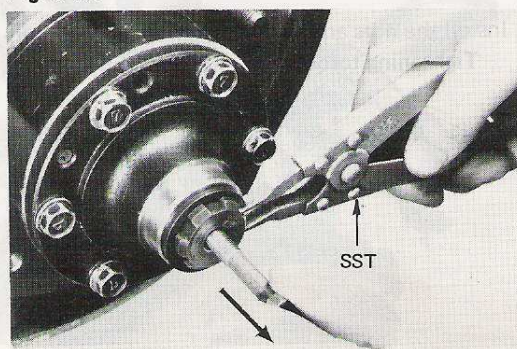Fig. 6-53



Use SST[09905-00010].

— Note —

Install a bolt on the axle shaft, and while pulling out the shaft, install the snap ring.

DIFFERENTIAL

REMOVAL

Remove the parts in the order numbered below.

Fig. 6-54

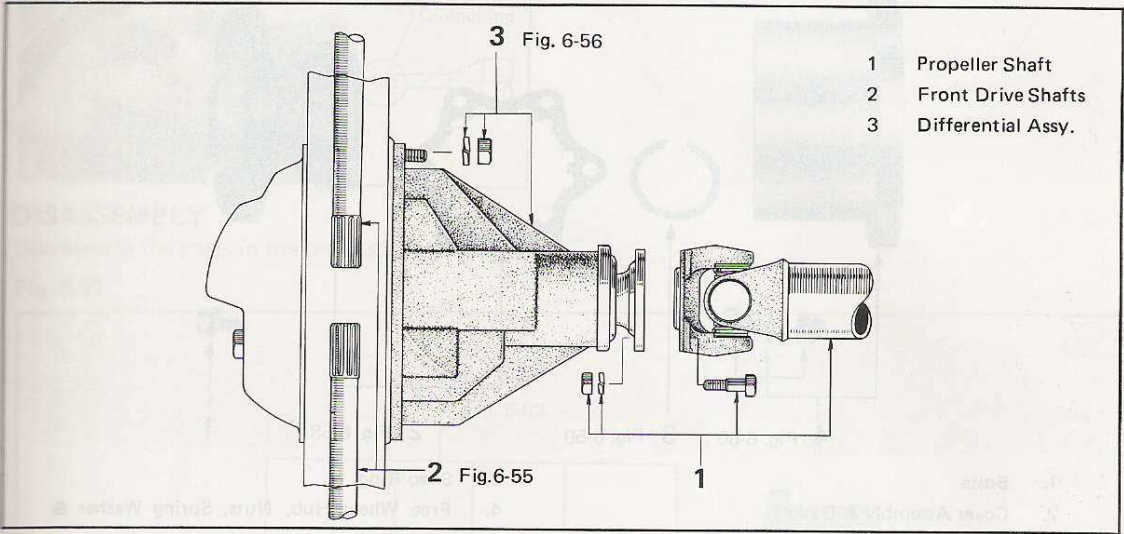


Fig. 6-55

SEE
STEERING KNUCKLE AND AXLE
SHAFT SECTION

Remove the axle shafts.


DISASSEMBLY AND ASSEMBLY

Refer to the disassembly and assembly procedures for the differential in the Rear Axle and Rear Suspension Section.

INSTALLATION

Perform the removal in reverse order.

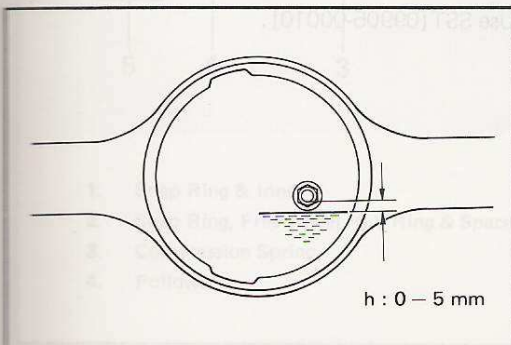Fig. 6-56



After installing the axle shaft fill in hypoid gear oil SAE90, API GL-5.

Standard capacity

FJ, BJ & HJ series

2.5 liter

(2.6 US.qts., 2.2 Imp.qts.)

FREE WHEEL HUB

REMOVAL

Remove the parts in the order shown below.

Fig. 6-57


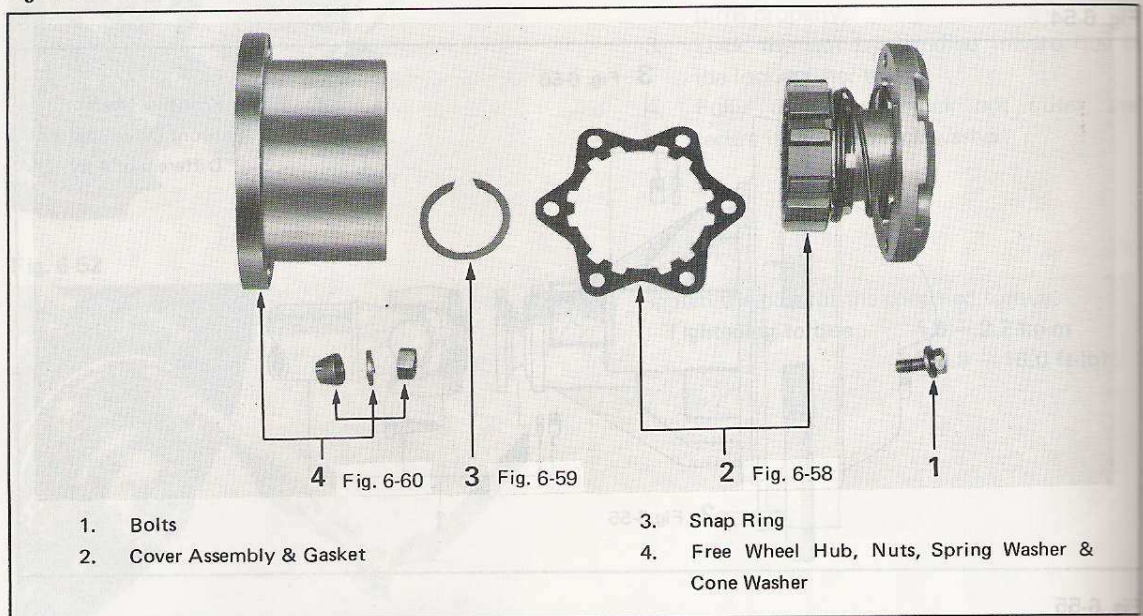


Fig. 6-58

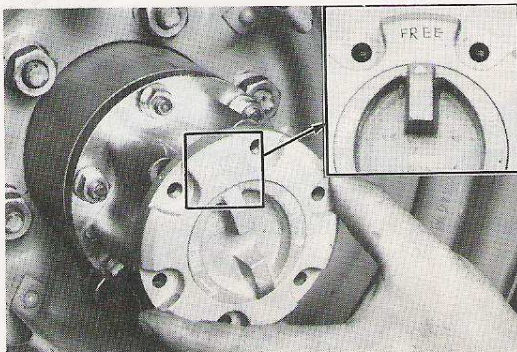


Remove the cover assembly.

— Note —

The hub control handle should be set to FREE.

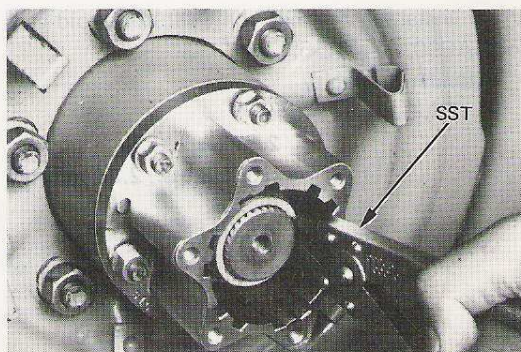Fig. 6-59



Use SST [09905-00010].


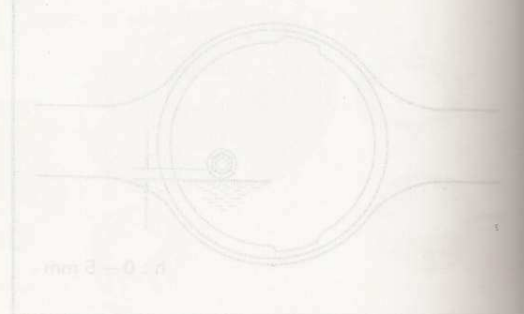


Fig. 6-60

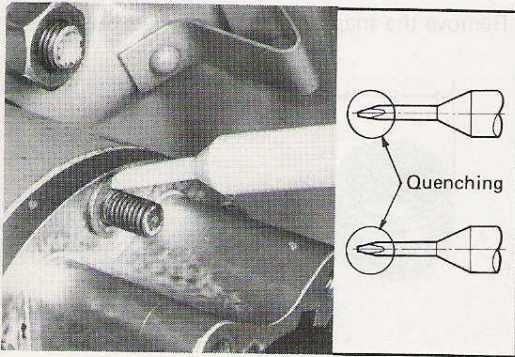


Remove the cone washer.

DISASSEMBLY

Disassemble the parts in the order shown below.

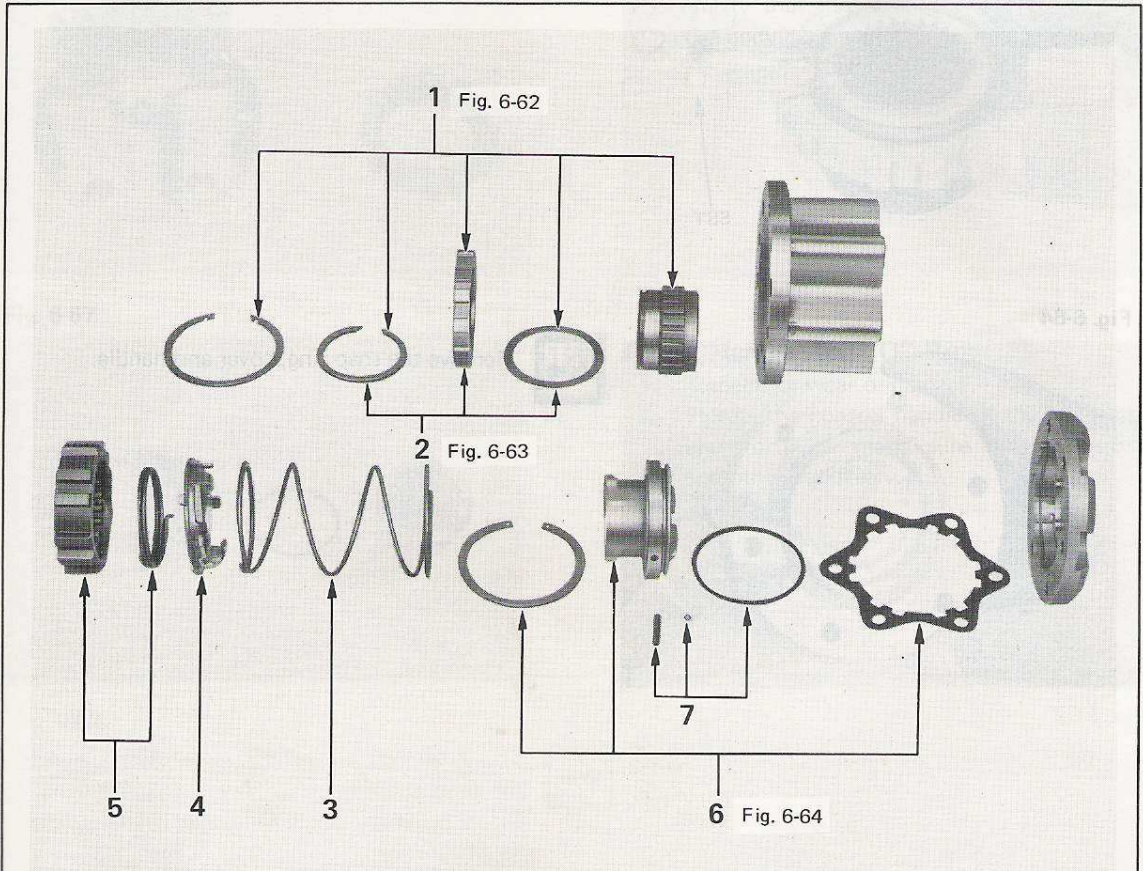
Fig. 6-61



1. Snap Ring & Inner
2. Snap Ring, Free Wheel Hub Ring & Spacer
3. Compression Spring
4. Follower


5. Tension Spring & Clutch
6. Snap Ring, Handle & Cover
7. "O" Ring, Spring & Ball

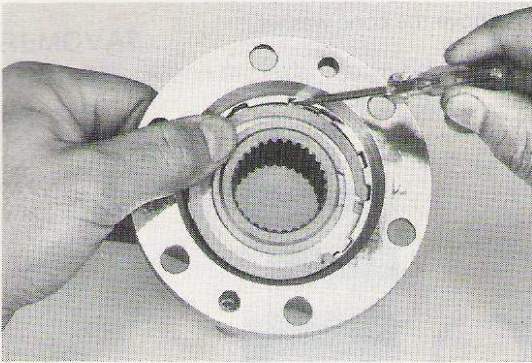Fig. 6-62




Remove the snap ring and free wheel hub ring.

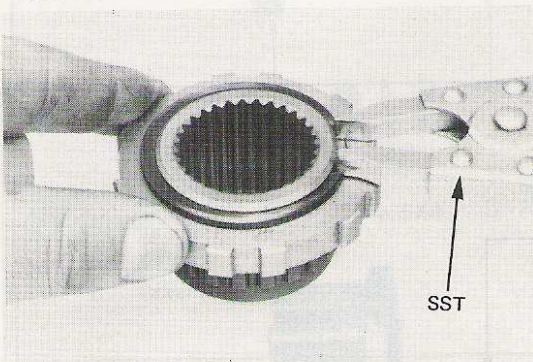Fig. 6-63




Use SST [09905-00010].

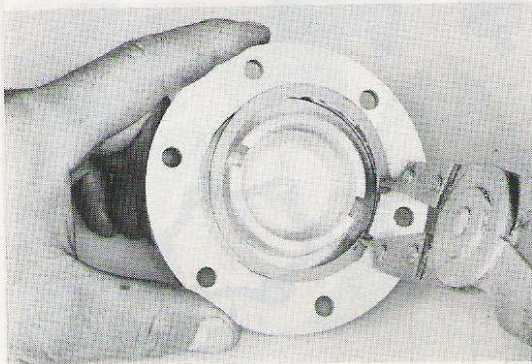Fig. 6-64



Remove the snap ring, cover and handle.

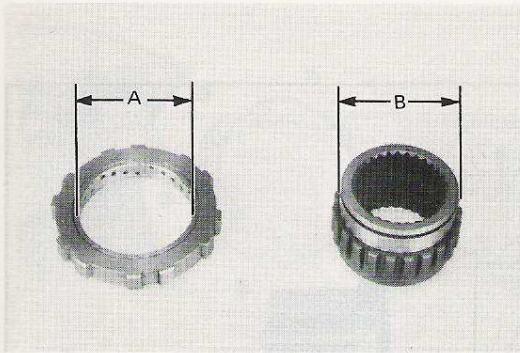Fig. 6-65



INSPECTION




Wash the disassembled parts and inspect them on the following points.



Inner And Free Wheel Hub Ring

1. Inspect for wear or damage.
2. **Oil clearance limit (A — B)**
0.3 mm (0.012 in.)

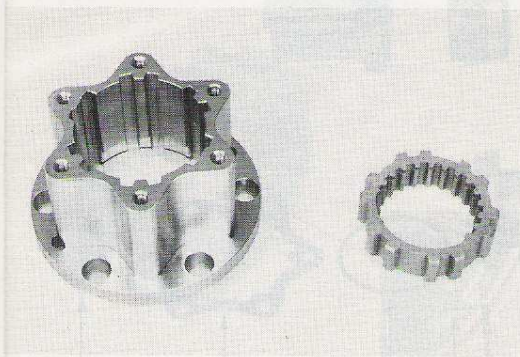
Fig. 6-66



Body And Clutch

1. Inspect for wear, damage or rust.
2. Verify that the clutch moves smoothly in the body.

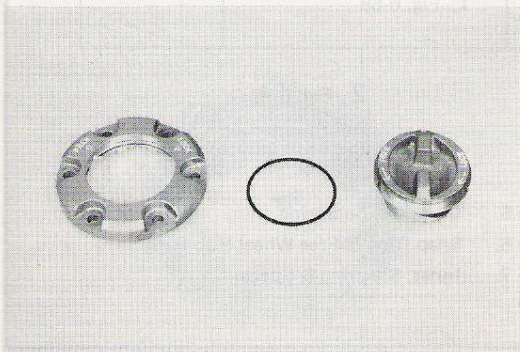Fig. 6-67



Cover, Handle And "O" Ring

1. Inspect for wear or damage.
2. Rotate the control handle of the hub back and forth to make sure that it moves smoothly and freely.

ASSEMBLY

Assemble the parts in the order shown below.

Fig. 6-68



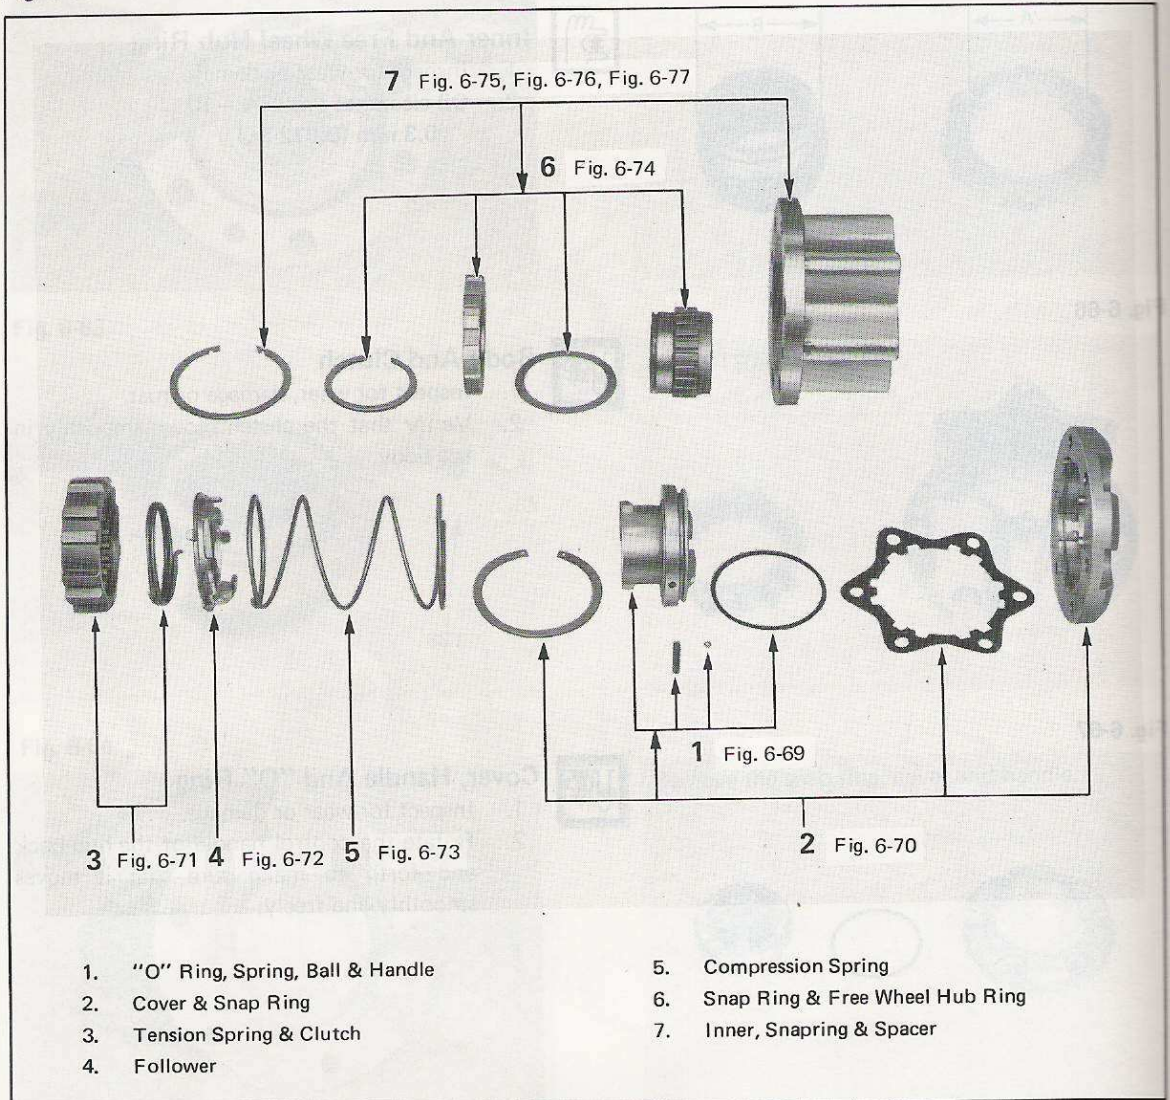


Fig. 6-69

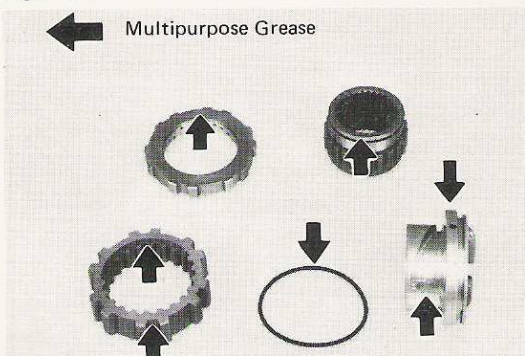


Apply MP grease on the arrow mark portion, before assembling.
Before assembly, apply MP grease as indicated on the photo.

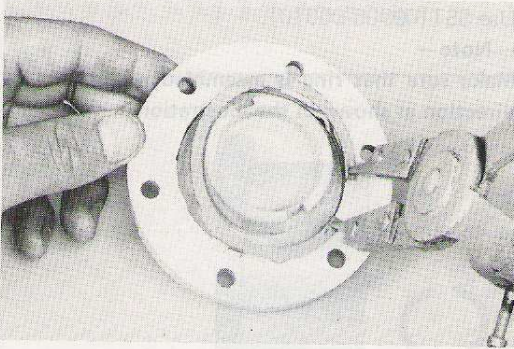Fig. 6-70



Install the handle in the cover.

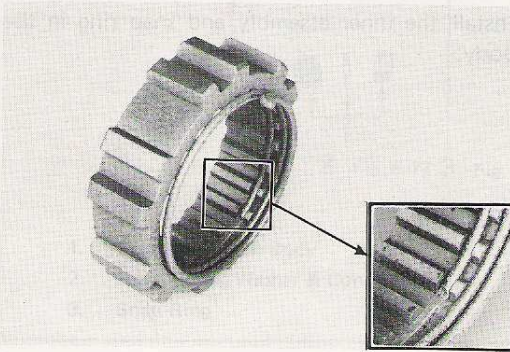Fig. 6-71




Install the tension spring in the clutch.

— Note —


Fit the spring end into the clutch spring so as to be aligned with the initial groove.

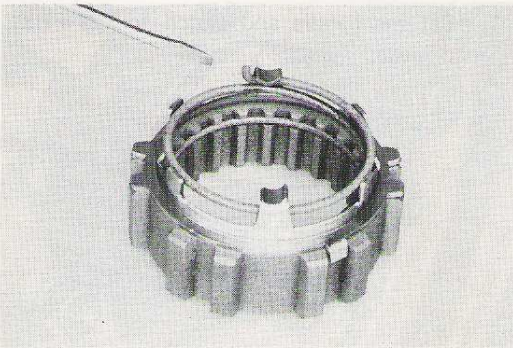Fig. 6-72




Fit follower pawl together with spring bent portion.

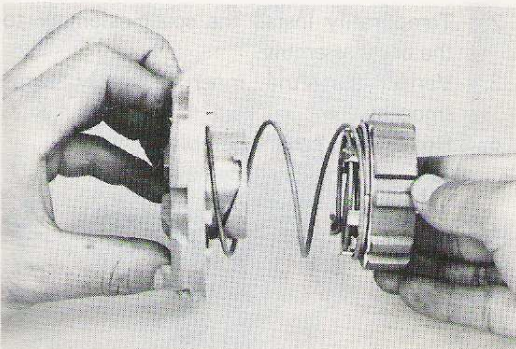Fig. 6-73



Install the clutch and spring into the handle assembly.

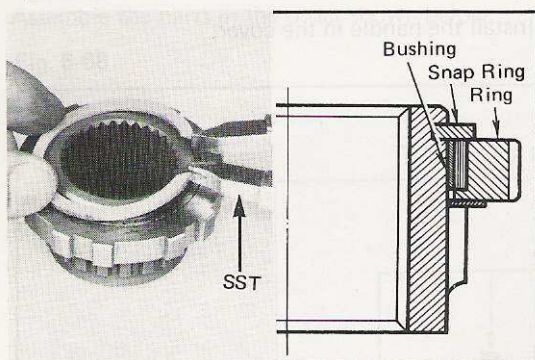Fig. 6-74




Use SST [09905-00010].

— Note —


Make sure that ring is assembled in the correct direction as shown in the illustration.

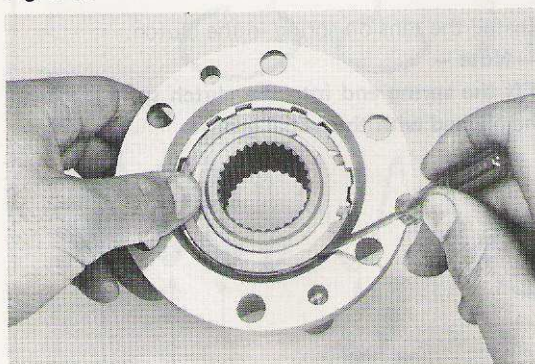Fig. 6-75




Install the inner assembly and snap ring in the body.

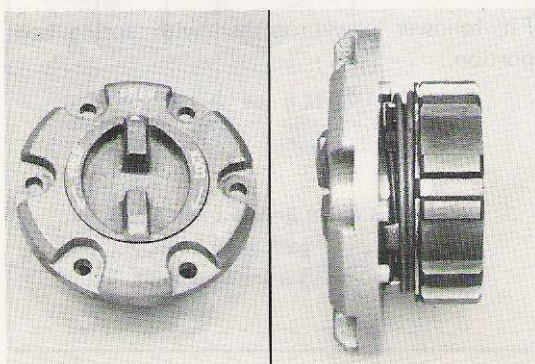Fig. 6-76



1. Set the handle and clutch to the FREE position.

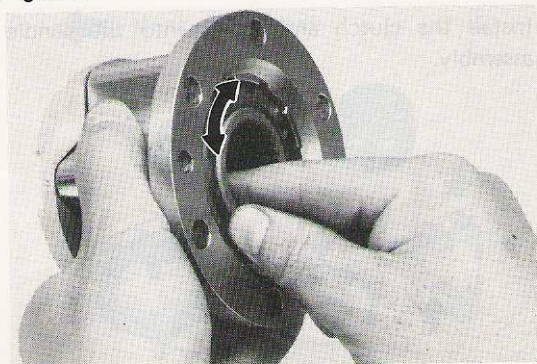Fig. 6-77



2. Temporarily install the cover assembly to the body assembly.
3. Verify that the inner assembly turns smoothly.
4. Remove the cover assembly.

INSTALLATION

Install the parts in the order shown below.

Fig. 6-78


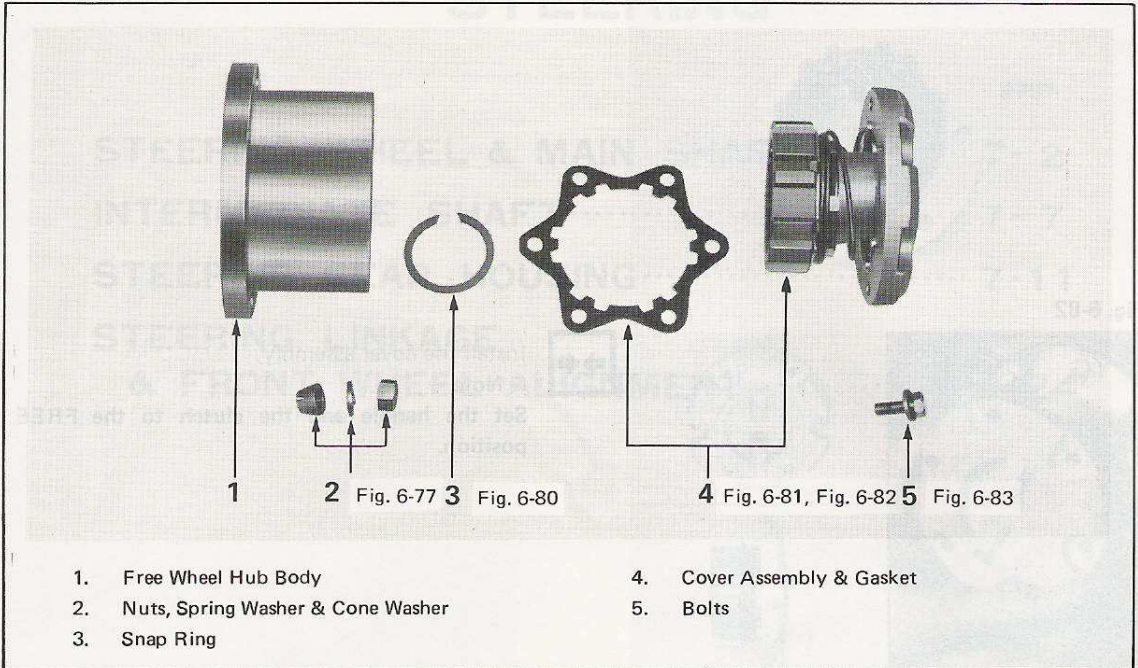



Fig. 6-79

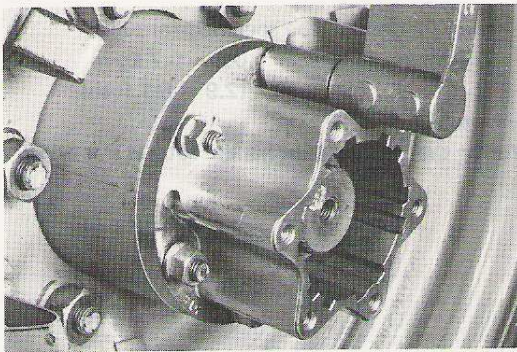

Tighten six nuts to the specified torque.

Tightening torque 2.5 – 3.5 kg-m
(18.1 – 25.3 ft-lb)

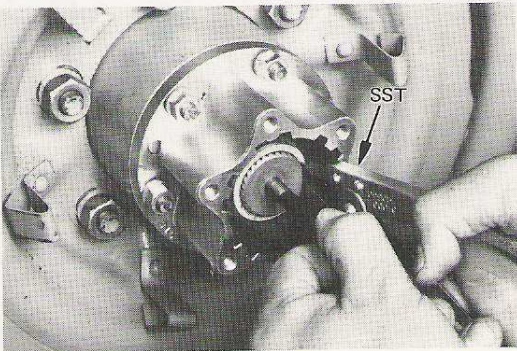Fig. 6-80




Use SST [09905-00010].

— Note —


Gripping a bolt, pull the axle shaft out to install the snap ring.

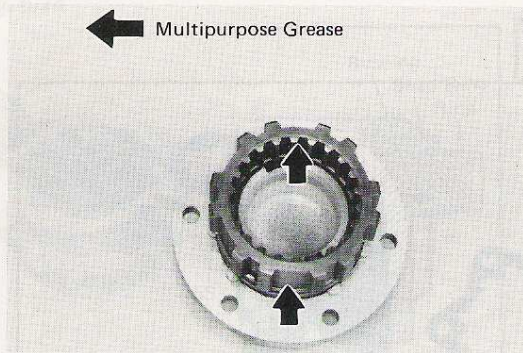Fig. 6-81



Apply MP grease on the portion indicated.

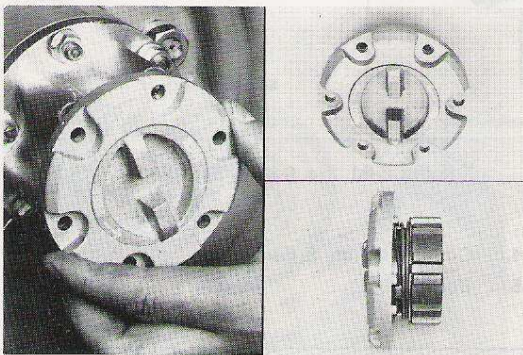Fig. 6-82




Install the cover assembly.

— Note —

Set the handle and the clutch to the FREE position.

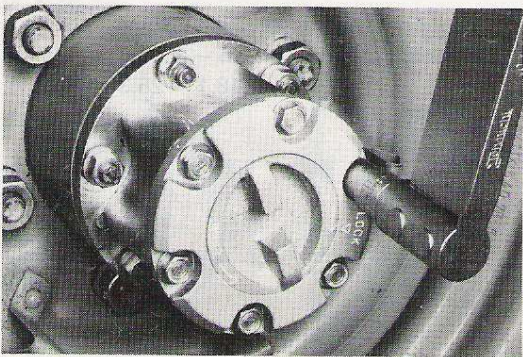Fig. 6-83



Tighten six bolts to the specified torque.

Tightening torque 0.4 – 0.7 kg-m
 (2.9 – 5.1 ft-lb)

— Note —

Verify that the control handle rotates smoothly.

Fig. 7-2

STEERING WHEEL AND MAIN SHAFT

STEERING

page

STEERING WHEEL & MAIN SHAFT	7- 2
INTERMEDIATE SHAFT	7- 7
STEERING GEAR HOUSING	7-11
STEERING LINKAGE & FRONT WHEEL ALIGNMENT	7-24


STEERING WHEEL AND MAIN SHAFT

REMOVAL

Remove the parts in the order numbered below.

Fig. 7-1

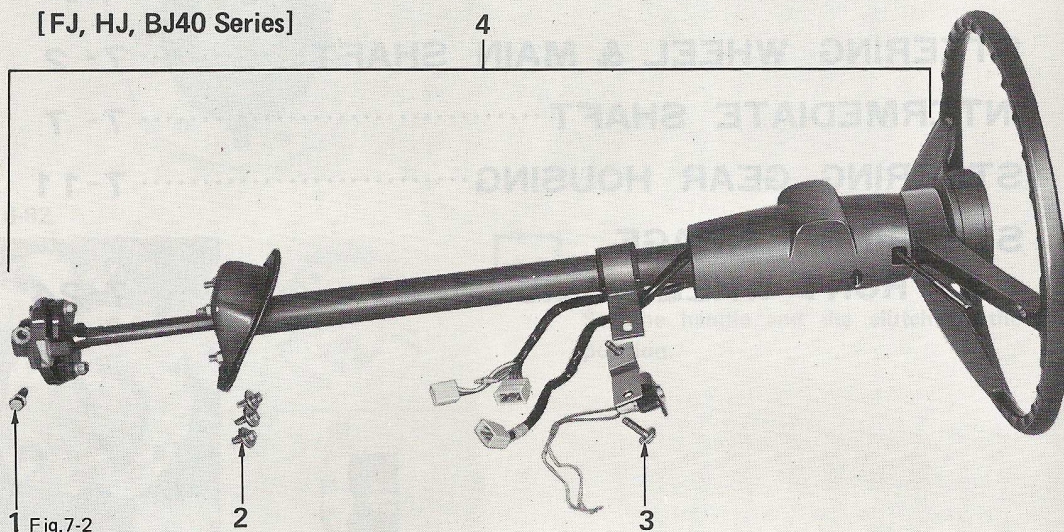
[FJ, HJ, BJ40 Series]



- 1 Lock Bolt
- 2 Oil Cover Bolts

- 3 Upper Bracket
- 4 Steering Column Assy.

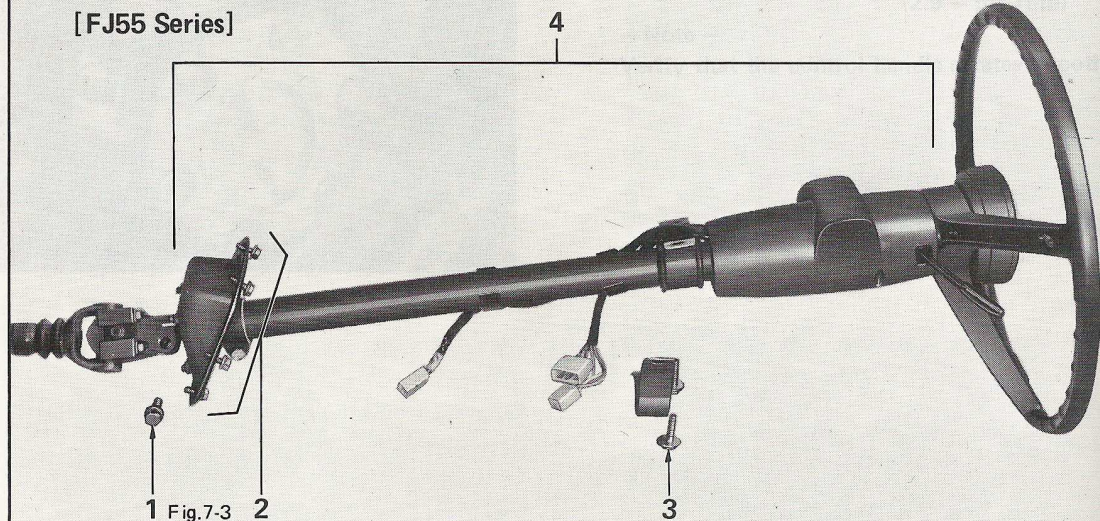
[FJ55 Series]



- 1 Lock Bolt
- 2 Hole Cover Bolts


- 3 Upper Bracket
- 4 Steering Column Assy.

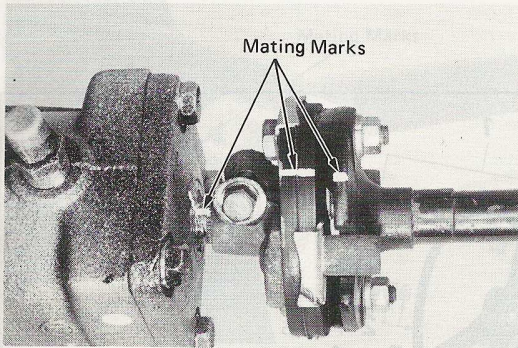Fig. 7-2



Place mating marks on the gear box, couplings, and main shaft.

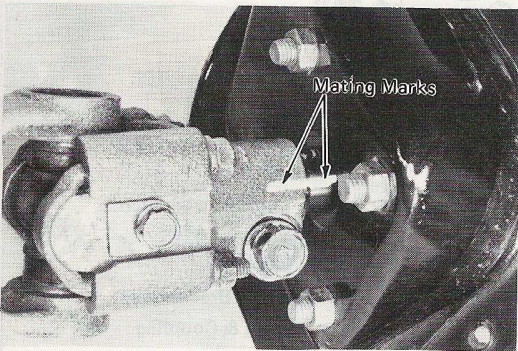Fig. 7-3



Place mating marks on the yoke and main shaft.

INSPECTION

(FJ, HJ, BJ40 Series)

Inspect the shaft, bearing and couplings for damage, wear, and cracks.

(FJ55 Series)

Inspect the shaft, bearing and couplings for damage, wear, and cracks.


- 1 Pad
- 2 Steering Wheel Assy
- 3 Housing
- 4 Turn Signal Switch
- 5 Retainer
- 6 Bearing
- 7 Coupling
- 8 Shaft
- 9 Hole Cover
- 10 Bearing

DISASSEMBLY

Disassemble the parts in the order numbered below.

Fig. 7-4

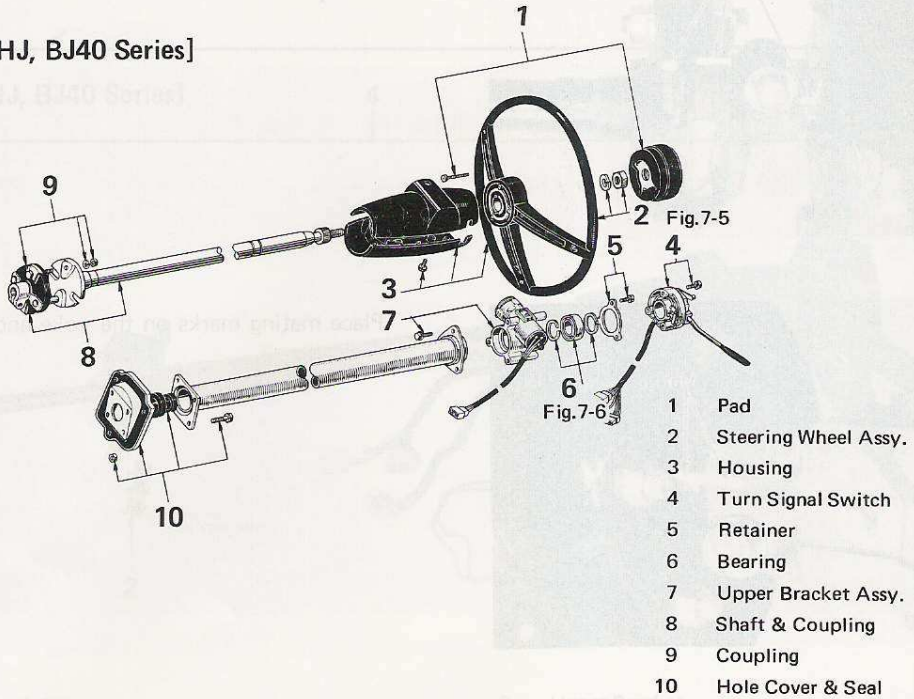[FJ, HJ, BJ40 Series]



[FJ55 Series]


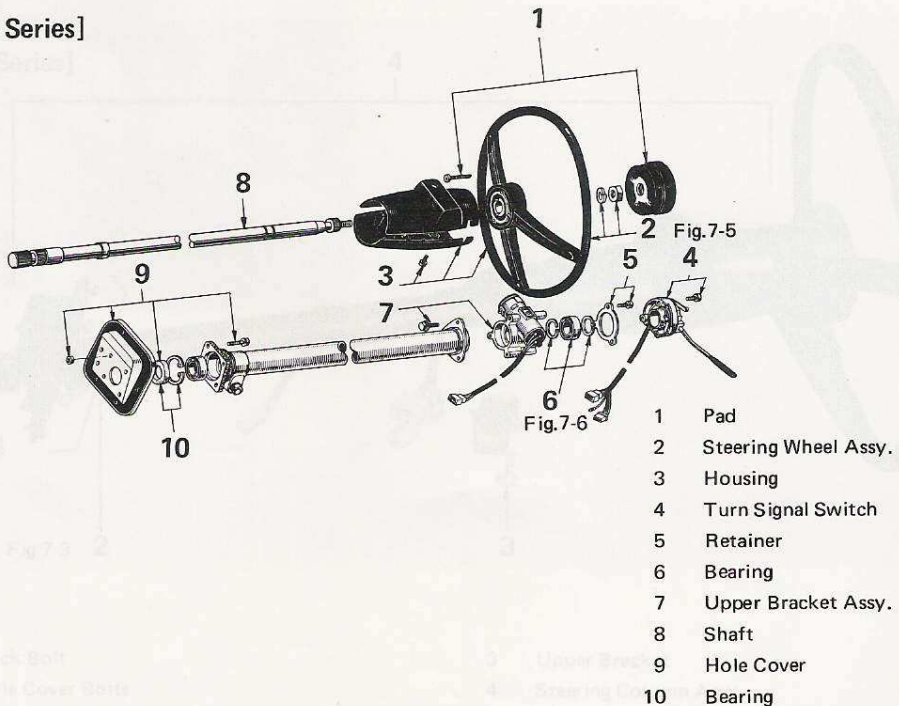



Fig. 7-5

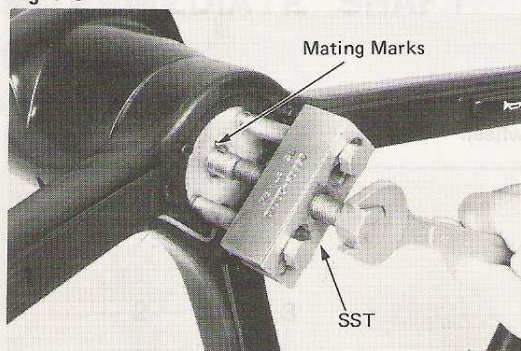

Place mating marks on the shaft and steering wheel.


Use SST [09609-20010] to remove the steering wheel.

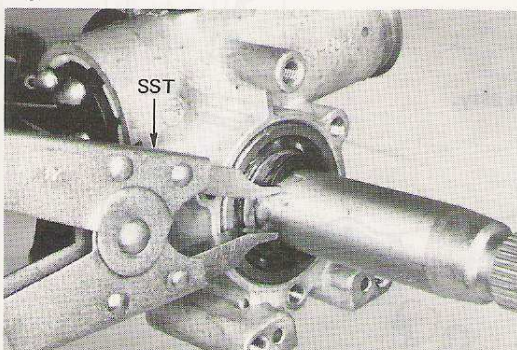Fig. 7-6



Use SST [09905-00010]

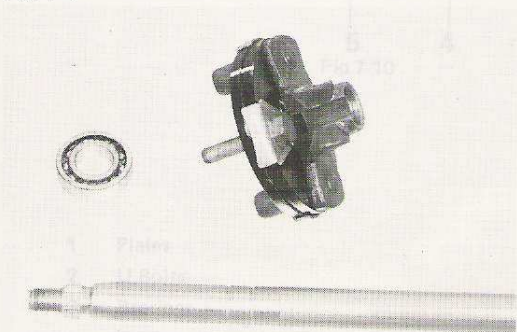Fig. 7-7



INSPECTION




[FJ, HJ, BJ40 Series]

Inspect the shaft, bearing, and coupling for damage, wear, and cracks.

- 4 Snap Rings
- 5 Spider & Bearings
- 6 Gears

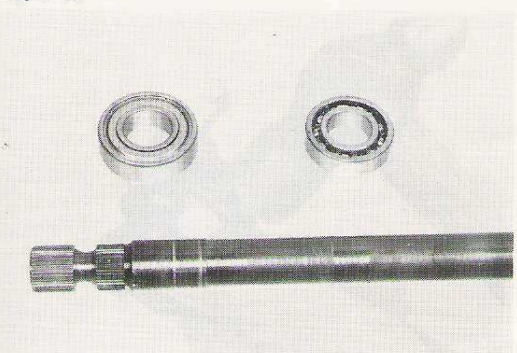Fig. 7-8



[FJ55 Series]

Inspect the shaft and bearings for damage, wear, and cracks.

Hold downward the bearing and spider of the other and while tapping the yoke.

ASSEMBLY

Perform the disassembly in reverse order.

– Note –

1. Pack grease into the upper bearing.
2. Align the mating marks when installing the steering wheel.

INSTALLATION

Perform the removal in reverse order.

– Note –

Align the mating marks when installing the steering column assy.

INTERMEDIATE SHAFT

DISASSEMBLY

Disassemble the parts in the order numbered below.

Fig. 7-9


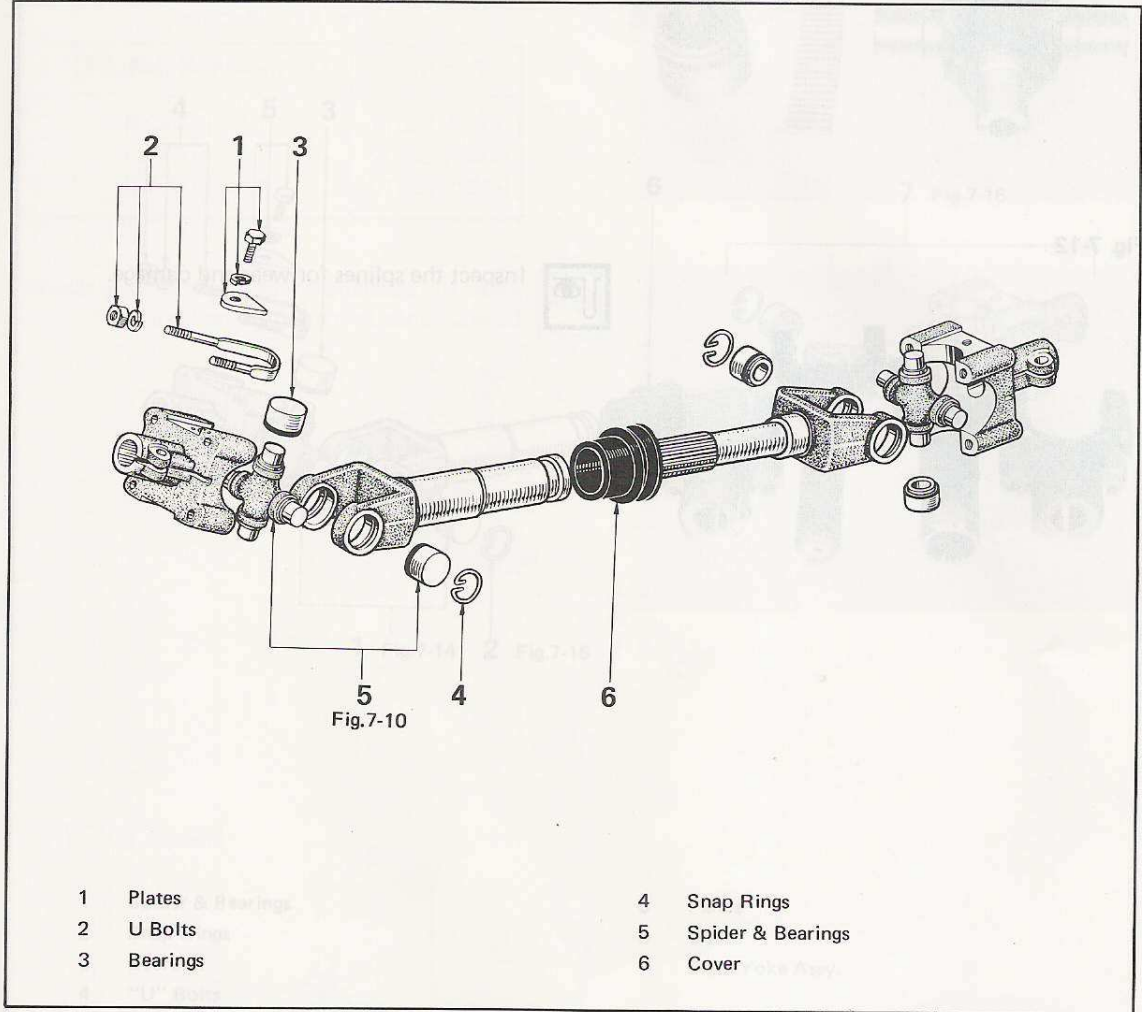


Fig. 7-10

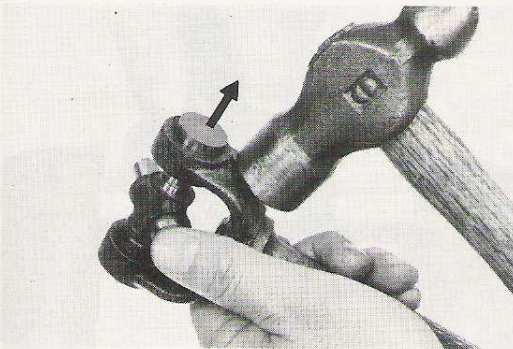


Remove the bearing cup by lightly tapping the yoke with a hammer.

— Note —

Hold downward the bearing and spider at the other end while tapping the yoke.

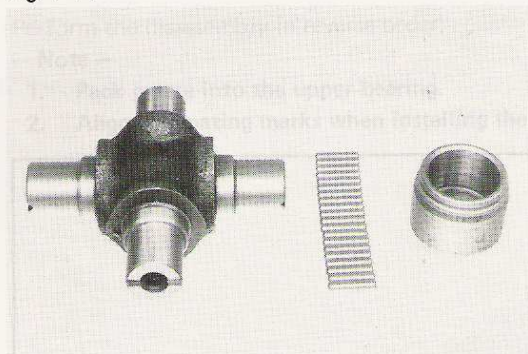Fig. 7-11




INSPECTION



Inspect the spider and bearing for damage and wear.


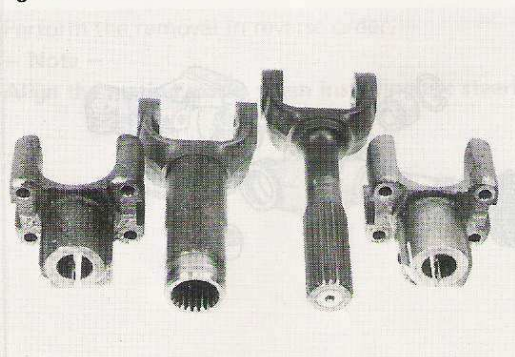
Fig. 7-12



Inspect the splines for wear and damage.


ASSEMBLY

Assemble the parts in the order numbered below.

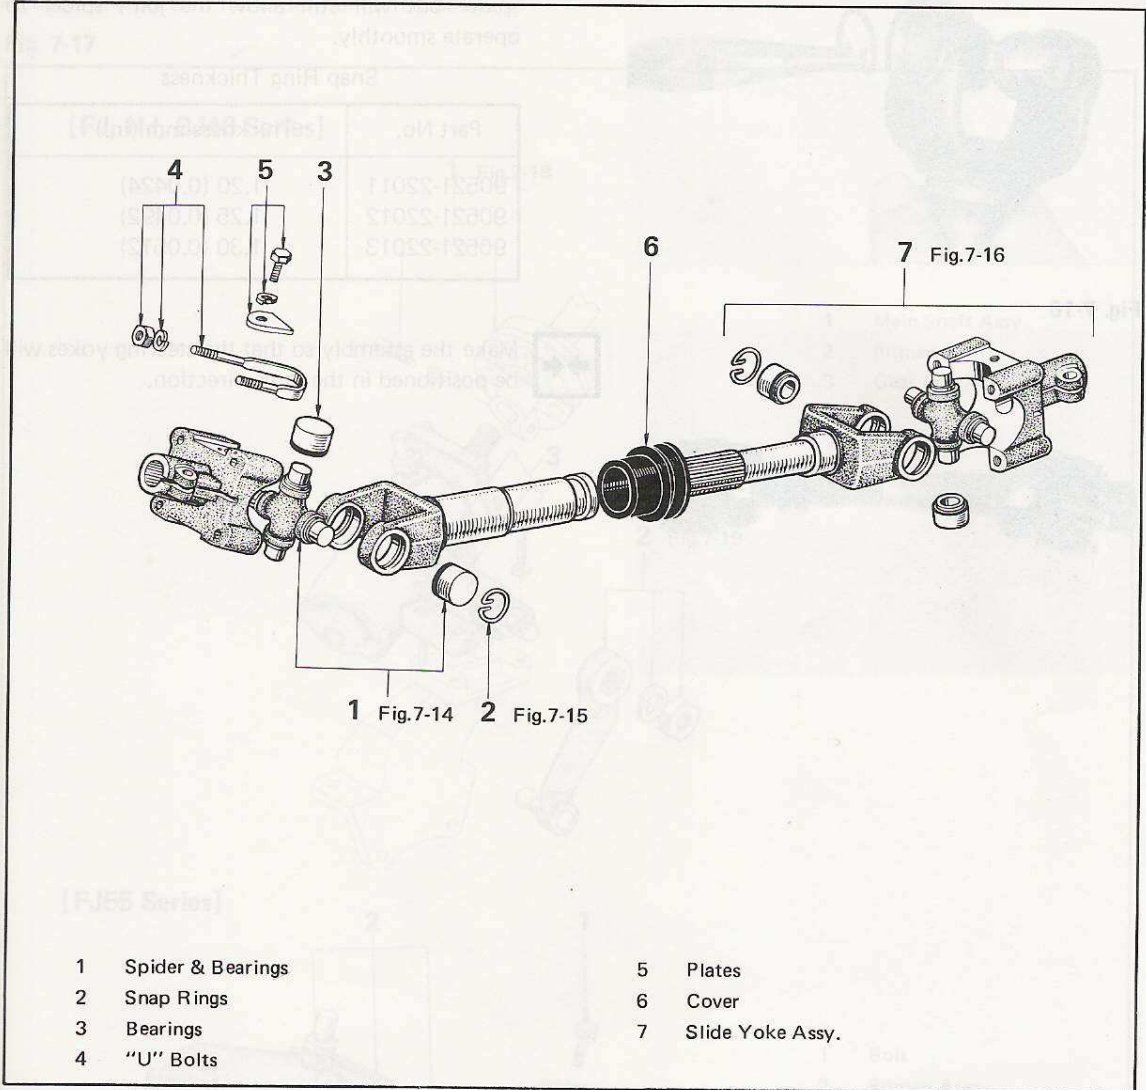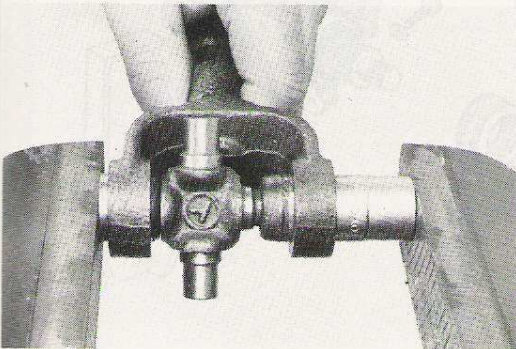Fig. 7-13**Fig. 7-14**

Using a vise, assemble the bearings.

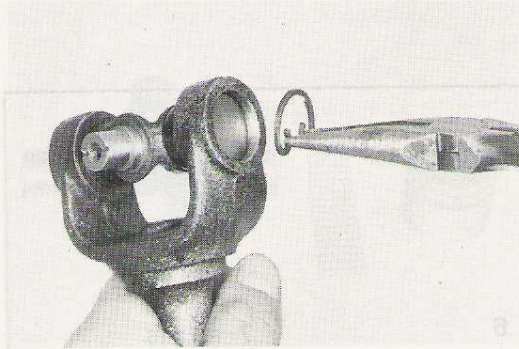Fig. 7-15




Select snap rings of the thickness that will provide minimum thrust clearance in the joint spider but will still allow the joint spider to operate smoothly.

Snap Ring Thickness

Part No.	Thickness mm (in.)
90521-22011	1.20 (0.0424)
90521-22012	1.25 (0.0492)
90521-22013	1.30 (0.0512)

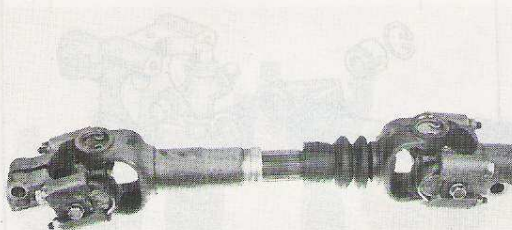Fig. 7-16



Make the assembly so that the steering yokes will be positioned in the same direction.


STEERING GEAR HOUSING

REMOVAL

Remove the parts in the order numbered below.


Fig. 7-17

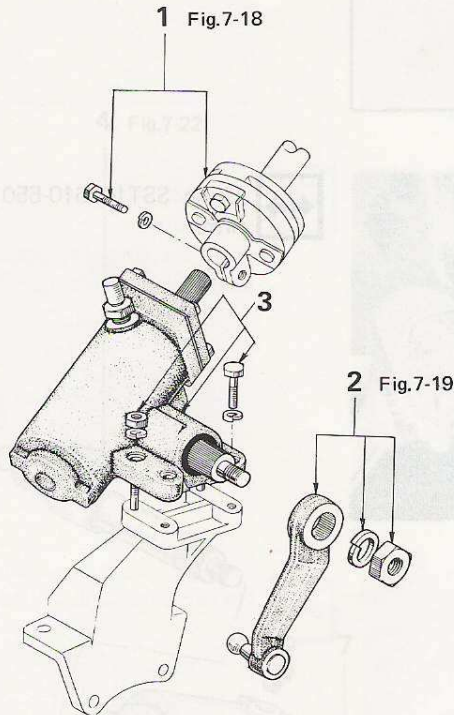[FJ, HJ, BJ40 Series]




- 1 Main Shaft Assy.
- 2 Pitman Arm
- 3 Gear Box Assy.

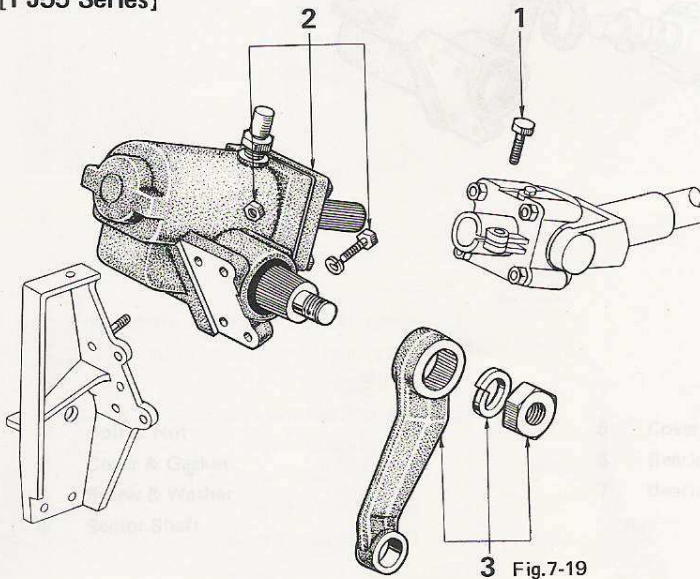[FJ55 Series]



- 1 Bolt
- 2 Pitman Arm
- 3 Gear Box Assy.

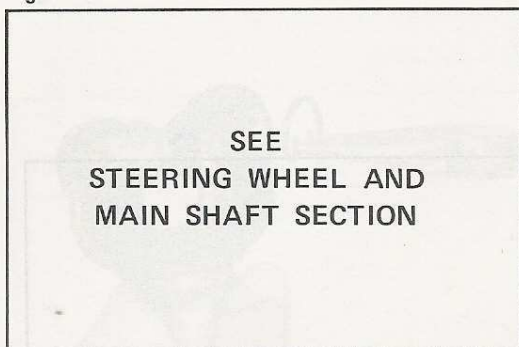Fig. 7-18



Remove the steering wheel and main shaft.

Fig. 7-19




Using SST [09610-55011], remove the pitman arm.



DISASSEMBLY


Disassemble the parts in the order numbered below.

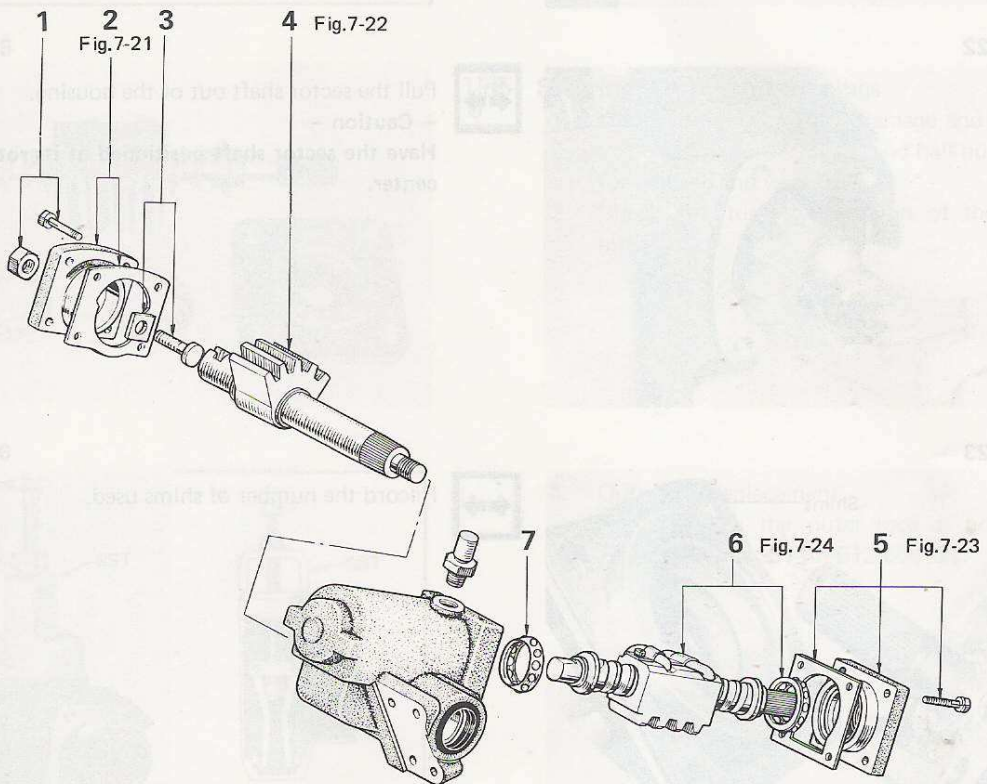Fig. 7-20

- 1 Bolt & Nut
- 2 Cover & Gasket
- 3 Screw & Washer
- 4 Sector Shaft

- 5 Cover & Shim
- 6 Bearing & Worm Assy.
- 7 Bearing

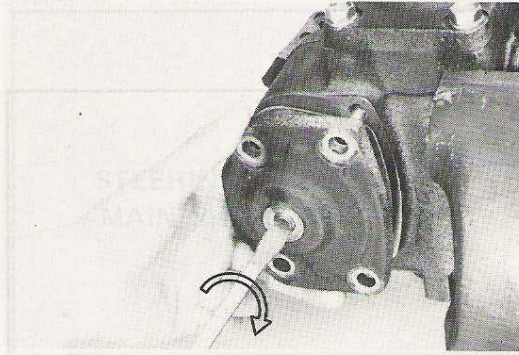Fig. 7-21




Screw in the bolt and remove the cover.

– Note –

Use a receiver to catch the oil from the gear housing.

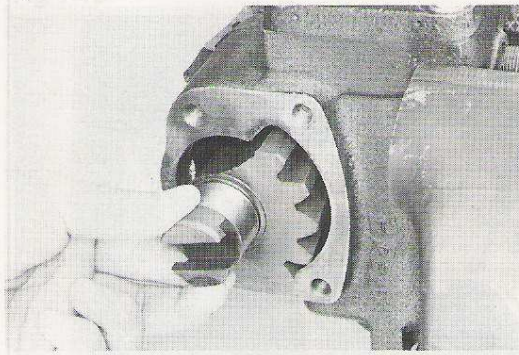Fig. 7-22




Pull the sector shaft out of the housing.

– Caution –


Have the sector shaft positioned at its rotational center.

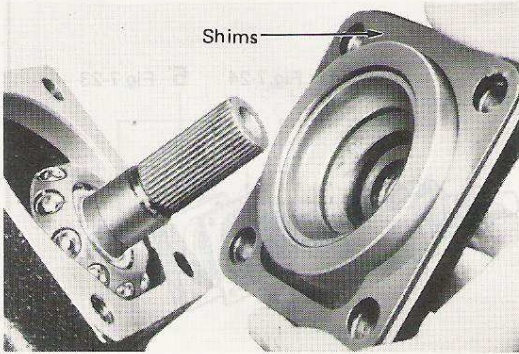Fig. 7-23



Record the number of shims used.

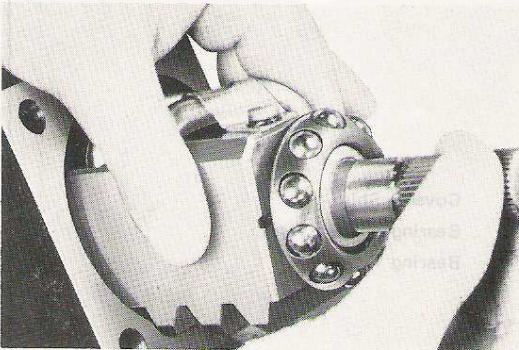Fig. 7-24



Remove the worm assembly.

– Note –

1. Keep the bearings in proper order so that they can be reassembled to their initial positions.
2. Do not attempt to disassemble the steering worm assembly.
If any part of it is defective, replace the entire assembly.
3. Do not run the ball nut to the worm end.

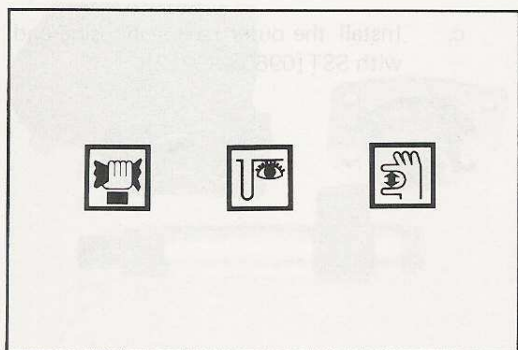


Fig. 7-25

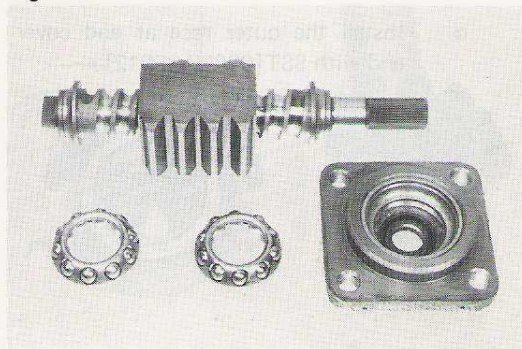


Fig. 7-26

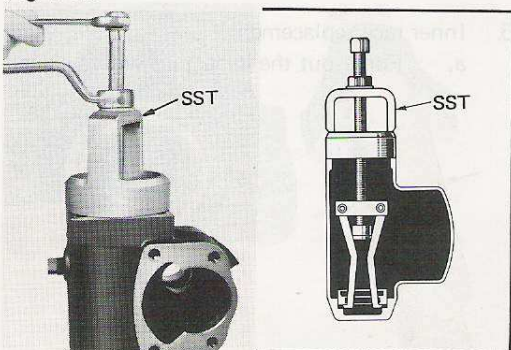
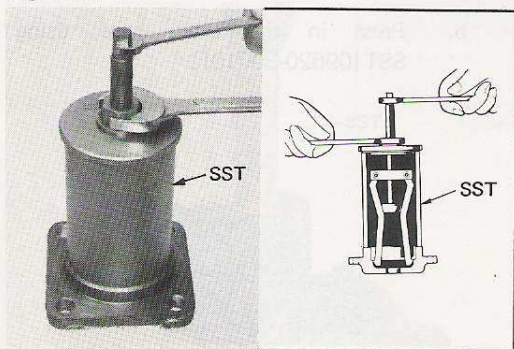


Fig. 7-27

**INSPECTION**

Wash the disassembled parts and inspect them on the following points.

Replace any part found defective.

**Steering Worm And Bearings**

1. Inspect the bearings for damage and wear.
2. Inspect the worm threads and ball nut rack for damage and wear.
3. Check the turning condition of the ball nut.




4. Outer race replacement.
 - a. Remove the outer race at housing end with SST [09612-65012].




- b. Remove the outer race at end cover end with SST [09612-30011].

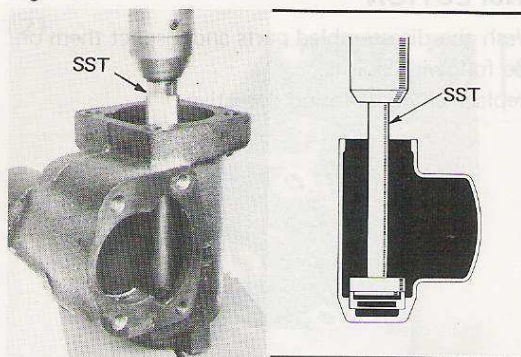Fig. 7-28




- c. Install the outer race at housing end with SST [09608-35012].

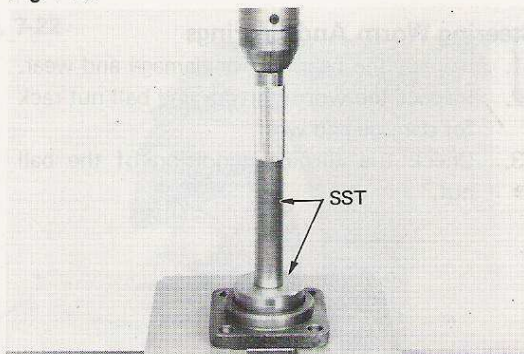Fig. 7-29




- d. Install the outer race at end cover end with SST [09608-35012].

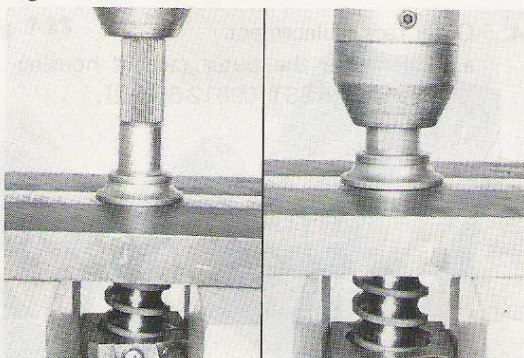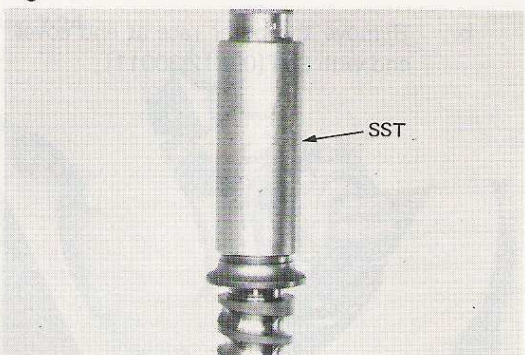Fig. 7-30



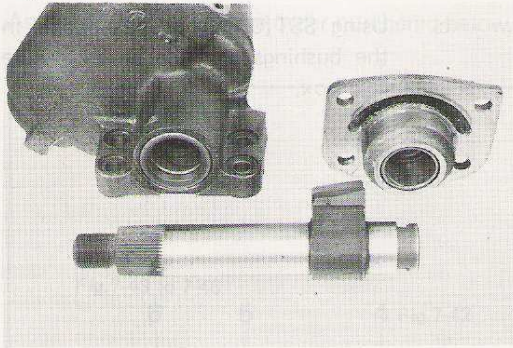
5. Inner race replacement.
a. Force out the inner race with a press.

Fig. 7-31




- b. Press in the inner race, using SST [09620-30010].

Fig. 7-32

**Sector Shaft And Bushing**

1. Inspect the shaft at bushing contacting surfaces and at gear teeth for wear and damage.
Inspect the bushings for wear and damage.

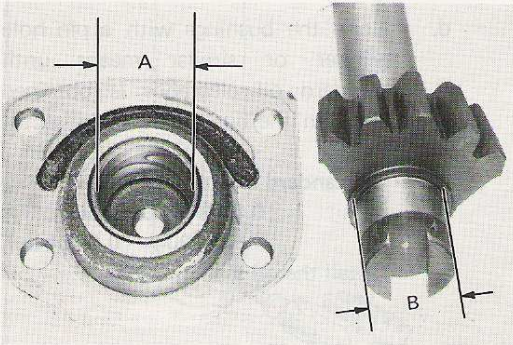
Fig. 7-33



2. Check the sector shaft oil clearance (A — B).

Limit 0.1 mm (0.004 in.)

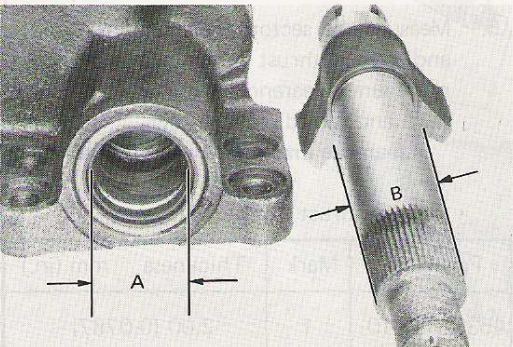
Fig. 7-34




3. Check the sector shaft oil clearance (A — B).

Limit 0.1 mm (0.004 in.)

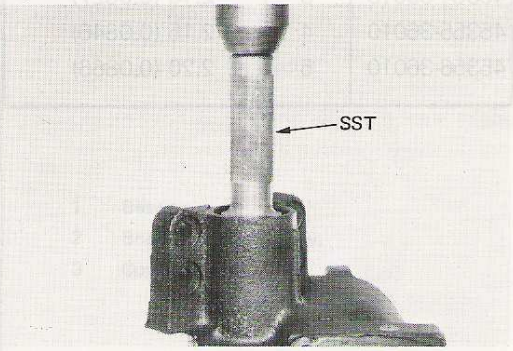
Fig. 7-35



4. Replacement of gear housing bushings.
 - a. Remove the oil seal.
 - b. Using SST [09307-12010], press out the two bushings at the same time in the same direction.

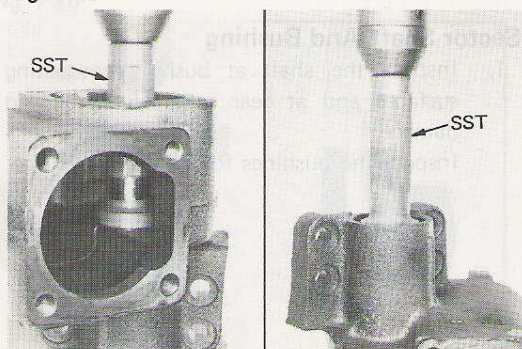Fig. 7-36

- c. Using SST [09307-12010], press in the bushings from each end of the gear box.

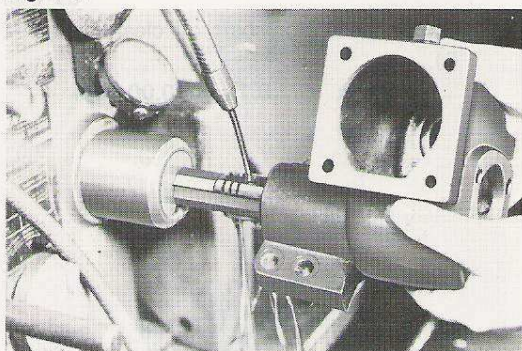
Fig. 7-37

- d. Hone the bushings with a pin hole grinder or similar means until standard oil clearance is obtained between the bushings and the sector shaft.

Standard clearance

0.009 – 0.060 mm
(0.0004 – 0.0024 in.)

- e. Install the oil seal.

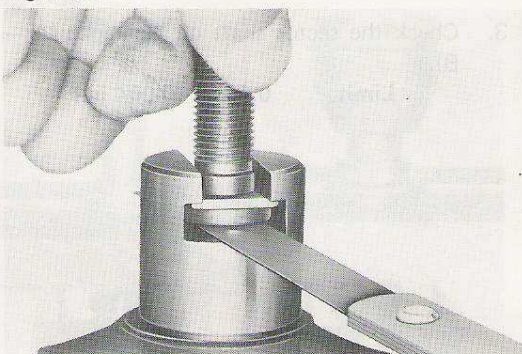Fig. 7-38

5. Measure the sector shaft thrust clearance, and select a thrust washer that will provide minimum clearance between the sector shaft and the adjusting screw.

Clearance limit 0.1 mm (0.004 in.)

Thrust Washer Thickness

Part No.	Mark	Thickness mm (in.)
45352-36010	1	2.00 (0.0787)
45353-36010	2	2.05 (0.0807)
45354-36010	3	2.10 (0.0827)
45355-36010	4	2.15 (0.0846)
45356-36010	5	2.20 (0.0866)

ASSEMBLY

Assemble the parts in the order numbered below.

Fig. 7-39



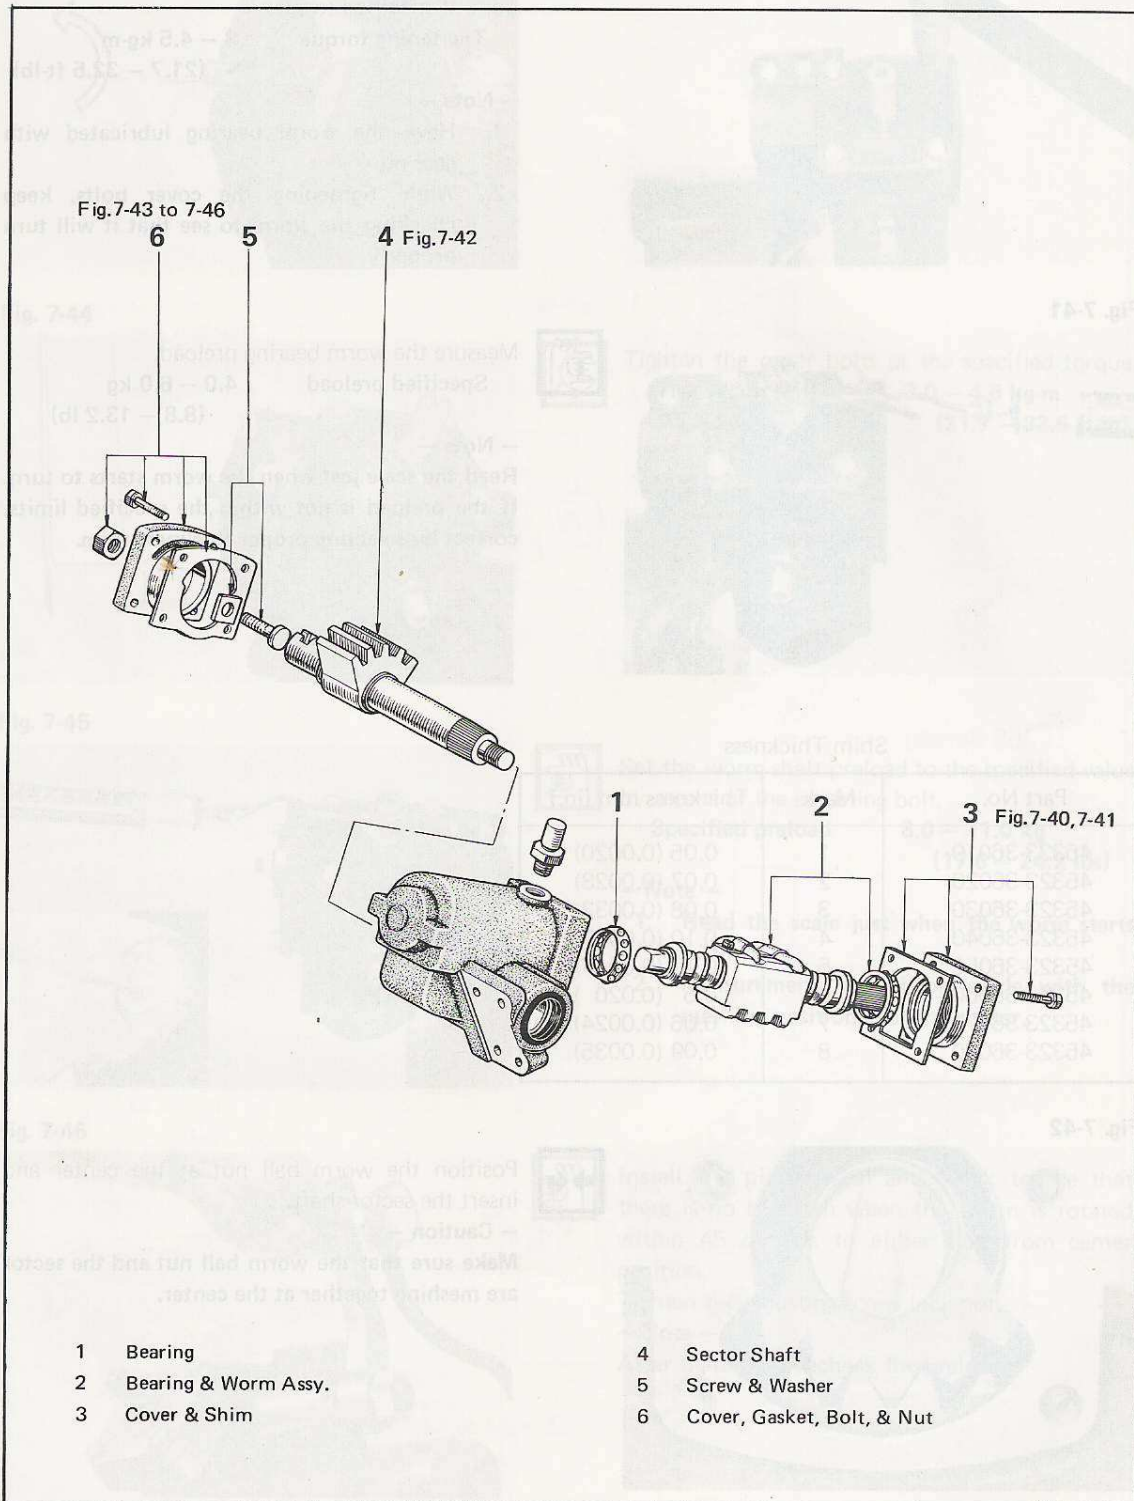


Fig. 7-43

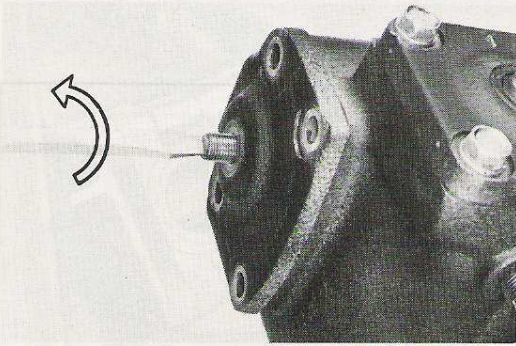

Loosen the adjusting bolt all the way, and install the cover.

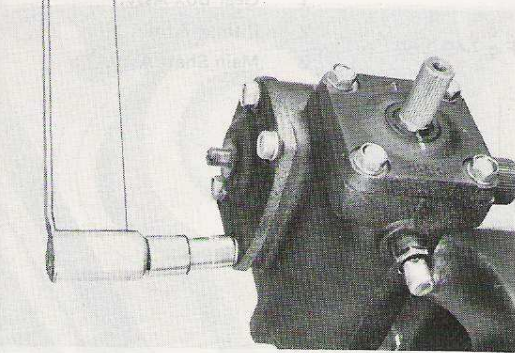
Fig. 7-44



Tighten the cover bolts at the specified torque.

Tightening torque **3.0 – 4.5 kg-m**
 (21.7 – 32.5 ft-lb)

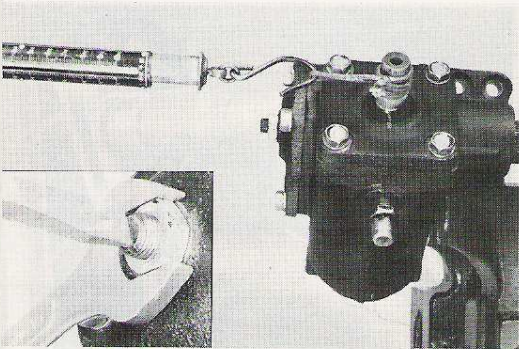Fig. 7-45




Set the worm shaft preload to the specified value by means of the adjusting bolt.

Specified preload **8.0 – 11.0 kg**
 (17.6 – 24.2 lbs)

— Note —

1. Read the scale just when the worm starts to turn.
2. Measurement should be made with the meshing positioned at the center.

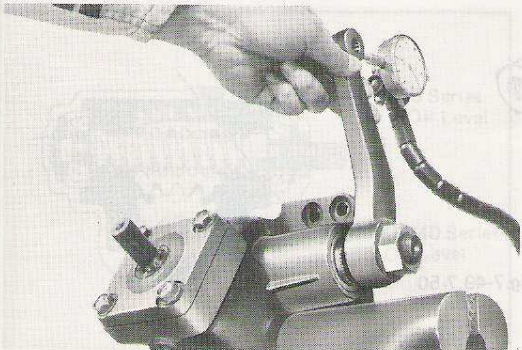Fig. 7-46



Install the pitman arm and check to see that there is no backlash when the worm is rotated within 45 degrees to either side from center position.

Tighten the adjusting screw lock nut.

— Note —


After tightening, recheck the preload.

INSTALLATION

Install the parts in the order numbered below.


Fig. 7-47

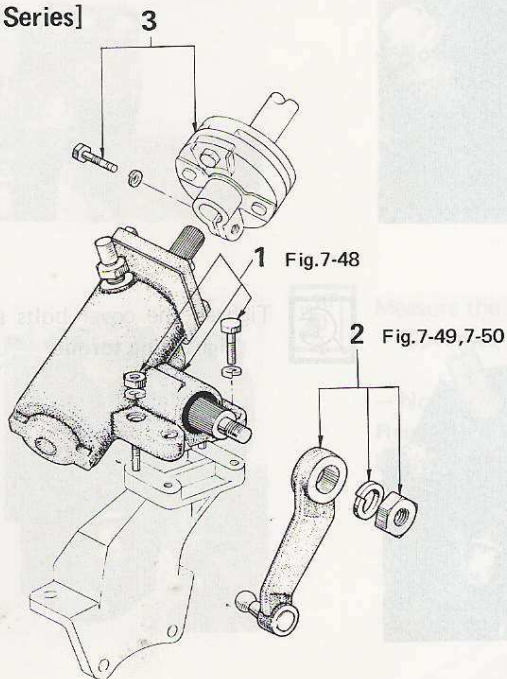[FJ, HJ, BJ40 Series]




- 1 Gear Box Assy.
- 2 Pitman Arm
- 3 Main Shaft Assy.

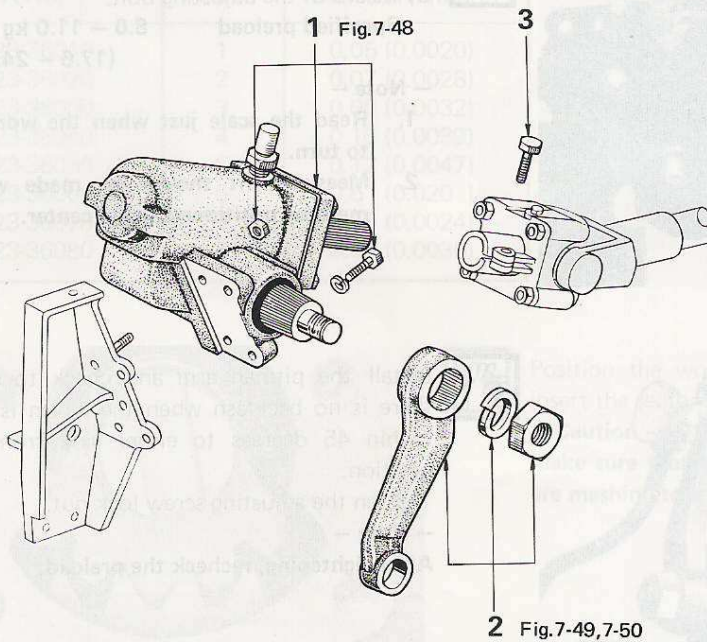[FJ55 Series]



- 1 Gear Box Assy.
- 2 Pitman Arm
- 3 Bolt

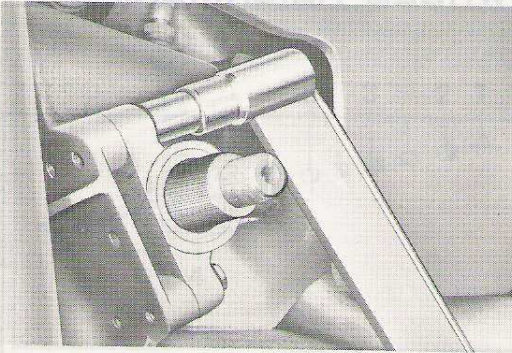
Fig. 7-48



Tighten the bolts and nuts at the specified torque.


Tightening torque **4.0 – 5.5 kg-m**
(28.9 – 39.8 ft-lb)

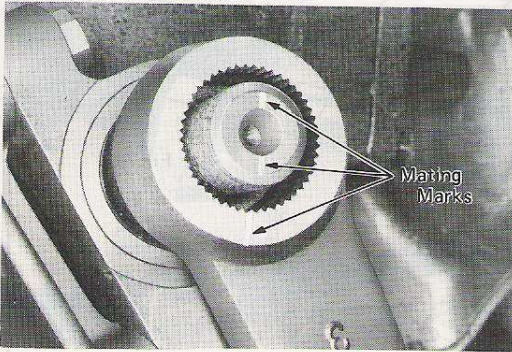Fig. 7-49



Align the mating marks on the pitman arm and sector shaft.

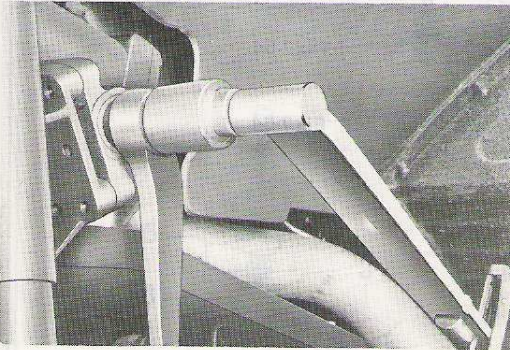
Fig. 7-50



Tighten at specified torque.

Tightening torque **16.5 – 19.5 kg-m**
(119 – 141 ft-lb)

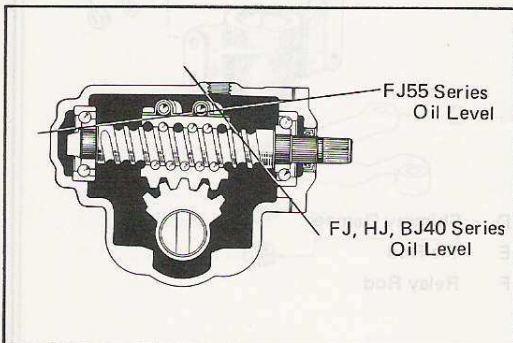Fig. 7-51



Fill in gear oil.

Standard capacity **0.6 liter**
(0.6 US qt, 0.5 Imp.qt.)
Type SAE 90 API GL4

STEERING LINKAGE & FRONT WHEEL ALIGNMENT

REMOVAL AND DISASSEMBLY

Fig. 7-52



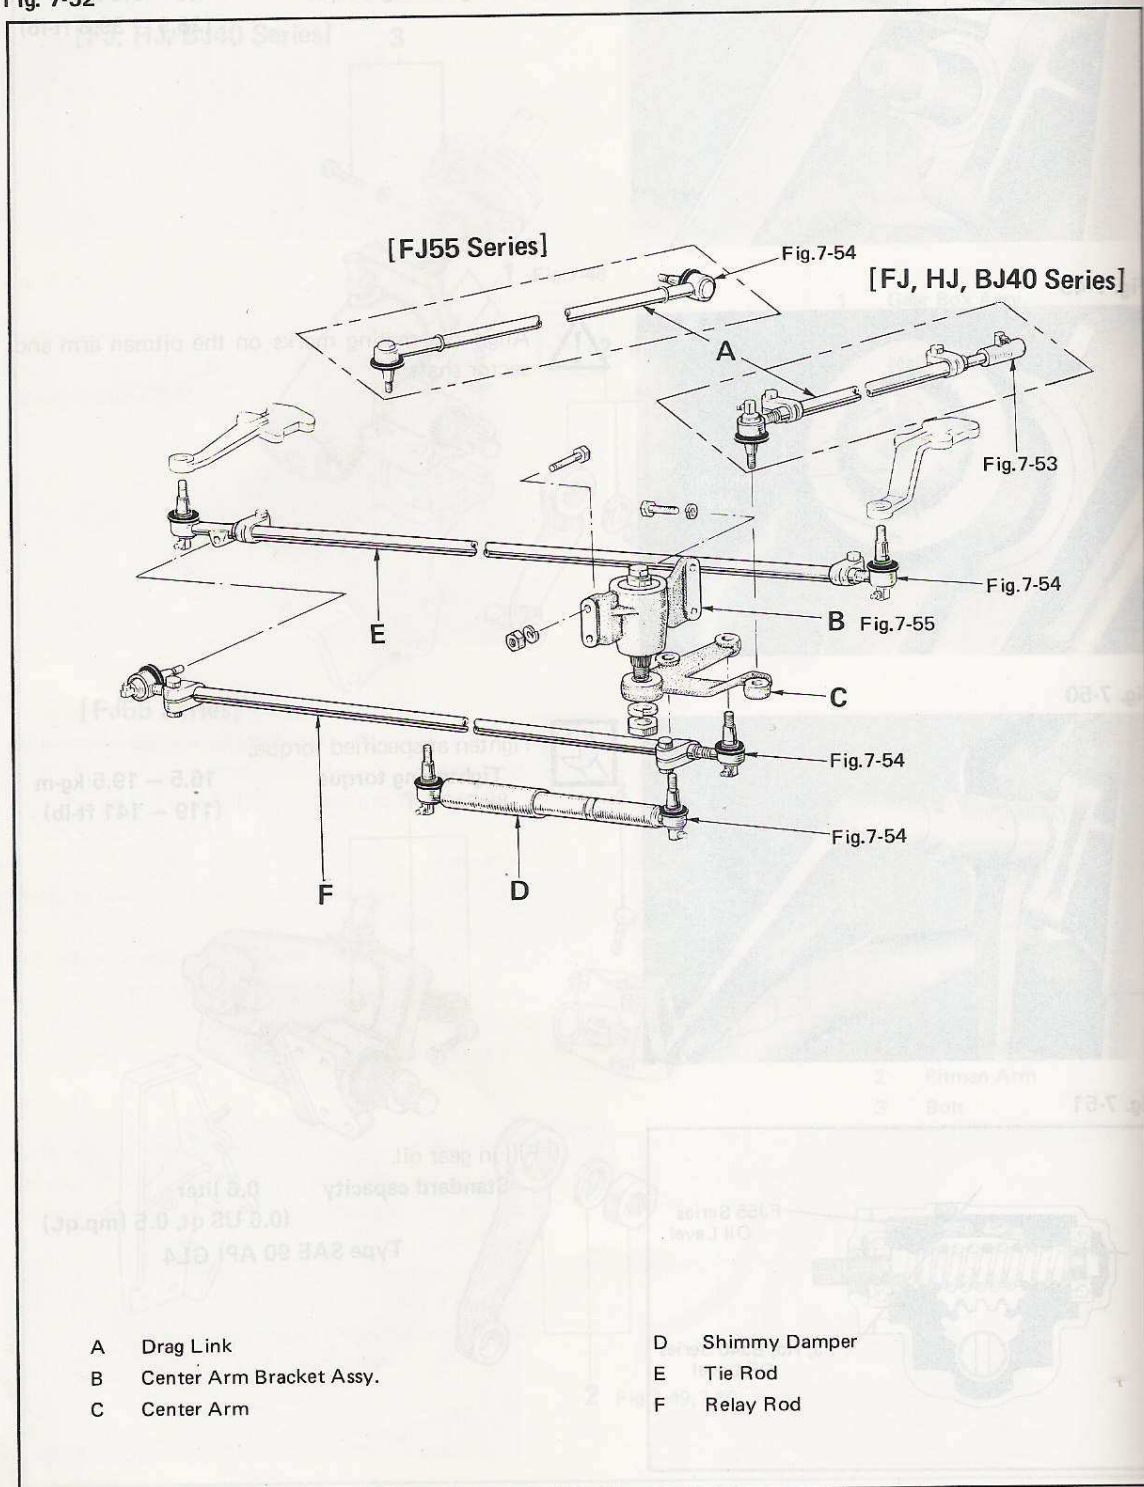


Fig. 7-53

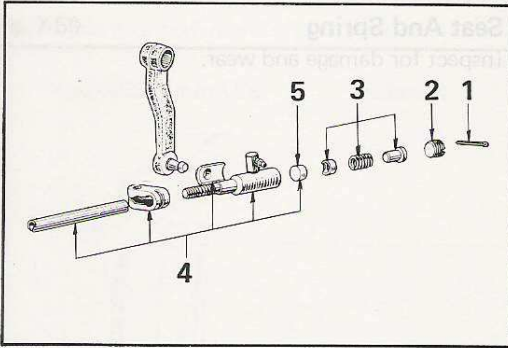


Disassemble the parts in the order shown by numbers.

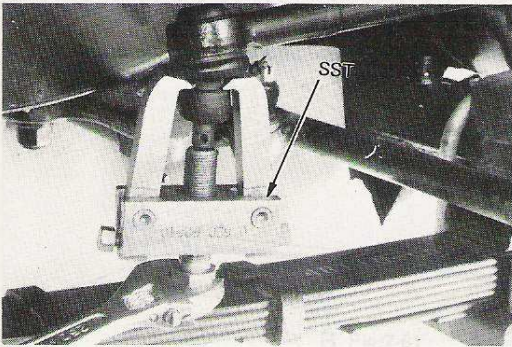Fig. 7-54



Use SST [09628-62010] or SST [09611-20014].

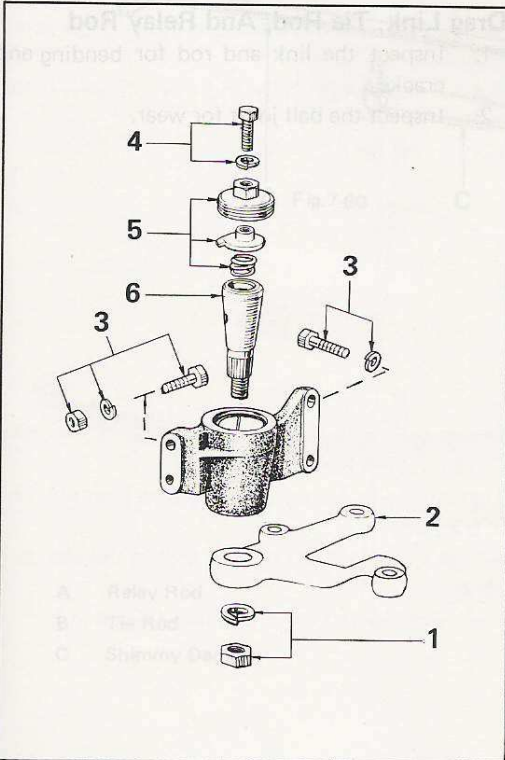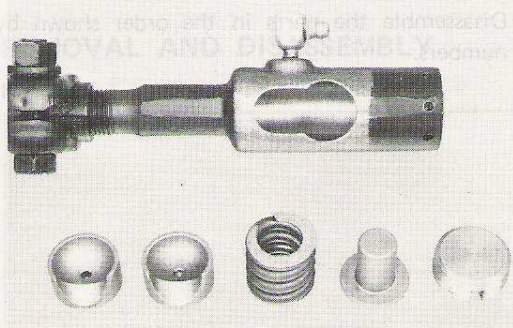
Fig. 7-55



Disassemble the parts in the order shown by numbers.

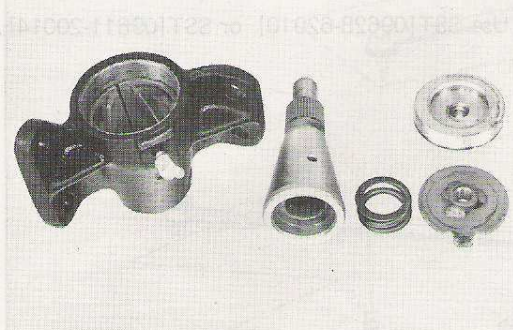
To remove the arm (2), use SST [09628-62010].

Fig. 7-56

**INSPECTION****Seat And Spring**

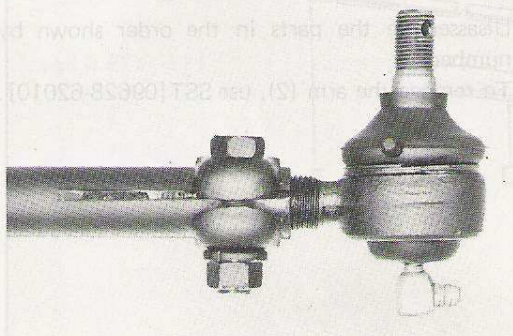
Inspect for damage and wear.

Fig. 7-57

**Shaft And Bushing**

Inspect for damage and wear.

Fig. 7-58

**Drag Link, Tie Rod, And Relay Rod**


1. Inspect the link and rod for bending and cracks.
2. Inspect the ball joint for wear.

A Drag Link
B Center Arm Bracket Assy
C Center Arm

D Shimmy Damper
E Tie Rod
F Relay Rod

ASSEMBLY AND INSTALLATION

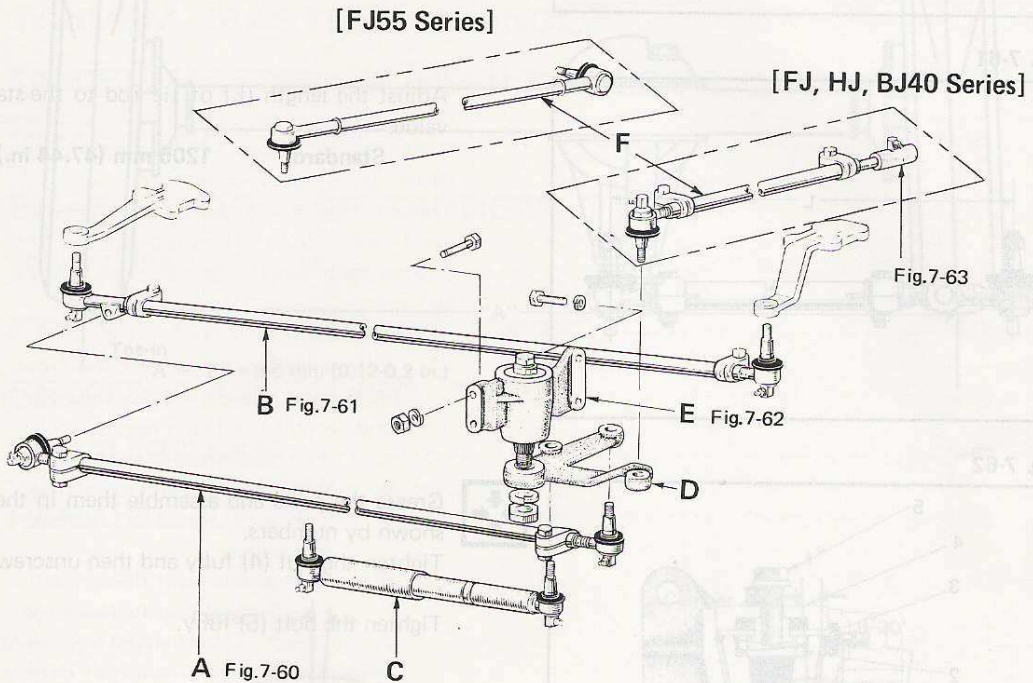
Fig. 7-59



- A Relay Rod
- B Tie Rod
- C Shimmy Damper

- D Center Arm
- E Center Arm Bracket Assy.
- F Drag Link

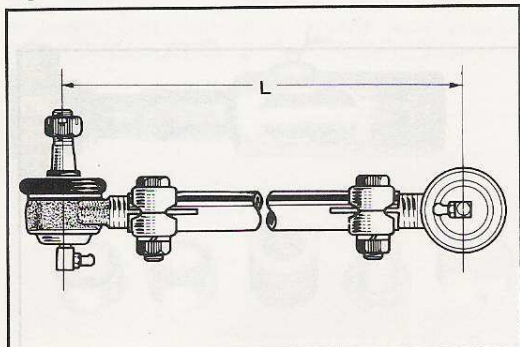
Fig. 7-60



Adjust the length (L) of relay rod to the standard value.

Standard **827 mm (32.56 in.)**

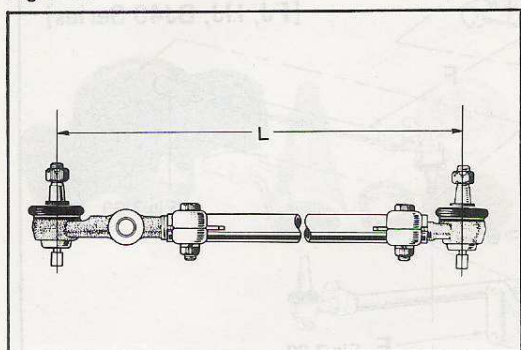
Fig. 7-61



Adjust the length (L) of tie rod to the standard value.

Standard **1205 mm (47.44 in.)**

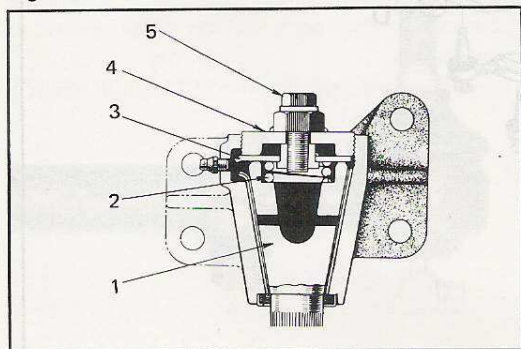Fig. 7-62




Grease the parts and assemble them in the order shown by numbers.

Tighten the nut (4) fully and then unscrew it 1/4 turn.

Tighten the bolt (5) fully.

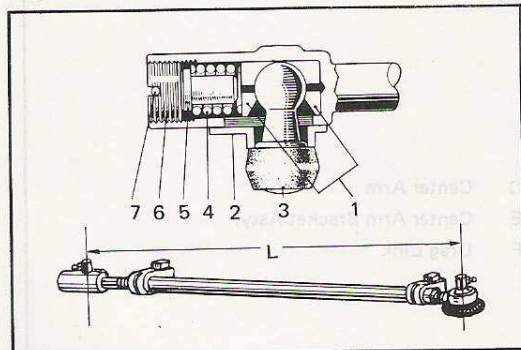Fig. 7-63



Grease the parts and assemble them in the order shown by numbers.

Tighten the end plug (6) fully and then unscrew it 1/2 turn.

Adjust the length (L) of drag link to the standard value.

Standard **855 mm (33.66 in.)**

FRONT WHEEL ALIGNMENT

Fig. 7-64

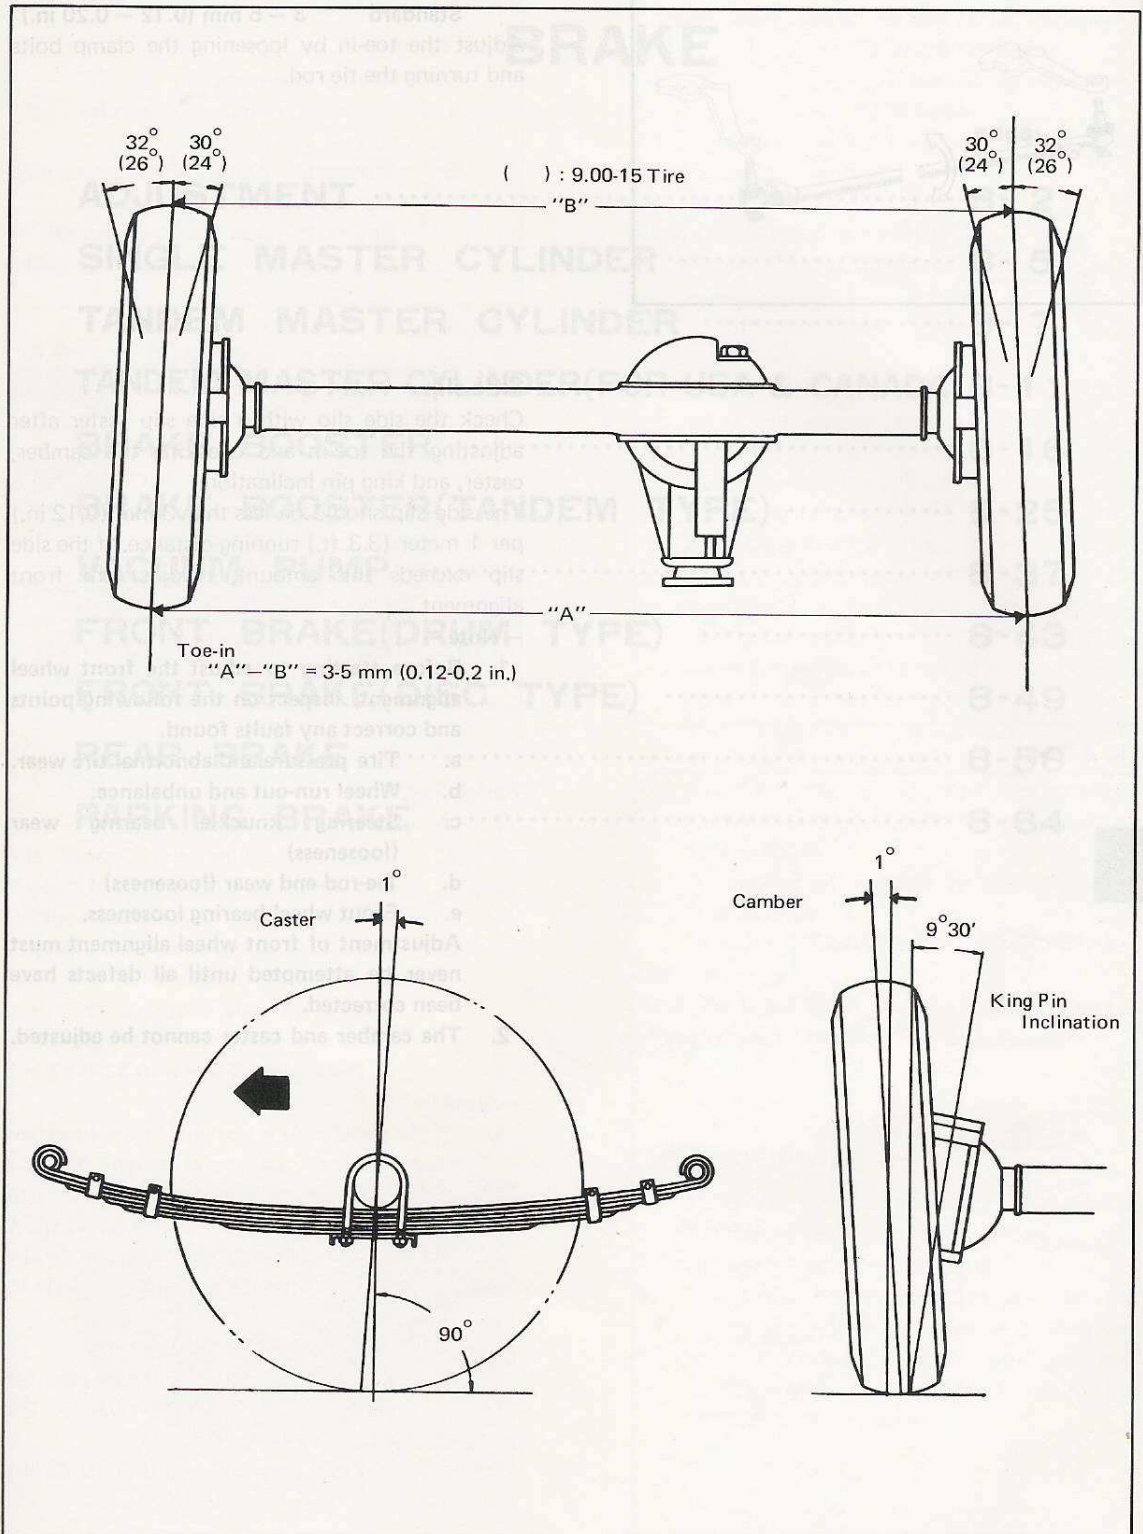
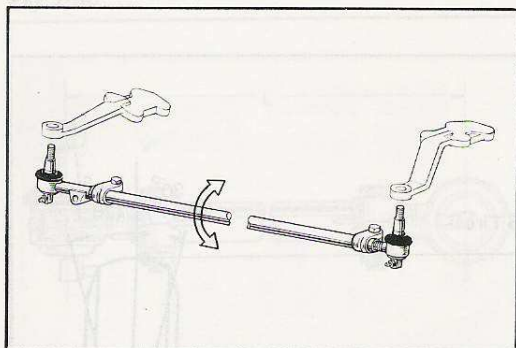


Fig. 7-65

**Toe-in**

Standard **3 – 5 mm (0.12 – 0.20 in.)**

Adjust the toe-in by loosening the clamp bolts and turning the tie rod.

Side slip

Check the side slip with a side slip tester after adjusting the toe-in and checking the camber, caster, and king pin inclination.

The side slip should be less than 3 mm (0.12 in.) per 1 meter (3.3 ft.) running distance. If the side slip exceeds this amount, readjust the front alignment.

— Note —

1. Before starting to adjust the front wheel alignment, inspect on the following points and correct any faults found.
 - a. Tire pressure and abnormal tire wear.
 - b. Wheel run-out and unbalance.
 - c. Steering knuckle bearing wear (looseness)
 - d. Tie-rod end wear (looseness)
 - e. Front wheel bearing looseness.

Adjustment of front wheel alignment must never be attempted until all defects have been corrected.
2. The camber and caster cannot be adjusted.

BRAKE

	page
ADJUSTMENT	8- 2
SINGLE MASTER CYLINDER	8- 5
TANDEM MASTER CYLINDER	8- 7
TANDEM MASTER CYLINDER(FOR USA & CANADA)	8-11
BRAKE BOOSTER	8-16
BRAKE BOOSTER(TANDEM TYPE)	8-25
VACUUM PUMP	8-37
FRONT BRAKE(DRUM TYPE)	8-43
FRONT BRAKE(DISC TYPE)	8-49
REAR BRAKE	8-58
PARKING BRAKE	8-64

Fig. 8-1


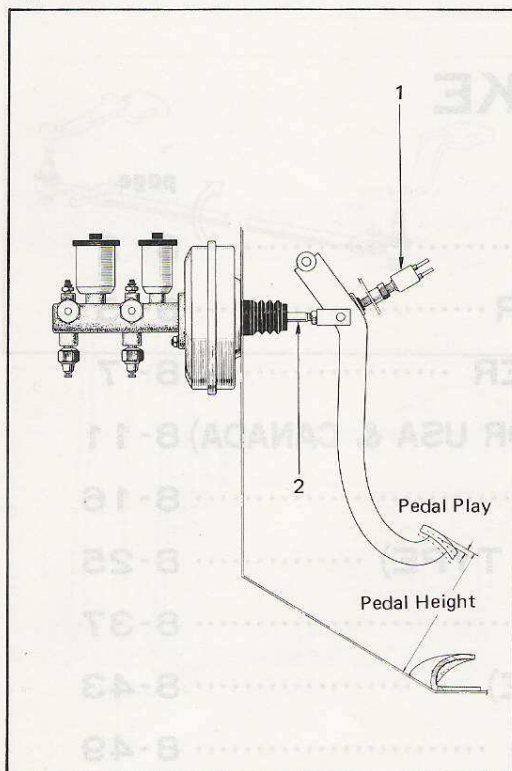


Fig. 8-2

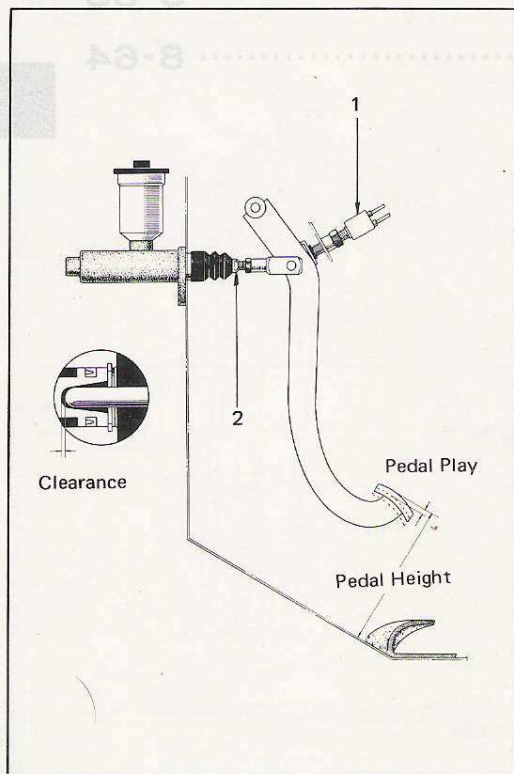

ADJUSTMENT

BRAKE PEDAL

Pedal Height

1. Vehicles with brake booster
 - a. Sufficiently loosen the stop light switch (1).
 - b. Adjust the pedal height by turning the push rod (2).
 - c. Return the stop light switch until its body lightly contacts the pedal stopper.
2. Vehicles without brake booster
 - a. Loosen the push rod (2).
 - b. Adjust the pedal height by turning the stop light switch (1).
 - c. Adjust the push rod (2) while referring to the methods described in Pedal Play Adjustment.

Standard Pedal Heights

	w/brake booster mm (in.)	w/o brake booster mm (in.)
FJ, HJ, BJ40 Series	215 (8.46)	198 (7.80)
FJ55 Series	185 (7.28)	172 (6.77)

Pedal Play

1. Vehicles with brake booster
 - a. Stop the engine and depress the brake pedal several times until there is no more vacuum left in the booster.
 - b. Press down the pedal with fingers until initial resistance is felt. The amount of play sensed at this time should be within the specified range.

Pedal play 3-6 mm (0.12-0.23 in.)

— Note —

1. If the pedal play is not within the specified range, adjust the pedal height by the method described in Pedal Height so as to provide the proper amount of pedal play.
2. The pedal play is not the amount of stroke up to the time the booster piston starts to move.
2. Vehicle without brake booster
 - a. Adjust the pedal play by turning the push rod (2) and adjusting the clearance at push rod tip.

Pedal play 3-6 mm (0.12-0.23 in.)

Fig. 8-3

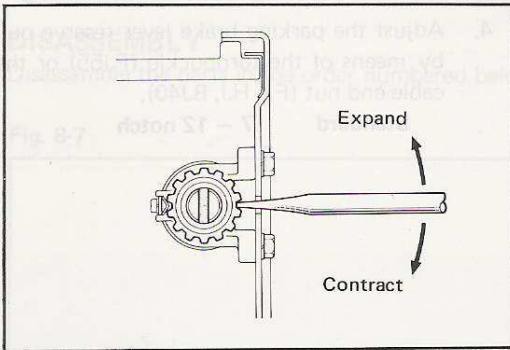


Fig. 8-4


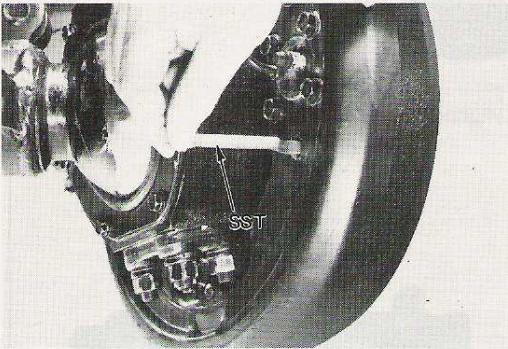


Fig. 8-5

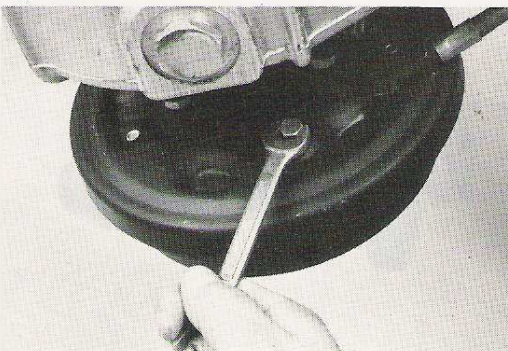

SHOE CLEARANCE

Pedal Reserve Travel

Pedal reserve travel 80 mm (3.15) minimum

--- FJ, HJ, BJ40 Series

70 mm (2.76) minimum

--- FJ55 Series

If the reverse travel less than the specified value, adjust the shoe clearance.

Shoe Clearance Adjustment

1. Remove the plugs from shoe adjusting holes.
2. Check the wheel to see that it turns smoothly.
3. Insert the SST [09704-10010] through the adjusting hole, and turn the wheel cylinder adjusting nut by moving the tool tip from the wheel center toward the rim so as to expand the shoes.
4. Keep on turning the adjusting nut until the shoes are expanded and the adjusting nut cannot be turned further. Then, depress the brake pedal and try to expand the shoes further so as to insure proper contact against the drum.
5. Now, turn the adjusting nut in reverse direction, by moving the tool tip from the wheel rim toward the center, and carefully retract the shoes until the wheel can be turned lightly.

A number of notches to be returned is from 4 to 5.

6. Install the plugs in the shoe adjusting holes.


— Caution —

Check the brake pedal to make sure that there is sufficient reserve travel.

PARKING BRAKE

1. Turn the adjuster counterclockwise until the brake shoes are fully expanded.
2. Return the adjuster one notch.
3. Check the brake drums to see that the brakes are not dragging after pulling the parking brake lever all the way back and then releasing it. If dragging, return the adjuster another notch.

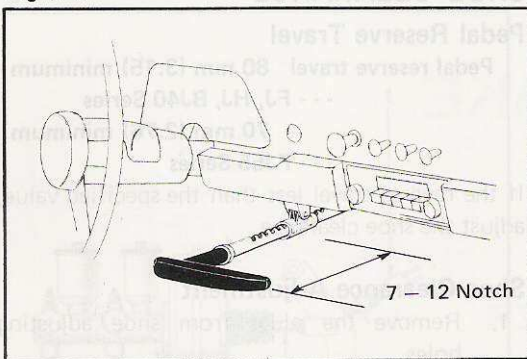Fig. 8-6



4. Adjust the parking brake lever reserve pull by means of the turnbuckle (FJ55) or the cable end nut (FJ, HJ, BJ40).

Standard 7 – 12 notch

SINGLE MASTER CYLINDER

DISASSEMBLY

Disassemble the parts in the order numbered below.

Fig. 8-7

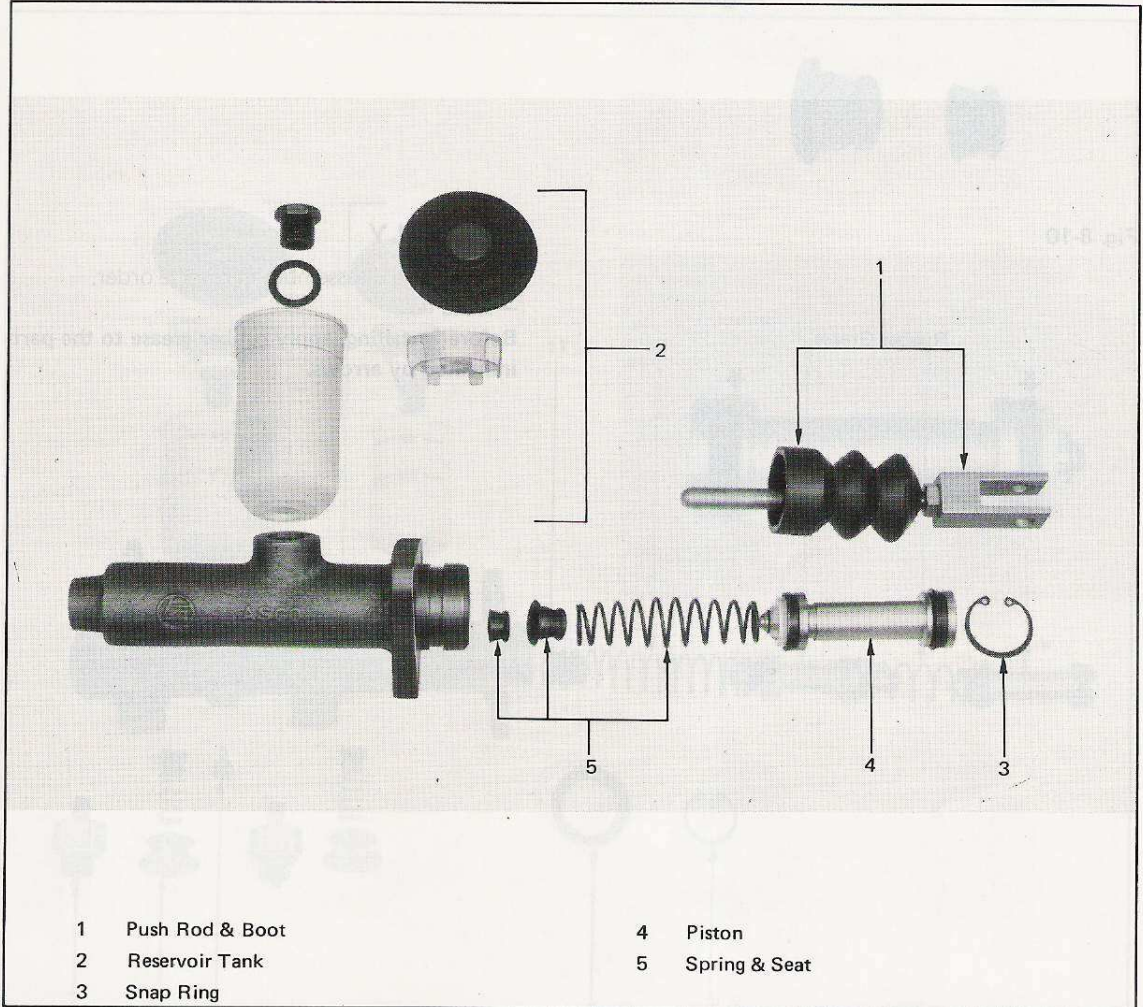


Fig. 8-8



INSPECTION

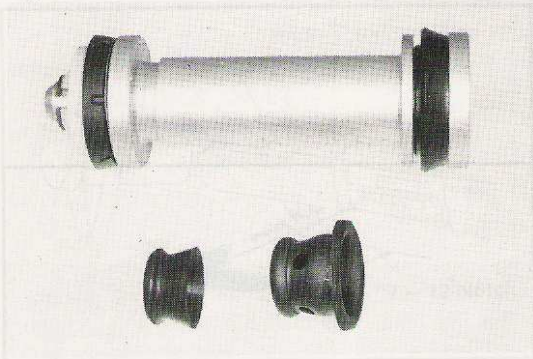


Check the disassembled parts on the following points, and repair or replace all defective parts found.

Master Cylinder Body

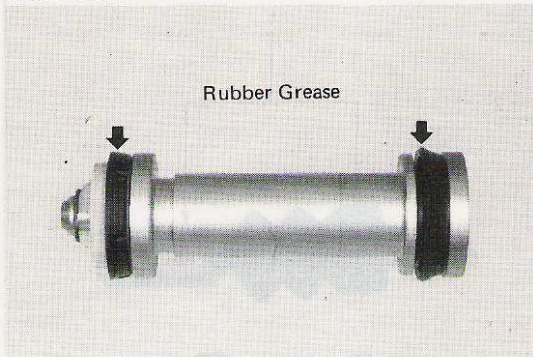
Inspect for wear and scores.

Fig. 8-9

**Piston Assembly And Check Valve**

Inspect for wear and scores.

Fig. 8-10

**ASSEMBLY**

Perform the disassembly in reverse order.

— Note —

Before installing, apply rubber grease to the parts indicated by arrows.

Check the disassembled parts on the following points, and repair or replace all defective parts found.




Master Cylinder Body
Inspect for wear and scores.

TANDEM MASTER CYLINDER

DISASSEMBLY

Remove the parts in the order numbered below.

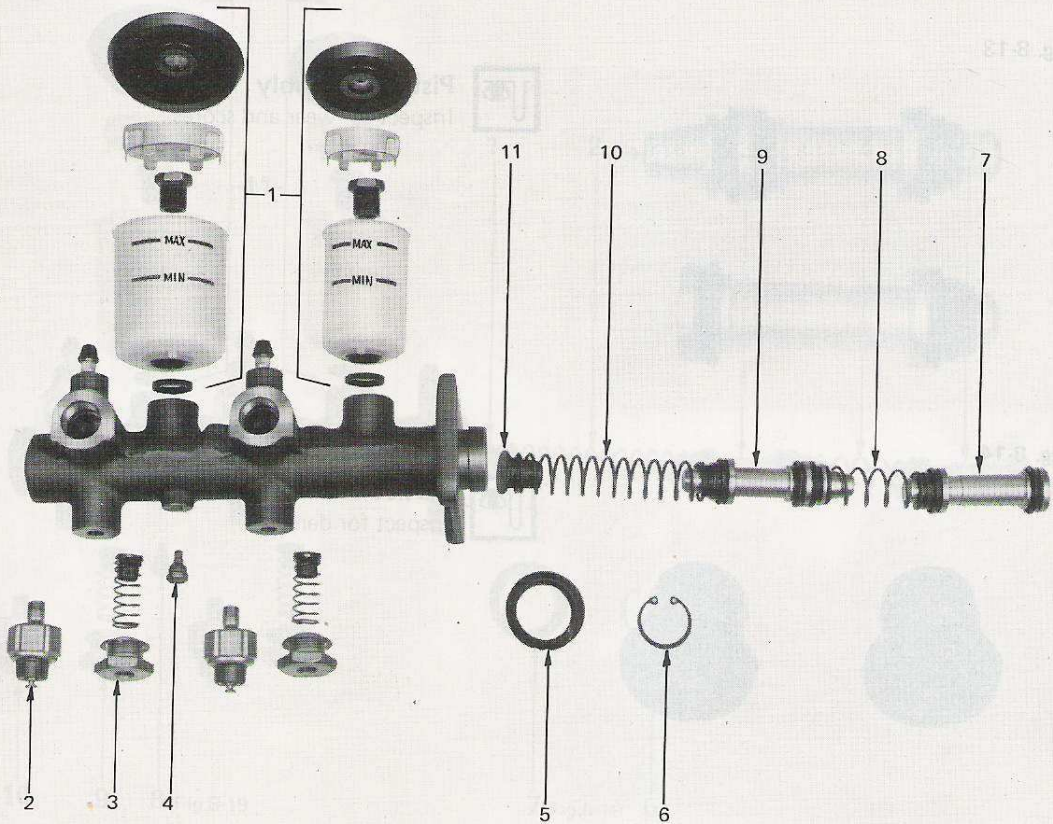
Fig. 8-11



- 1 Reservoir Tank
- 2 Oil Pressure Switches
- 3 Plugs & Check Valves
- 4 Bolt
- 5 Boot
- 6 Snap Ring

- 7 Piston No.1
- 8 Spring
- 9 Piston No.2
- 10 Spring
- 11 Piston Stopper

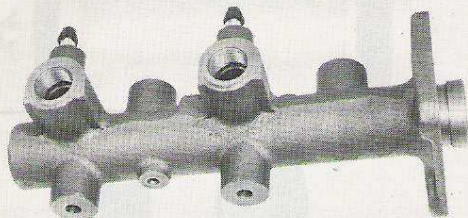Fig. 8-12


**INSPECTION**

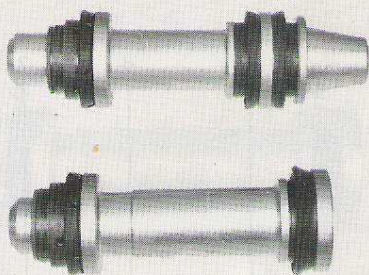Inspect the disassembled parts on the following points, and repair or replace all defective parts found.

Master Cylinder Body

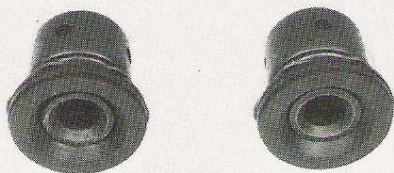
Inspect for wear and scores.

Fig. 8-13

**Piston Assembly**

Inspect for wear and scores.

Fig. 8-14

**Outlet Check Valve**

Inspect for damage.

ASSEMBLY

Assemble the parts in the order numbered below.

Fig. 8-15



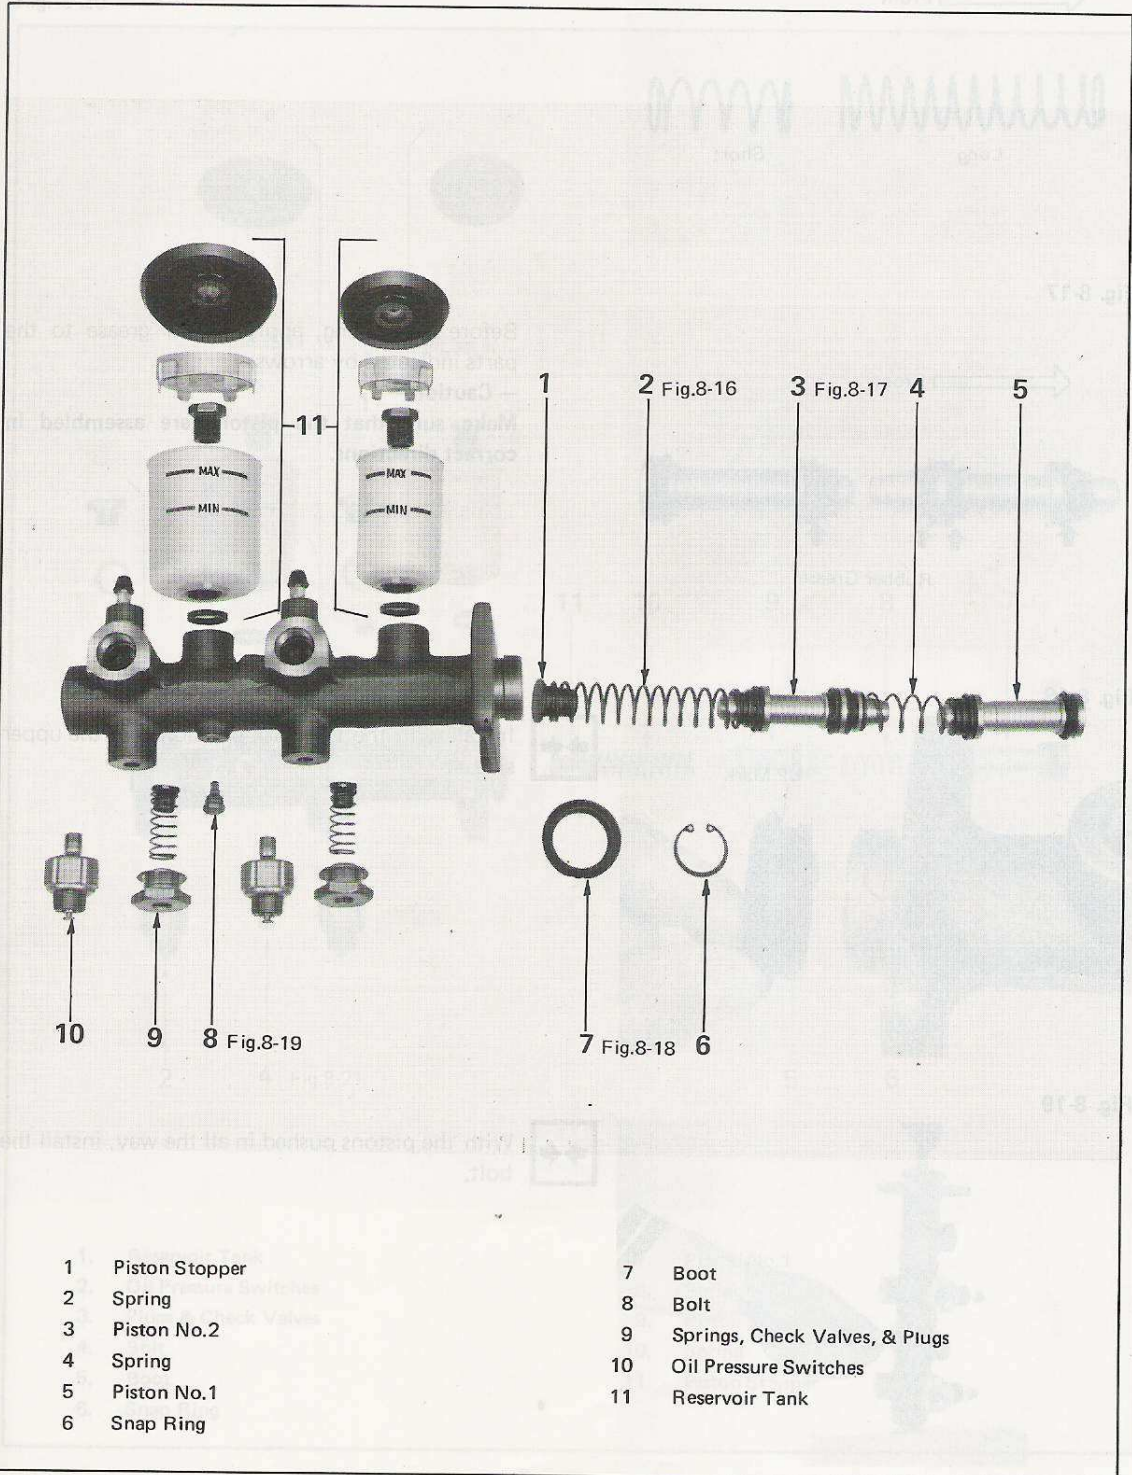


Fig. 8-16

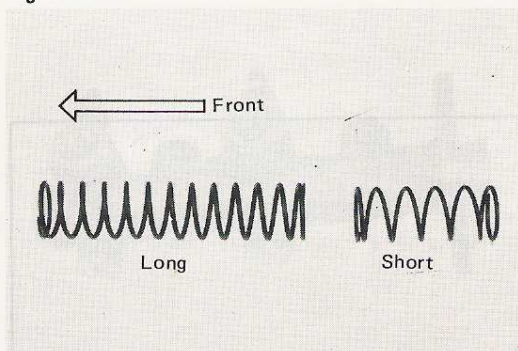

Assemble the long spring at the front side.

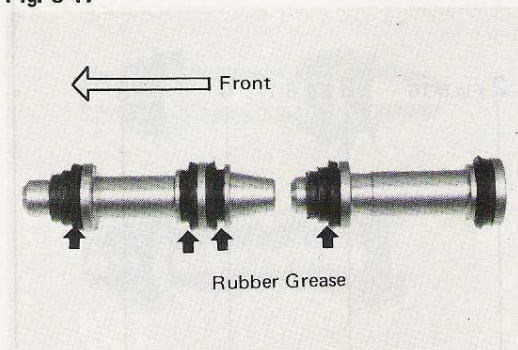Fig. 8-17




Before assembling, apply rubber grease to the parts indicated by arrows.

— **Caution** —


Make sure that the pistons are assembled in correct directions.

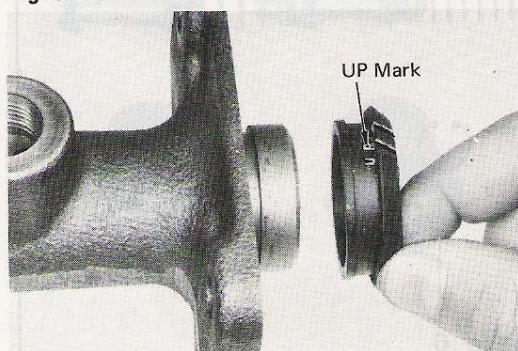Fig. 8-18



Install with the UP mark positioned at the upper side.

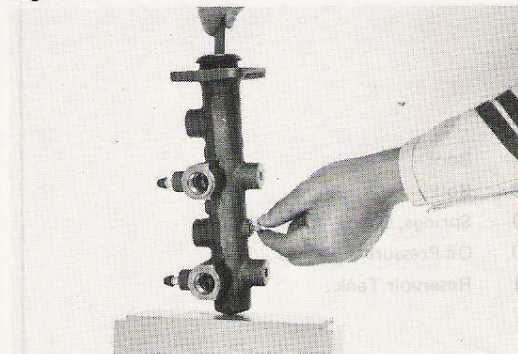Fig. 8-19



With the pistons pushed in all the way, install the bolt.

TANDEM MASTER CYLINDER (FOR USA & CANADA)

DISASSEMBLY

Remove the parts in the order shown below.

Fig. 8-20


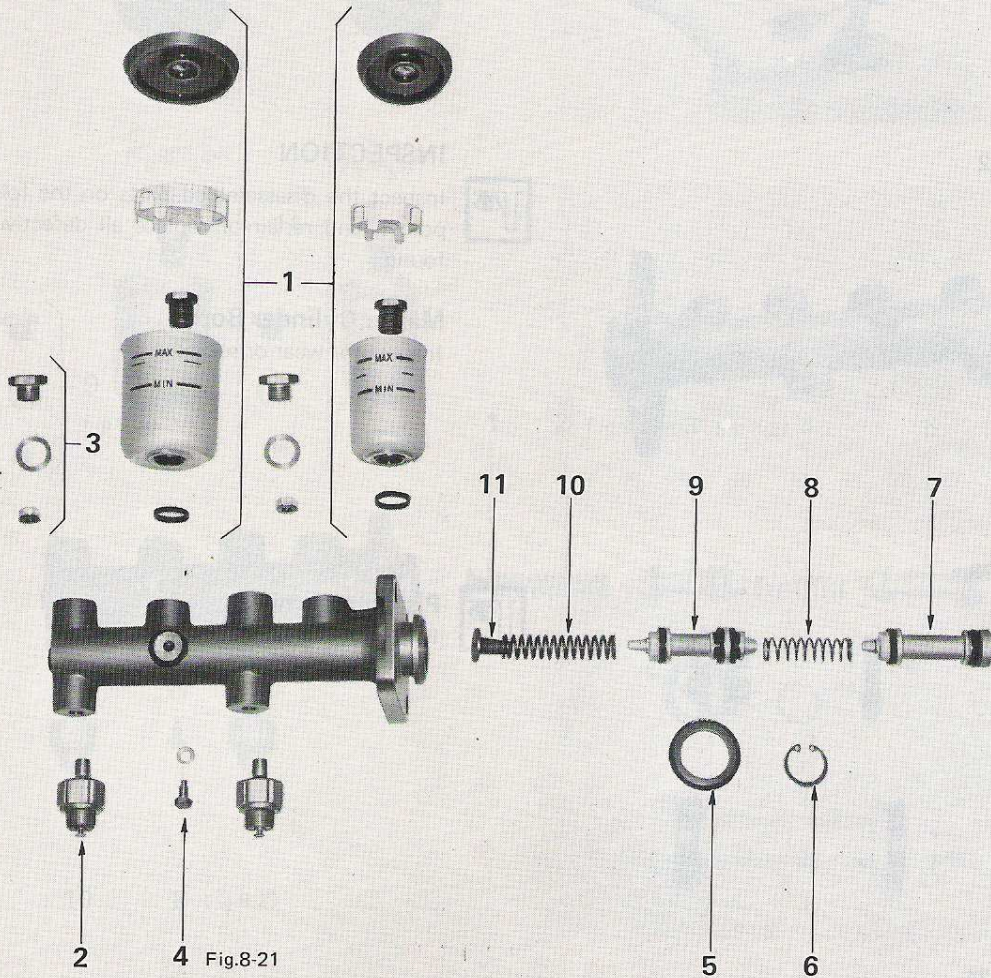


Fig.8-21


- | | |
|--------------------------|--------------------|
| 1. Reservoir Tank | 7. Piston No.1 |
| 2. Oil Pressure Switches | 8. Spring |
| 3. Plugs & Check Valves | 9. Piston No.2 |
| 4. Bolt | 10. Spring |
| 5. Boot | 11. Piston Stopper |
| 6. Snap Ring | |

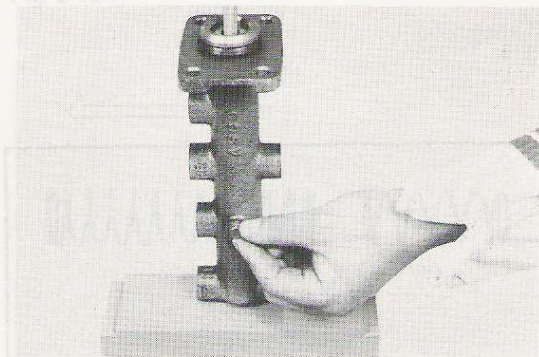Fig. 8-21



With the pistons pushed in all the way, remove the bolt.

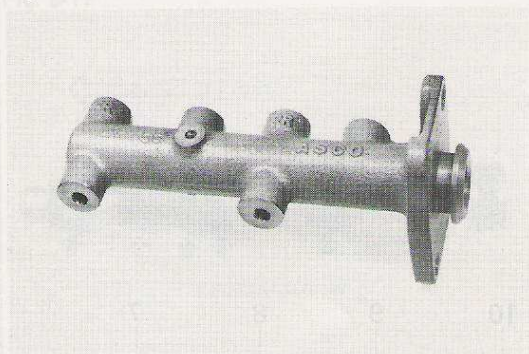Fig. 8-22



INSPECTION




Inspect the disassembled parts on the following points, and repair or replace all defective parts found.

Master Cylinder Body

Inspect for wear or scores.

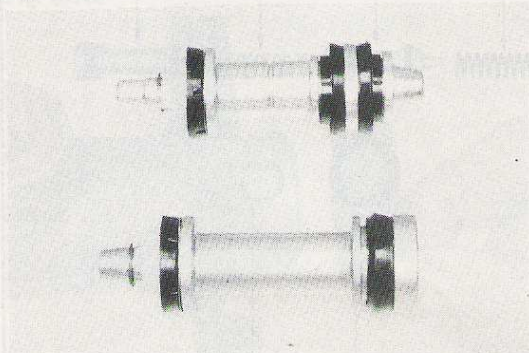
Fig. 8-23



Piston Assembly

Inspect for wear or scores.

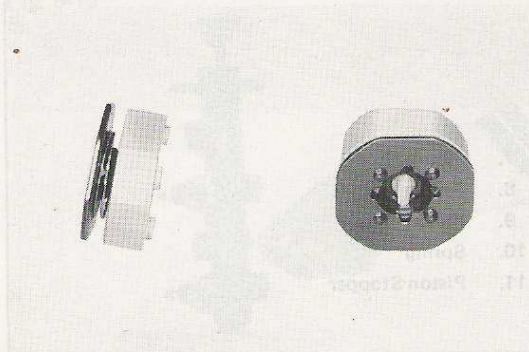Fig. 8-24




Outlet Check Valve

Inspect for damage.

ASSEMBLY


Assemble the parts in the order shown below.

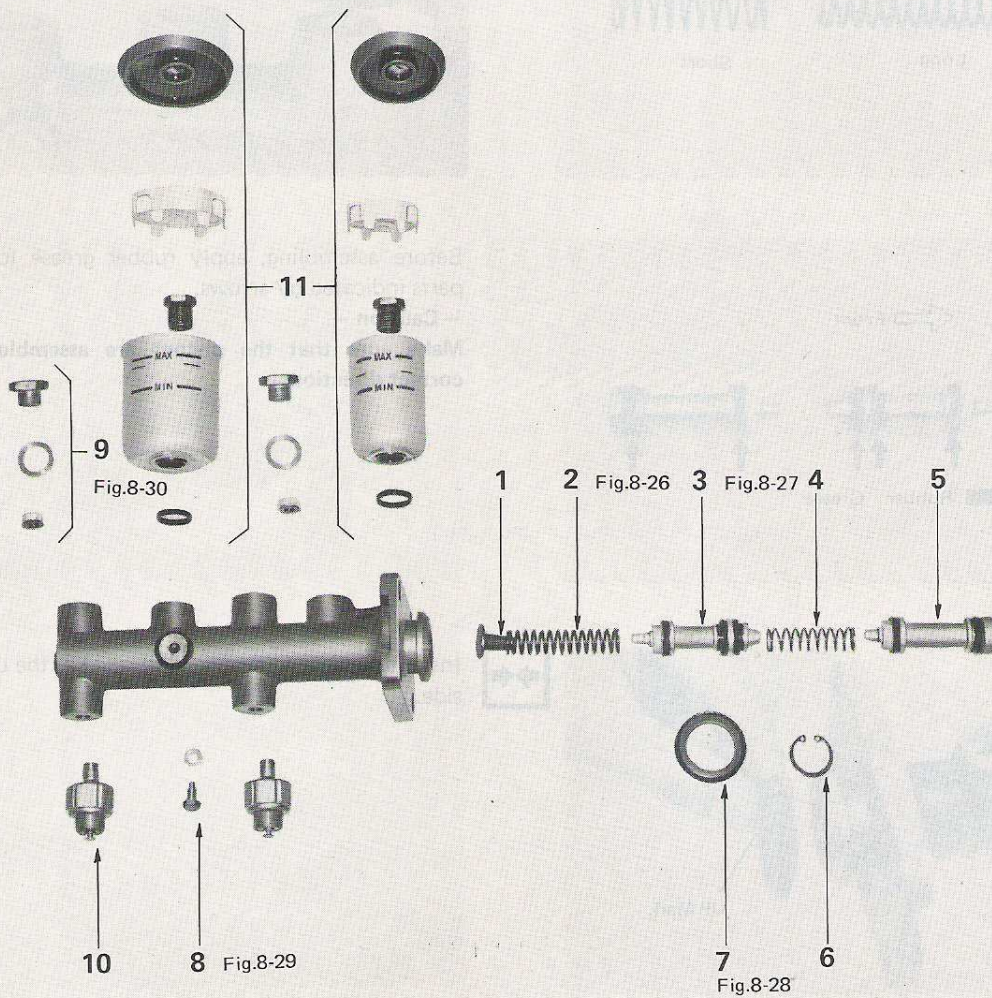Fig. 8-25

1. Piston Stopper
2. Spring
3. Piston No.2
4. Spring
5. Piston No.1
6. Snap Ring


7. Boot
8. Bolt
9. Check Valves, & Plugs
10. Oil Pressure Switches
11. Reservoir Tank

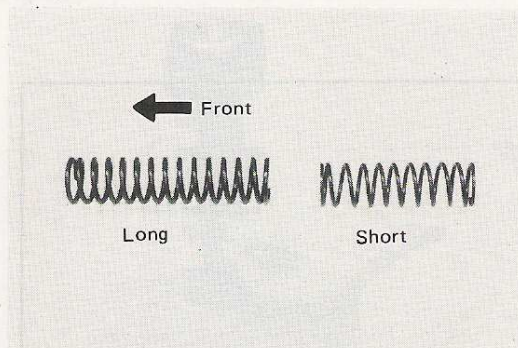Fig. 8-26



Assemble the long spring at the front side.

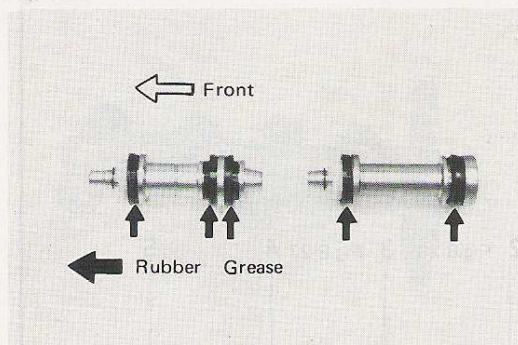Fig. 8-27




Before assembling, apply rubber grease to the parts indicated by arrows.

— **Caution** —


Make sure that the pistons are assembled in correct directions.

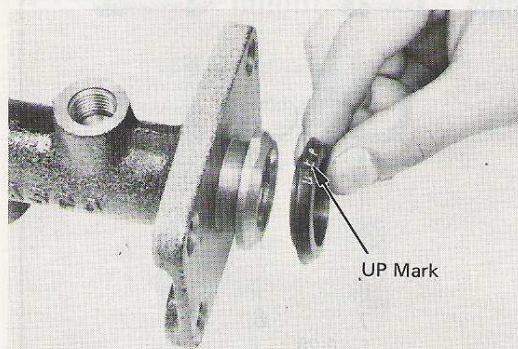Fig. 8-28




Install with the UP mark positioned at the upper side.

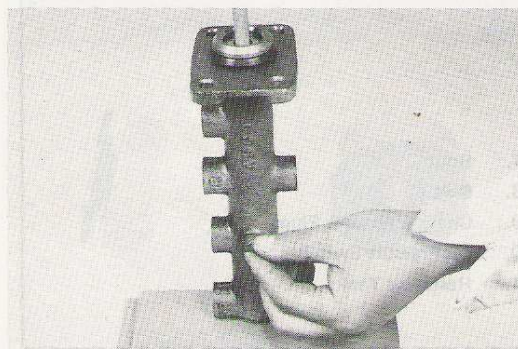Fig. 8-29



With the pistons pushed in all the way, install the bolt.

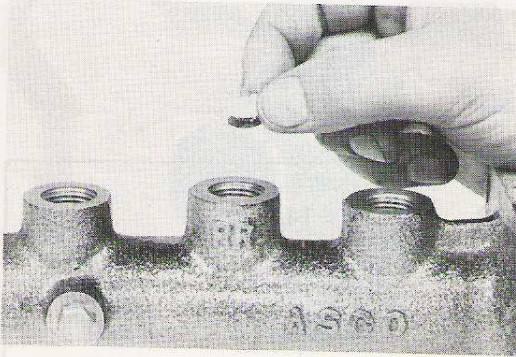Fig. 8-30




Install the check valve with bakelite positioned on the upper side.

BRAKE BOOSTER

Disassemble the parts in the order indicated below.

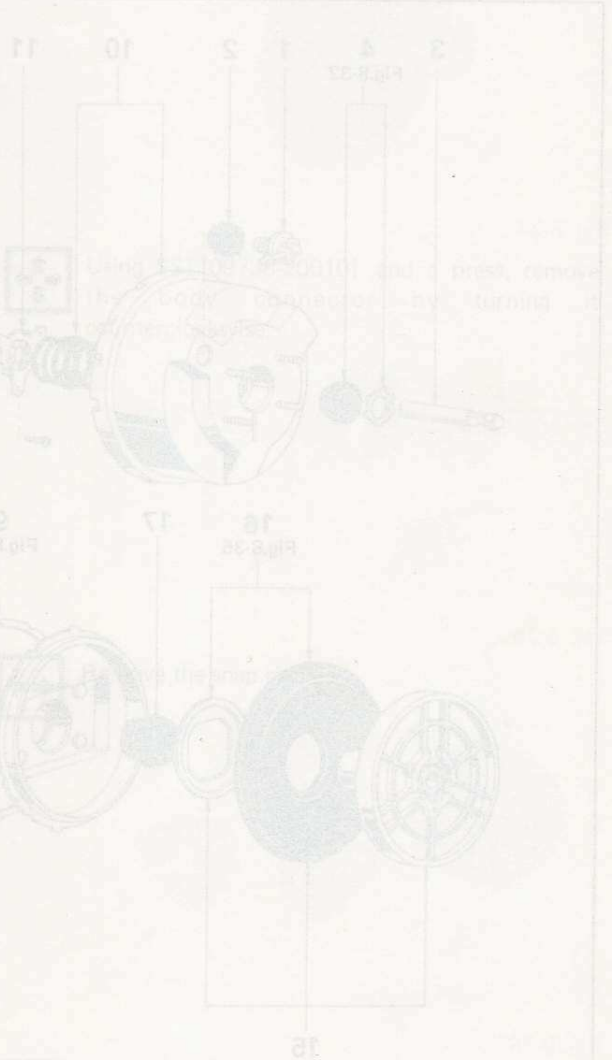Fig. 8-31



Install the check valve with bakelite positioned on the upper side.

- 10 Front Body & Spring
- 11 Retainer
- 12 Retainer & Seal
- 13 Snap Ring & Washer
- 14 Valve Operating Piston
- 15 Piston & Seal
- 16 Retainer & Seal
- 17 Retainer


- 10 Front Body & Spring
- 11 Retainer
- 12 Retainer & Seal
- 13 Snap Ring & Washer
- 14 Valve Operating Piston
- 15 Piston & Seal
- 16 Retainer & Seal
- 17 Retainer

BRAKE BOOSTER

DISASSEMBLY

Disassemble the parts in the order numbered below.

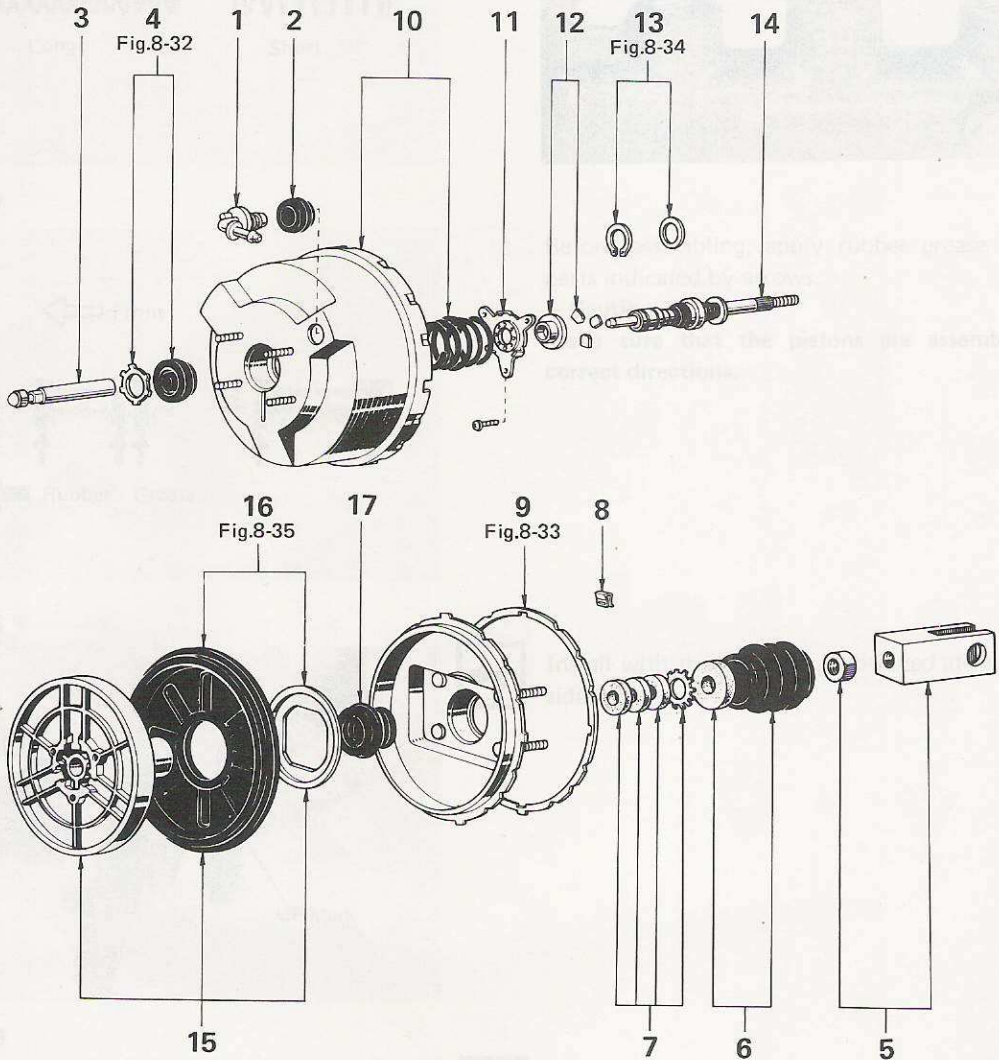Fig. 8-31



1 Check Valve

2 Grommet

3 Push Rod

4 Retainer & Seal

5 Clevis

6 Boot & Silencer

7 Retainer, Separator, & Element

8 Lock

9 Connector

10 Front Body & Spring

11 Retainer

12 Reaction Plate & Levers

13 Snap Ring & Washer


14 Valve Operating Rod

15 Piston Assy.

16 Retainer & Diaphragm


17 Bearing

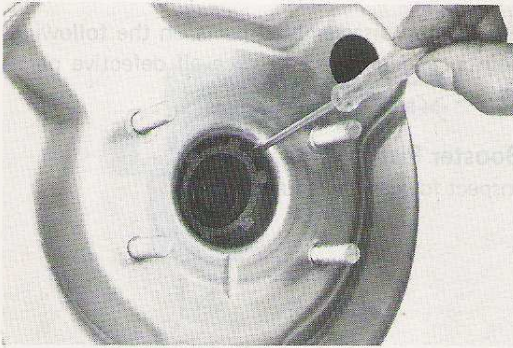Fig. 8-32




Remove the retainer with a screwdriver.

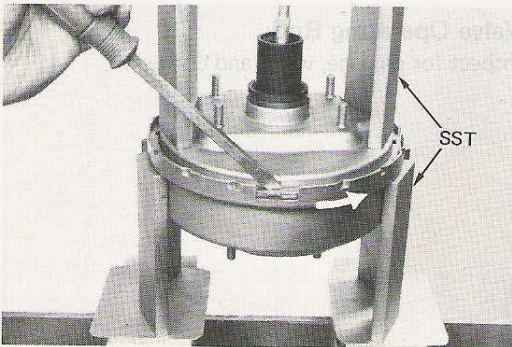Fig. 8-33




Using SST [09738-20010] and a press, remove the body connector by turning it counterclockwise.

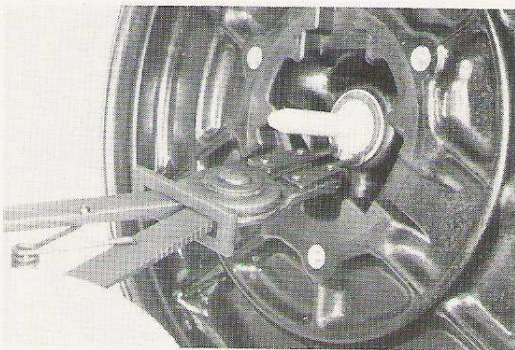Fig. 8-34



Remove the snap ring.

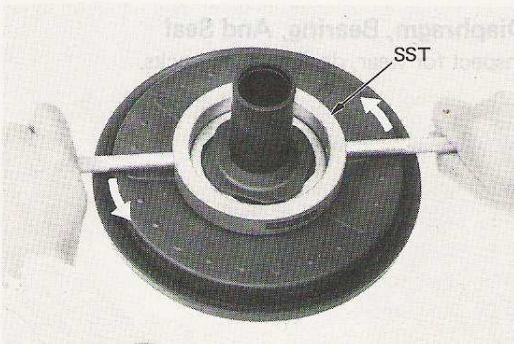Fig. 8-35



Remove the retainer by turning it counterclockwise with SST [09736-30020].

Fig. 8-36



Fig. 8-37

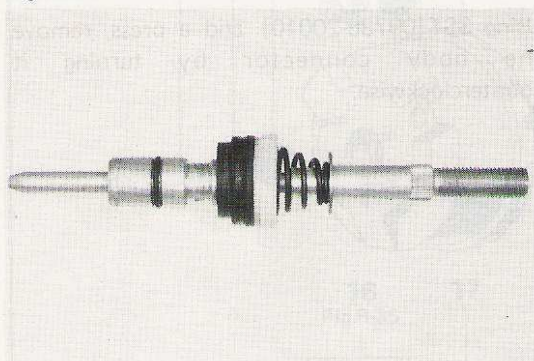


Fig. 8-38


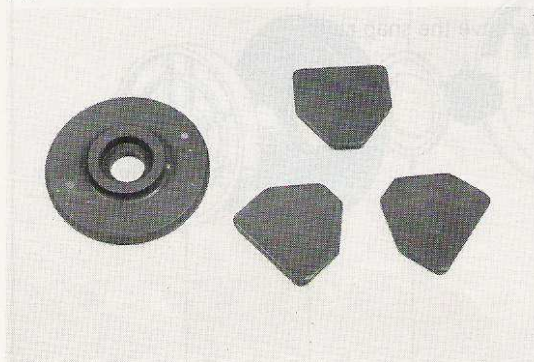


Fig. 8-39

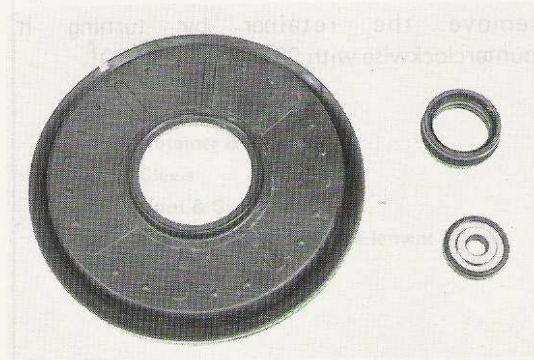

INSPECTION



Inspect the disassembled parts on the following points, and repair or replace all defective parts found.

Booster Piston

Inspect for damage and cracks.



Valve Operating Rod

Inspect for damage, wear, and corrosion.



Reaction Levers And Plate

Inspect for wear and deformation.




Diaphragm, Bearing, And Seal

Inspect for wear, damage, and cracks.

Fig. 8-40

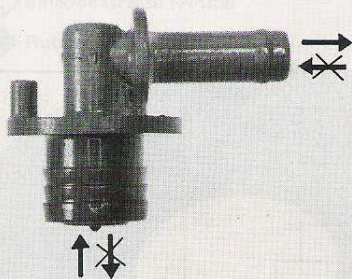Vacuum Check Valve
 Check the operation of valve.



— Note —
 Before starting assembly, note the parts indicated in detail in this section.

Fig. 8-43

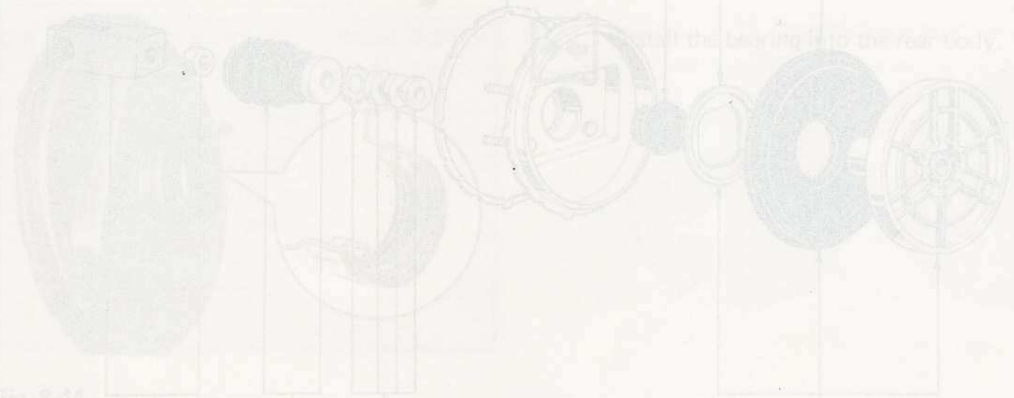



Fig. 8-44



- (continued from page 8-18)
- | | |
|---|------------------------|
| 1 | Bearing |
| 2 | Diaphragm & Retainer |
| 3 | Piston Assy. |
| 4 | Valve Operating Rod |
| 5 | Washer & Snap Ring |
| 6 | Reaction Lamin & Plate |
| 7 | Retainer |
| 8 | Boring & Front Body |
- | | |
|----|-------------|
| 9 | Connector |
| 10 | Lock Washer |
| 11 | Brake Shoe |
| 12 | Brake Pad |
| 13 | Brake Drum |

ASSEMBLY

Assemble the parts in the order numbered below.

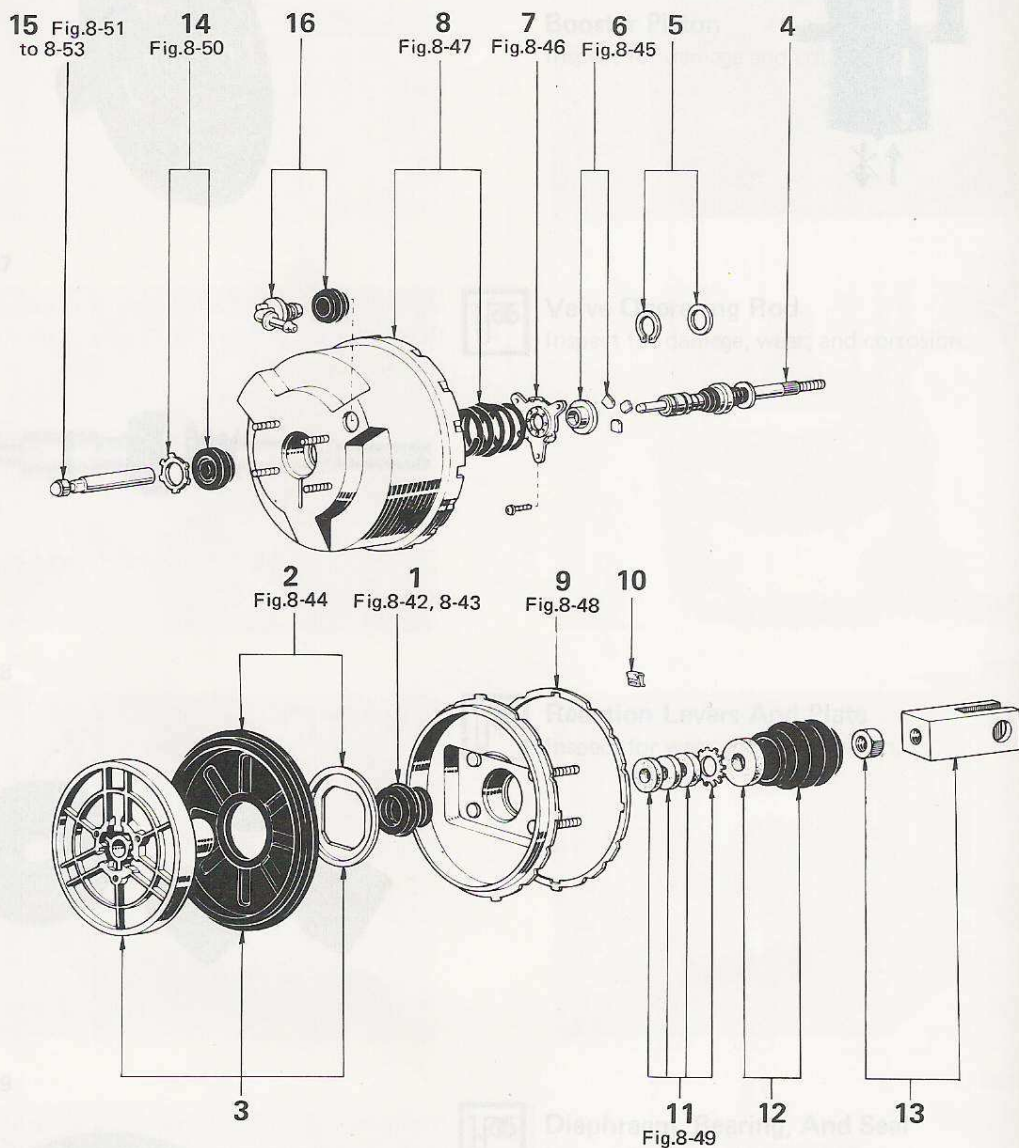Fig. 8-41

- 1 Bearing
- 2 Diaphragm & Retainer
- 3 Piston Assy.
- 4 Valve Operating Rod
- 5 Washer & Snap Ring
- 6 Reaction Levers & Plate
- 7 Retainer
- 8 Spring & Front Body

- 9 Connector
- 10 Lock
- 11 Elements & Retainer
- 12 Boot & Silencer
- 13 Clevis
- 14 Seal & Retainer
- 15 Push Rod
- 16 Grommet & Check Valve

Fig. 8-42



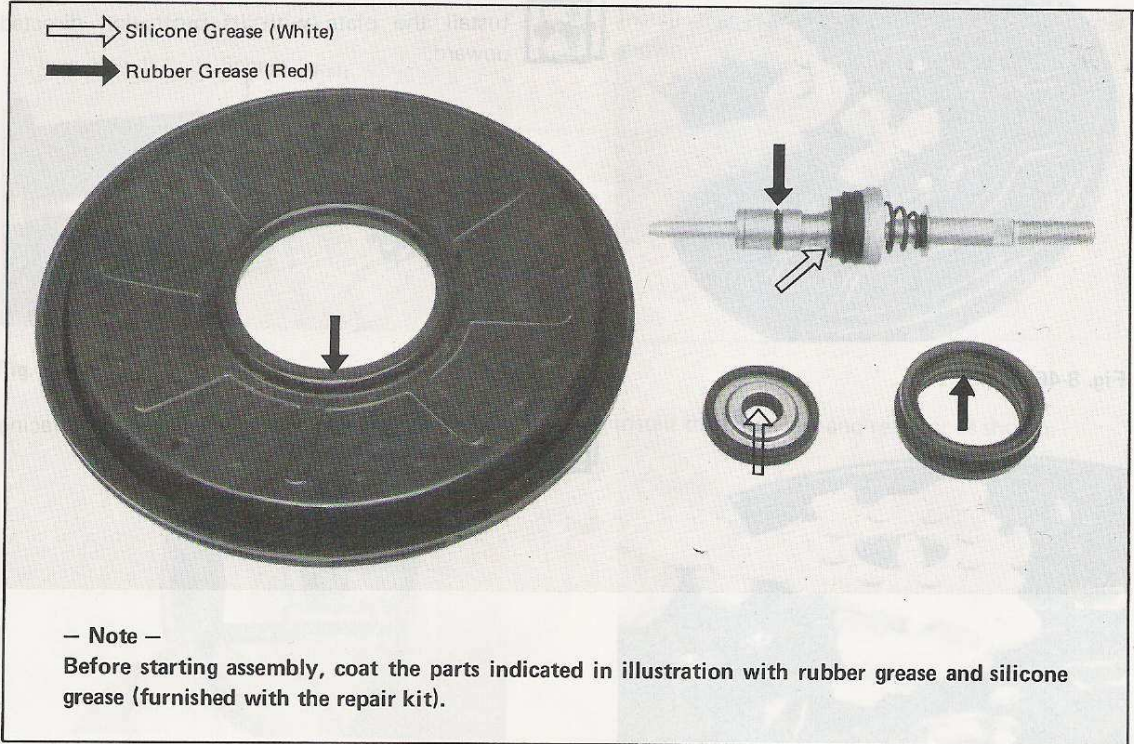


Fig. 8-43

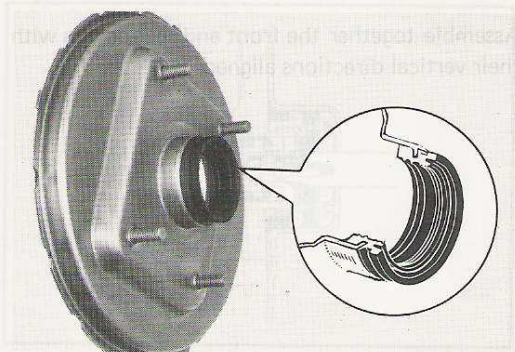


Install the bearing into the rear body.

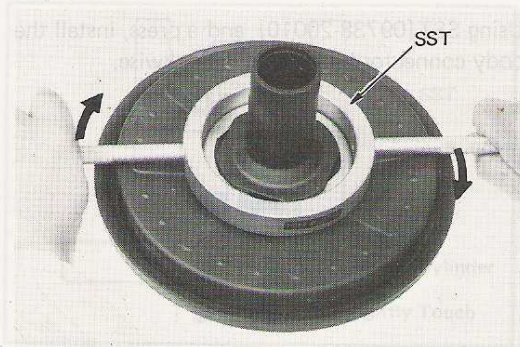Fig. 8-44




Install the retainer by turning it clockwise with SST [09736-30020].

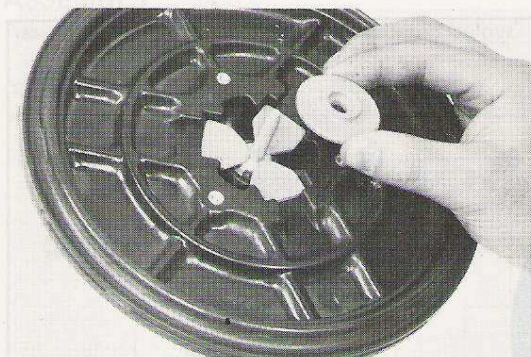Fig. 8-45




Install the plate with its protrusion directed upward.

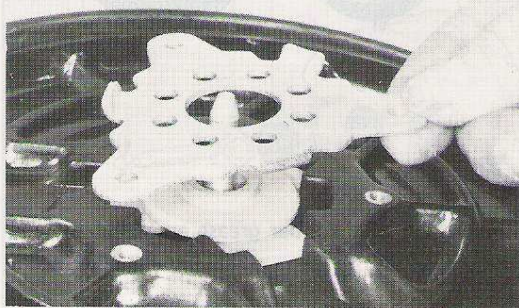Fig. 8-46




Install the retainer with the lipped part facing outward.

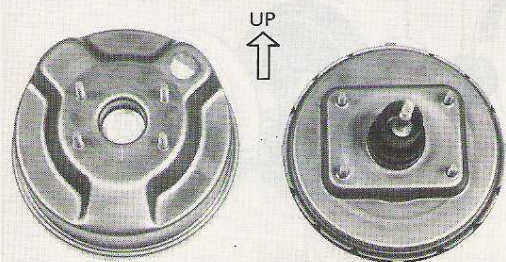Fig. 8-47




Assemble together the front and rear bodies with their vertical directions aligned.

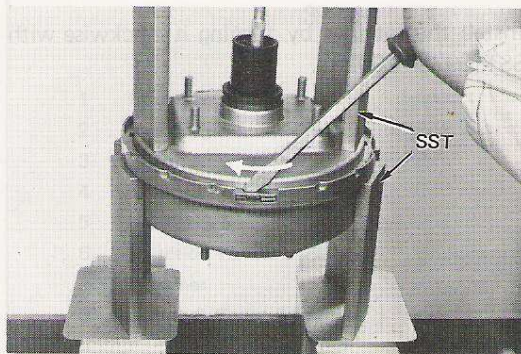Fig. 8-48




Using SST [09738-20010] and a press, install the body connector by turning it clockwise.

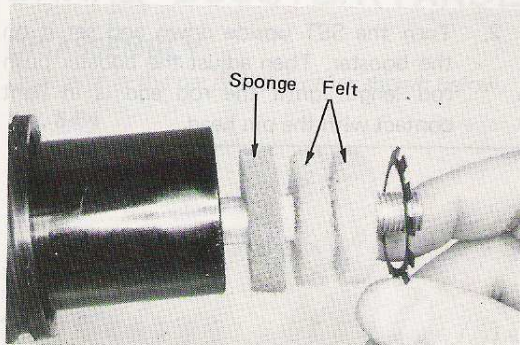Fig. 8-49




Install the elements and retainer in the order shown.

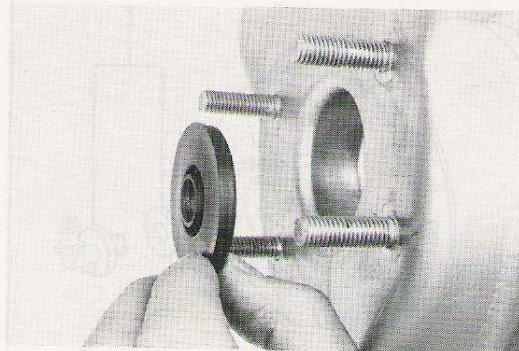Fig. 8-50



Install the body seal and retainer as shown.

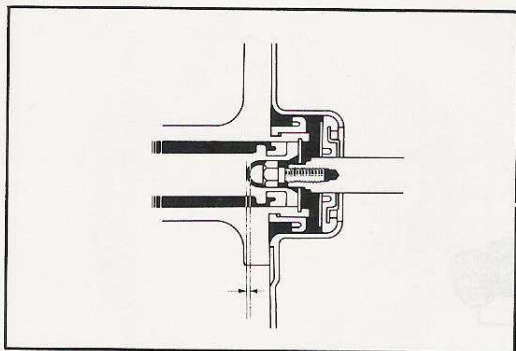Fig. 8-51




Booster Push Rod Length Adjustment

The length of booster push rod is adjusted to provide the specified clearance between the push rod end and the master cylinder piston.


Standard Clearance **0.1-0.5 mm**
(0.004-0.020 in.)

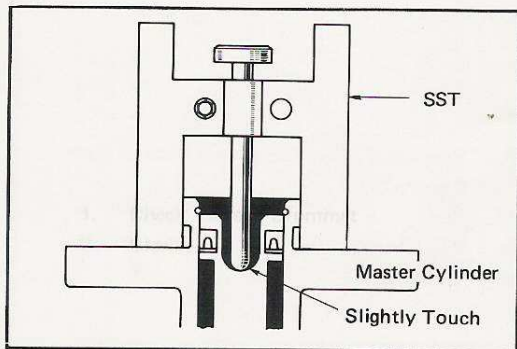Fig. 8-52



1. Set the SST[09737-22012] on the master cylinder, and lower the pin until its tip comes in light contact with the piston.

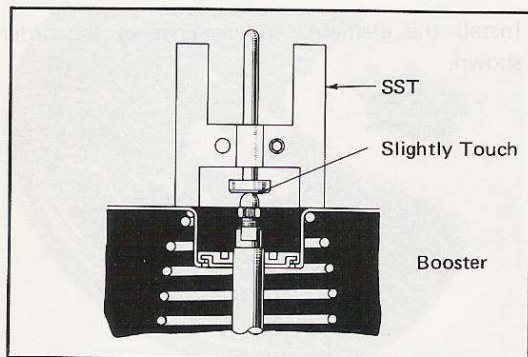Fig. 8-53



2. Turn the SST upside down and set it on the booster. Then adjust the booster push rod length until the rod end is in light contact with the pin head.

Fig. 8-45

Fig. 8-57

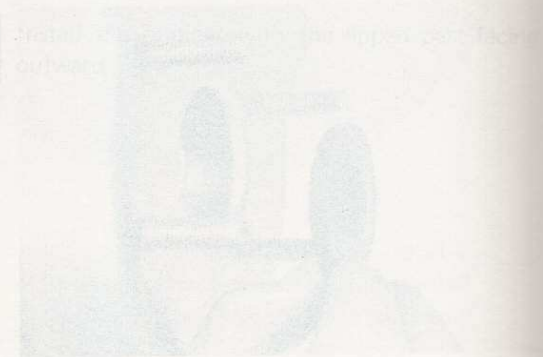


Fig. 8-47

Fig. 8-51


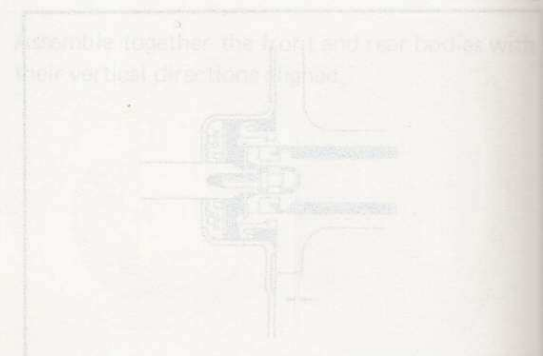
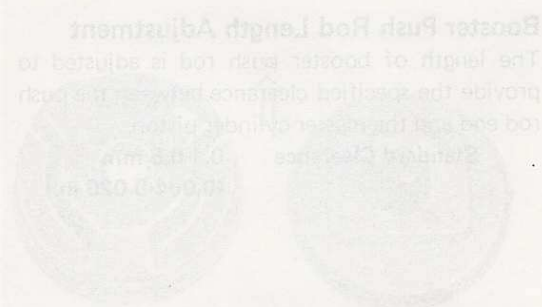
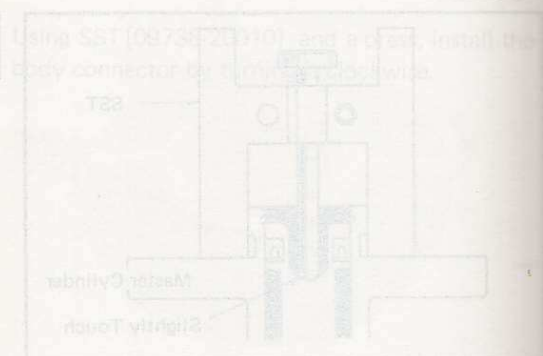


Fig. 8-48

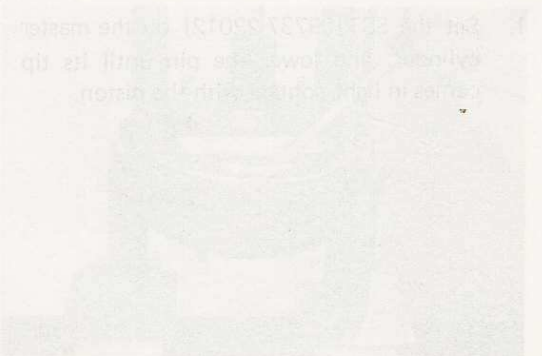Fig. 8-52



BRAKE BOOSTER(TANDEM TYPE)

DISASSEMBLY

Disassemble the parts in the order shown below.

Fig. 8-54

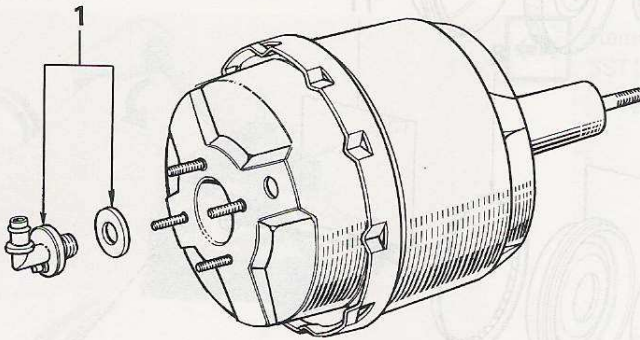
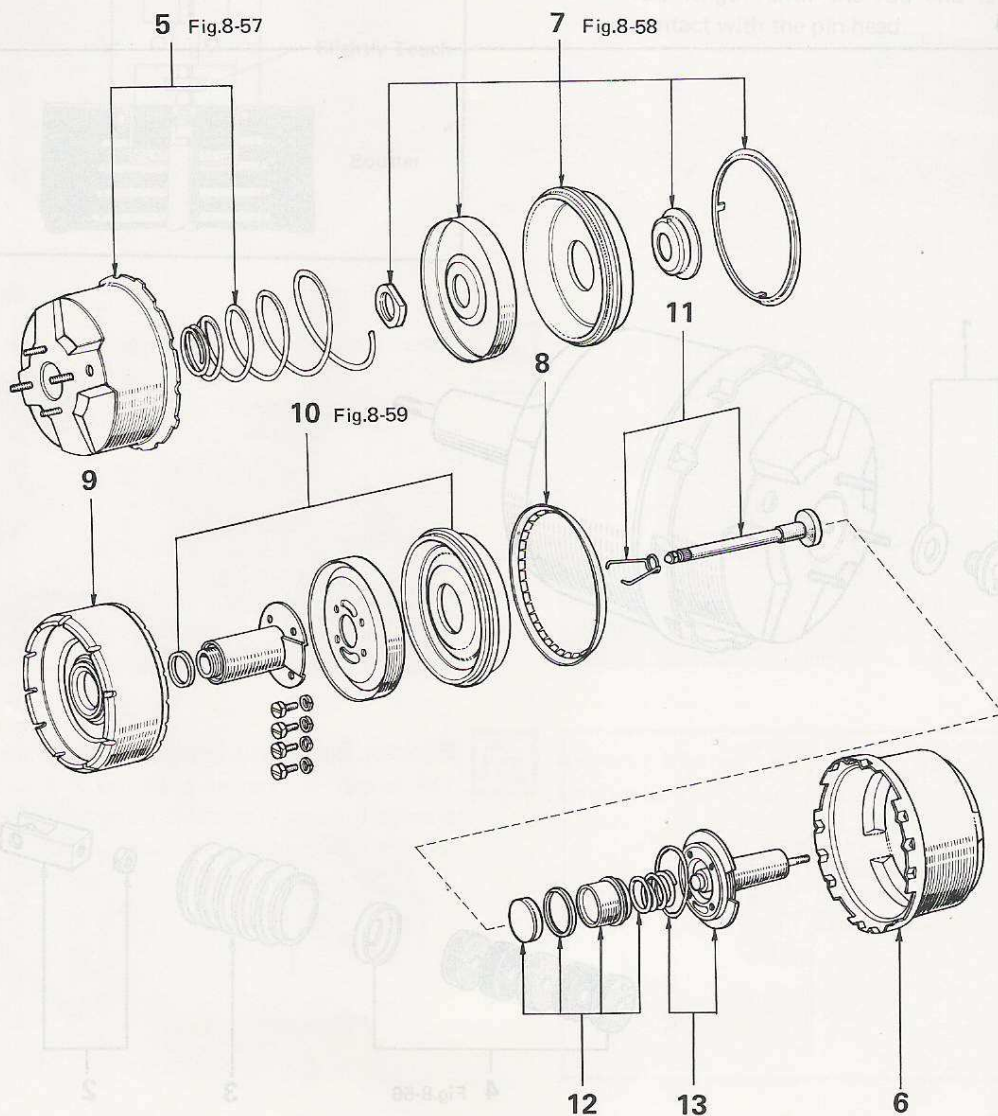


Fig.8-56


1. Check Valve & Grommet
2. Clevis

3. Boot
4. Retainer, Filter & Silencer

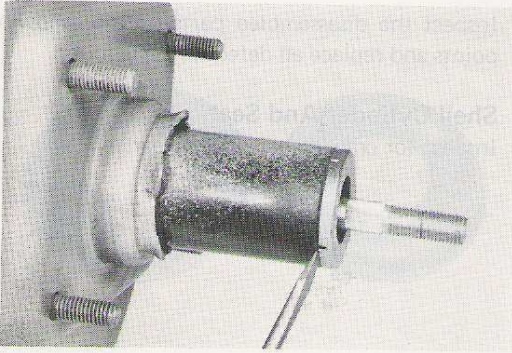Fig. 8-55


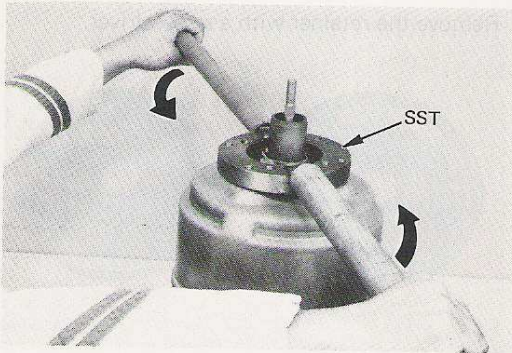
- | | |
|---|---|
| 5. Front Shell Cylinder & Spring | 10. Hub, Bolts, Rear Diaphragm Plate & Rear Diaphragm |
| 6. Rear Shell Cylinder | 11. Rod |
| 7. Nut, Front Diaphragm Plate, Front Diaphragm & Front Diaphragm Retainer | 12. Reaction Disc, Reaction Disc Hub & Spring |
| 8. Rear Diaphragm Retainer | 13. Valve Body & "O" Ring |
| 9. Center Plate | |

Fig. 8-56




Remove the retainer before disassembly.

Fig. 8-57




Remove the front shell cylinder and spring using SST [09738-22012] and [09753-22010].

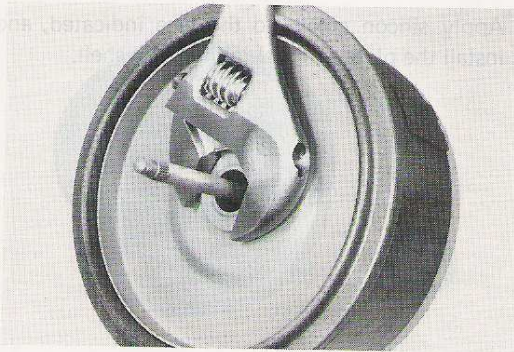Fig. 8-58




Remove the nut.

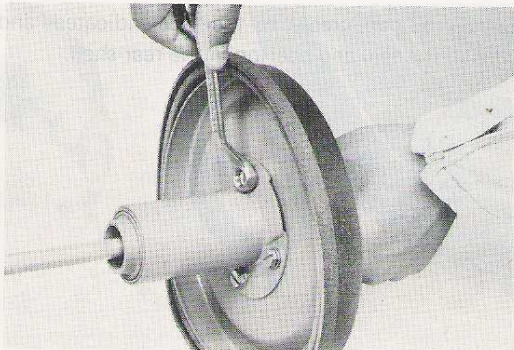Fig. 8-59



Remove the hub, rear diaphragm plate, and rear diaphragm.

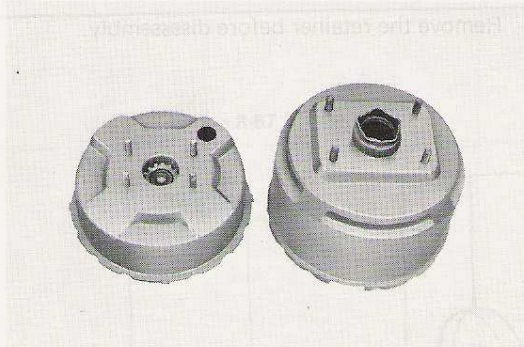Fig. 8-60



INSPECTION




Inspect the disassembled parts on the following points and replace all defective parts found.

Shell Cylinder And Seal


Inspect for cracks, damage, or wear.

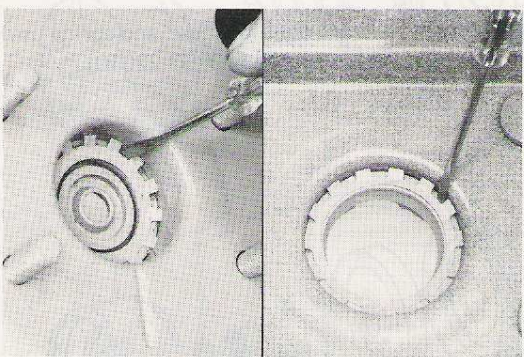Fig. 8-61




Remove the retainer with a screw driver.

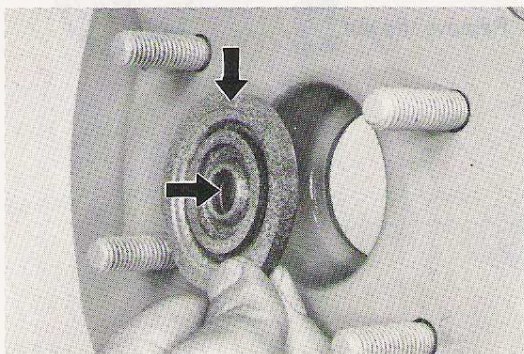Fig. 8-62




Apply silicon grease to the face indicated, and install the plate and seal in the front shell.

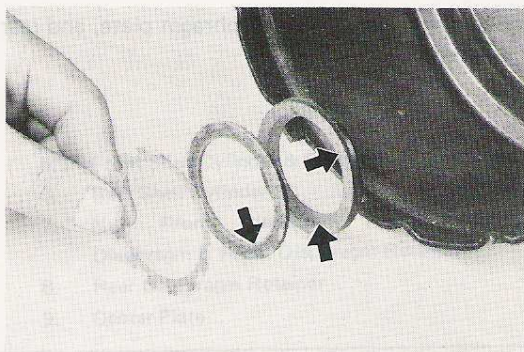Fig. 8-63



Apply silicon grease to the face indicated, and install the seal and bearing in the rear shell.

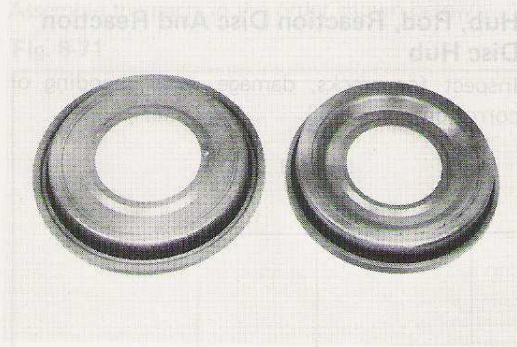
Fig. 8-64



Diaphragm

Inspect for damage.

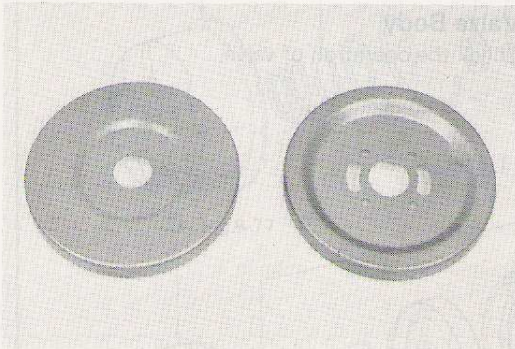
Fig. 8-65



Diaphragm Plate

Inspect for cracks or damage.

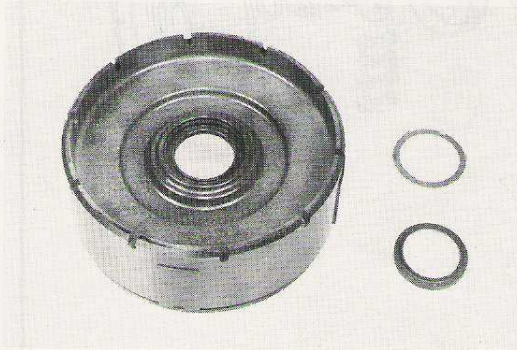
Fig. 8-66



Center Plate And Seal


Inspect for cracks or damage.

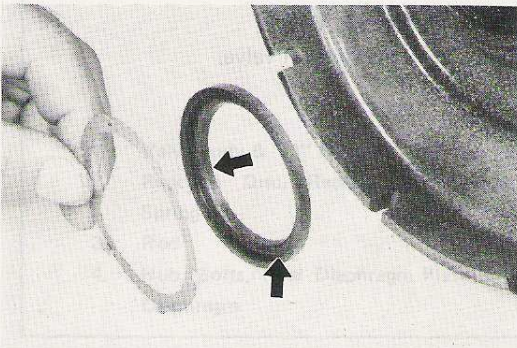Fig. 8-67



Apply silicon grease to the face indicated, and install the seal in the center plate.

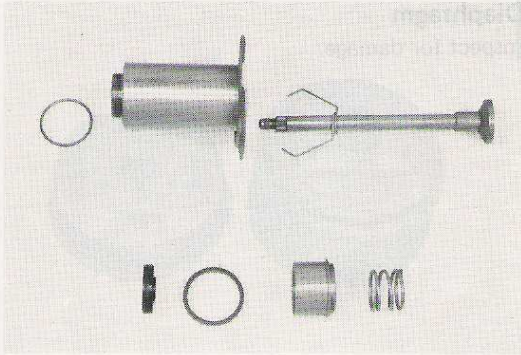
Fig. 8-68



Hub, Rod, Reaction Disc And Reaction Disc Hub

Inspect for cracks, damage, wear, bending or corrosion.

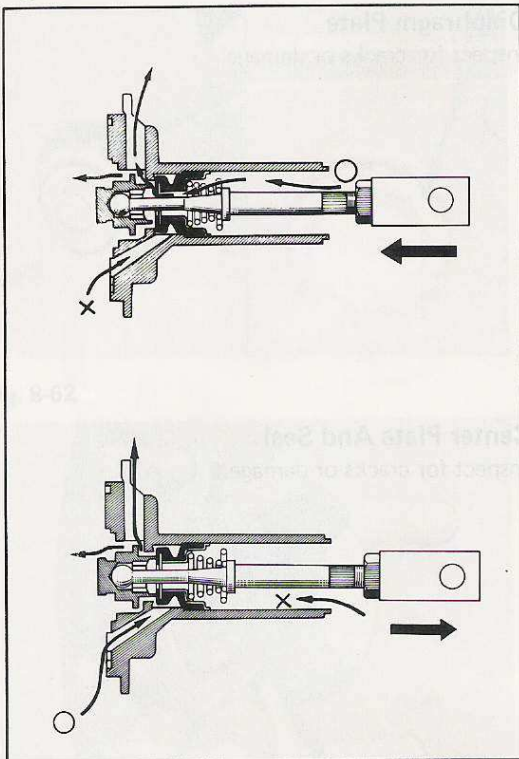
Fig. 8-69



Valve Body

Check the operation of valve.

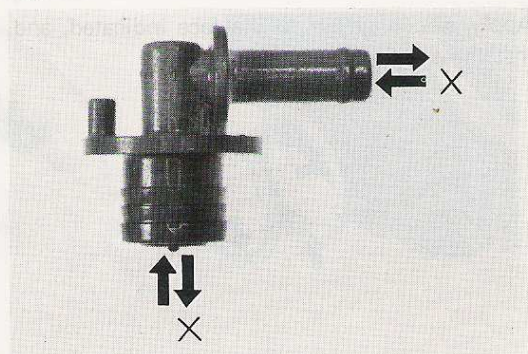Fig. 8-70




Vacuum Check Valve

Check the operation of valve.

ASSEMBLY


Assemble the parts in the order shown below.

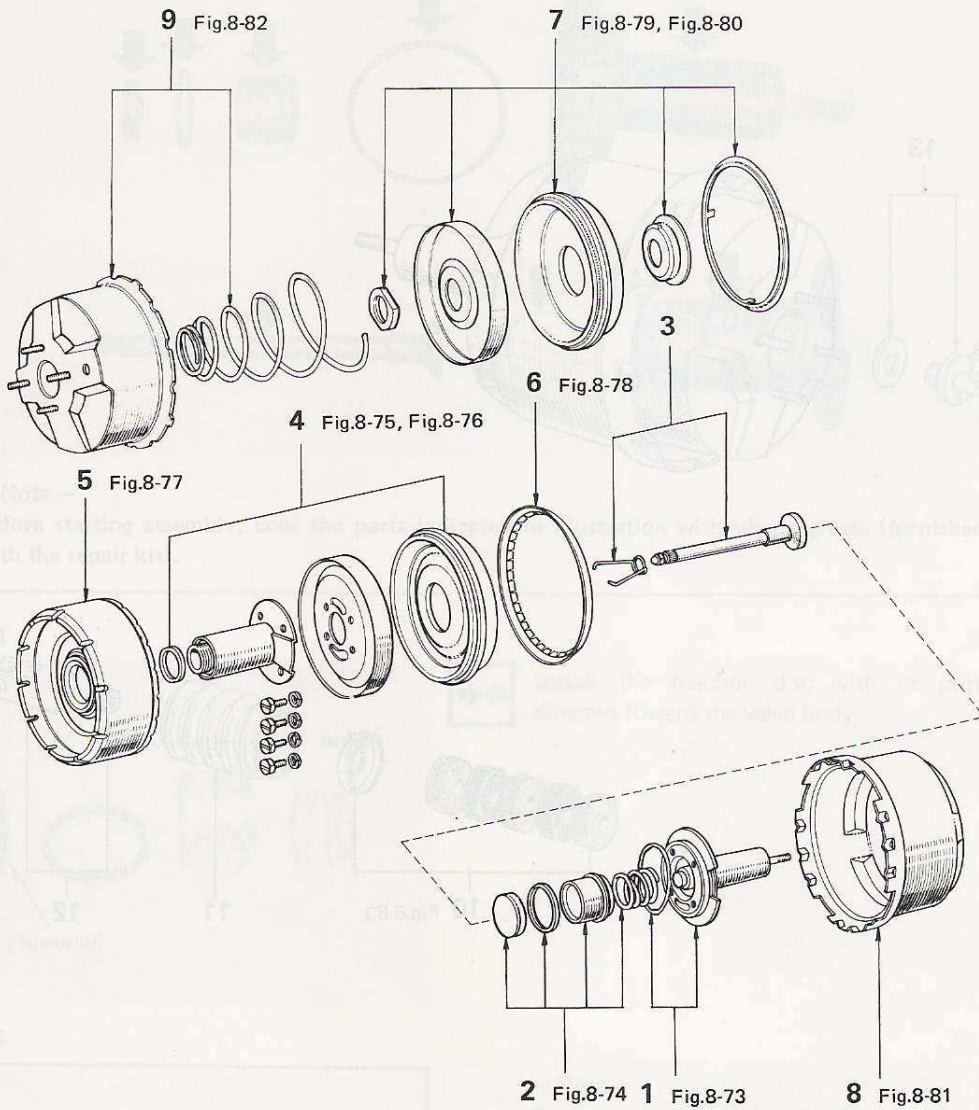Fig. 8-71

1. Valve Body & "O" Ring
2. Reaction Disc, Reaction Disc Hub & Spring
3. Rod
4. Hub, Bolts, Rear Diaphragm Plate & Rear Diaphragm

5. Center Plate
6. Rear Diaphragm Retainer
7. Nut, Front Diaphragm Plate, Front Diaphragm & Front Diaphragm Retainers
8. Rear Shell Cylinder
9. Front Shell Cylinder & Spring

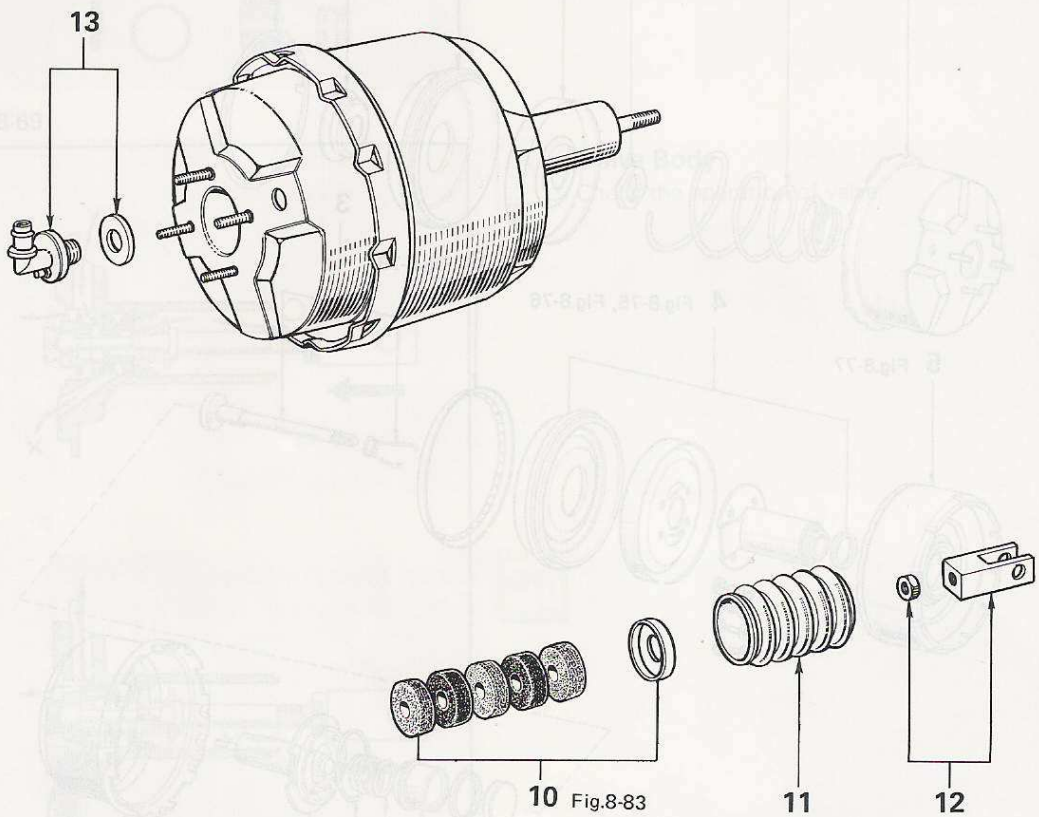Fig. 8-72



10. Retainer, Filter & Silencer

11. Boot

12. Clevis

13. Check Valve & Grommet

Fig. 8-73



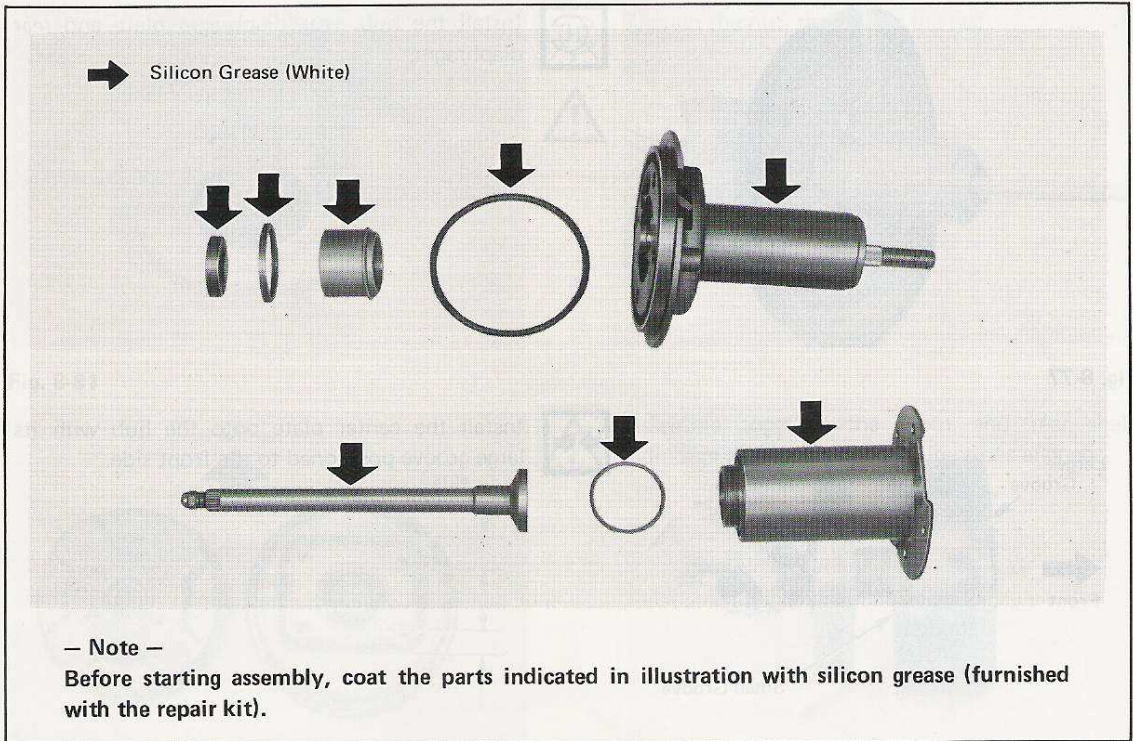


Fig. 8-74

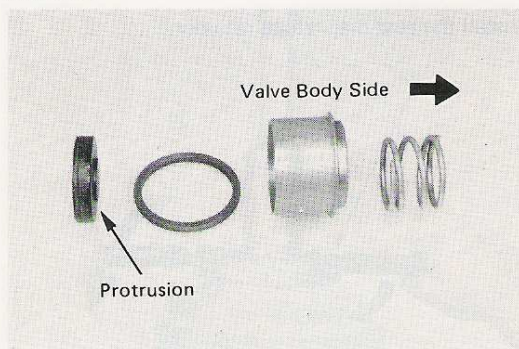

Install the reaction disc with its protrusion directed toward the valve body.

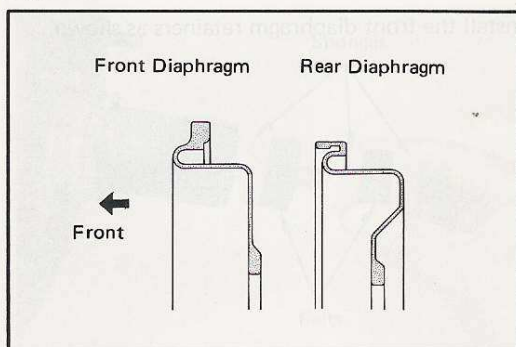
Fig. 8-75



— Note —


Do not confuse rear diaphragm with front diaphragm.

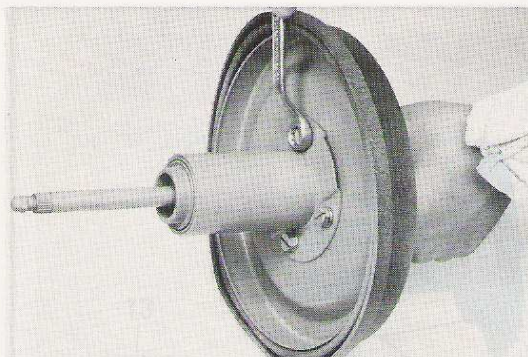Fig. 8-76




Install the hub, rear diaphragm plate and rear diaphragm.

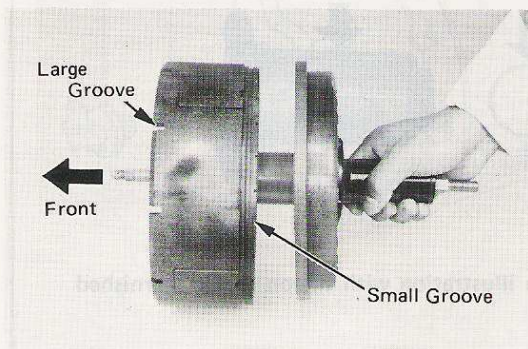Fig. 8-77




Install the center plate onto the hub with its large groove positioned to the front side.

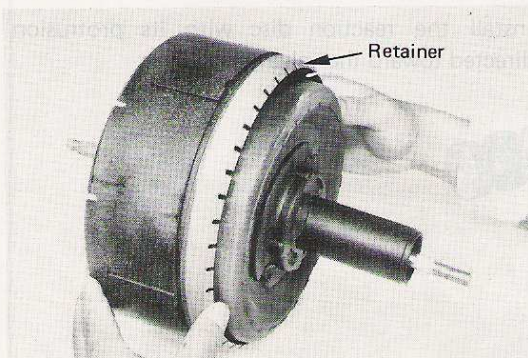Fig. 8-78




Install the rear diaphragm retainer.

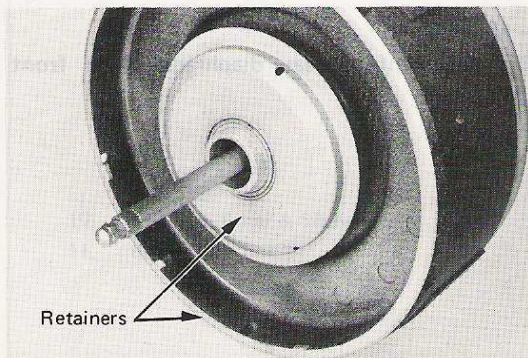Fig. 8-79



Install the front diaphragm retainers as shown.

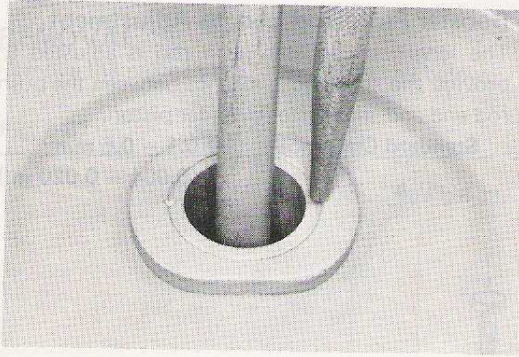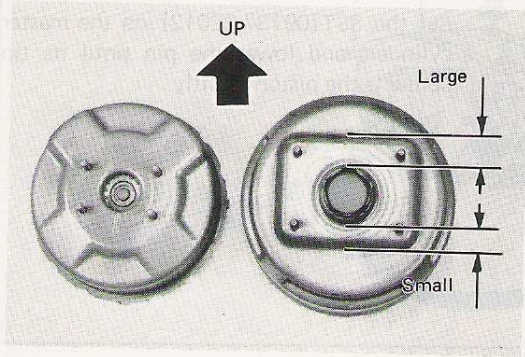
Fig. 8-80



Tighten the nut, then stake the nut.

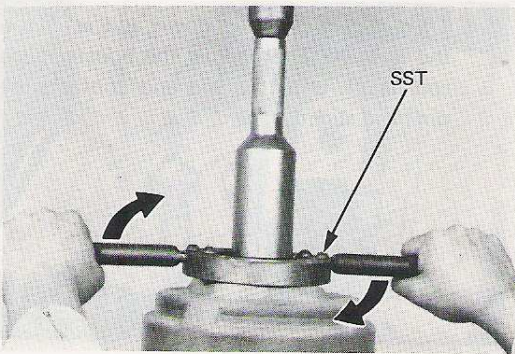


Fig. 8-81



Assemble together the front and rear shell cylinders with their vertical directions aligned.

Fig. 8-82

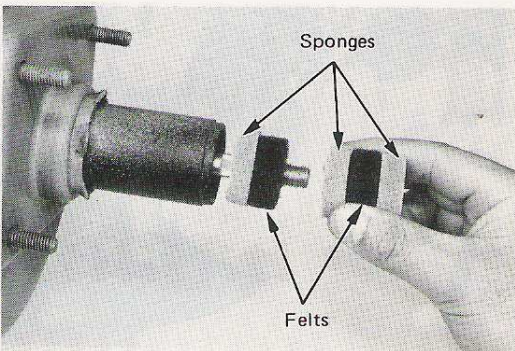


Using SST [09738-22012], [09753-22010], and a press, install the shell cylinder and stud assembly until the rear shell cut is securely against the stopper.

— Note —

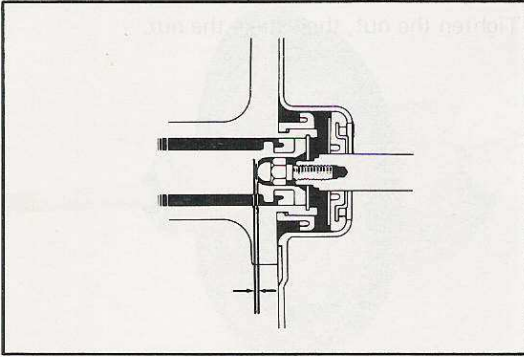
If the rear shell is too tight and cannot be turned, re-apply oil on the diaphragm edge which contacts with the front and rear shells.

Fig. 8-83



Install the sponges and felts as shown.


Fig. 8-84

**Booster Push Rod Length Adjustment**

The length of booster push rod is adjusted to provide the specified clearance between the push rod end and the master cylinder piston.


Standard Clearance **0.1 – 0.5 mm**
 (0.004 – 0.020 in.)

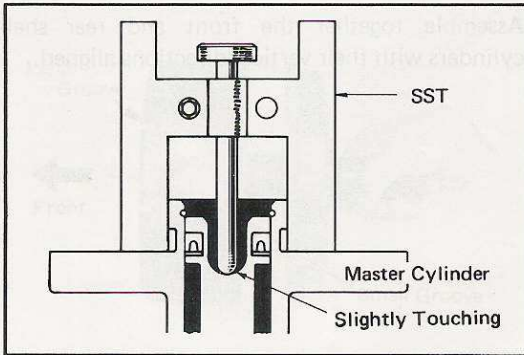Fig. 8-85



1. Set the SST[09737-22012] on the master cylinder, and lower the pin until its tip contacts the piston slightly.

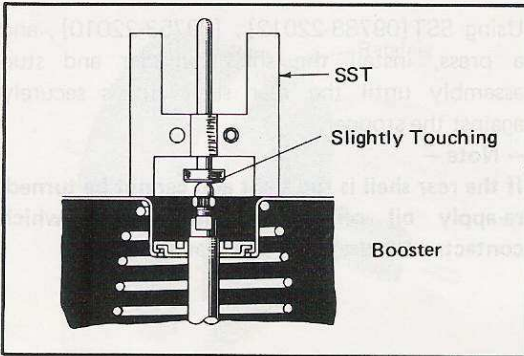Fig. 8-86



2. Turn the SST upside down and set it on the booster. Then adjust the booster push rod length until the rod end contacts the pin head slightly.

VACUUM PUMP

REMOVAL

Remove the parts in the order numbered below.

Fig. 8-87


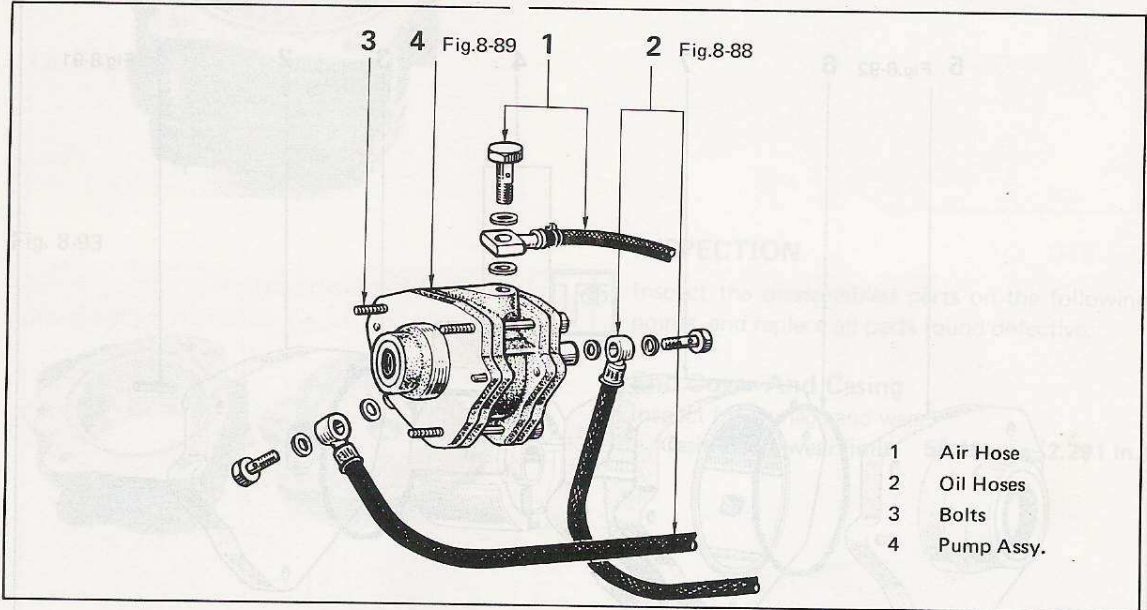


Fig. 8-88

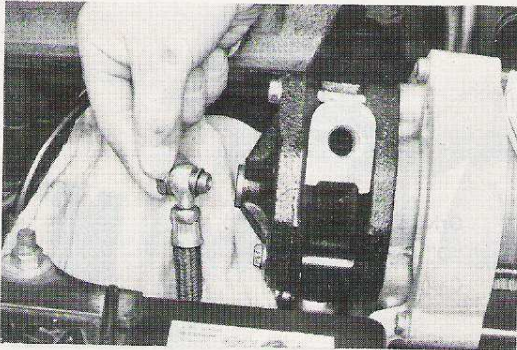


Disconnect the oil hoses.

— Caution —

Oil hose is contained in the hoses so avoid spilling it out when removing the hoses.


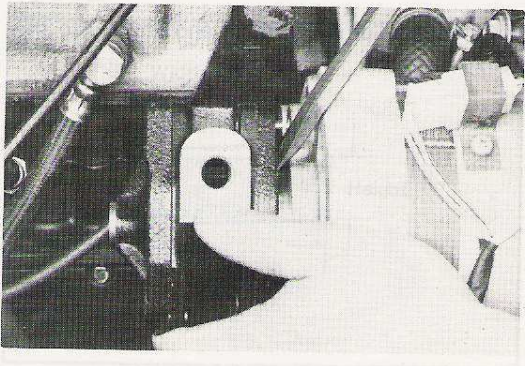
Fig. 8-89



Remove the vacuum pump assembly.

DISASSEMBLY

Remove the parts in the order numbered below.

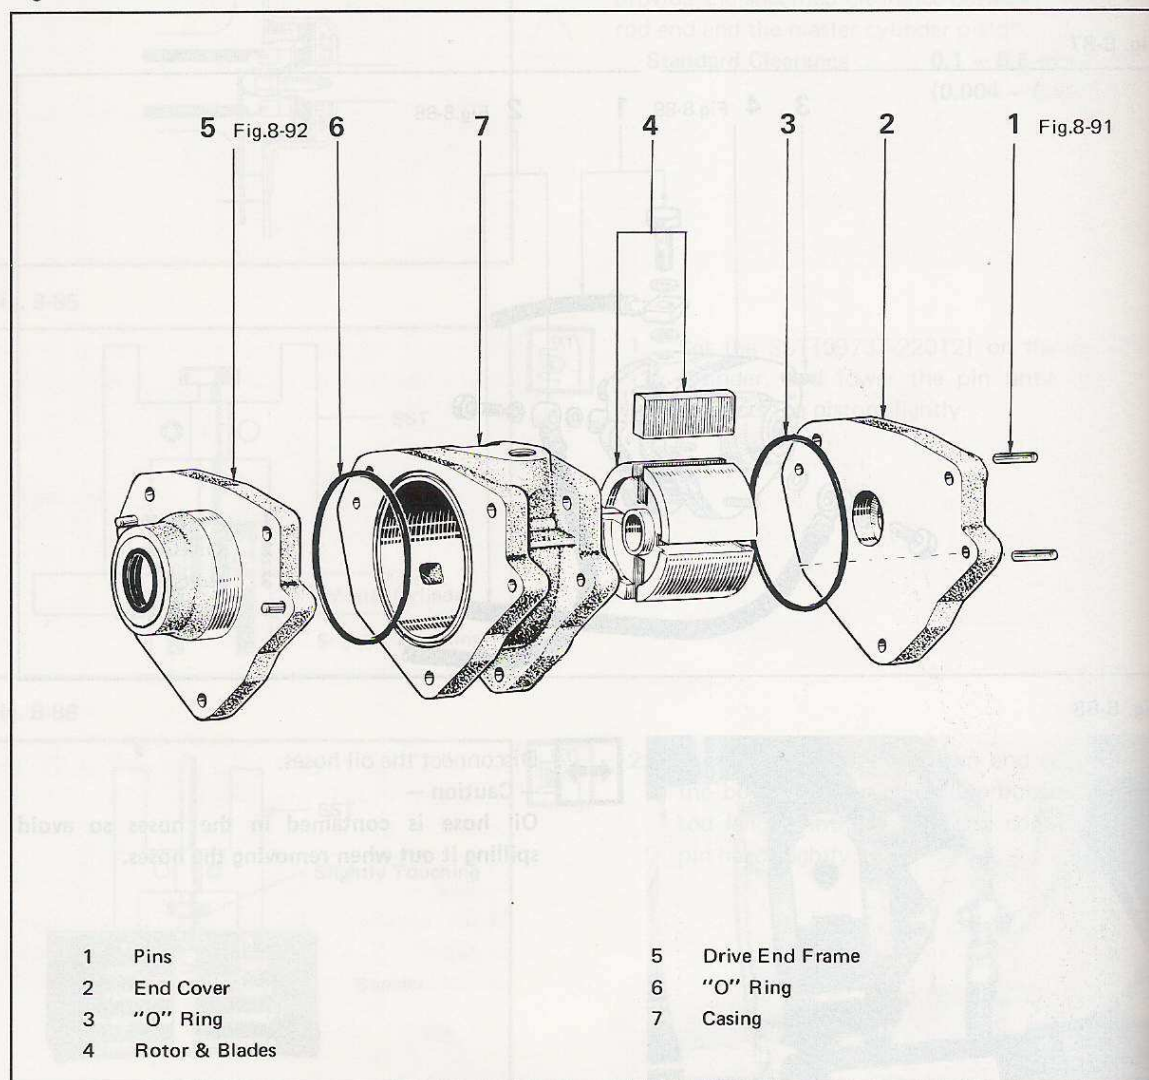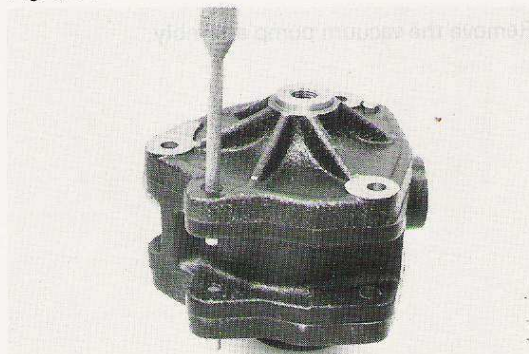Fig. 8-90**Fig. 8-91**


Drive out the pins from the end cover into the casing.

Fig. 8-92



Drive out the pins from the casing until flush with the inner face of end frame, and remove the end frame with the pins attached.

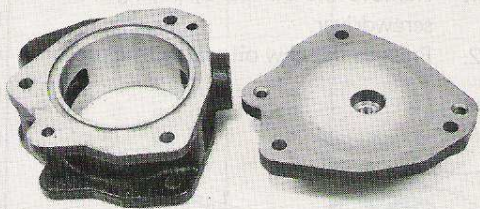Fig. 8-93



INSPECTION




Inspect the disassembled parts on the following points, and replace all parts found defective.

End Cover And Casing

Inspect for damage and wear.

Casing bore wear limit 58.19 mm (2.291 in.)

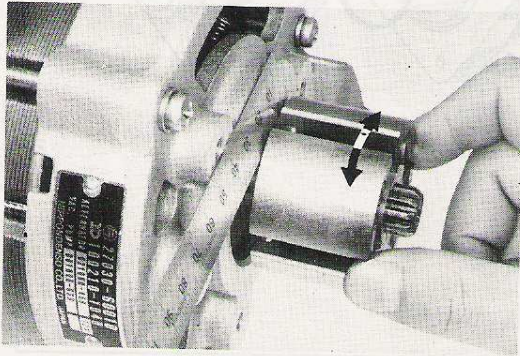Fig. 8-94




Alternator Shaft And Rotor

Check the rotor-to-spline play

Limit (on rotor) 2.4 mm (0.095 in.)

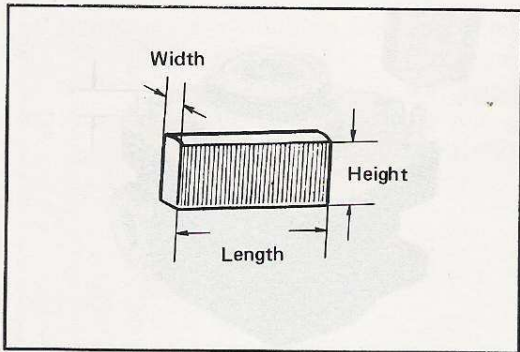Fig. 8-95




Blades

Inspect for damage and wear.



Height limit	mm (in.)	12 (0.47)
Width limit	mm (in.)	0.92 (0.272)
Length limit	mm (in.)	34.98 (1.377)

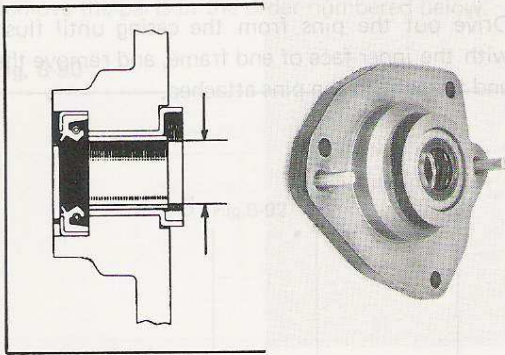Fig. 8-96



Drive End Frame

1. Inspect the end frame for damage and wear.
2. Inspect the oil seal and bushing for damage and wear.

Bushing bore wear limit

16.14 mm (0.6354 in.)



Fig. 8-97



Oil Seal Replacement

1. Remove the oil seal by prying it out with a screwdriver.
2. Press in the new oil seal with a press.


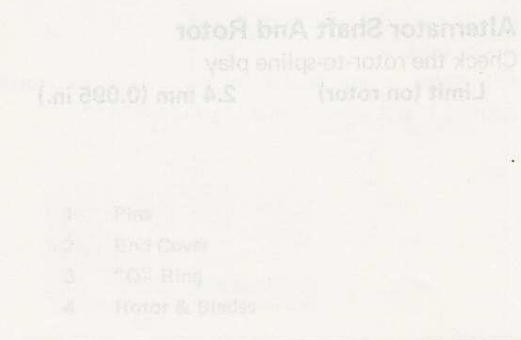


Fig. 8-98

Length limit (max 10.47)	10.47 (0.412)
Width limit (max 10.27)	10.27 (0.404)
Height limit (max 10.27)	10.27 (0.404)

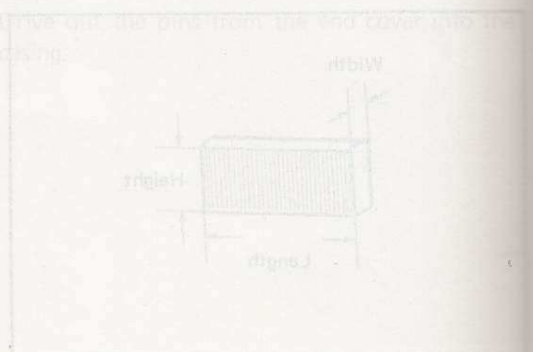

ASSEMBLY

Assemble the parts in the order numbered below.

Fig. 8-98

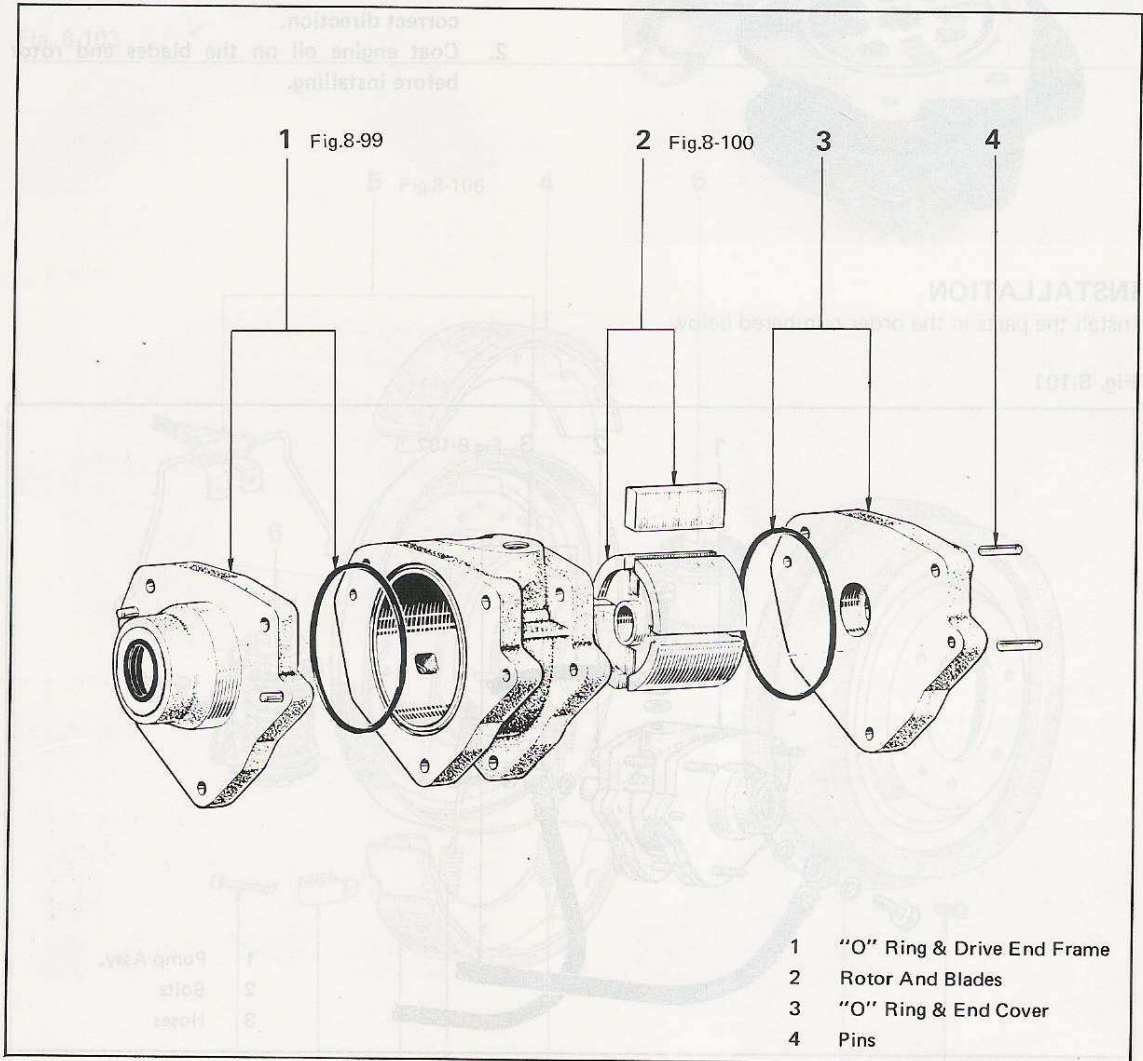


Fig. 8-99



Drive in the pins until their end are protruding out only about 8 mm.

— Note —

Apply engine oil on the "O" ring and light coat of grease on the oil seal before installing.

Fig. 8-100



Install the rotor and blades.

— Note —

1. Make sure that the blades are positioned in correct direction.
2. Coat engine oil on the blades and rotor before installing.

INSTALLATION

Install the parts in the order numbered below.

Fig. 8-101


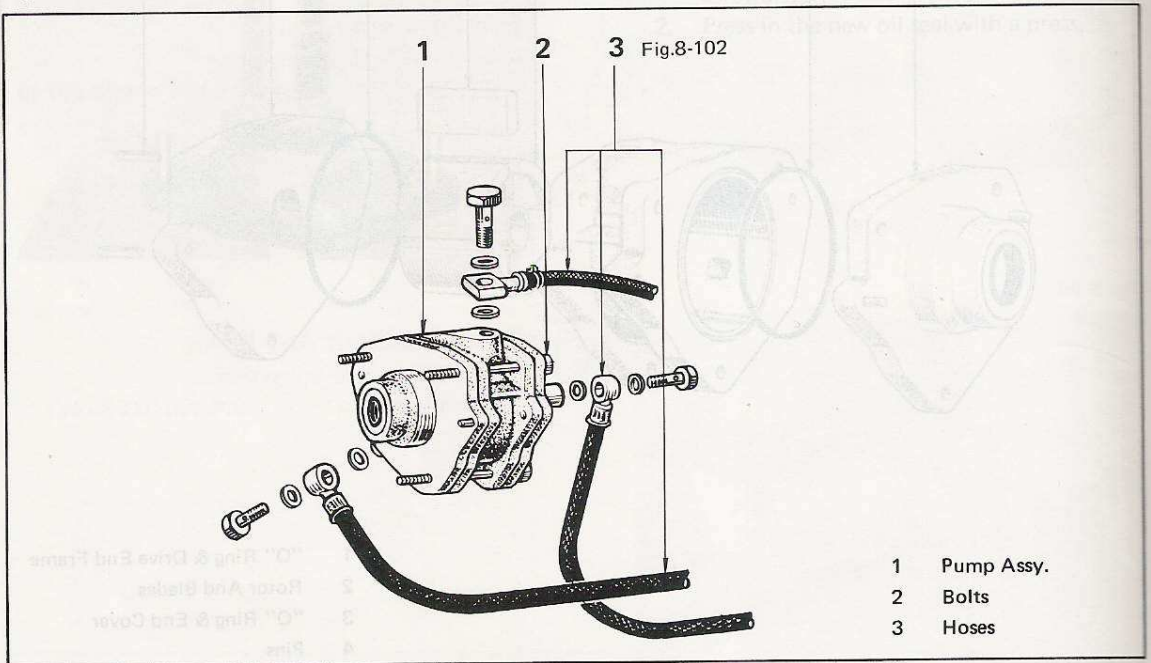


Fig. 8-102

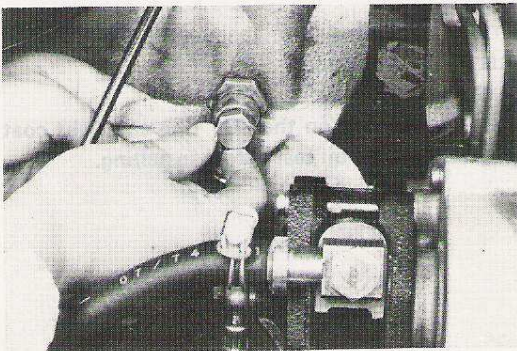

Run the engine at low speed after completing the installation.


Loosen the hollow screw at delivery end of vacuum pump and check if oil is circulating within the pump.

FRONT BRAKE(DRUM TYPE)

REMOVAL

Remove the parts in the order numbered below.

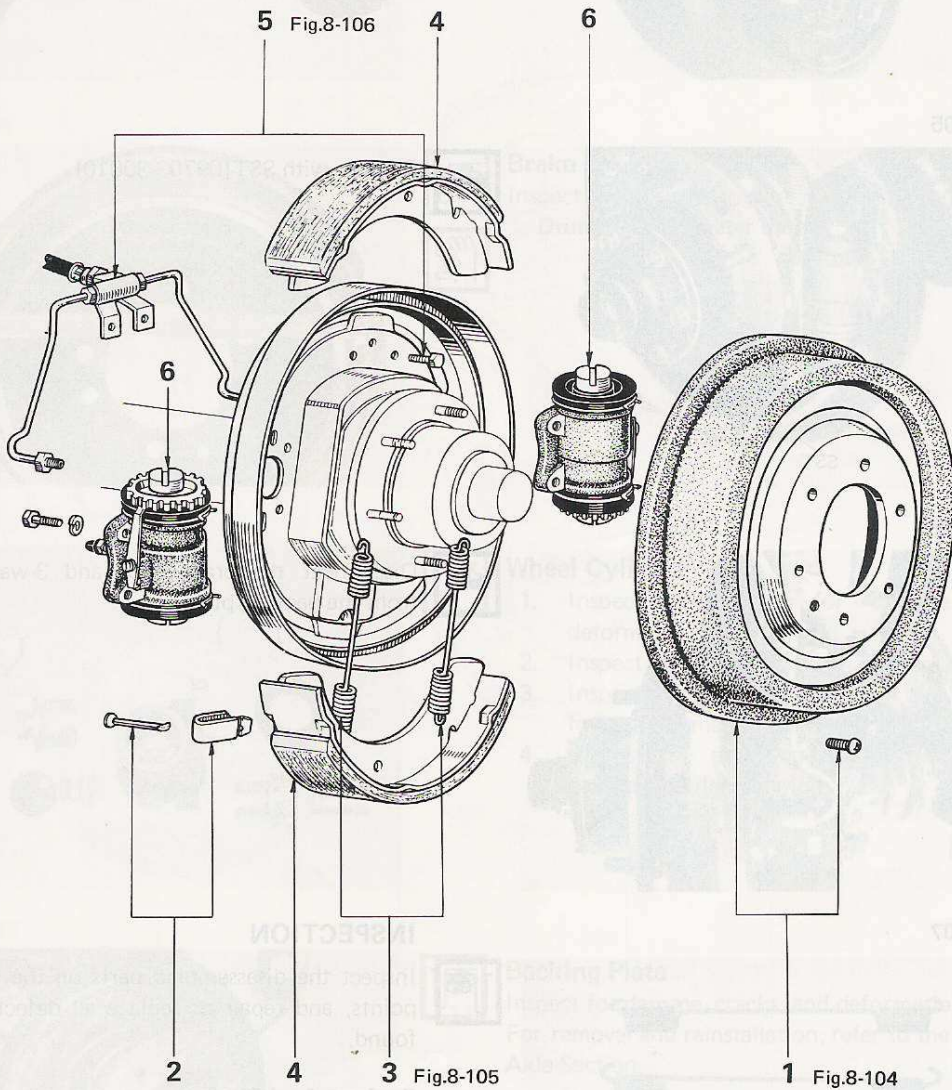
Fig. 8-103



- 1 Brake Drum
- 2 Shoe Hold Down Springs & Pins
- 3 Shoe Return Springs


- 4 Shoe Assemblies
- 5 Brake Tube
- 6 Wheel Cylinders

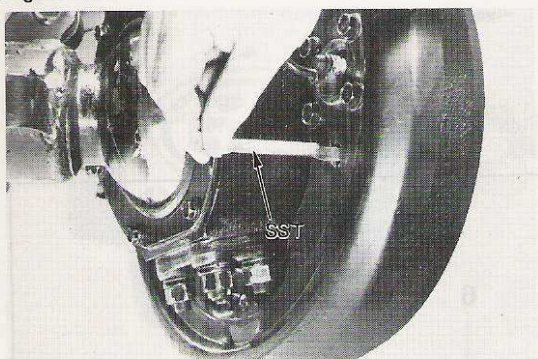Fig. 8-104




Return the wheel cylinder adjusting nut with SST [09704-10010] and then remove the drum.

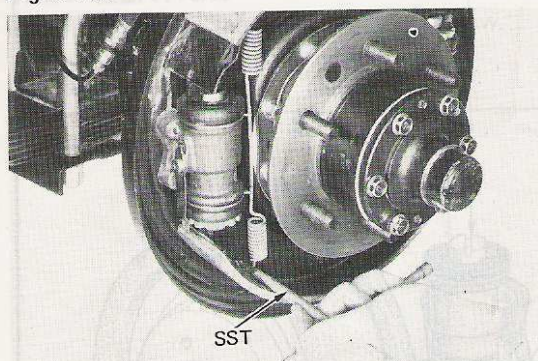Fig. 8-105




Remove with SST [09703-30010].

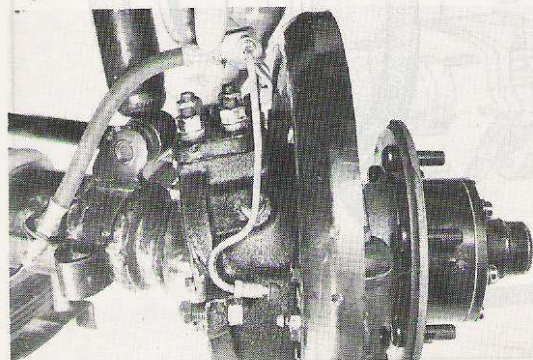Fig. 8-106



Disconnect the brake tube and 3-way fitting from the backing plate.

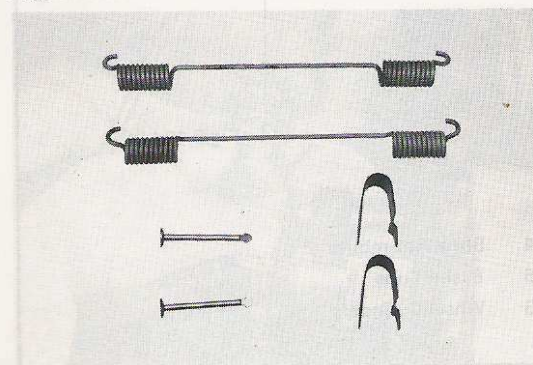Fig. 8-107



INSPECTION




Inspect the disassembled parts on the following points, and repair or replace all defective parts found.

Springs And Pins

Inspect for damage and deformation.

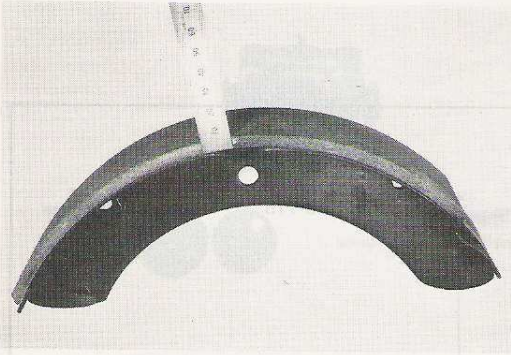
Fig. 8-108

**Shoe And Lining**

Inspect for wear, damage, and deformation.

Lining thickness limit 1.5 mm (0.06 in.)

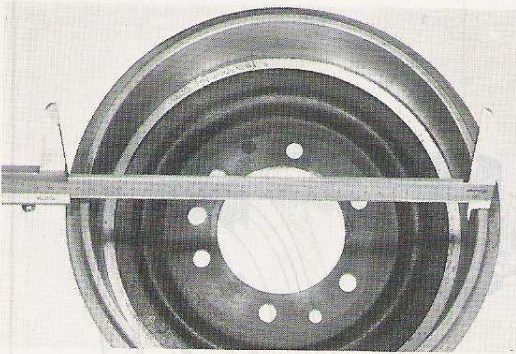
Fig. 8-109

**Brake Drum**

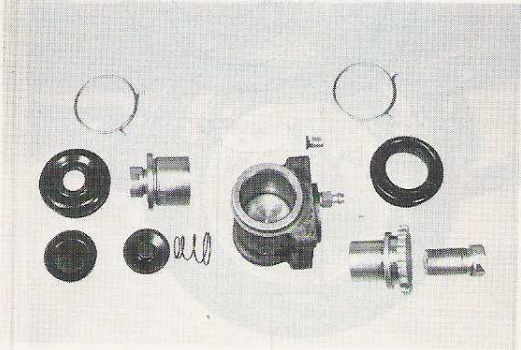Inspect for wear, damage, and cracks.

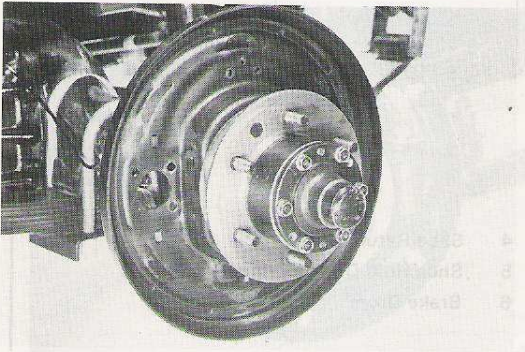
**Drum inner diameter limit****297 mm (11.70 in.)**

Fig. 8-110

**Wheel Cylinder**

1. Inspect the cups for damage and deformation.
2. Inspect the boots for damage and cracks.
3. Inspect the cylinder body bore and piston for wear, damage, rust, and corrosion.
4. Inspect the adjusting nut and bolt for damage and deformation.

Fig. 8-111

**Backing Plate**

Inspect for damage, cracks, and deformation.

For removal and reinstallation, refer to the Front Axle Section.

INSTALLATION

Install the parts in the order numbered below.

Fig. 8-112



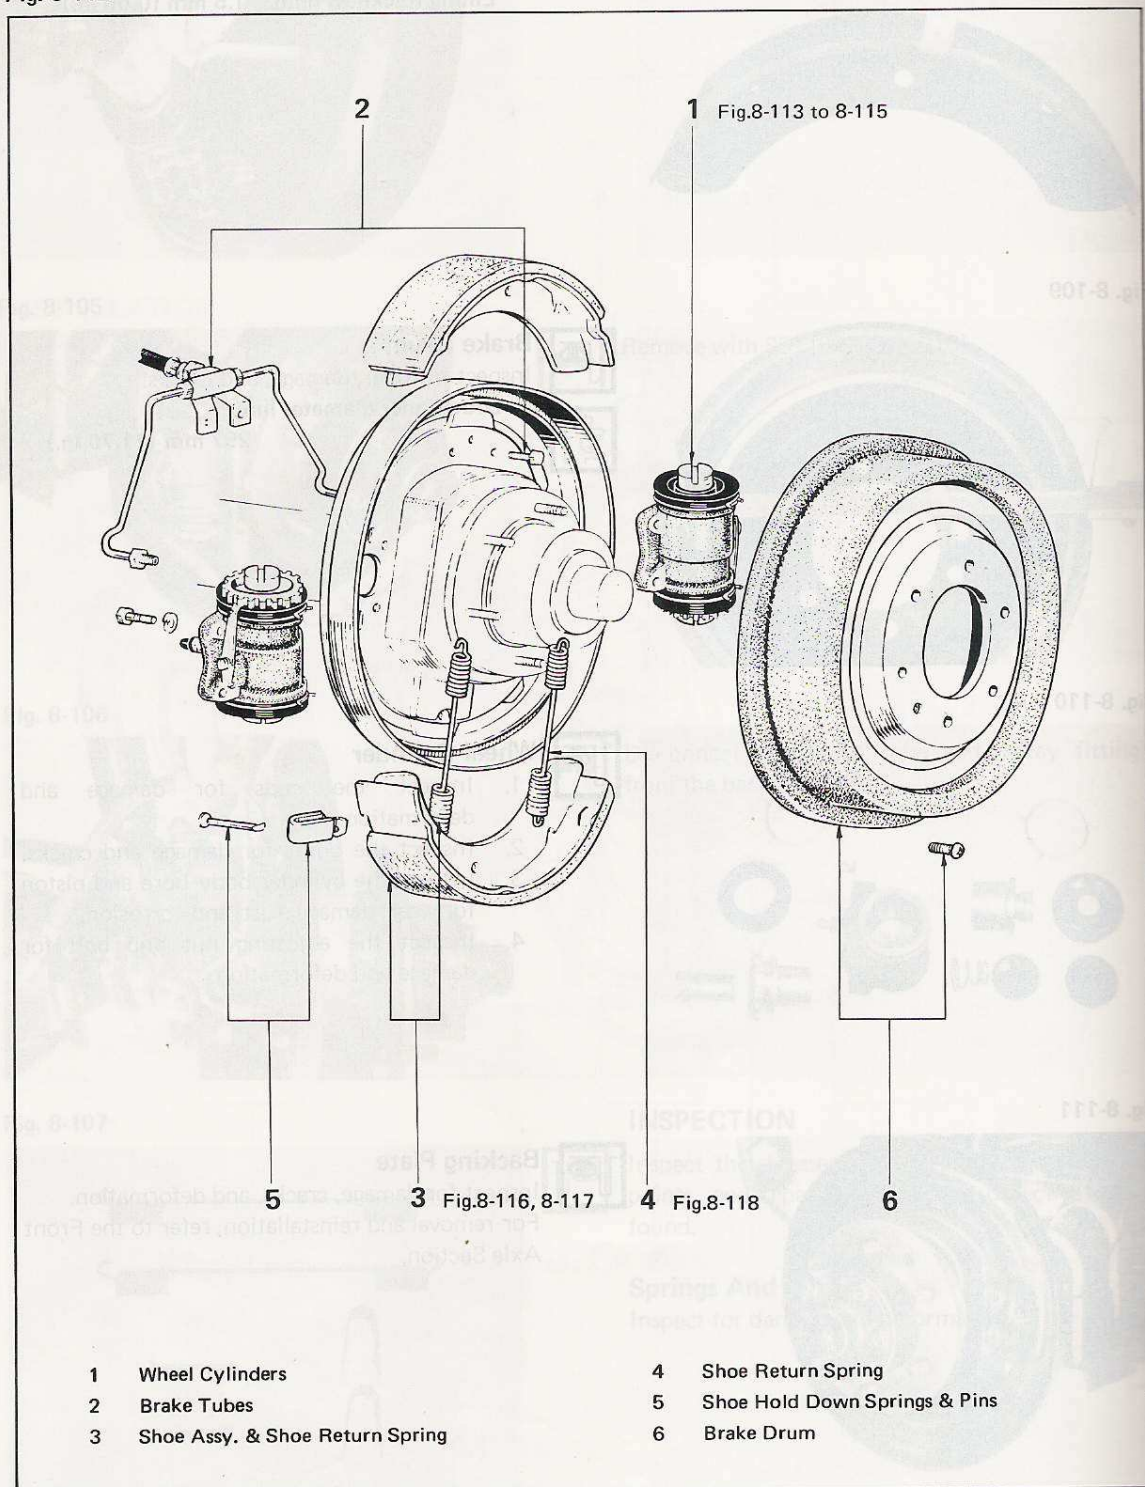


Fig. 8-113

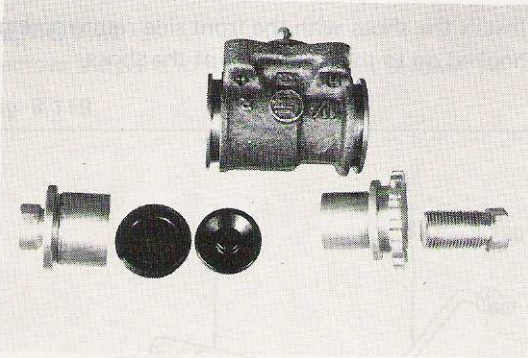

Apply rubber grease on the piston and cup.
Apply non-melt type grease on the adjusting nut and bolt.

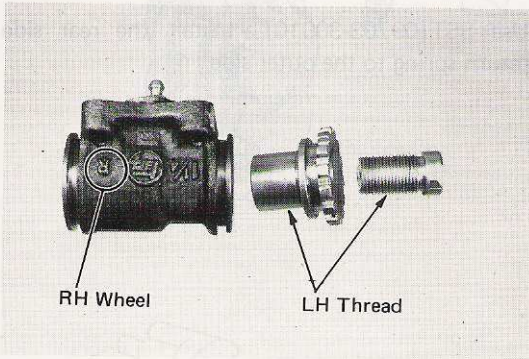
Fig. 8-114



Install the left hand thread adjusting nut and bolt at the right wheel brake.


Install the right hand thread adjusting nut and bolt at the left wheel brake.

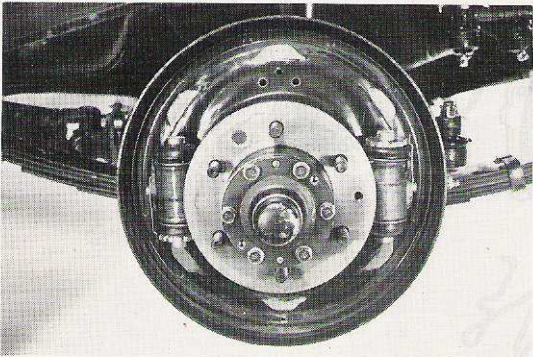Fig. 8-115



Install the wheel cylinders.

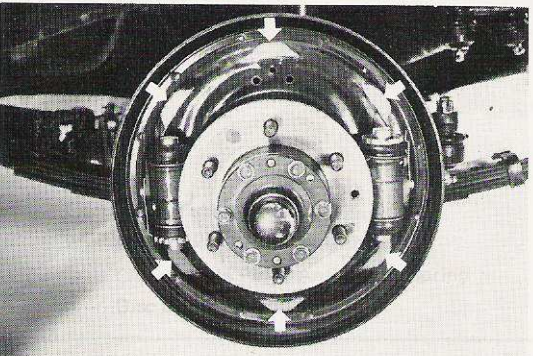
Fig. 8-116



Apply non-melt grease to the place indicated by the arrow.


- 5. Set Ring
- 6. Cylinder Bores & Disk Brake Piston
- 7. Seal Ring

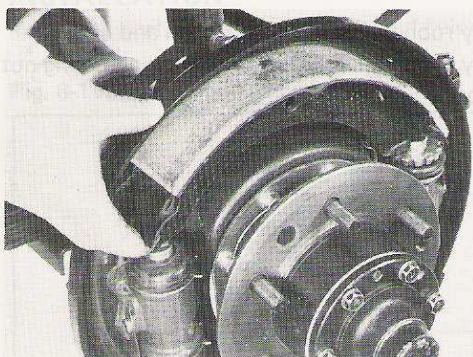Fig. 8-117



Install the shoes with the front side return spring hooked on to the inner sides of the shoes.

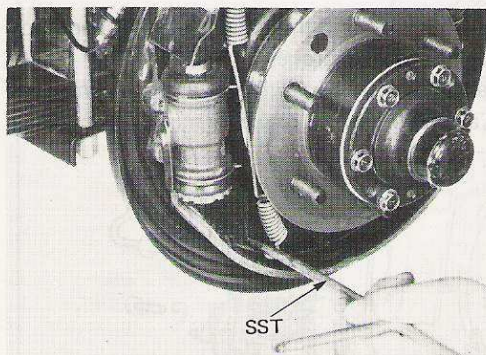Fig. 8-118



Use SST [09703-30010]. Install the rear side return spring to the outer side.


- 1 Wheel Cylinders
- 2 Brake Tumor
- 3 Shoe Assy. & Shoe Return Spring

FRONT BRAKE(DISC TYPE)

REMOVAL

Remove the parts in the order shown below.

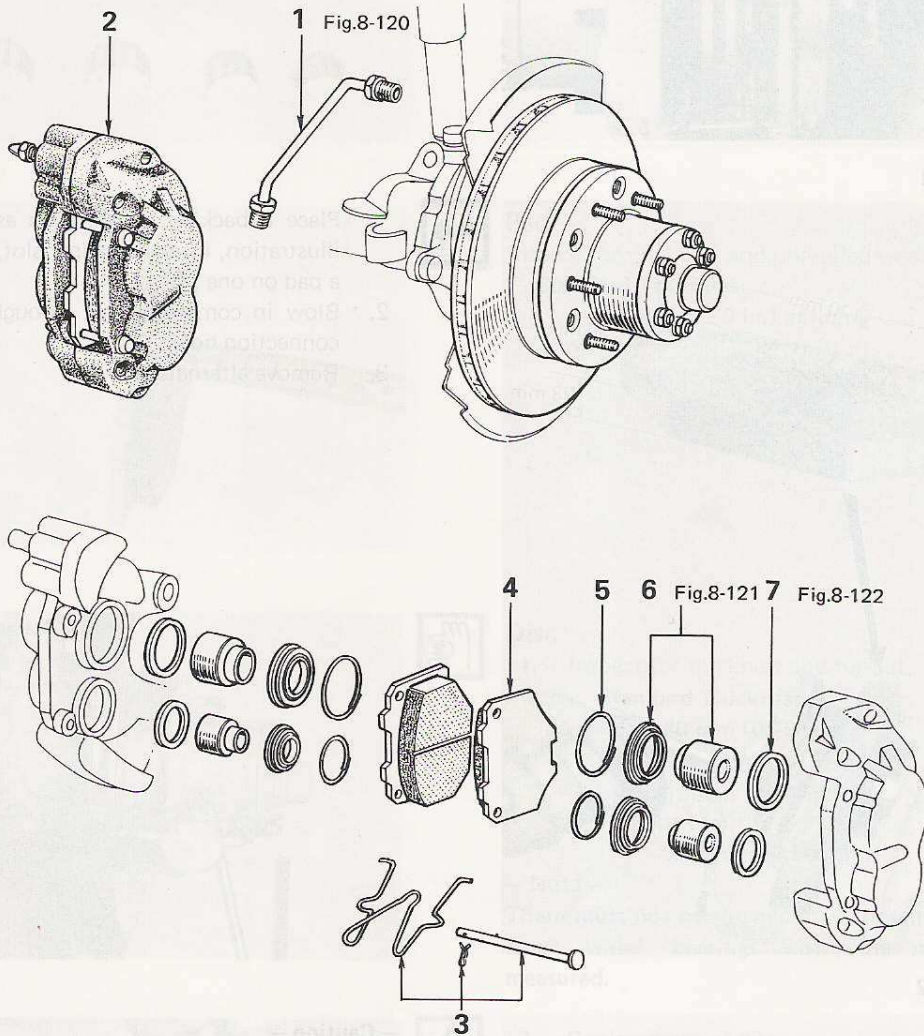
Fig. 8-119



1. Brake Tube
2. Disc Brake Caliper Assembly
3. Clip, w/Hole Pin & Anti-Rattle Spring
4. Disc Brake Pad


5. Set Ring
6. Cylinder Boots & Disc Brake Piston
7. Seal Ring

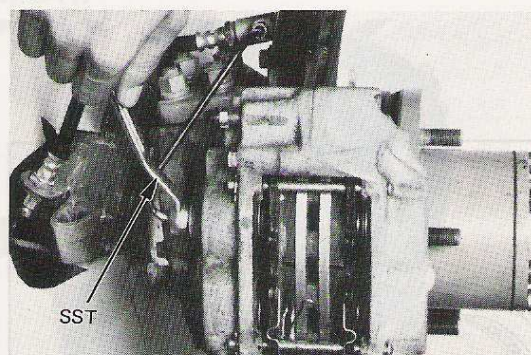Fig. 8-120




Remove the brake tube using SST[09751-36010].

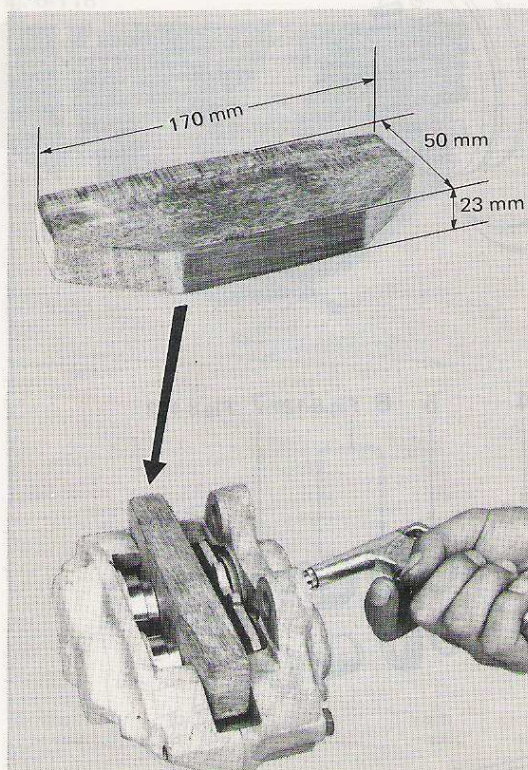Fig. 8-121



1. Place a backing board, such as shown in illustration, into the caliper slot, and insert a pad on one side.
2. Blow in compressed air through the tube connection hole.
3. Remove alternately.

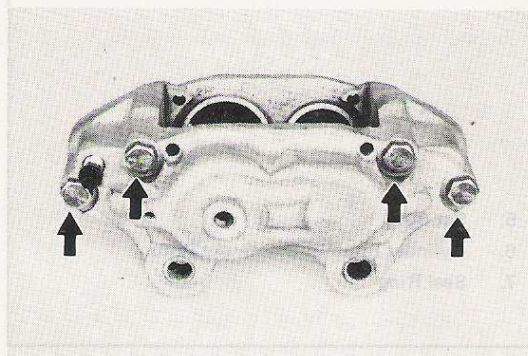Fig. 8-122



— Caution —
Never loosen the caliper bolts attaching the caliper halves.

Fig. 8-123

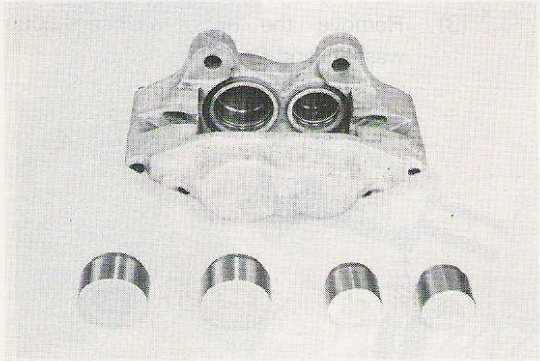


Fig. 8-124

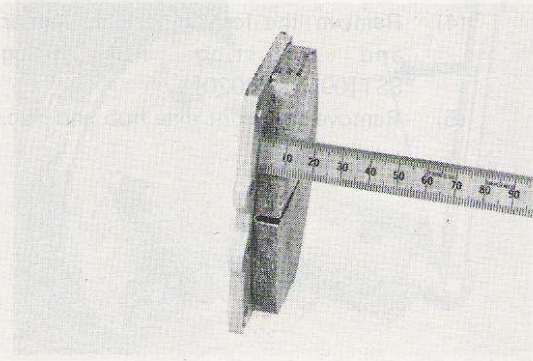


Fig. 8-125


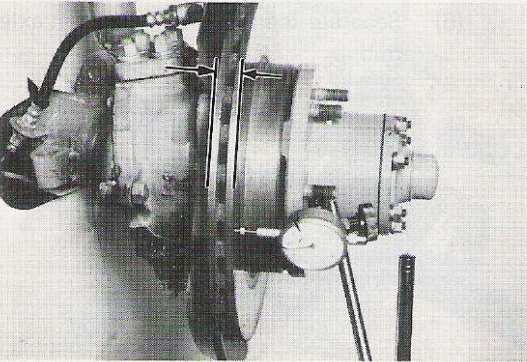


Fig. 8-126

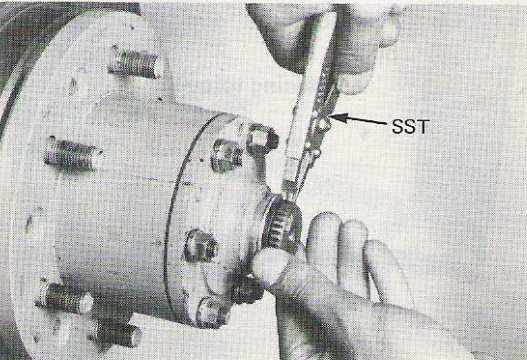

INSPECTION

Caliper And Piston

1. Inspect the caliper for deformation or cracks.
2. Inspect the cylinder bore and piston for eccentric wear, damage or corrosion.



Pad

Inspect for thickness and one-sided wear.

Standard Thickness

10 mm (0.39 in.) at lining

Limit

1 mm (0.04 in.) at lining



Disc

1. Inspect for thickness and runout.

Standard Thickness

20 mm (0.79 in.)

Thickness Limit

19 mm (0.74 in.)

Runout Limit

0.12 mm (0.005 in.)

— Note —


There must not be any excessive looseness in the front wheel bearings when the runout is measured.



2. Replacement of disc.


- (1) Remove the front hub grease cup.
- (2) Remove the snap ring using SST[09905-00010].

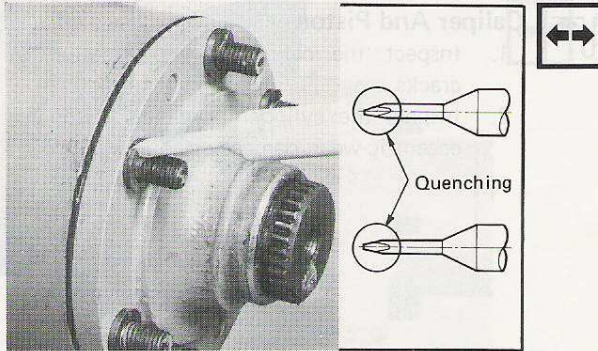Fig. 8-127




- (3) Remove the nuts, washers, cone washers and flange.

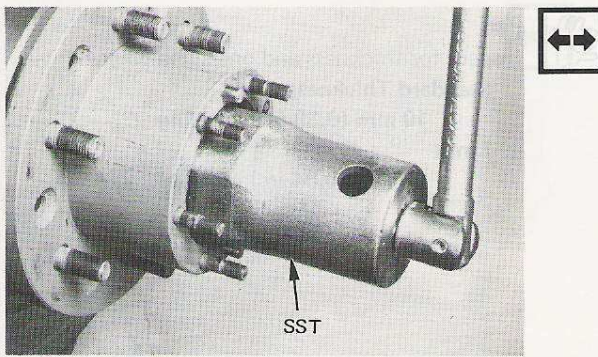Fig. 8-128




- (4) Remove the lock nut, lock washer and adjusting nut using SST[09607-60020].
 (5) Remove the front axle hub and disc.

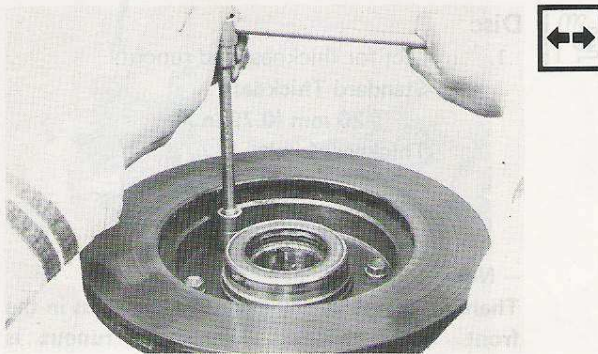Fig. 8-129



- (6) Separate the disc from the front axle hub.

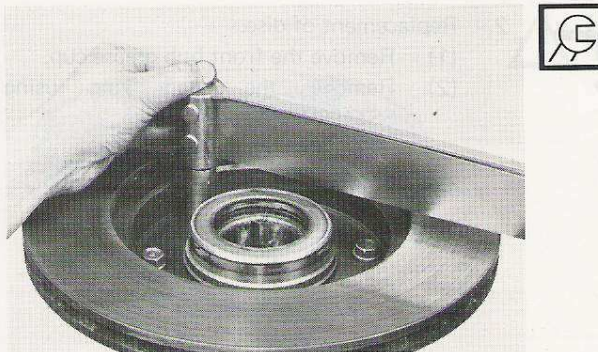Fig. 8-130




- (7) Assemble the disc and front axle hub.

Tightening torque


**4.0 – 5.5 kg-m
 (28.9 – 39.8 ft-lb)**

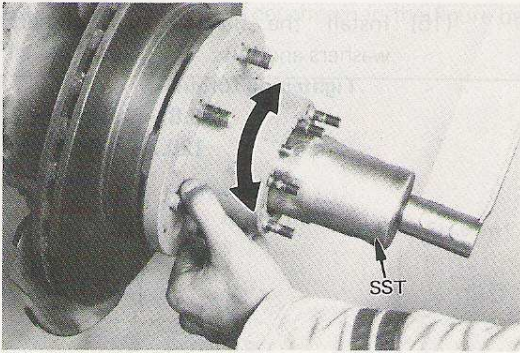Fig. 8-131




- (8) Install the front axle hub and disc.
- (9) Tighten the adjusting nut to 6 kg-m (43 ft-lb), using SST [09607-60020].
- (10) Rotate the hub back and forth about three times to snug down the bearing.

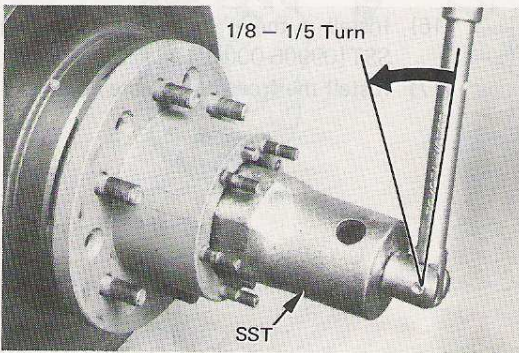Fig. 8-132




- (11) Retighten the adjusting nut to 6 kg-m (43 ft-lb), then unscrew it nut 1/8th to 1/5th turn.

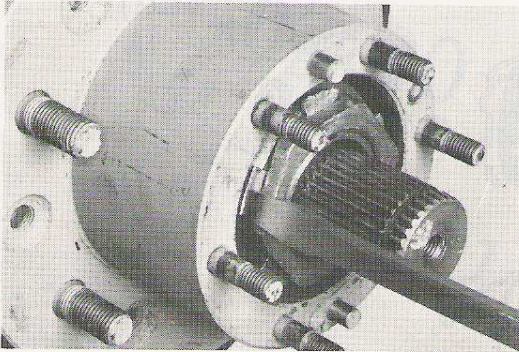Fig. 8-133



- (12) Lock the nut by bending inward one of the lock washer teeth.

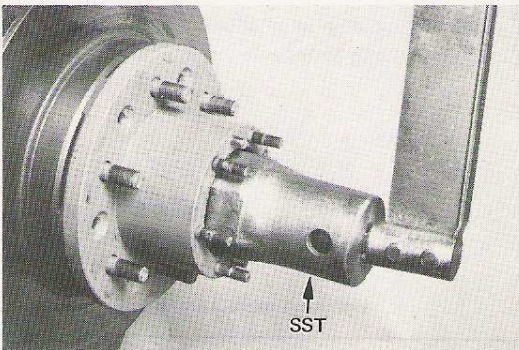Fig. 8-134




- (13) Tighten the lock nut to the specified torque.

Tightening torque

**8 – 10 kg-m
(58 – 72 ft-lb)**

- (14) Secure the lock nut with the lock washer.

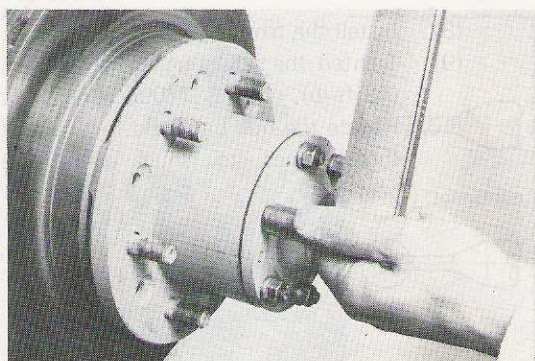Fig. 8-135




- (15) Install the flange, cone washers, washers and nuts.

Tightening torque

**2.8 – 3.5 kg-m
(20.3 – 25.3 ft-lb)**

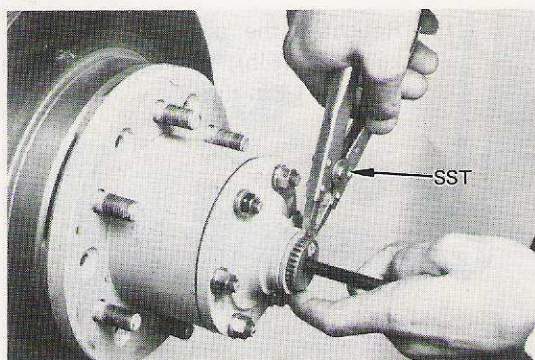
Fig. 8-136



- (16) Install the snap ring using SST [09905-00010].
(17) Install the front hub grease cup.

INSTALLATION


Install the parts in the order shown in the figure below.

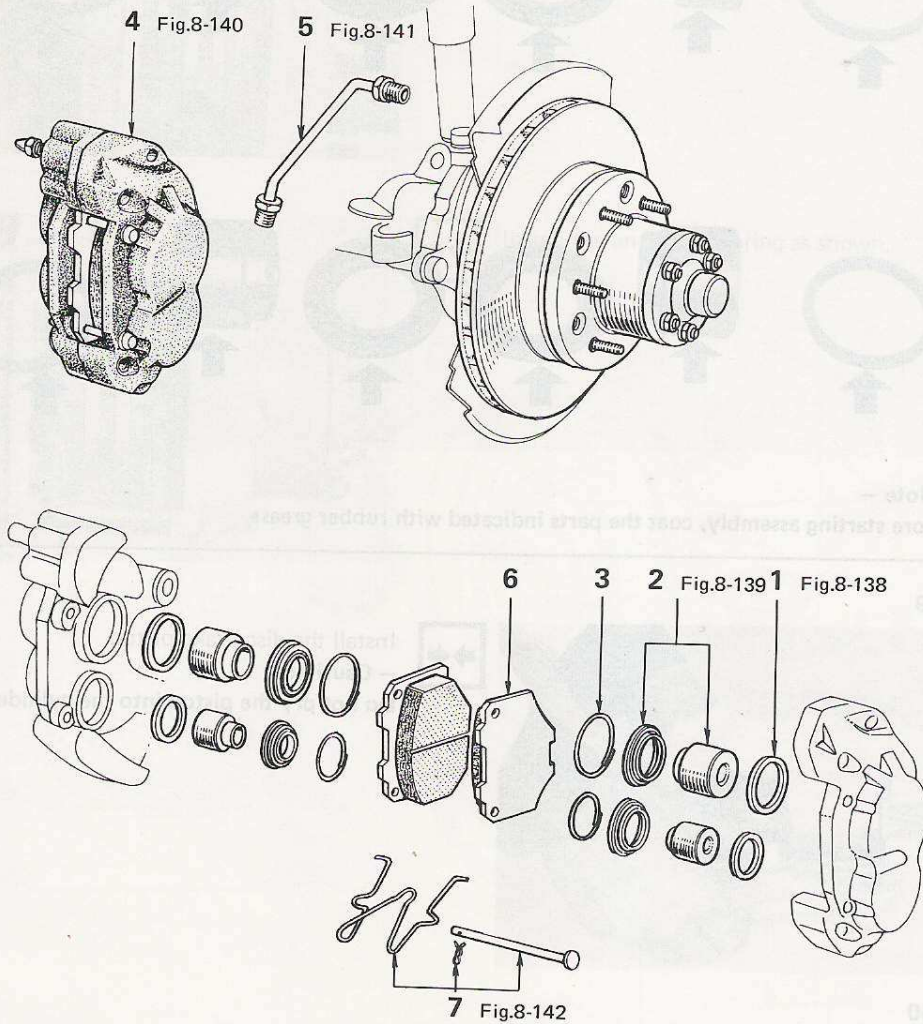Fig. 8-137

1. Seal Ring
2. Disc Brake Piston & Cylinder Boots
3. Set Ring
4. Disc Brake Caliper Assembly

5. Brake Tube
6. Disc Brake Pad
7. Anti-Rattle Spring, w/Hole Pin & Clip

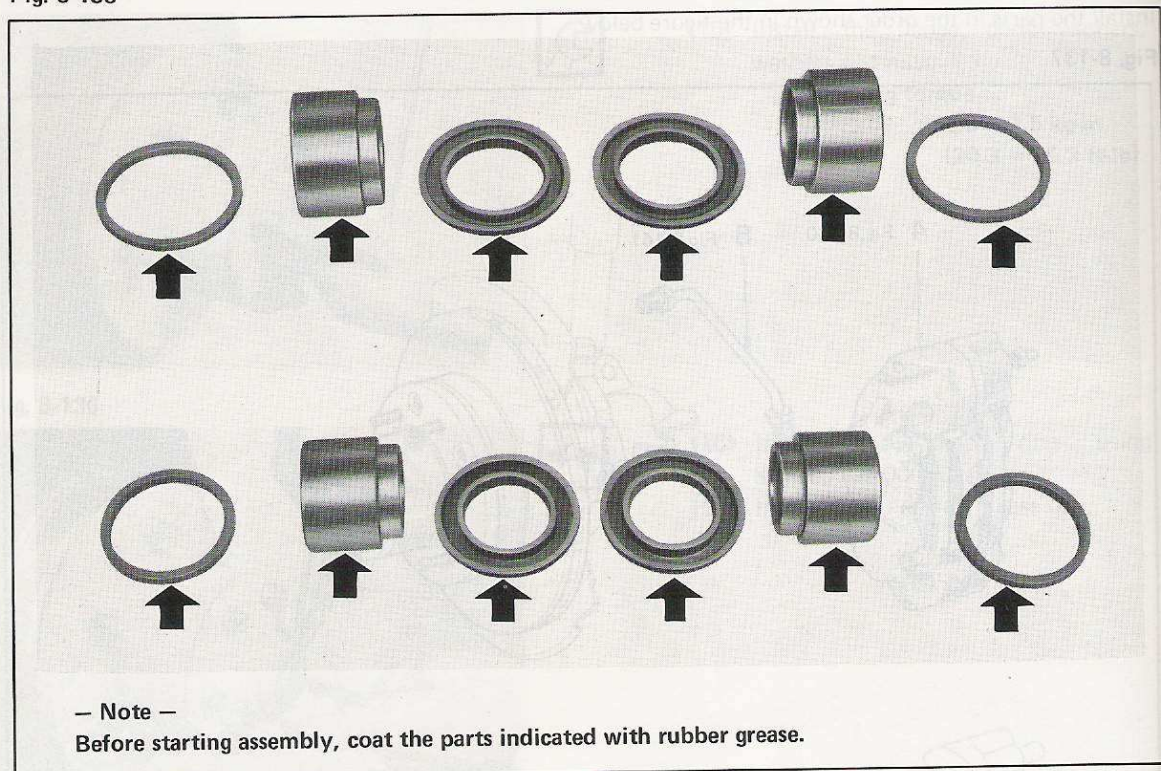Fig. 8-138



— Note —

Before starting assembly, coat the parts indicated with rubber grease.

Fig. 8-139




Install the disc brake piston.

– Caution –

Do not pry the piston into the cylinder.

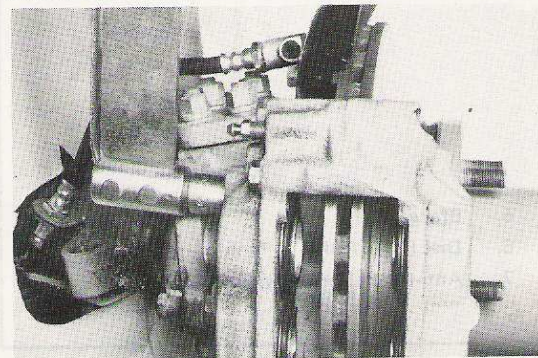
Fig. 8-140



Install the disc brake caliper assembly.


Tightening torque **7.5 – 10.5 kg-m**
(54.2 – 76.0 ft-lb)

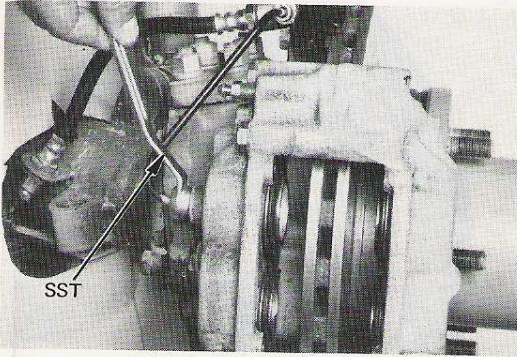Fig. 8-141



Install the brake tube with SST[09751-36010].

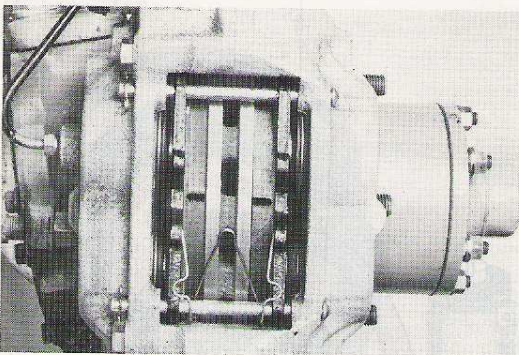Fig. 8-142




Install the anti-rattle spring as shown.

REAR BRAKE

REMOVAL

Remove the parts in the order numbered below.

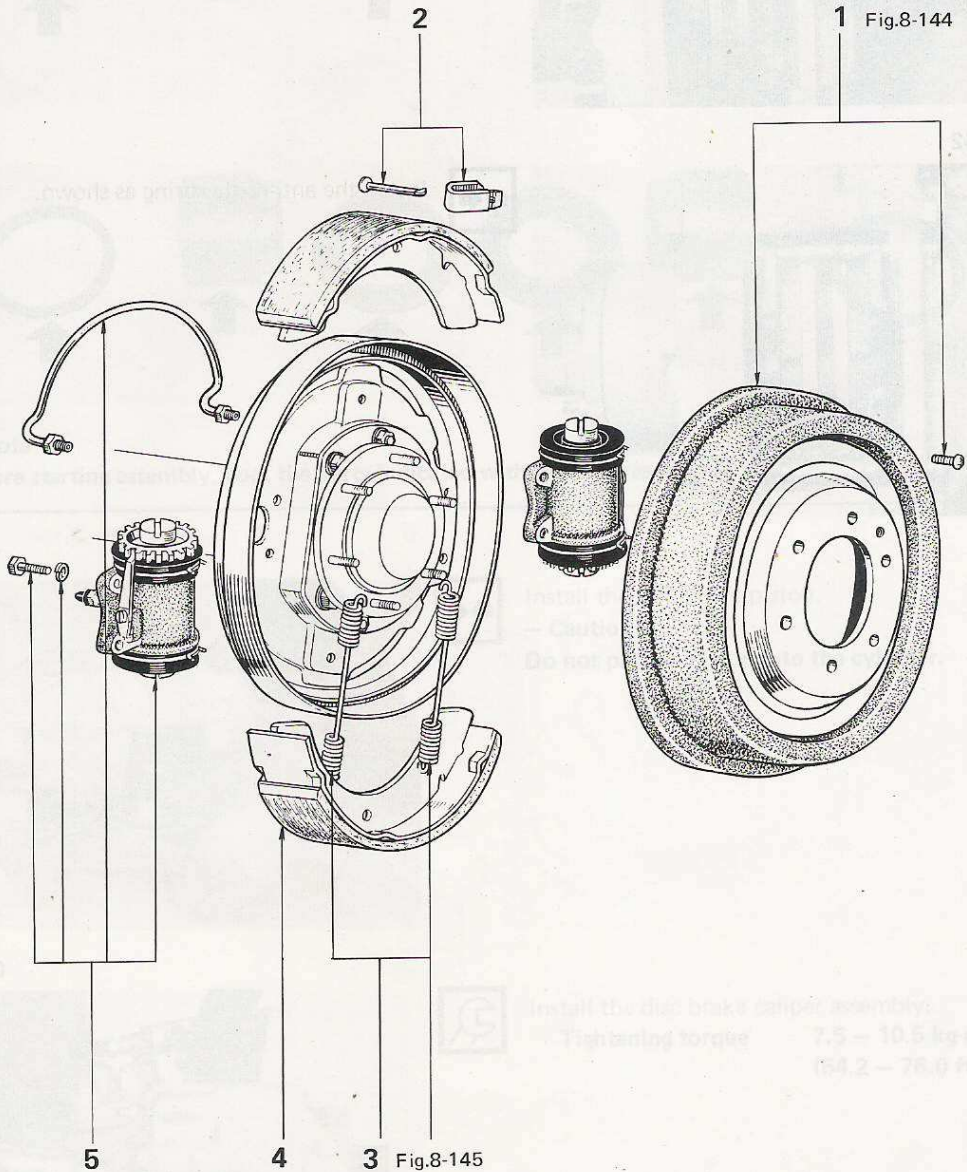
Fig. 8-143



- 1 Brake Drum
- 2 Shoe Hold Down Springs & Pins
- 3 Shoe Return Springs


- 4 Shoe Assemblies
- 5 Wheel Cylinders

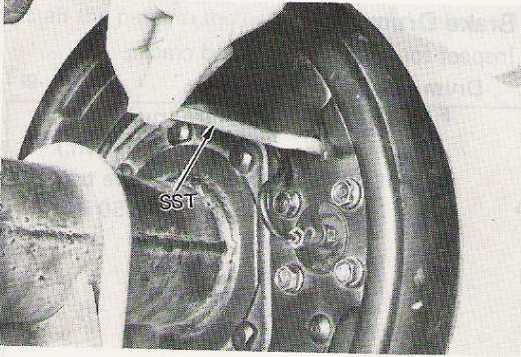Fig. 8-144




Return the wheel cylinder adjusting nut with SST [09704-10010] and then remove the drum.

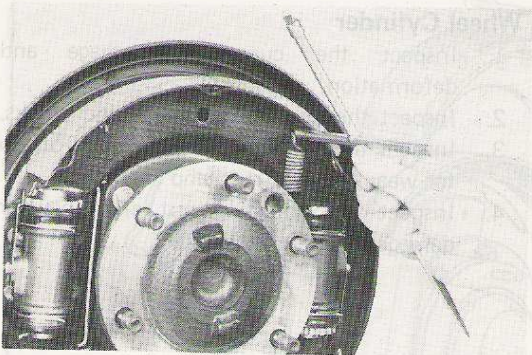Fig. 8-145



Remove with SST [09703-30010].

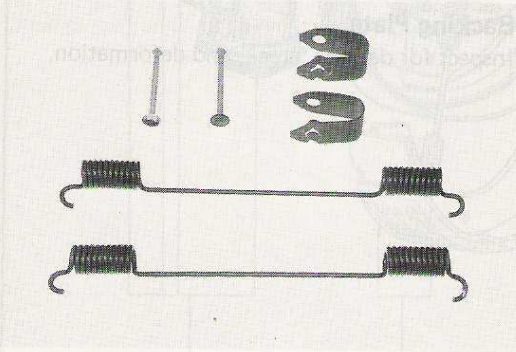Fig. 8-146




INSPECTION

Inspect the disassembled parts on the following points and replace all defective parts found.

Springs And Pins

Inspect for damage and deformation.

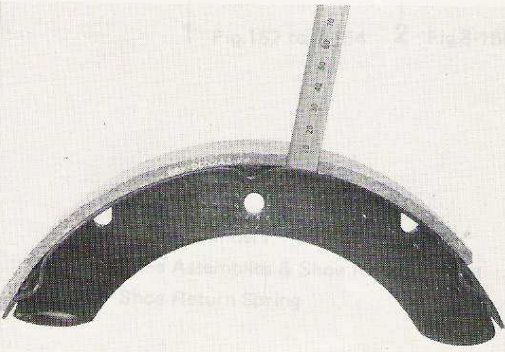Fig. 8-147




Shoes And Linings

Inspect for wear, damage, and deformation.

Lining thickness limit 1.5 mm (0.06 in.)



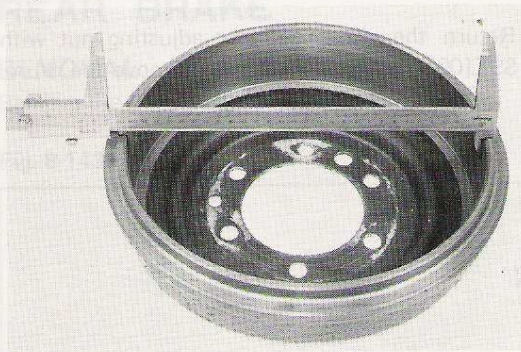Fig. 8-148

**Brake Drum**

Inspect for wear, damage, and cracks.

**Drum inner diameter limit**

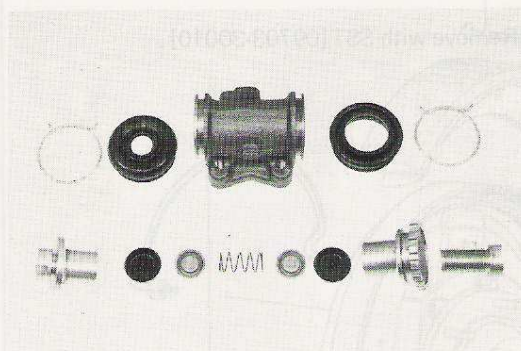
FJ45, HJ45 & FJ55 (Fire truck)

297 mm (11.70 in.)

Except FJ45, HJ45 & FJ55 (Fire truck)

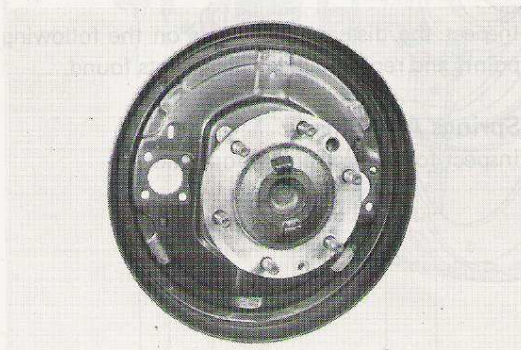
292 mm (11.50 in.)

Fig. 8-149

**Wheel Cylinder**

1. Inspect the cups for damage and deformation.
2. Inspect the boots for damage and cracks.
3. Inspect the cylinder body bore and piston for wear, damage, rust, and corrosion.
4. Inspect the adjusting nut and bolt for damage and deformation.


Fig. 8-150

**Backing Plate**

Inspect for damage, crack, and deformation.

INSTALLATION

Install the parts in the order numbered below.

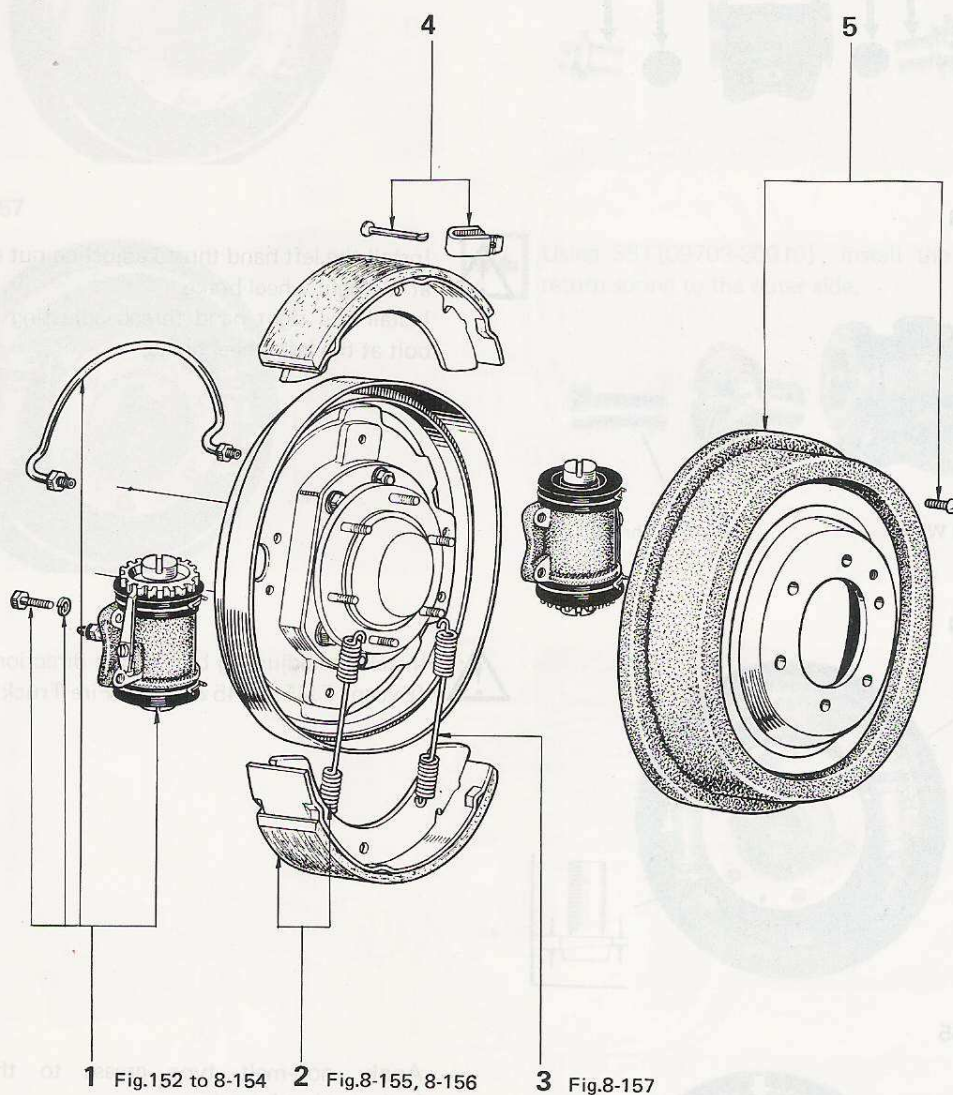Fig. 8-151

1 Wheel Cylinders


2 Shoe Assemblies & Shoe Return Spring

3 Shoe Return Spring

4 Shoe Hold Down Springs And Pins

5 Brake Drum

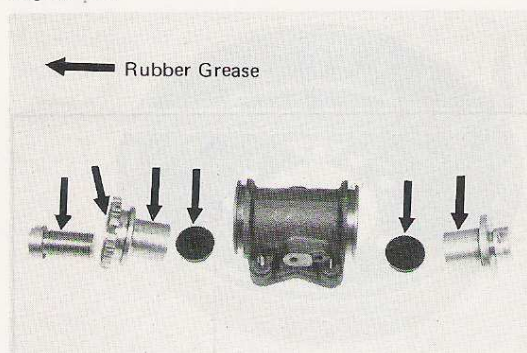
Fig. 8-152



Apply rubber grease on the piston and cup.

Apply non-melt type grease on the adjusting nut and bolt.

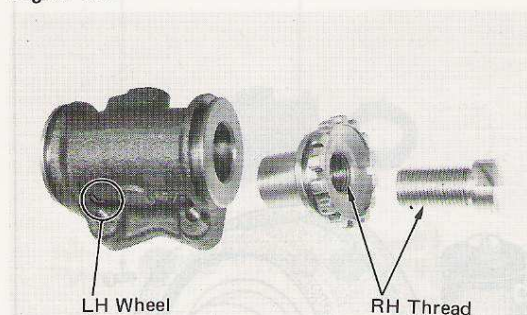
Fig. 8-153



Install the left hand thread adjusting nut and bolt at the right wheel brake.


Install the right hand thread adjusting nut and bolt at the left wheel brake.

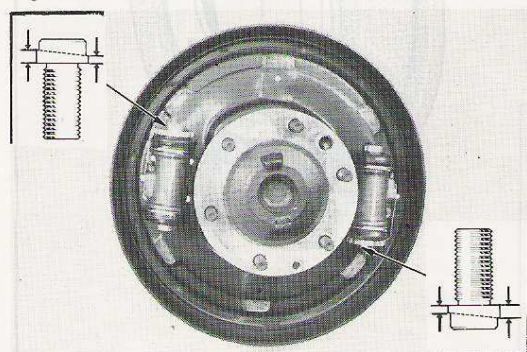Fig. 8-154




Install the adjusting bolt in the direction shown.
[Except FJ45, HJ45 & FJ55 (Fire Truck)]

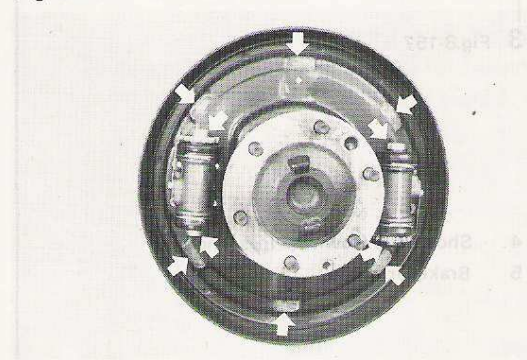Fig. 8-155




Apply non-melt type grease to the place indicated by the arrow.

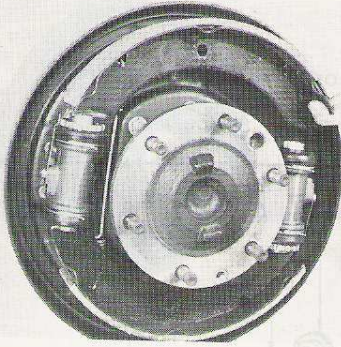Fig. 8-156



Install the shoes with the front side return spring hooked on to the inner sides of the shoes.

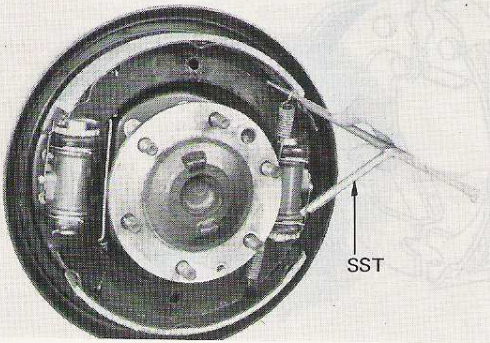Fig. 8-157



Using SST [09703-30010], install the rear side return spring to the outer side.

Fig. 8-161

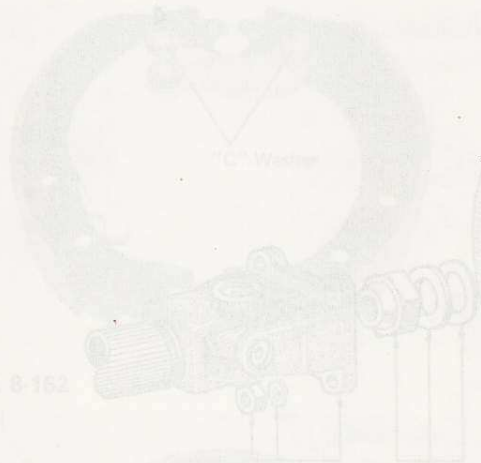


Fig. 8-162



Shoe Replacement

1. Remove the "C" washer and replace the

Brake Drum. Check the brake drum for

wear. Replace the drum if it is worn.

Brake Drum

1. Inspect the brake drum for wear.

Propeller Shaft

Hot Washer & Shim

Brake Drum


Tension Springs

PARKING BRAKE

REMOVAL

Drain out the oil from the transfer case, and remove the parts in the order numbered below.

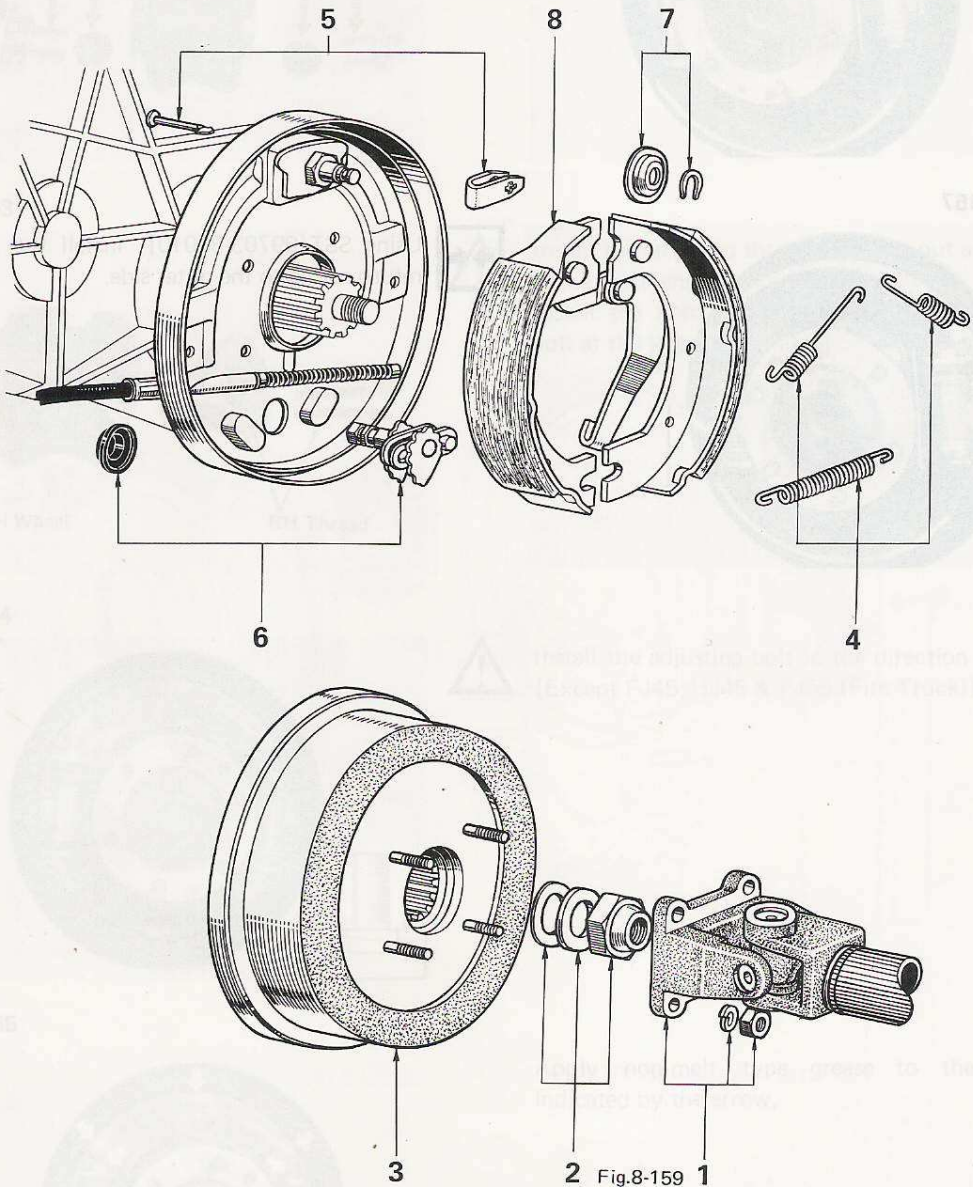
Fig. 8-158



- 1 Propeller Shaft
- 2 Nut, Washer, & Shim
- 3 Brake Drum
- 4 Tension Springs


- 5 Hold Down Springs & Pins
- 6 Cover & Shoe Adjuster
- 7 "C" Washer & Washer
- 8 Shoe Assemblies & Levers

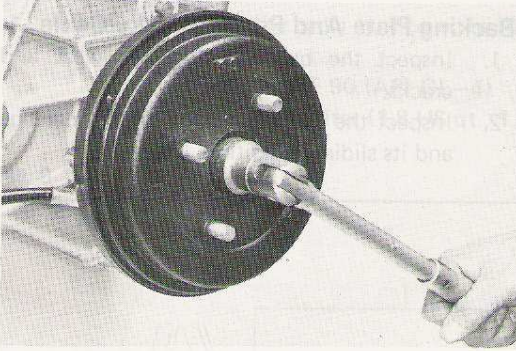Fig. 8-159



1. With the vehicle in front drive, engage the parking brake and foot brake.
2. Remove the nut after unlocking its staked parts.

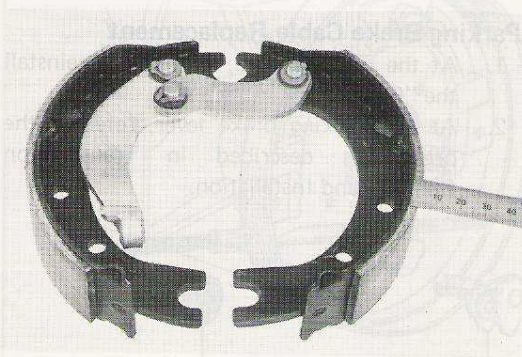Fig. 8-160



INSPECTION



Inspect the removed parts on the following points, and repair or replace all parts that are found defective.




Brake Shoe And Lining

Inspect for wear, damage, and deformation.

Lining thickness limit 1.5 mm (0.06 in.)

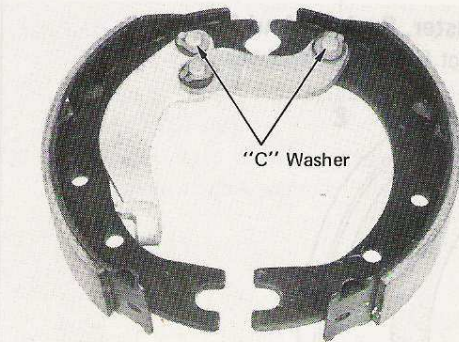Fig. 8-161



Shoe Replacement


1. Remove the "C" washers and replace the shoe.
2. Coat non-melt type grease on the pins, and install the shoe assembly.



— Note —

Illustration shows LH model vehicle.

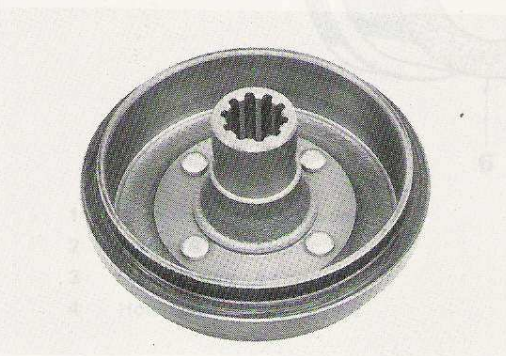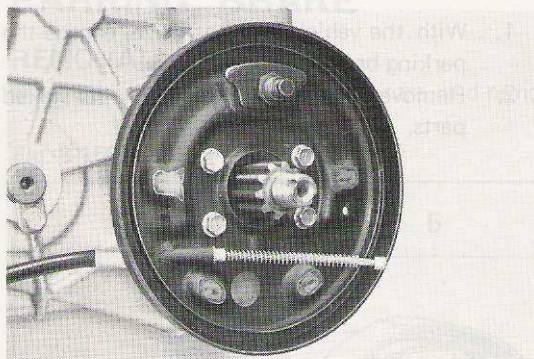
Fig. 8-162



Brake Drum

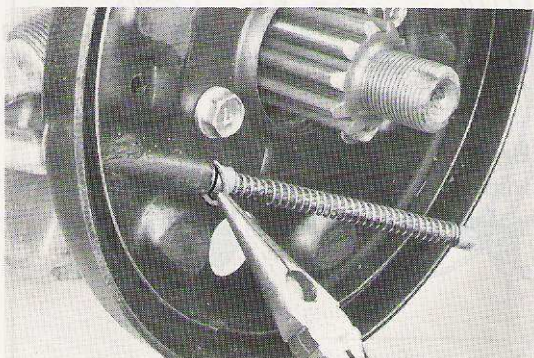
Inspect the inner surface for wear and damage.

Fig. 8-163

**Backing Plate And Parking Brake Cable**

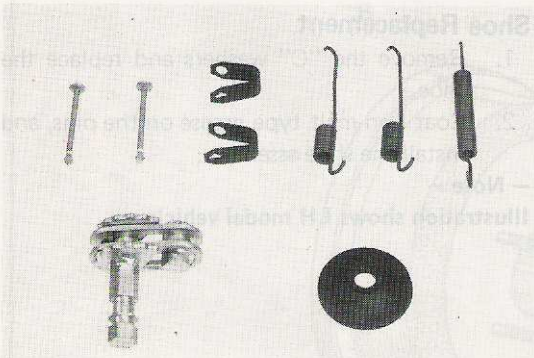
1. Inspect the backing plate for wear and cracks.
2. Inspect the parking brake cable for damage and its sliding condition.

Fig. 8-164

**Parking Brake Cable Replacement**

1. At the backing plate, remove and reinstall the "C" washer.
2. At the parking brake lever, refer to the procedures described in Transmission Removal and Installation.

Fig. 8-165

**Adjuster, Springs And Pins.**


Inspect for damage and wear.

INSTALLATION

1. Install the parts in the order numbered in the figure below.
2. Fill oil into the transfer case.

Type SAE 90 (API GL-4)
Capacity 1.7 liter (1.8 US qt., 1.5 Imp.qt.)

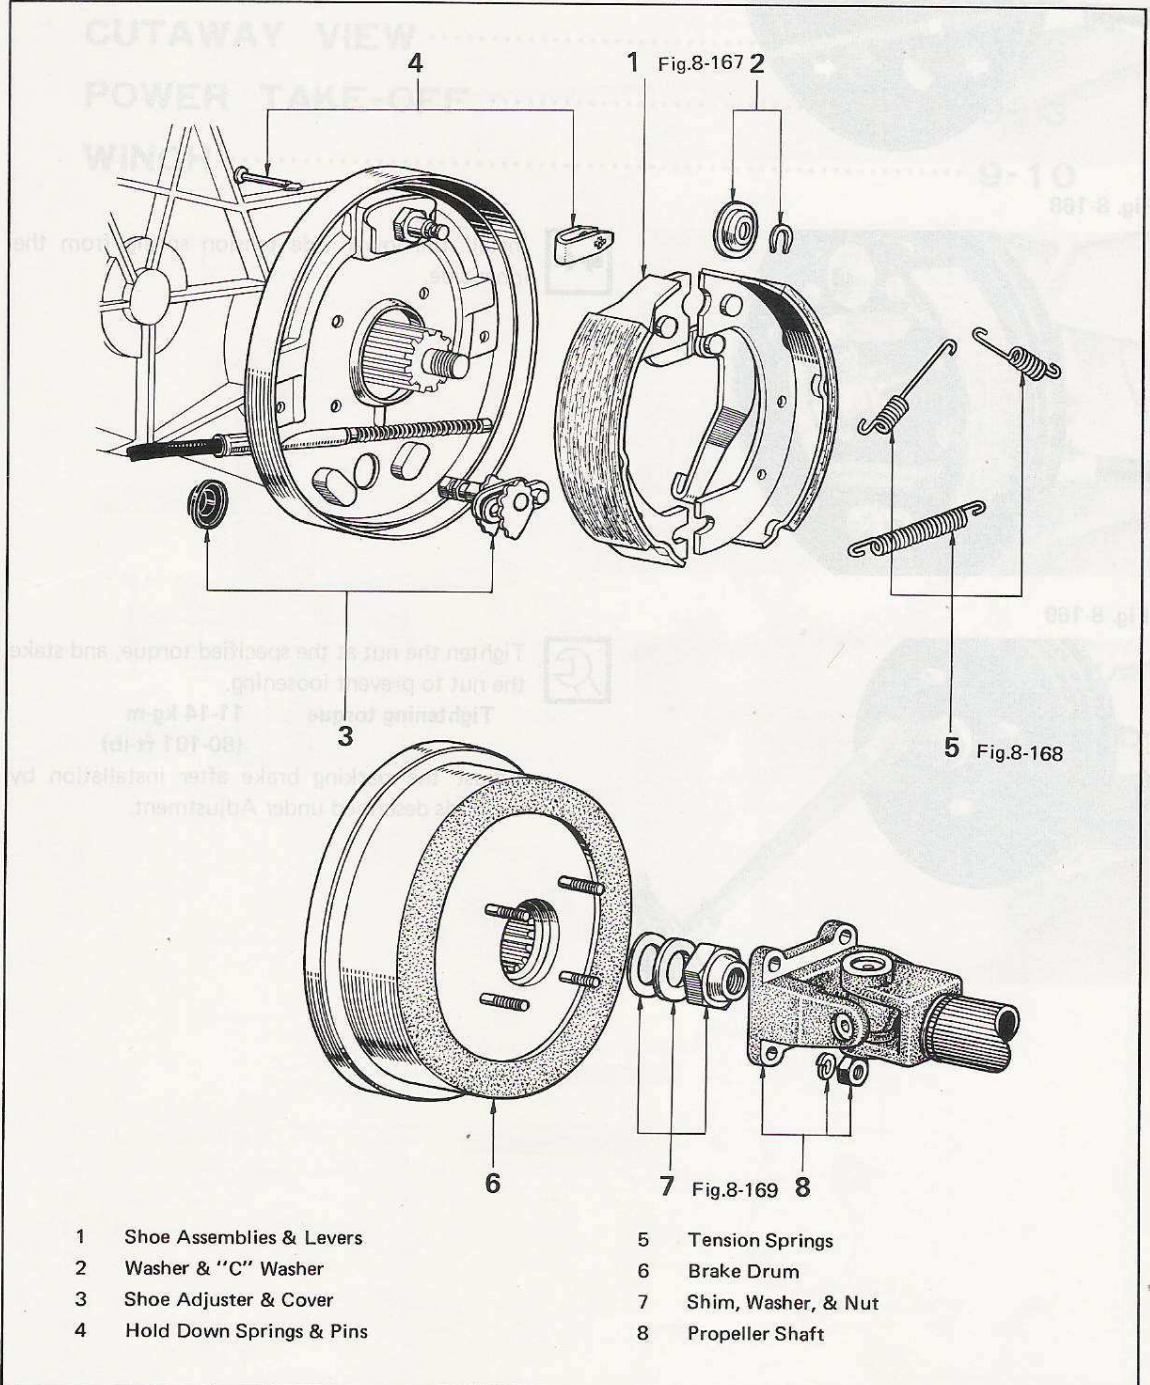
Fig. 8-166



- 1 Shoe Assemblies & Levers
- 2 Washer & "C" Washer
- 3 Shoe Adjuster & Cover
- 4 Hold Down Springs & Pins


- 5 Tension Springs
- 6 Brake Drum
- 7 Shim, Washer, & Nut
- 8 Propeller Shaft

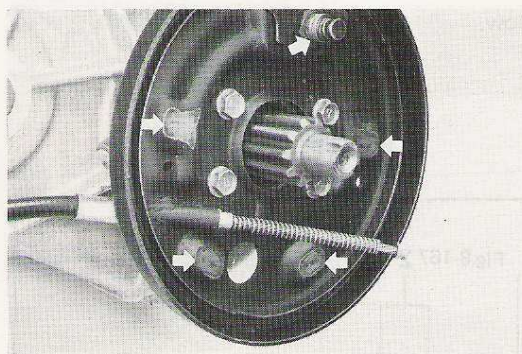Fig. 8-167




Apply non-melt type grease to the place indicated by arrow.

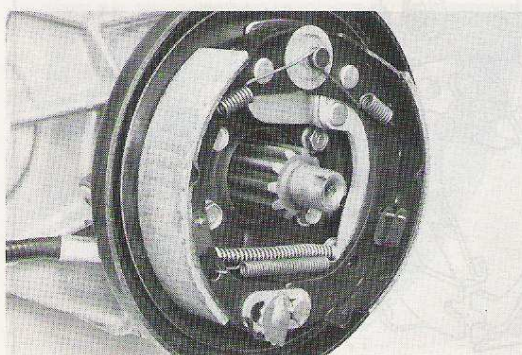Fig. 8-168



Install the lower side tension spring from the inner side.

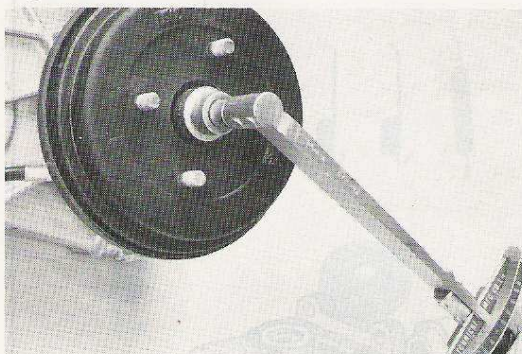Fig. 8-169



Tighten the nut at the specified torque, and stake the nut to prevent loosening.

Tightening torque **11-14 kg-m**
 (80-101 ft-lb)

Adjust the parking brake after installation by methods described under Adjustment.

POWER TAKE-OFF


CUTAWAY VIEW

DISASSEMBLY

FRONT WINCH

Fig. 9-1


	page
CUTAWAY VIEW	9- 2
POWER TAKE-OFF	9- 3
WINCH	9-10

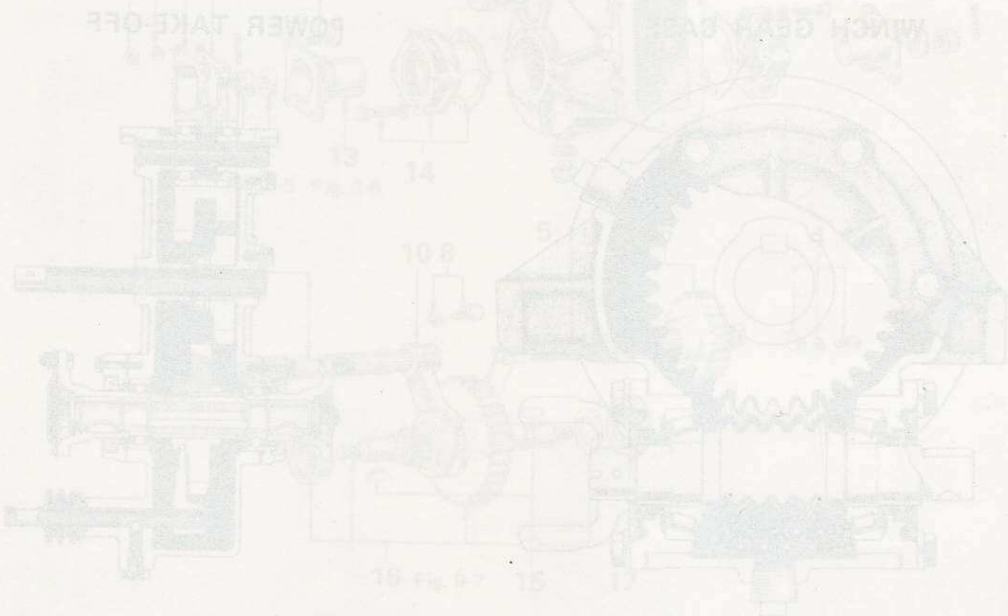

- | | |
|---------------------------------|---------------------------------|
| 1 Lock Plate | 19 Shift Fork |
| 2 Input Gear Shaft | 20 Input Gear |
| 3 Output, Input Gear & Bearings | 21 Output Gear |
| 4 Lock Plate | 22 Output Gear Shaft |
| 5 Reverse Idler Shaft Assy. | 23 Output Gear Bearings |
| 6 Reverse Idler Gear & Spacer | 24 Output Gear Lock |
| 7 Lock Bolt & Spring | 25 Output Gear Locking & Spacer |
| 8 Lock Bolt | 26 Output Gear Locking |
| 9 Fork Shaft & Gear | 27 Output Gear Locking |

CUTAWAY VIEW

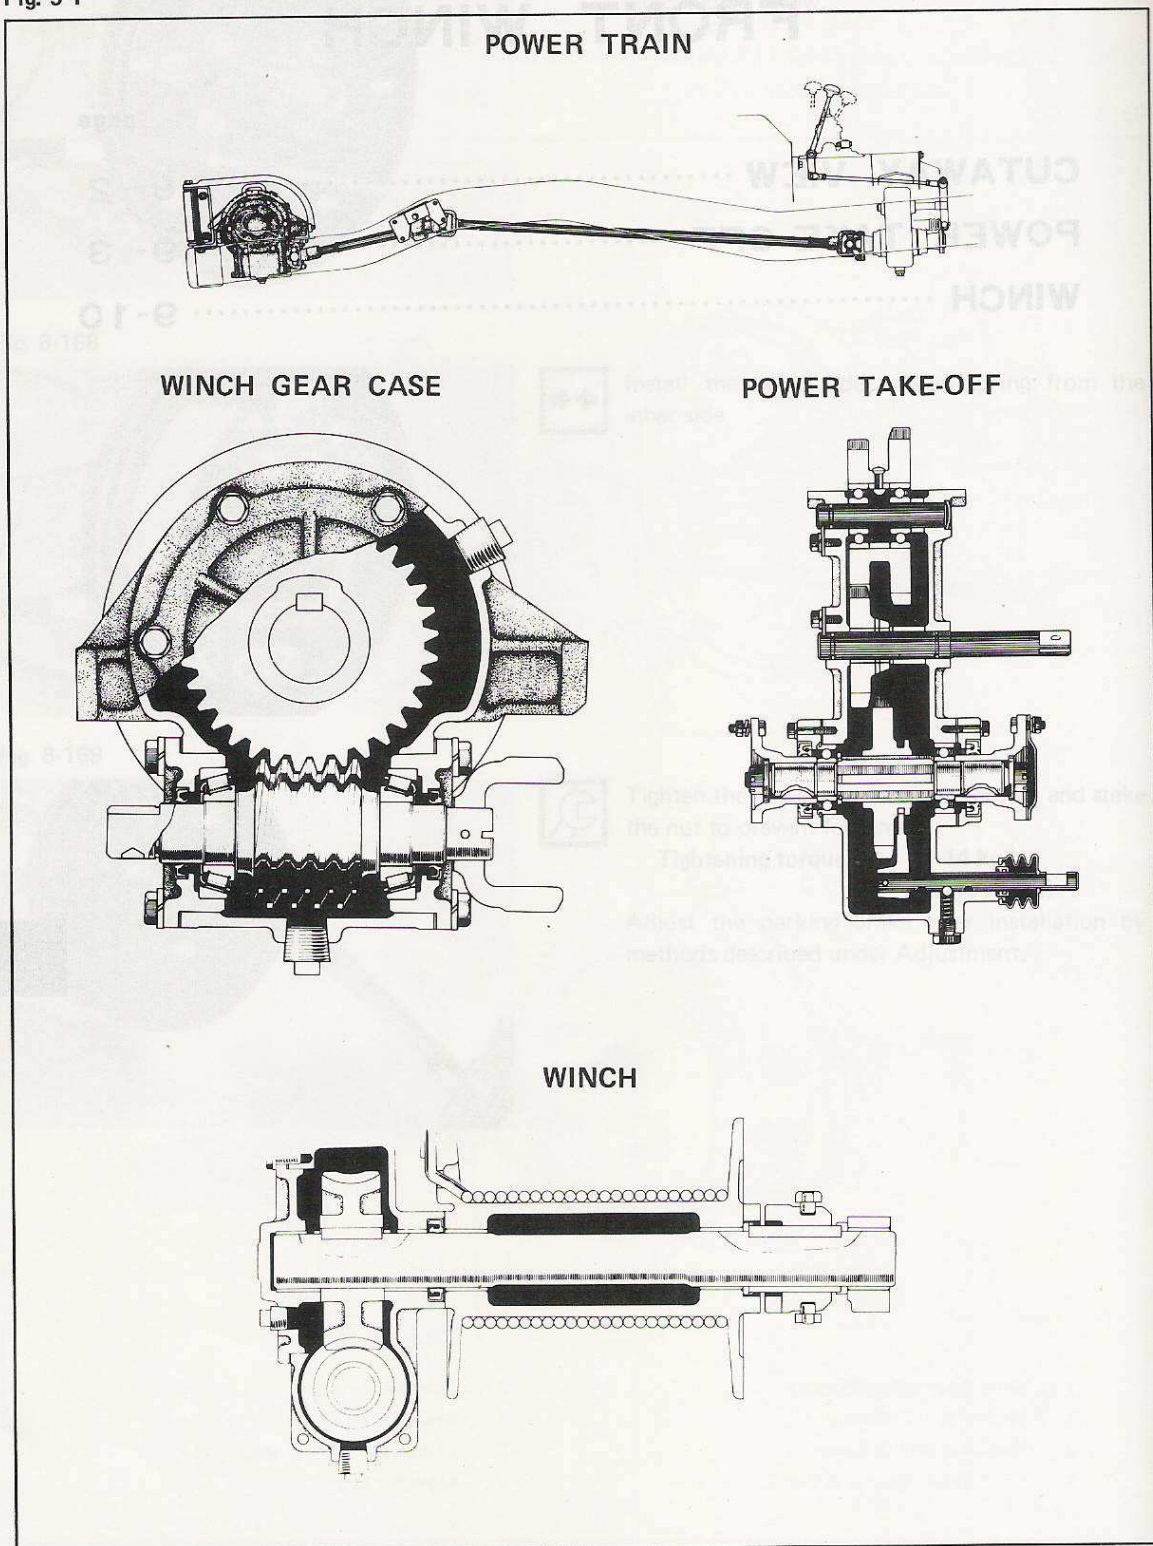Fig. 9-1




POWER TAKE-OFF

DISASSEMBLY


Disassemble the parts in the order numbered below.

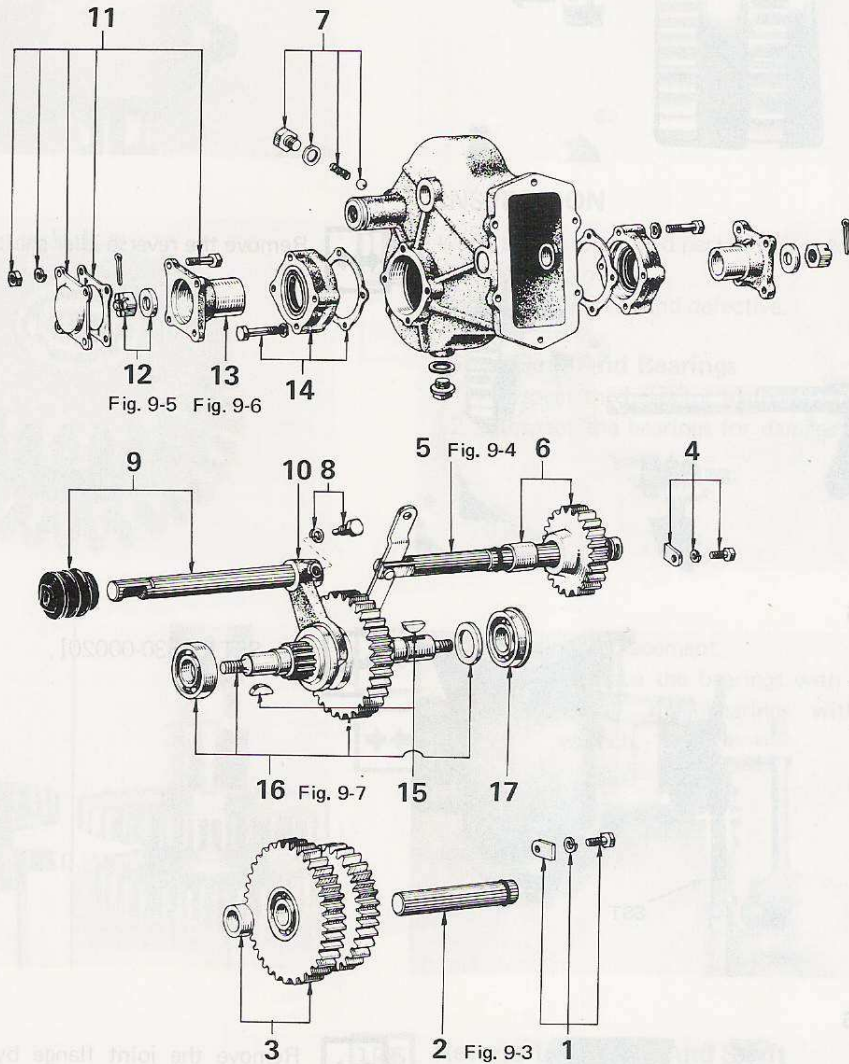Fig. 9-2



- | | | | |
|---|-------------------------------|----|--------------------------------|
| 1 | Lock Plate | 10 | Shift Fork |
| 2 | Input Gear Shaft | 11 | Retainer Cap |
| 3 | Spacer, Input Gear & Bearings | 12 | Nuts & Plates |
| 4 | Lock Plate | 13 | Joint Flanges |
| 5 | Reverse Idler Shaft Assy. | 14 | Bearing Retainers |
| 6 | Reverse Idler Gear & Spacer | 15 | Woodruff Keys |
| 7 | Lock Ball & Spring | 16 | Output Shaft, Bearing & Spacer |
| 8 | Lock Bolt | 17 | Bearing |
| 9 | Fork Shaft & Boot | | |

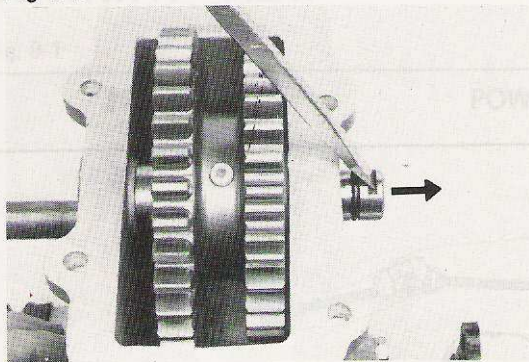Fig. 9-3




Remove the input gear shaft.

– Note –


If difficult to remove the shaft, first tap the shaft lightly towards the rear, and remove the expansion plug.

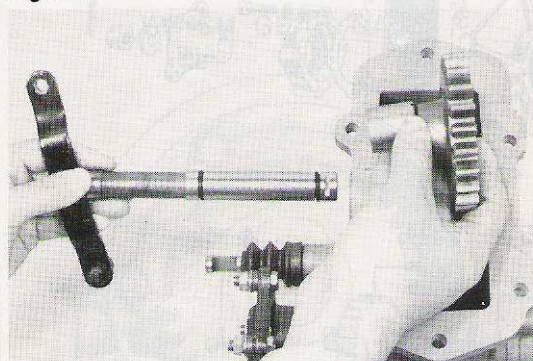Fig. 9-4




Remove the reverse idler shaft assembly.

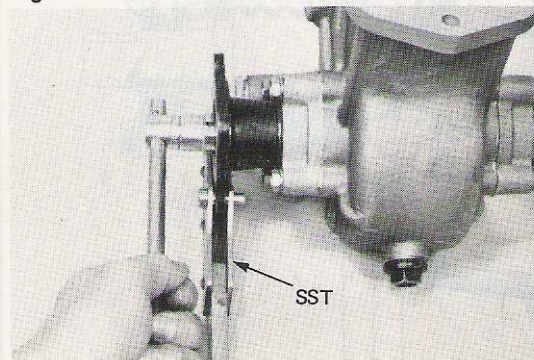Fig. 9-5




Use SST [09330-00020].

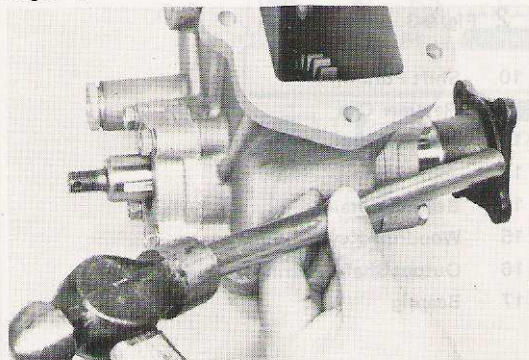Fig. 9-6




Remove the joint flange by lightly tapping its portion of woodruff key groove.

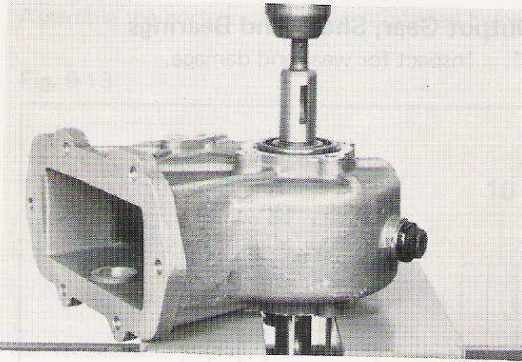Fig. 9-7



Remove the output shaft with the rear bearing using a press.

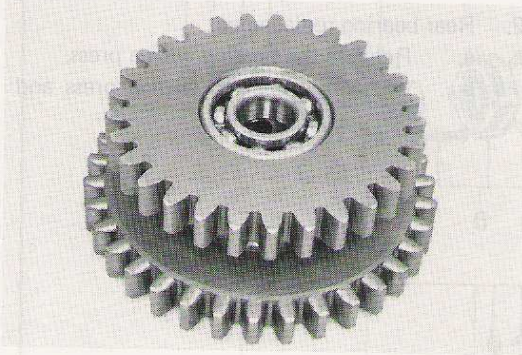Fig. 9-8



INSPECTION


Wash the disassembled parts and inspect them on the following points.

Replace any part found defective.

Input Gear And Bearings

1. Inspect the gears for teeth wear or damage.
2. Inspect the bearings for damage and wear.

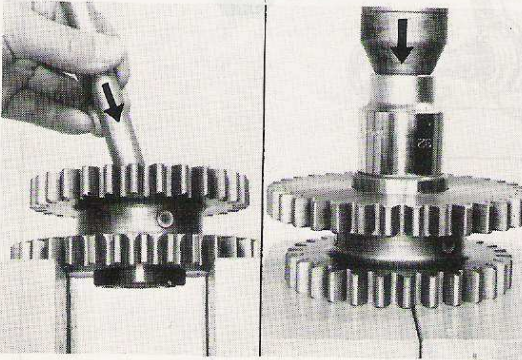Fig. 9-9




3. Bearings replacement.

- a. Remove the bearings with drift pin.
- b. Install the bearings with socket wrench.



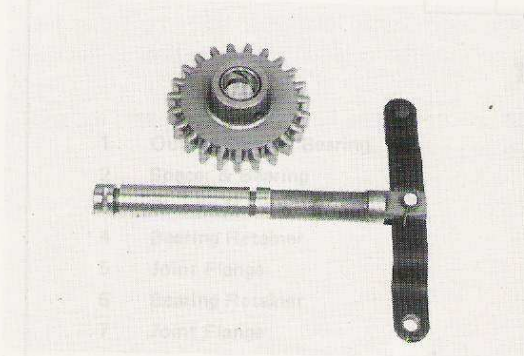Fig. 9-10




Reverse Idler Gear And Shaft

Inspect for wear and damage.

— Note —


For the bushing replacement, use a socket wrench.

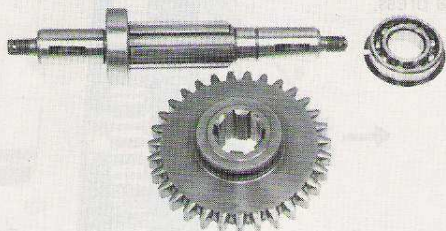Fig. 9-11

**Output Gear, Shaft And Bearings**

1. Inspect for wear and damage.

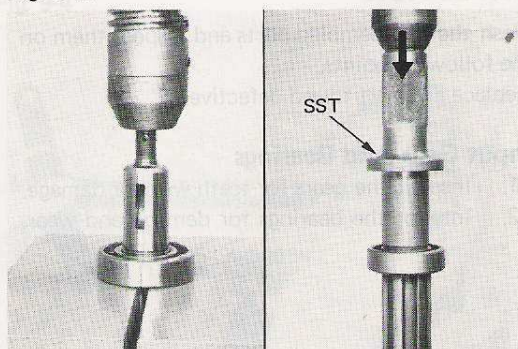Fig. 9-12



2. Rear bearing replacement.


- a. Remove the bearing with a press.
- b. Install the bearing with a press and SST [09325-12010].



ASSEMBLY

Assemble the parts in the order numbered below.

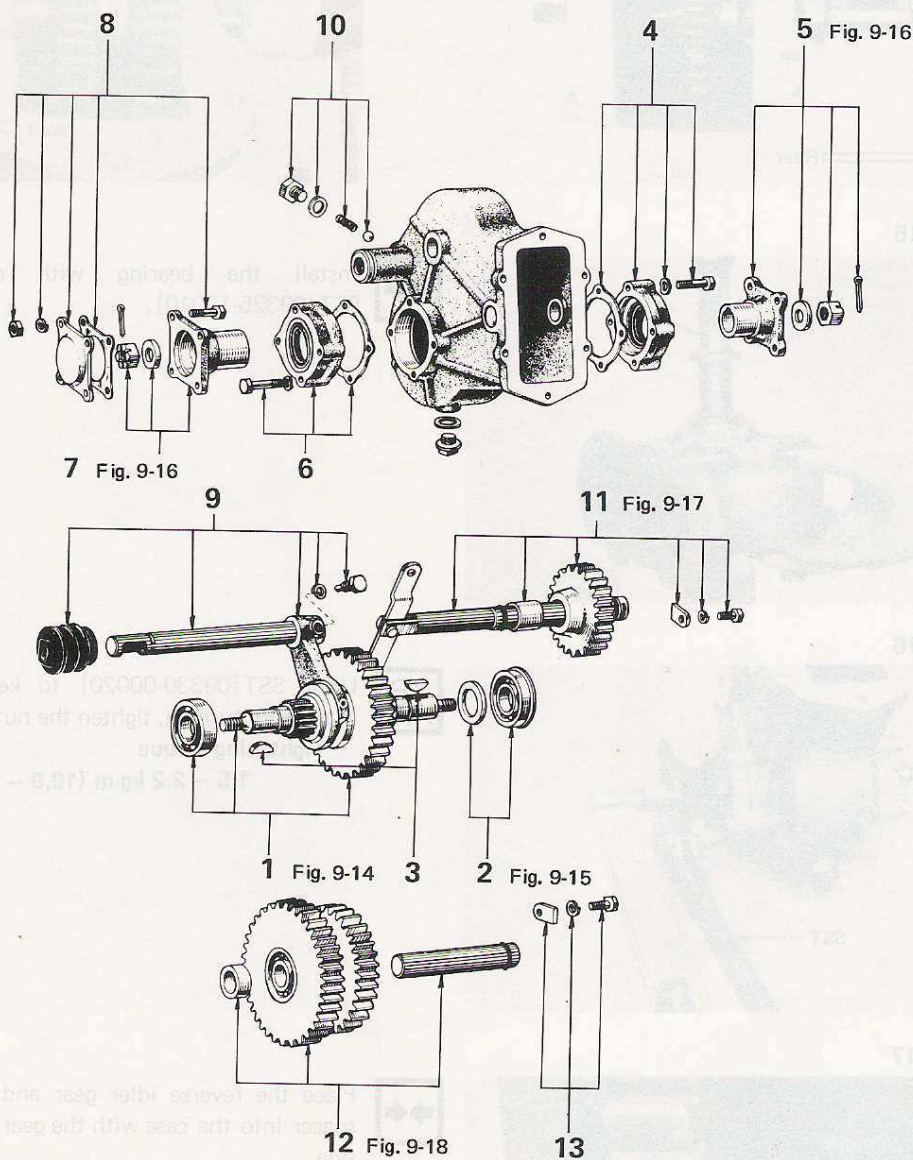
Fig. 9-13



- 1 Output Shaft & Bearing
- 2 Spacer & Bearing
- 3 Woodruff Keys
- 4 Bearing Retainer
- 5 Joint Flange
- 6 Bearing Retainer
- 7 Joint Flange


- 8 Retainer Cap
- 9 Shift Fork, Shaft & Boot
- 10 Lock Ball & Spring
- 11 Reverse Idler Gear, Spacer & Shaft
- 12 Input Gear & Shaft
- 13 Lock Plate

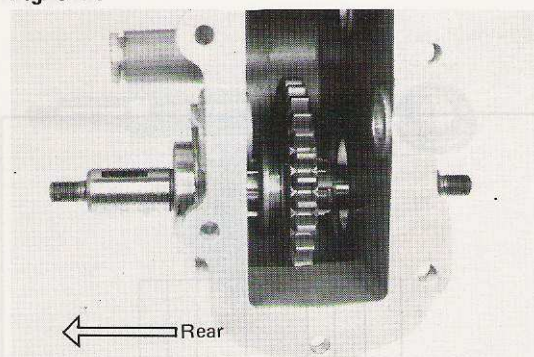Fig. 9-14




Position the output gear into the case with the shift fork groove towards the rear.

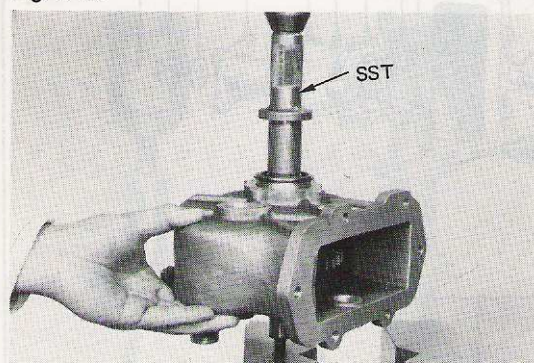Fig. 9-15



Install the bearing with a press and SST [09325-12010].

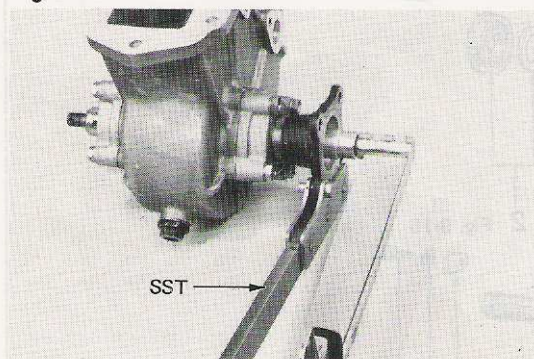Fig. 9-16




Using SST [09330-00020] to keep the output shaft from turning, tighten the nut.

Tightening torque

1.5 – 2.2 kg-m (10.9 – 15.9 ft-lb)

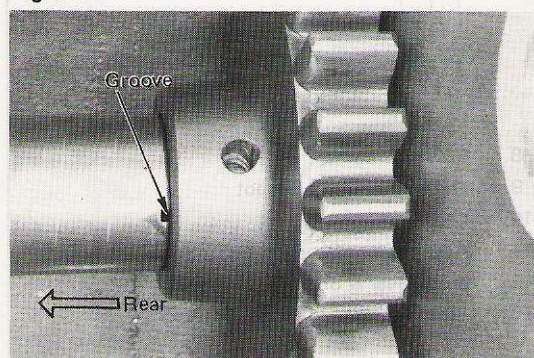
Fig. 9-17



Place the reverse idler gear and the idler gear spacer into the case with the gear hub to the rear side.

The spacer should be installed between the gear hub and the case.

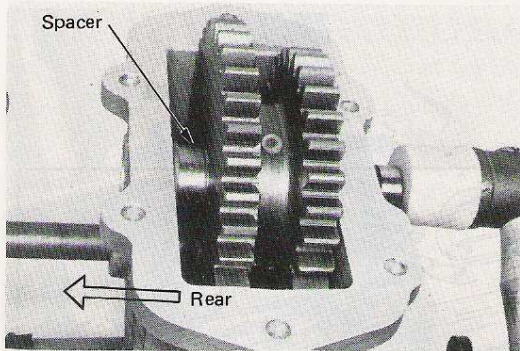Fig. 9-18



Place the input gear into the case with the larger gear towards the rear, and mesh with the reverse idler gear. Install the spacer.

Fig. 9-19


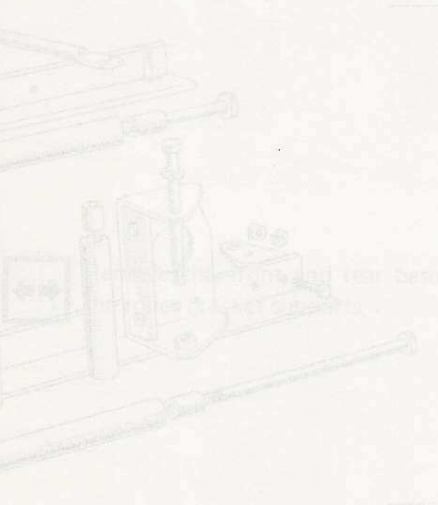


Fig. 9-20

Disassemble the gear

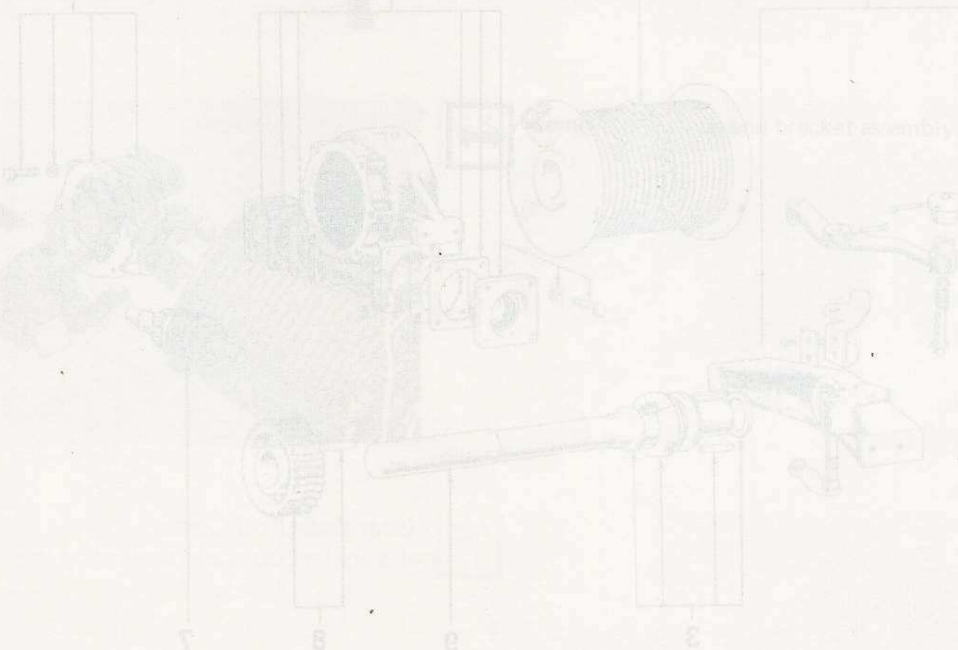Fig. 9-22



- | | | | |
|---|----------------------------|---|-------------------|
| 1 | Member & Bracket Assy. | 6 | Retainers & Shims |
| 2 | End Bracket & Clutch Assy. | 7 | Worm |
| 3 | Spacer, Key & Clutch | 8 | Worm Gear & Key |
| 4 | Winch Drum Assy. | 9 | Shaft |
| 5 | Case Cover | | |

WINCH

DISASSEMBLY

Dissassemble the parts in the order numbered below.

Fig. 9-19



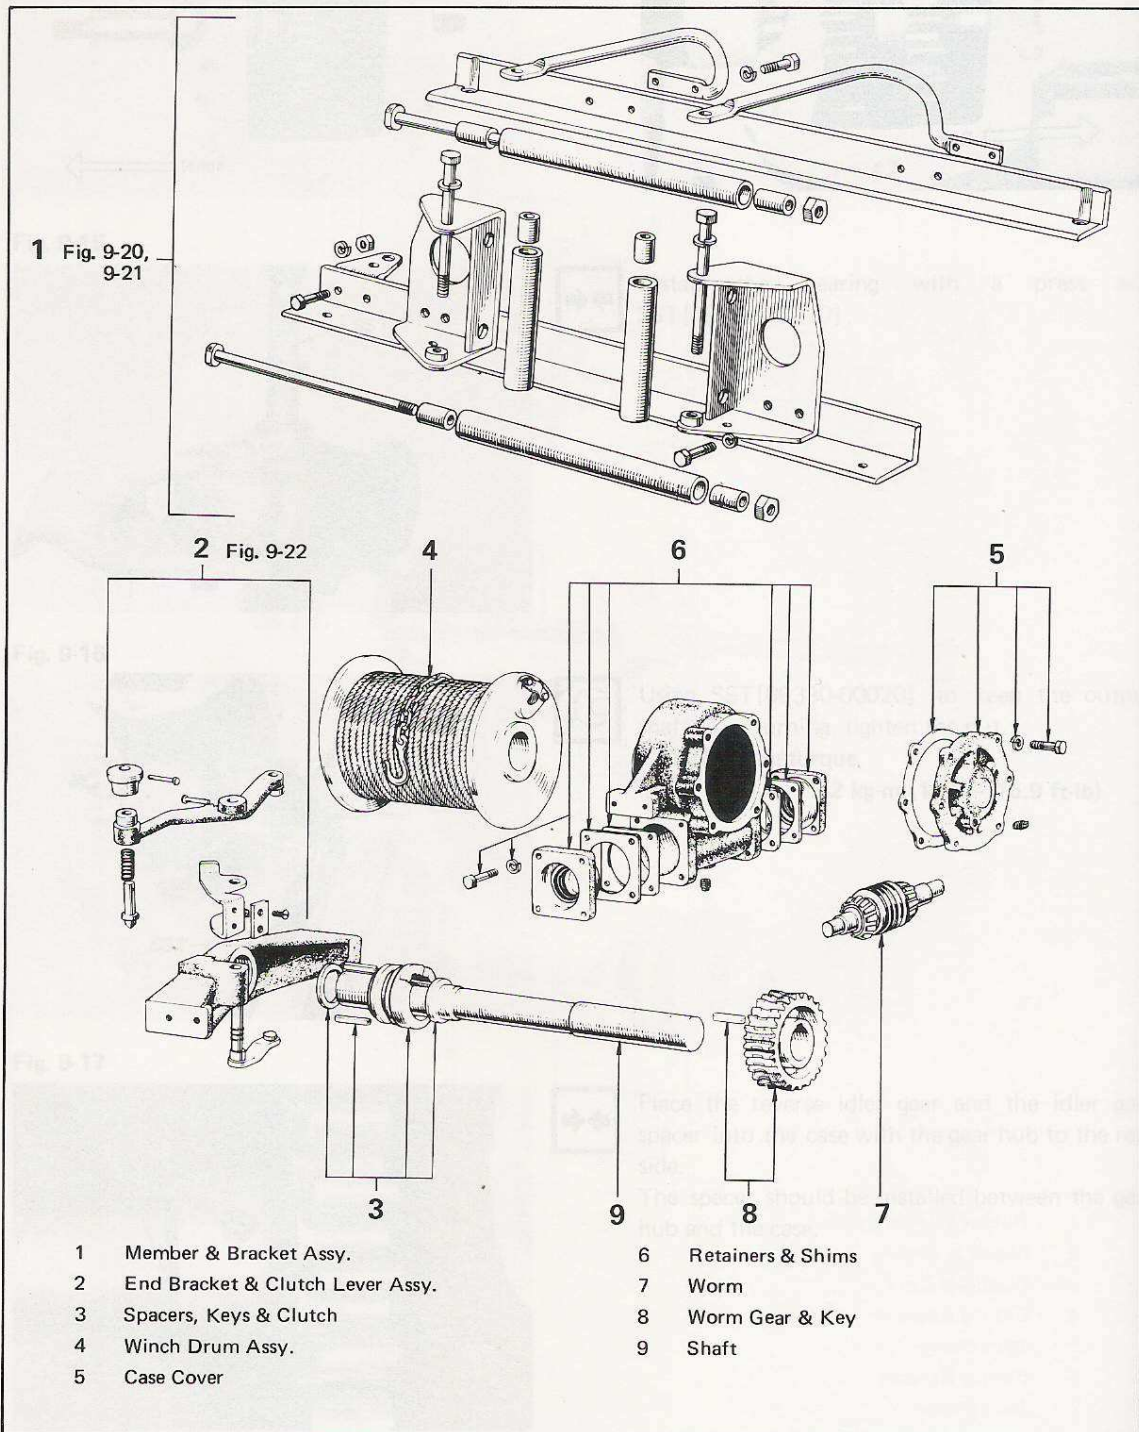


Fig. 9-20

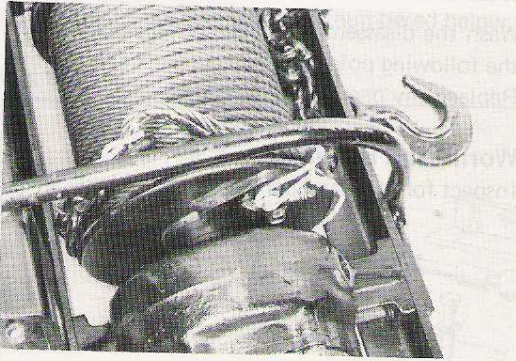


Keep the wire rope end tied together with a wire as shown in the photo.

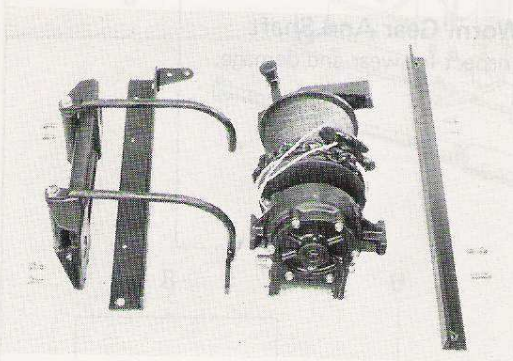Fig. 9-21



Remove the front and rear base members, and the roller bracket supports.

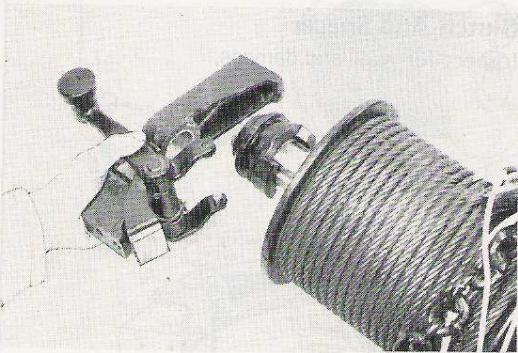Fig. 9-22



Remove the winch end bracket assembly.

- 1 Shaft
- 2 Key & Worm Gear
- 3 Worm
- 4 Retainers & Shims
- 5 Gear Cover

Fig. 9-23

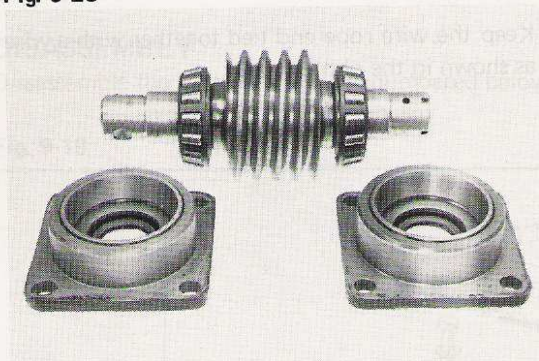


Fig. 9-24

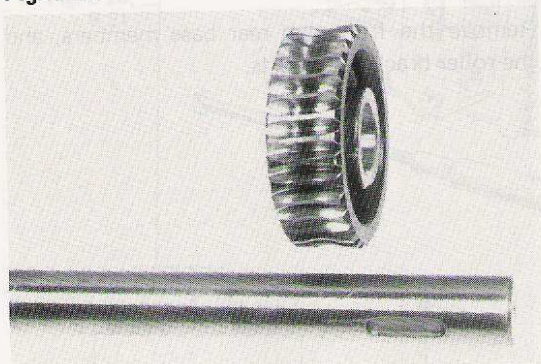


Fig. 9-25


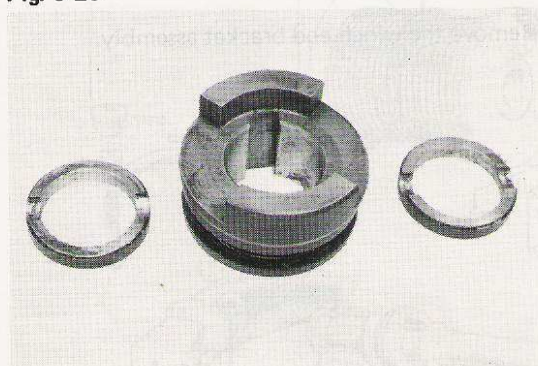


Fig. 9-26

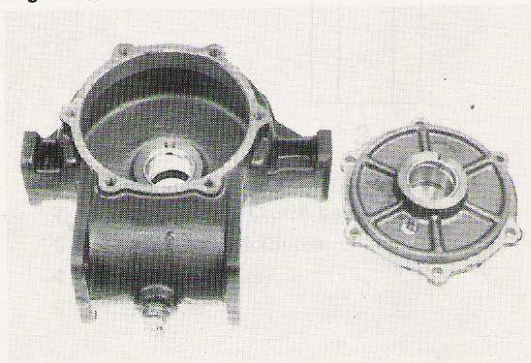

INSPECTION



Wash the disassembled parts and inspect them on the following points.
Replace any part found defective.

Worm And Bearing

Inspect for wear and damage.



Worm Gear And Shaft

Inspect for wear and damage.



Clutch And Spacer

Inspect for wear and damage.



Gear Case And Cover


Inspect for cracks and the bushing wear.

6. Bushings & Shim
7. Worm
8. Worm Gear & Key
9. Shaft

ASSEMBLY

Assemble the parts in the order numbered below.

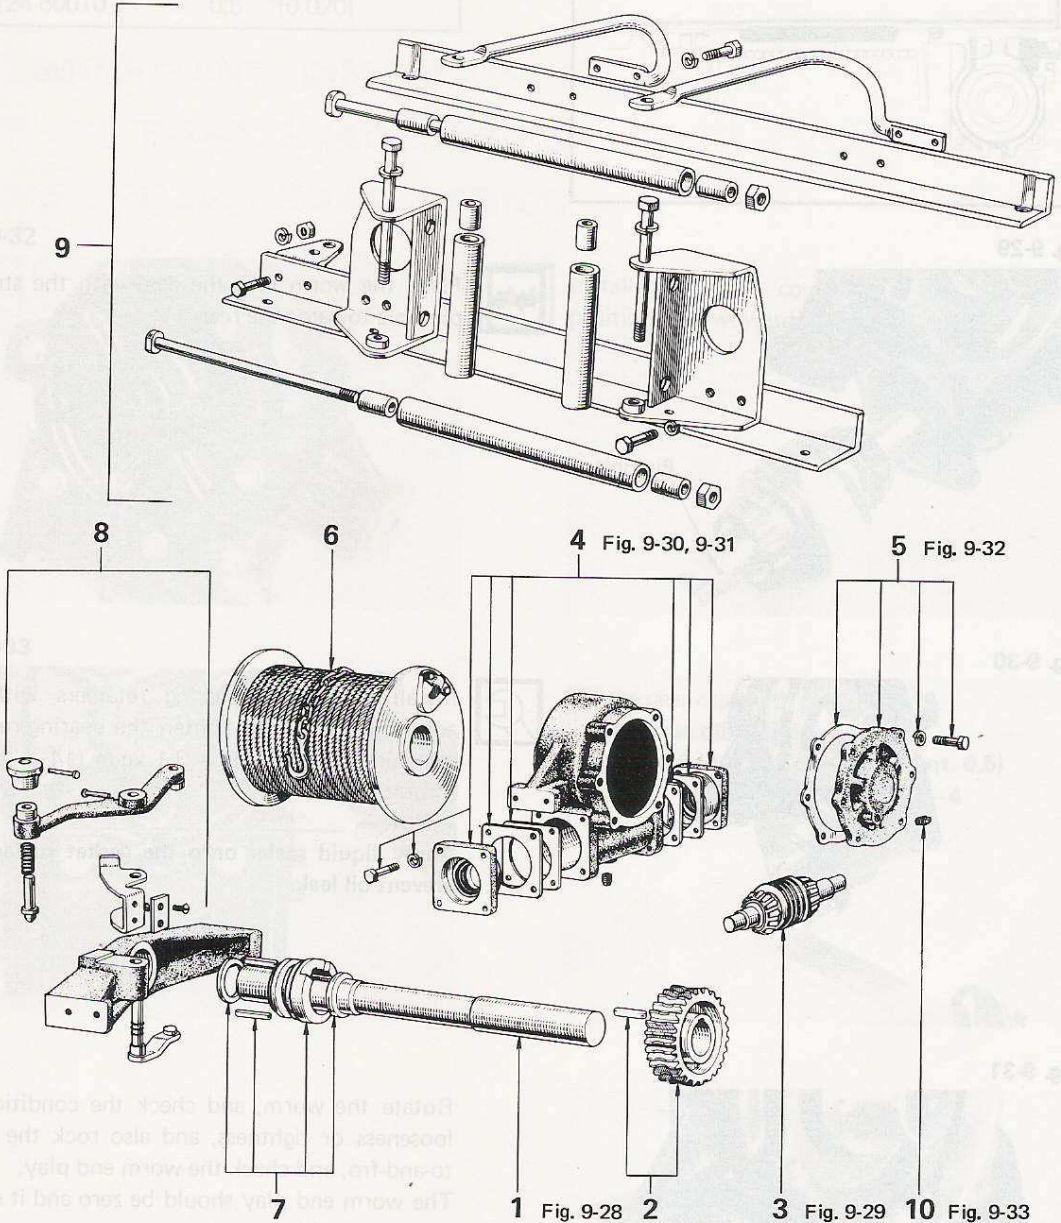
Fig. 9-27



- 1 Shaft
- 2 Key & Worm Gear
- 3 Worm
- 4 Retainers & Shims
- 5 Case Cover


- 6 Winch Drum Assy.
- 7 Spacers, Keys & Clutch
- 8 End Bracket & Clutch Lever Assy.
- 9 Member & Bracket Assy.
- 10 Plug

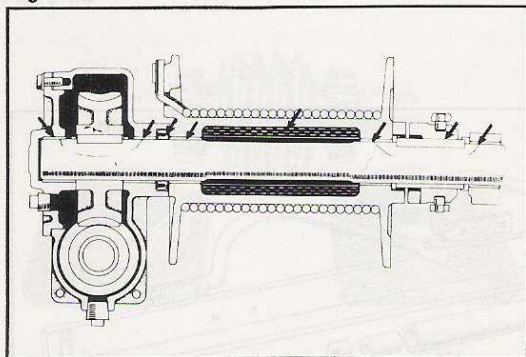Fig. 9-28




Apply multipurpose grease on all bushings, shaft and the clutch mechanism when assembling, and pack multipurpose grease into the drum to about three-fourth of the drum volume.

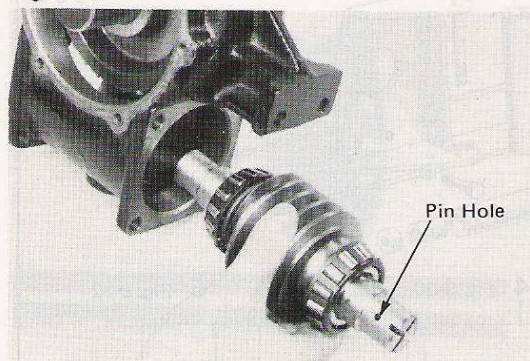Fig. 9-29



Place the worm into the case with the straight pin hole towards the rear.

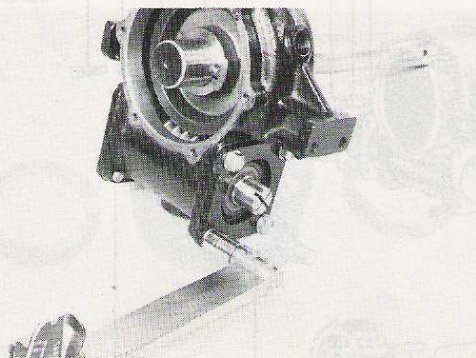Fig. 9-30




Install the worm bearing retainers with the adjusting shims and tighten the bearing retainer attaching bolts to 1.9 – 3.1 kg-m (14 – 22 ft-lb) torque.

— Note —

Apply liquid sealer onto the gasket surfaces to prevent oil leak.

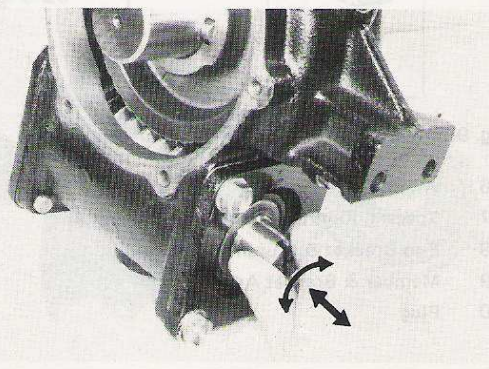Fig. 9-31



Rotate the worm, and check the condition for looseness or tightness, and also rock the worm to-and-fro, and check the worm end play.


The worm end play should be zero and it should rotate smoothly.

Adjusting Shim Thickness

Part No.	Thickness mm (in.)
38123-60010	0.228 (0.009)
38124-60010	0.5 (0.020)


If necessary, adjust the worm bearing pre-load by selecting the adjusting shims to obtain the proper condition.

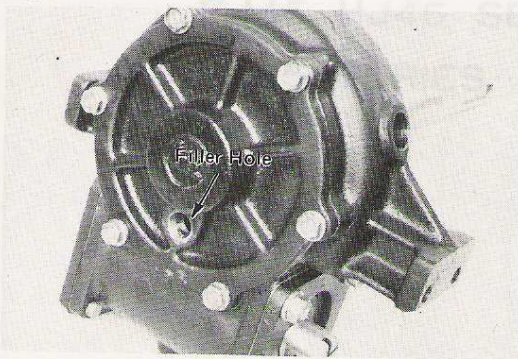Fig. 9-32



Install the case cover with its filler hole positioned downward.

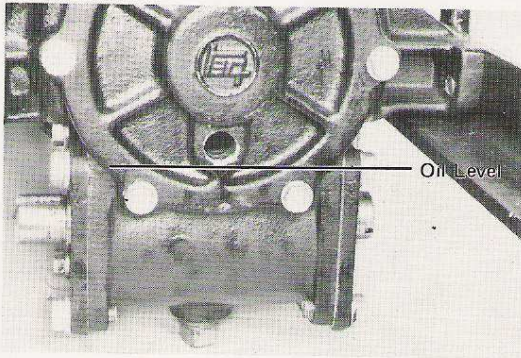Fig. 9-33



Fill the gear case with gear oil.

Gear case oil capacity

0.6 liter (US qt. 0.6, Imp.qt. 0.5)

Type SAE 90, API GL-4

FRAME

page

IMPORTANT DIMENSION OF FRAME

FJ40, BJ40 SERIES	10-2
FJ43, BJ43 SERIES	10-3
FJ45, HJ45 SERIES	10-4
FJ55 SERIES	10-5


IMPORTANT DIMENSION OF FRAME

In case the vehicle has crashed or overturned in an accident, the frame could have become twisted. At such time, make the repairs by

referring to the important dimensions of the frame.


FJ40, BJ40 SERIES

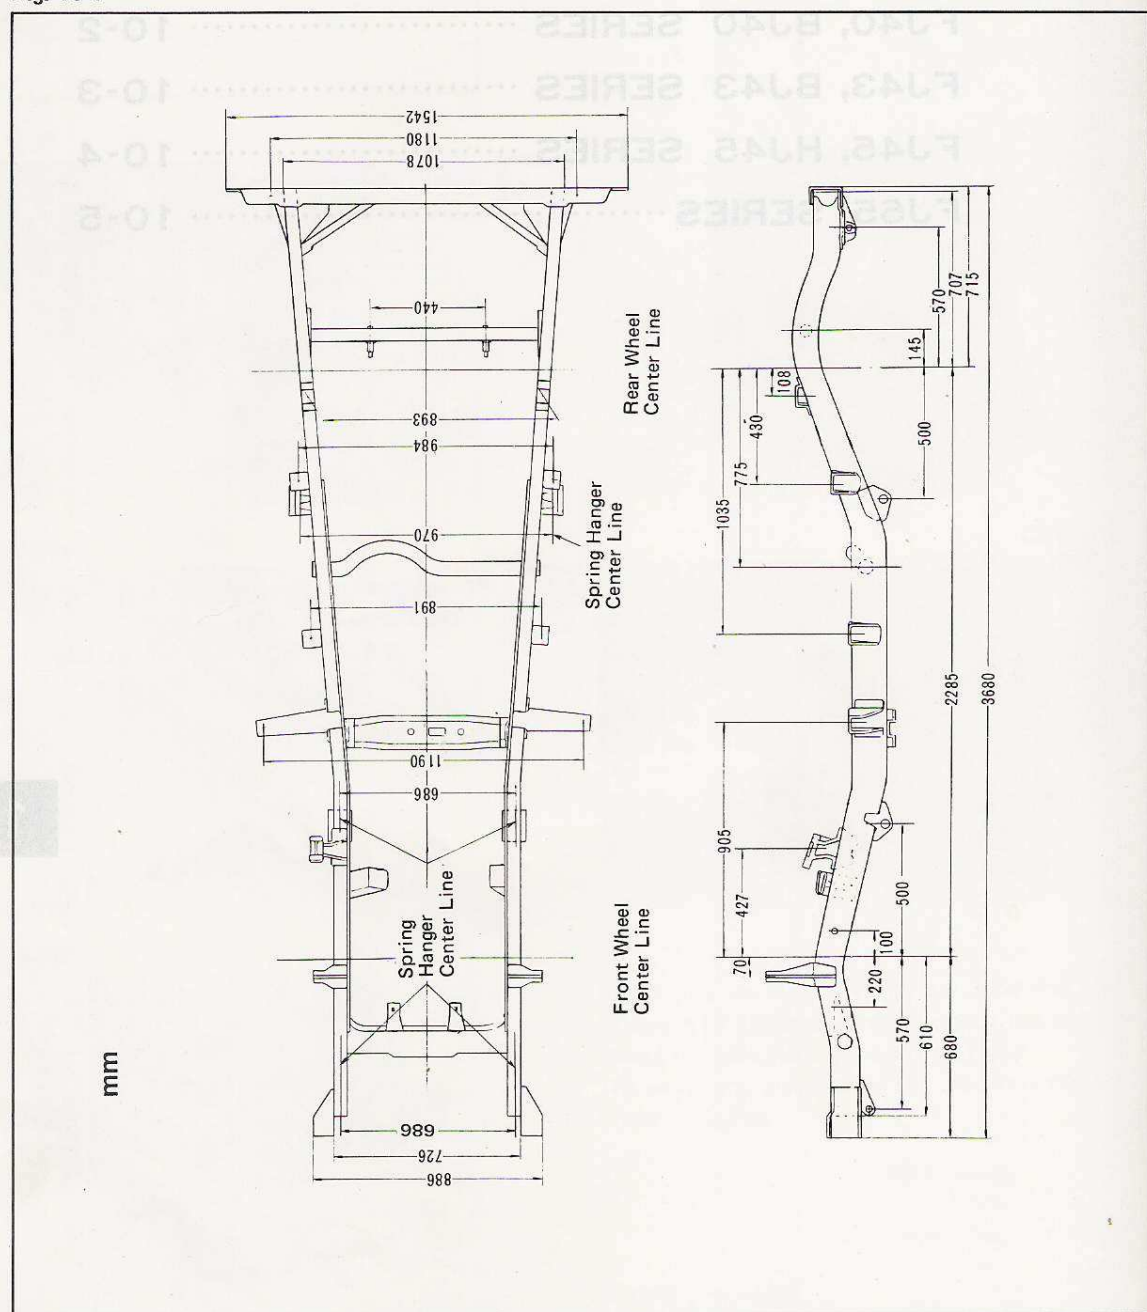Fig. 10-1




FJ43, BJ43 SERIES

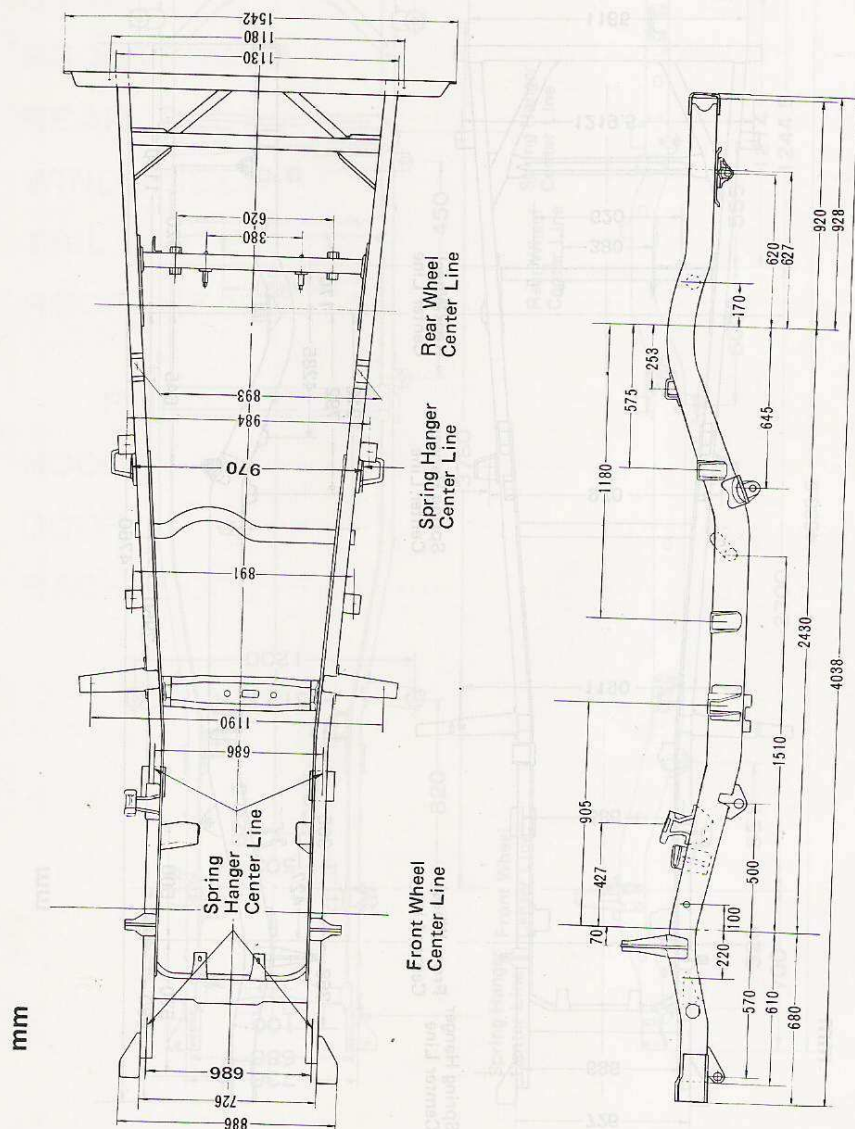Fig. 10-2




FJ45, HJ45 SERIES

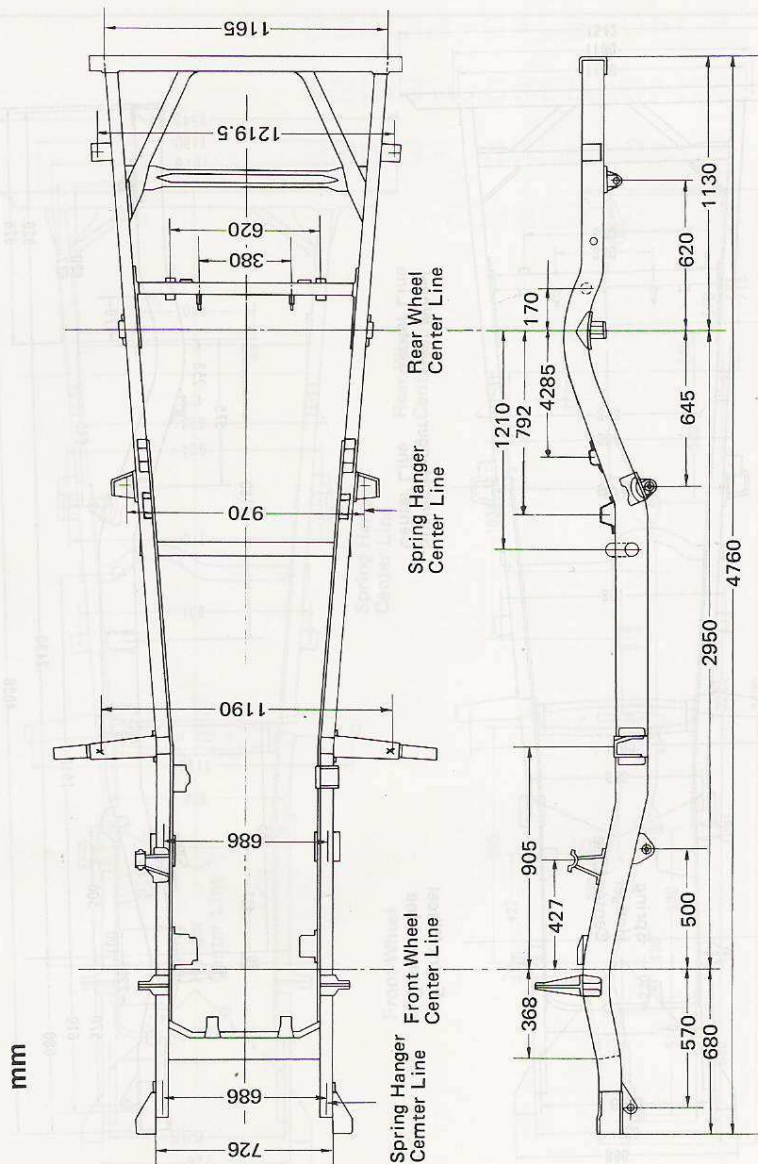Fig. 10-3



FJ55 SERIES

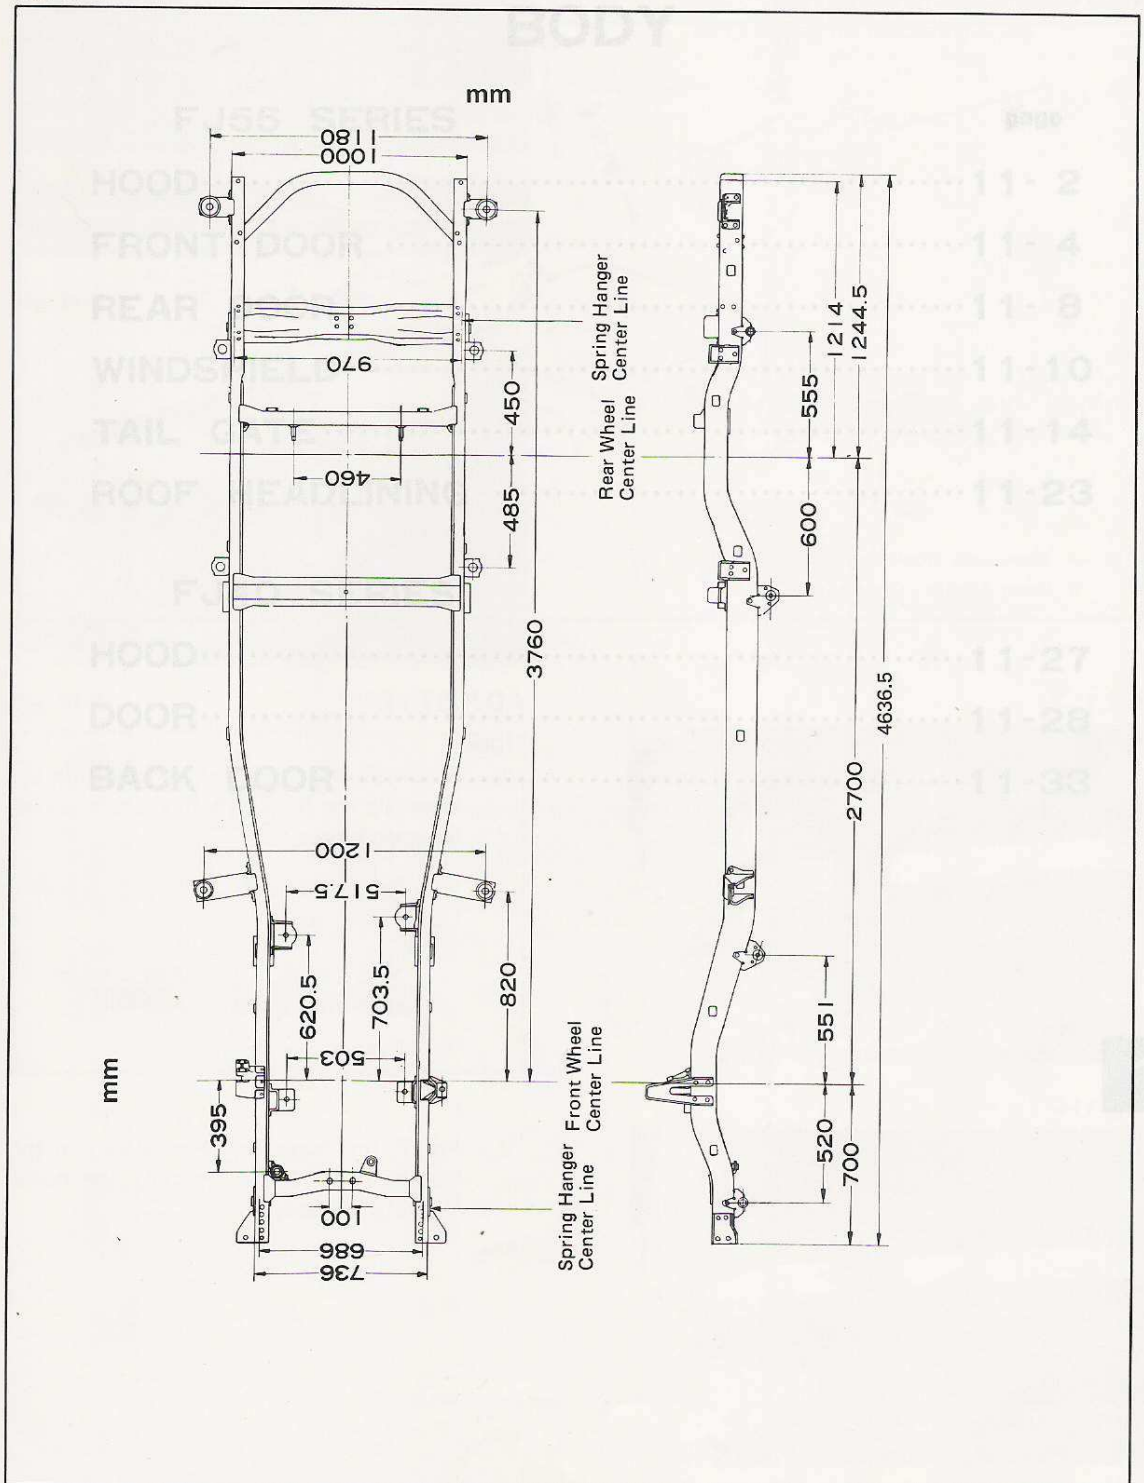Fig. 10-4



BODY

FJ55 SERIES

page

HOOD.....	11- 2
FRONT DOOR	11- 4
REAR DOOR	11- 8
WINDSHIELD	11-10
TAIL GATE.....	11-14
ROOF HEADLINING	11-23

FJ40 SERIES

HOOD.....	11-27
DOOR.....	11-28
BACK DOOR	11-33

FJ55 SERIES

HOOD

Fig. 11-1

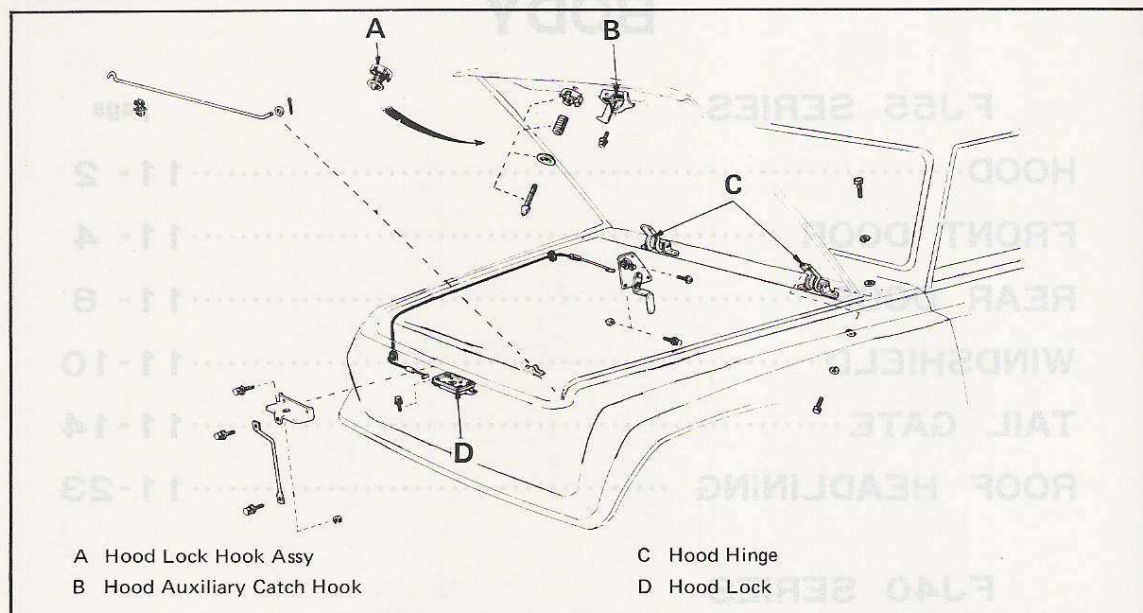


Fig. 11-2


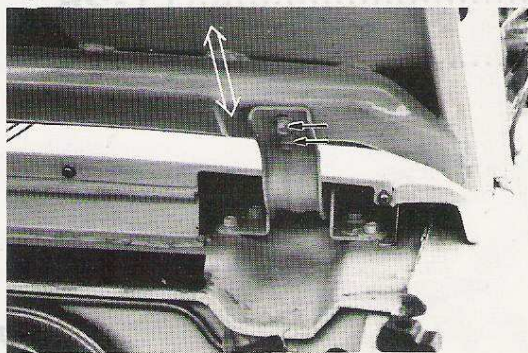


Fig. 11-3

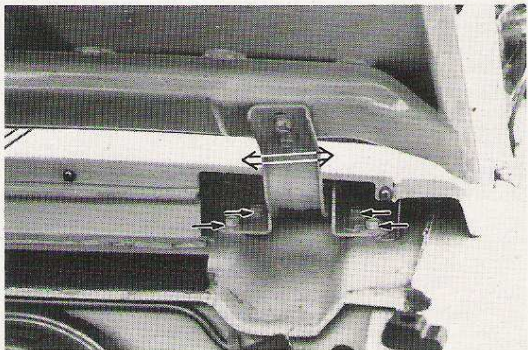


ADJUSTMENT

Hood

1. Adjust the hood in front-rear direction by loosening the bolts attaching the hood to the hood hinges.
2. Adjust the hood in lateral direction by loosening the bolts attaching the hood hinges to the body.

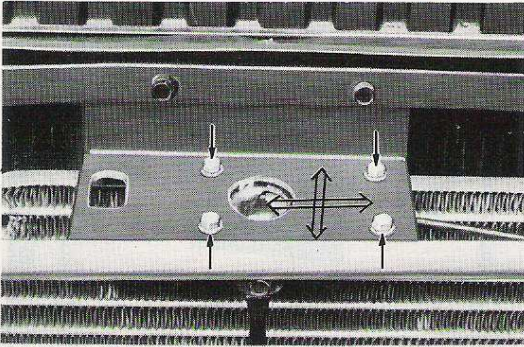
Fig. 11-4



Hood Lock


1. If the hood lock dowel and hood lock are out of alignment with each other, correct by loosening the mounting bolts.

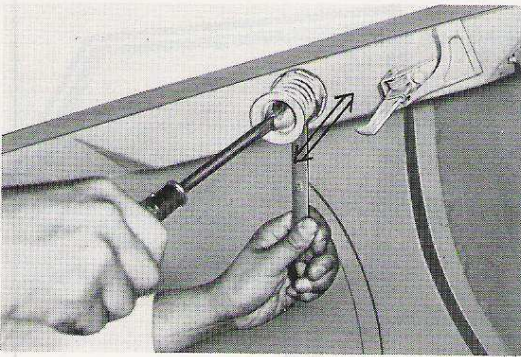Fig. 11-5



2. If the hood is loose in vertical direction, or the hood lock does not catch properly correct by adjusting the hood lock hook.

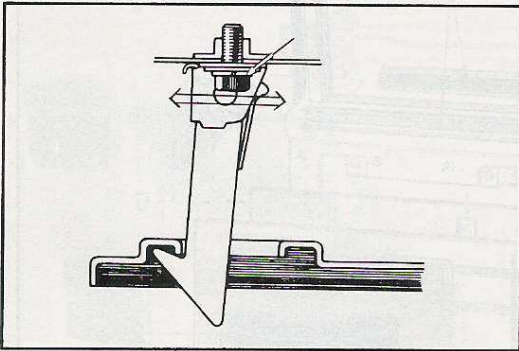Fig. 11-6



Hood Auxiliary Catch Hook

If the catch hook does not latch on properly, correct by loosening the bolts.

FRONT DOOR

REMOVAL

Door Window Glass and Regulator

Remove in the order of the numbers shown.

Fig. 11-7



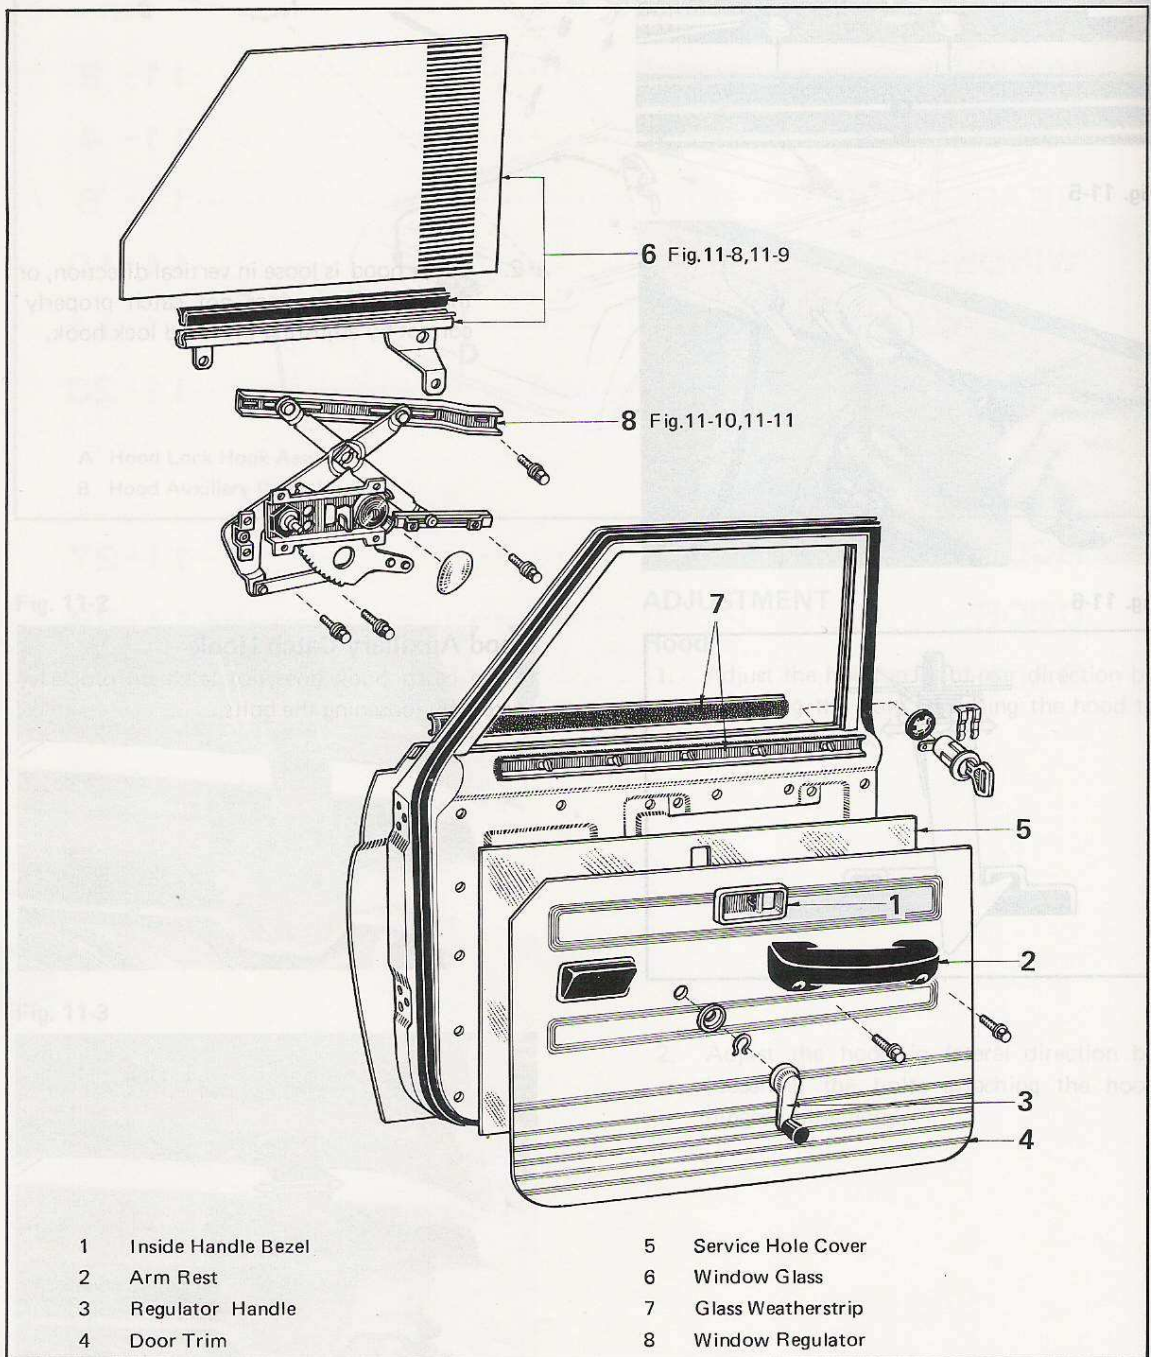


Fig. 11-8

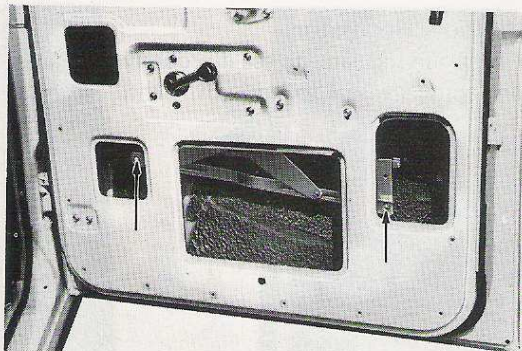


1. Remove the two bolts attaching the glass channel.

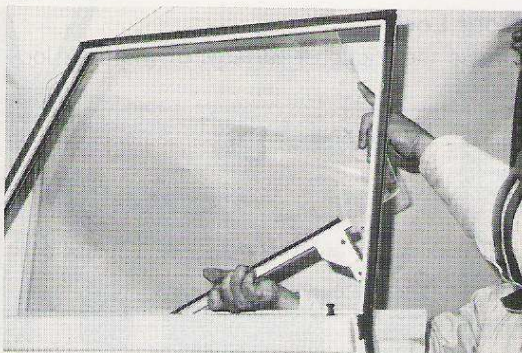Fig. 11-9




2. Pull out the window glass (with the glass channel attached) toward the top.

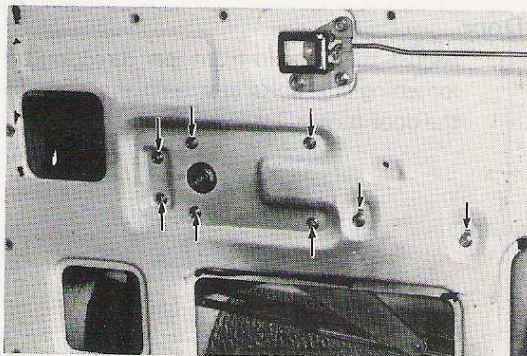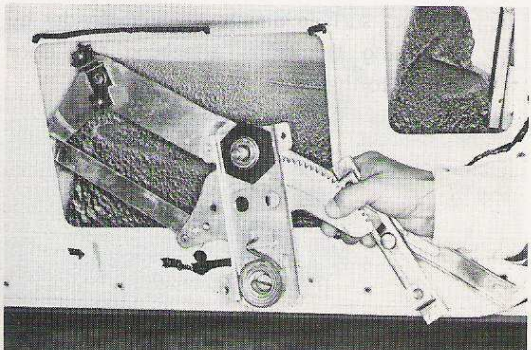Fig. 11-10



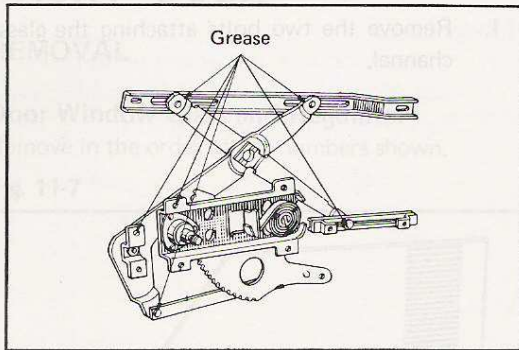
3. Remove the bolts attaching the window regulator.

Fig. 11-11



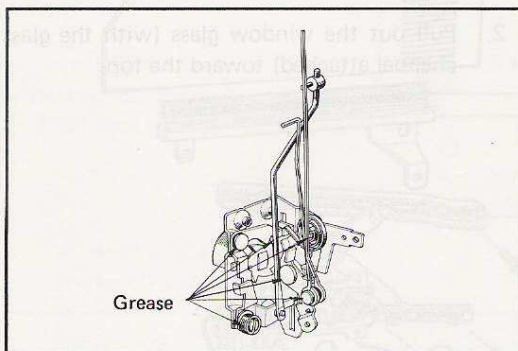
4. Take out the window regulator through the service hole.

Fig. 11-12

**INSPECTION****Window Regulator**

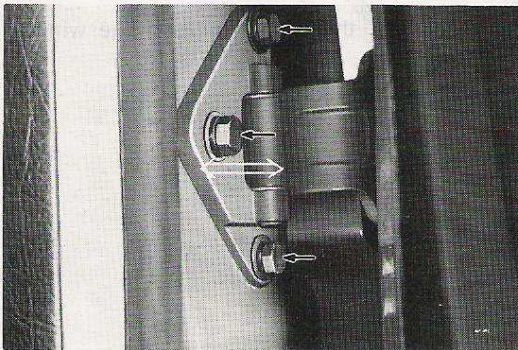
Check the regulator to see if properly lubricated, and apply grease if found insufficient.

Fig. 11-13

**Door Lock**


Grease the frictional surfaces of the door lock.

Fig. 11-14

**ADJUSTMENT****Door**

1. Adjust the door in front-rear direction by loosening the bolts attaching the door to the door hinges.

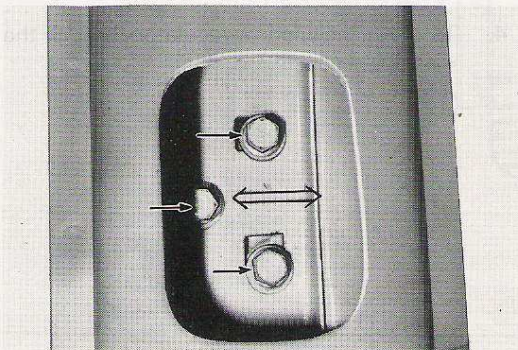Fig. 11-15



2. Correct surface difference with fender by loosening the bolts attaching the door hinges to the body.

Fig. 11-16

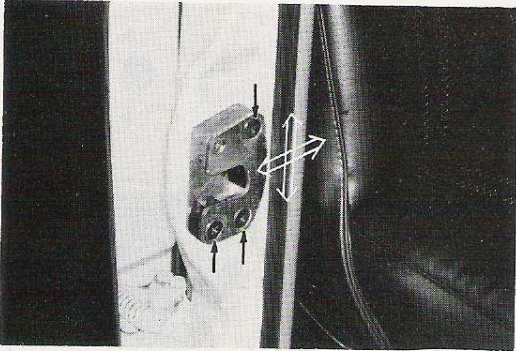


Fig. 11-17

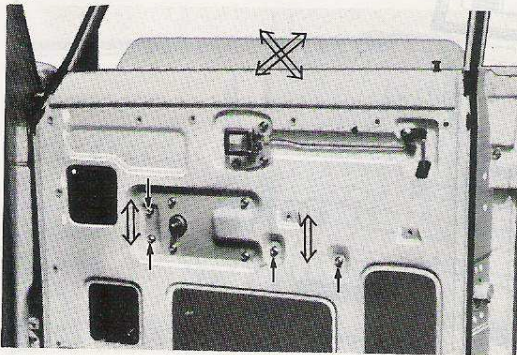


Fig. 11-18


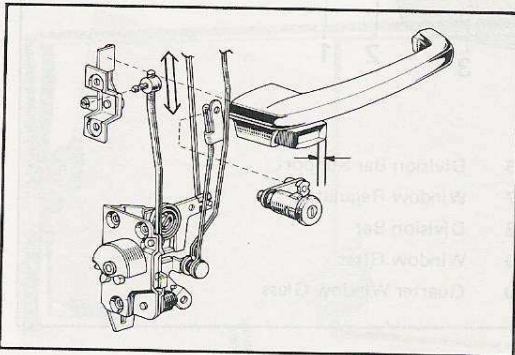


Fig. 11-19

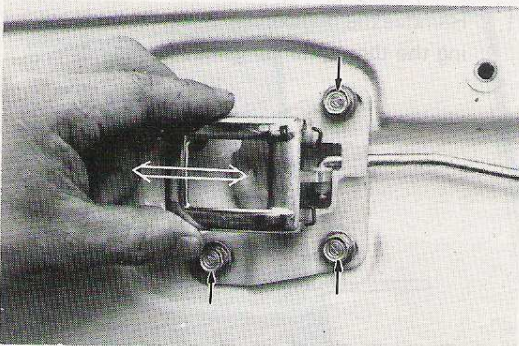

3. If the door does not close properly, correct by adjusting the door lock striker.

4. Adjust the window glass tilt.

5. Adjust the outside door handle play.

6. Adjust the inside door handle play.

REAR DOOR

REMOVAL

Window Glass and Quarter Window Glass

Remove in the order of the numbers shown.

Fig. 11-20


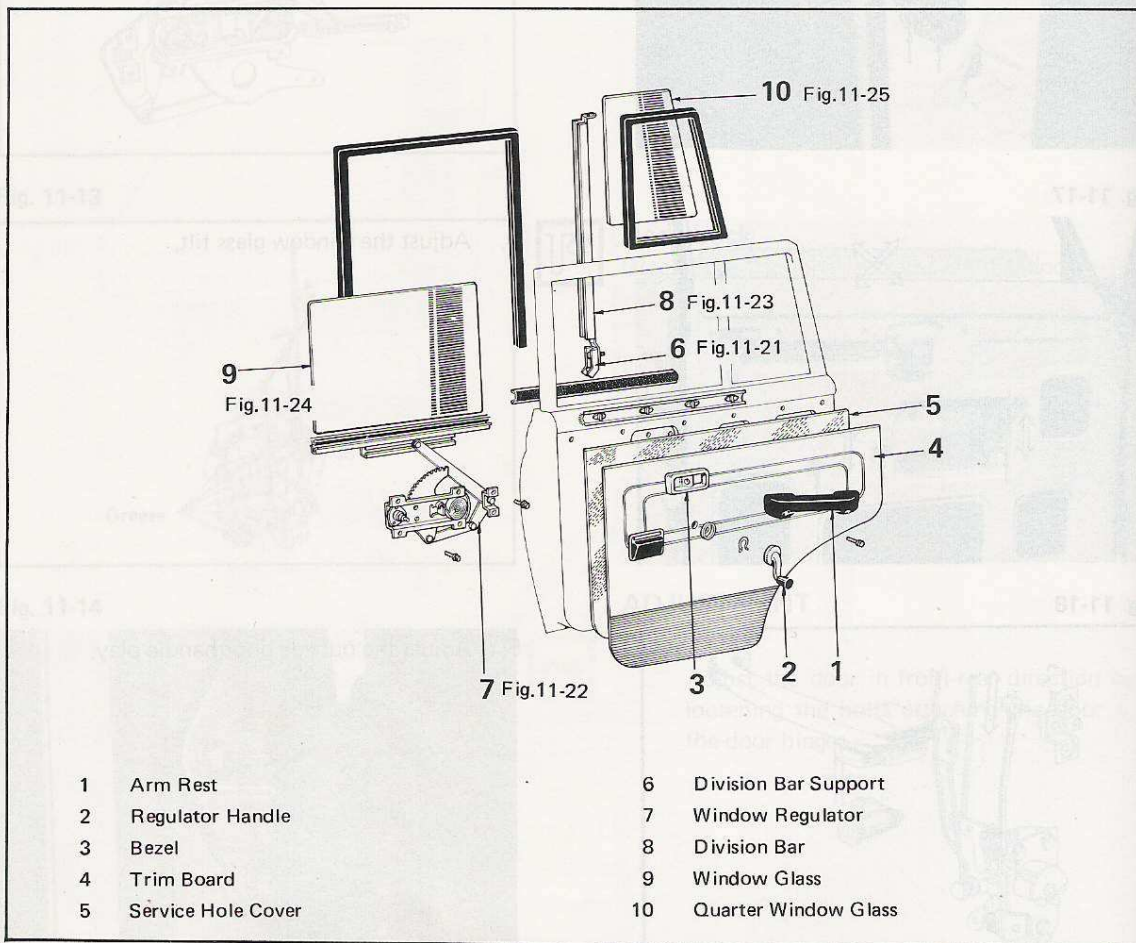


Fig. 11-21

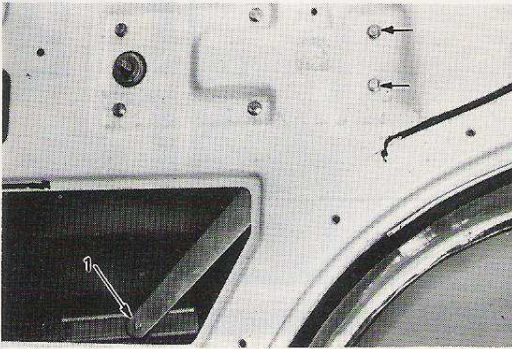


1. Remove the division bar support by loosening the three attaching bolts.

Fig. 11-22




2. Remove the two bolts attaching the window regulator and disconnect the roller (1) from glass channel.

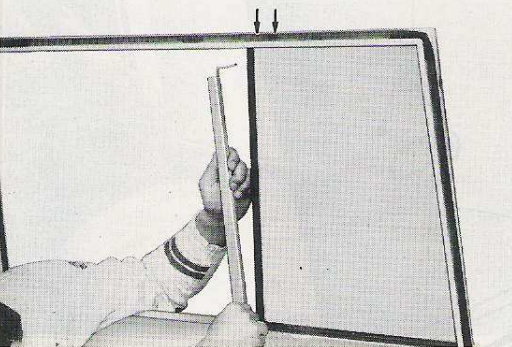Fig. 11-23




3. Remove the division bar by loosening the two screws from upper part of door.

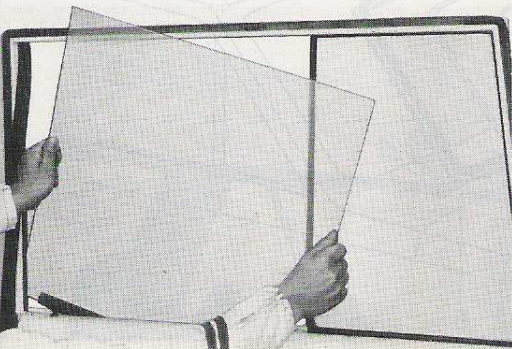Fig. 11-24



4. Remove the window glass or quarter window glass.
(1) Remove the window glass.

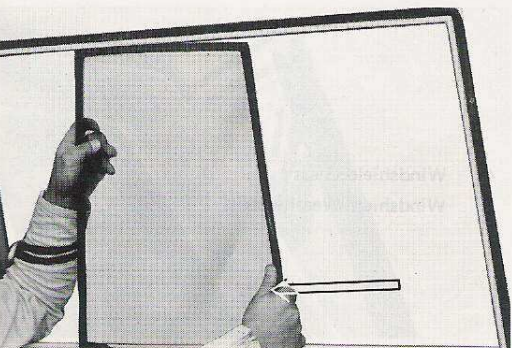Fig. 11-25



- (2) Remove the quarter window glass after shifting it to the center.


WINDSHIELD

REMOVAL

Windshield Glass

Remove in the order of the numbers shown.

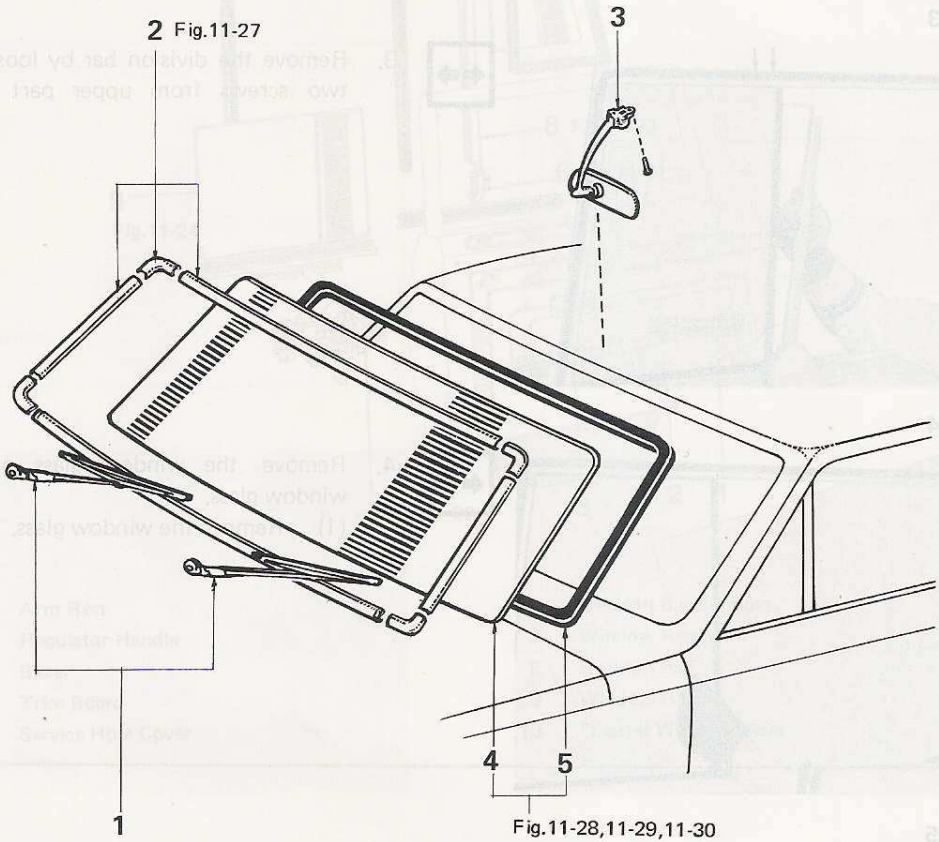
Fig. 11-26



- 1 Wiper Arm
- 2 Windshield Moulding
- 3 Inner Rear View Mirror


- 4 Windshield Glass
- 5 Windshield Weatherstrip

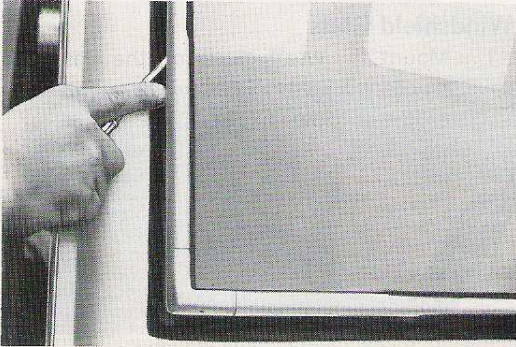Fig. 11-27




1. Remove the moulding with a screwdriver or similar tool.

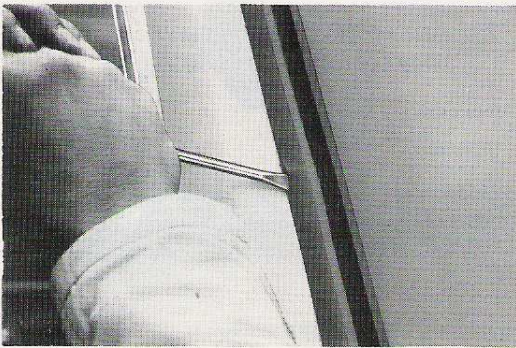Fig. 11-28



2. Using a screwdriver, remove the adhesive attaching the weatherstrip to the body.

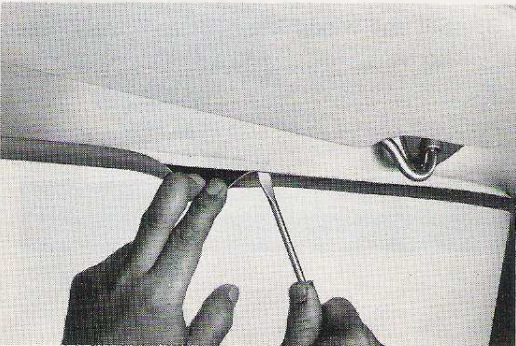Fig. 11-29



3. From inside the car, push out the weatherstrip upper side toward the outside with a screwdriver.

Fig. 11-30



4. Push the glass surface near the upper side of the weatherstrip toward the outside, and remove the glass with the weatherstrip attached.

— Note —

Apply force uniformly on the glass when pushing it out.

Fig. 11-31

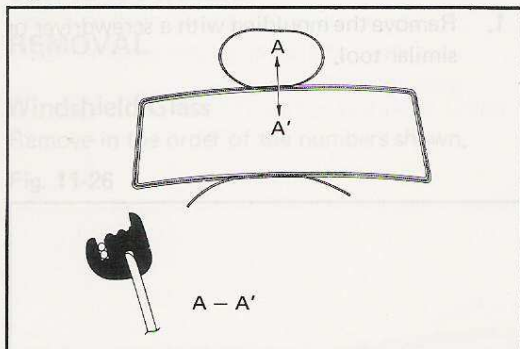


Fig. 11-32

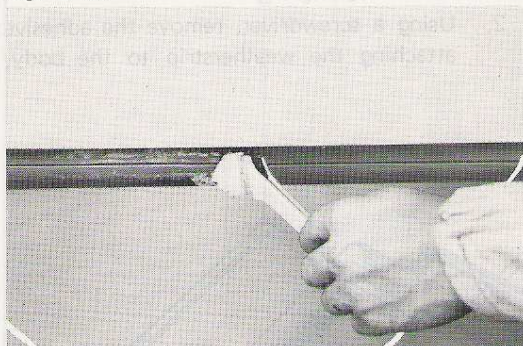


Fig. 11-33


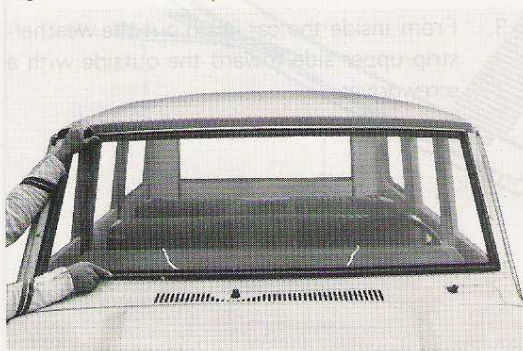


Fig. 11-34

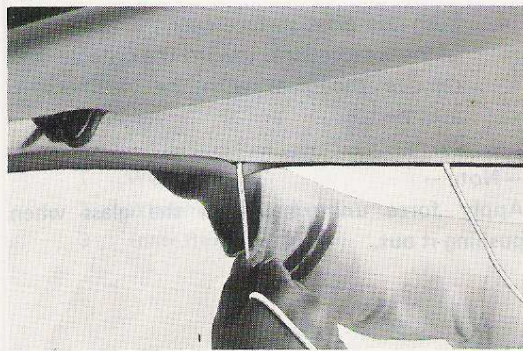

INSTALLATION

Windshield Glass

1. Mount the weatherstrip on the glass, and fit the work cord in the weatherstrip body groove as shown in Fig. 11-31.



2. Apply soapy water on the weatherstrip and body contacting surfaces.



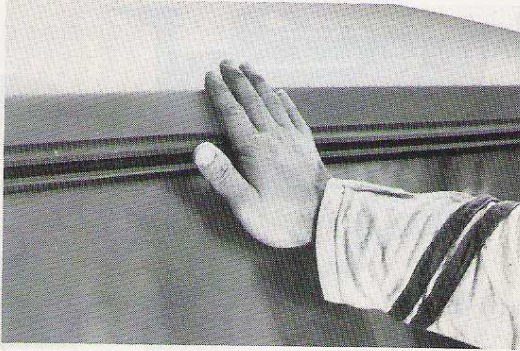
3. Set the windshield glass accurately on to body.



4. Pull the cord ends from inside the body, and at the time, tap the glass surface near the weatherstrip with palm of hand from the outside, and start installing from the lower center.

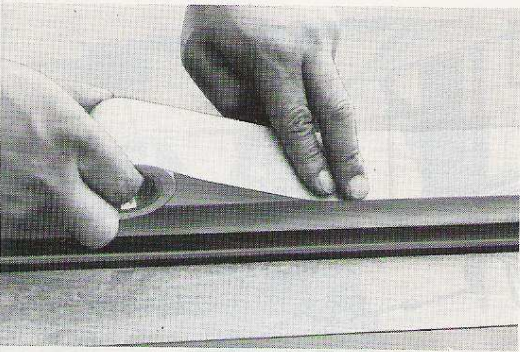


Fig. 11-35



5. After installing the glass, tap it from the outside with the palm of hand so as to settle it down.


Fig. 11-36



6. Fill adhesive into the space between the weatherstrip and body, and between the weatherstrip and glass.


- (1) Place masking tape on the windshield glass and body beforehand so as to allow easy removal of adhesive that had oozed out.

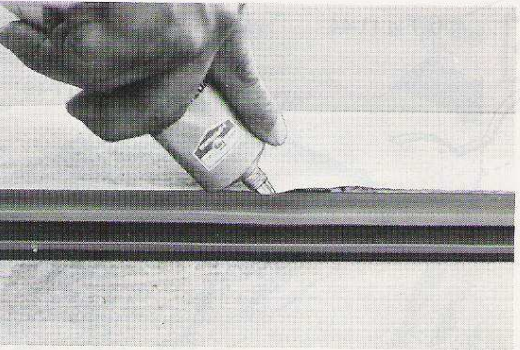Fig. 11-37



- (2) Fill in the adhesive from the outside.

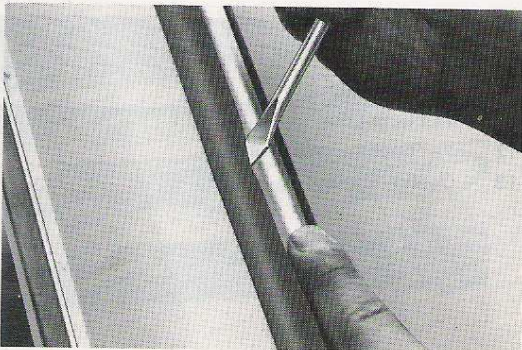Fig. 11-38



7. Install the windshield moulding. Install the wiper arm.


TAIL GATE

TAIL GATE GLASS, REGULATOR, AND TAIL GATE LOCK

Removal

Remove in the order of the numbers shown.

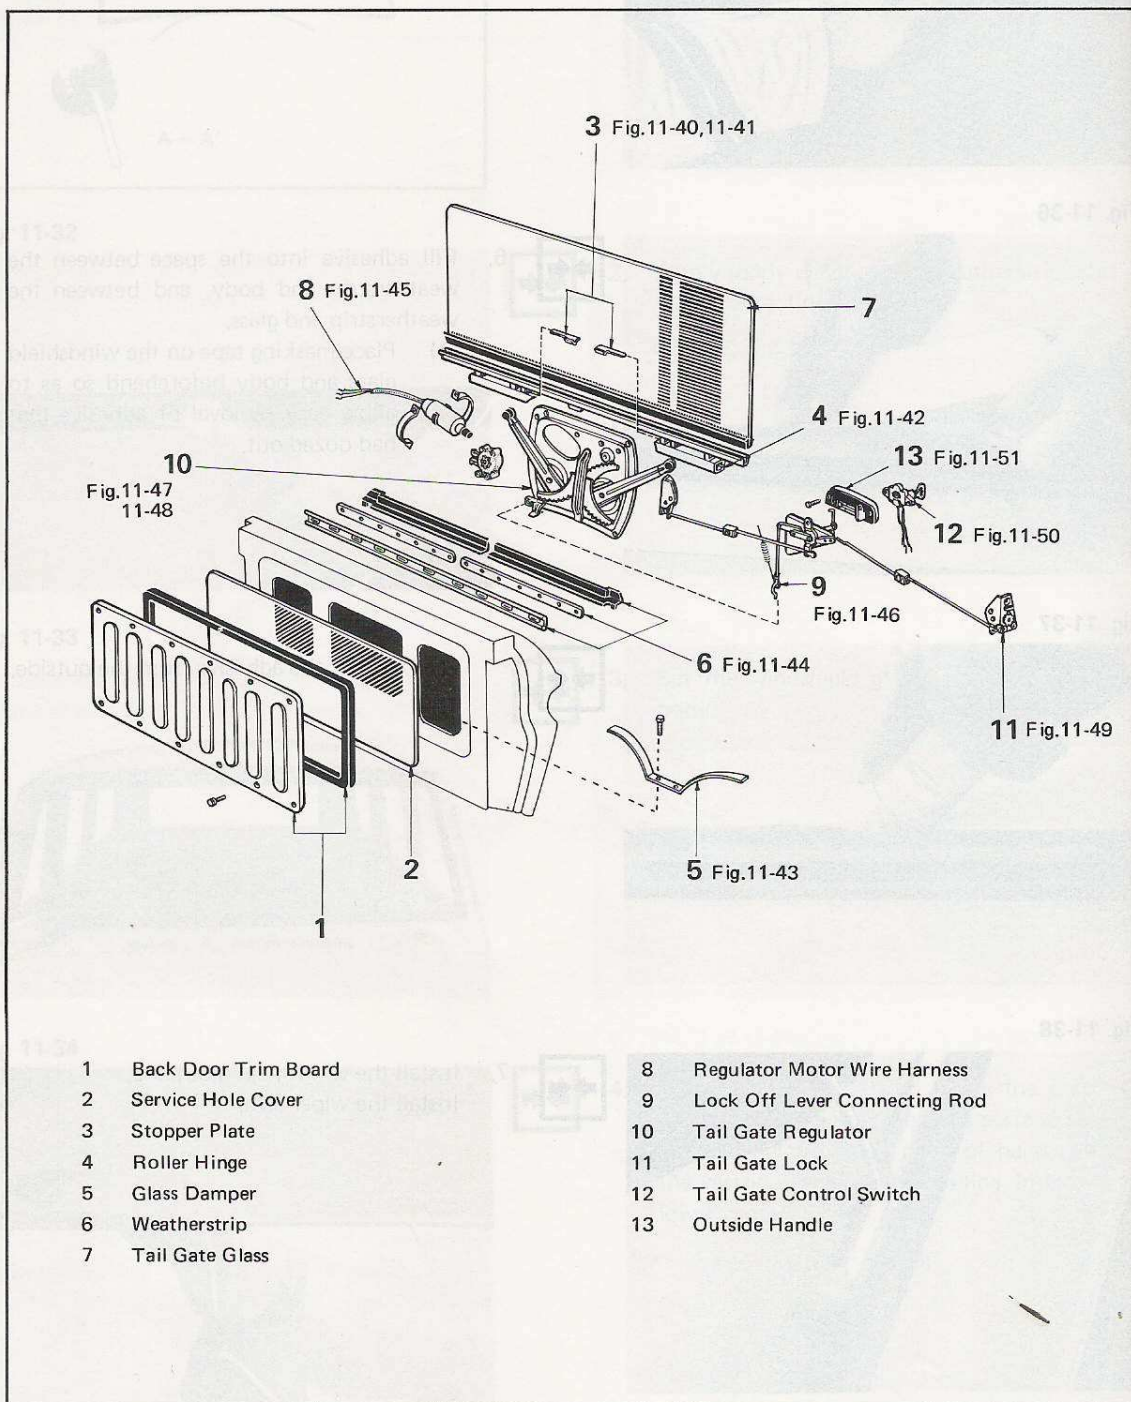
Fig. 11-39



- 1 Back Door Trim Board
- 2 Service Hole Cover
- 3 Stopper Plate
- 4 Roller Hinge
- 5 Glass Damper
- 6 Weatherstrip
- 7 Tail Gate Glass


- 8 Regulator Motor Wire Harness
- 9 Lock Off Lever Connecting Rod
- 10 Tail Gate Regulator
- 11 Tail Gate Lock
- 12 Tail Gate Control Switch
- 13 Outside Handle

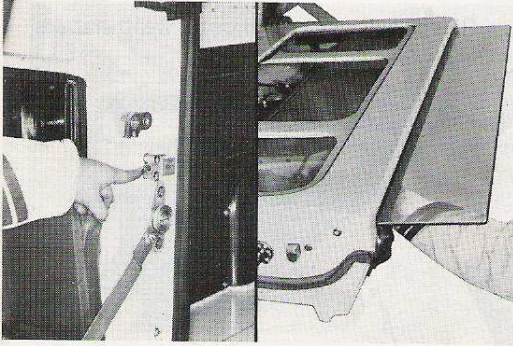Fig. 11-40




1. Stopper plate removal
(1) Press the safety switch when taking out the glass.

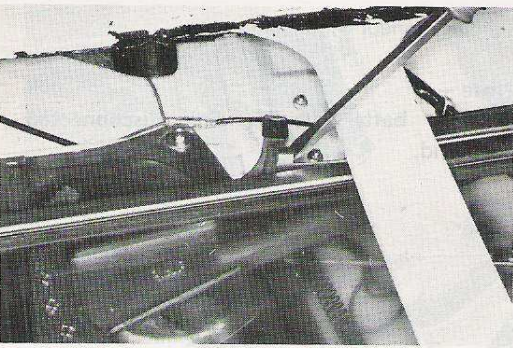Fig. 11-41




- (2) After letting out the glass about half way, remove the stopper plate.

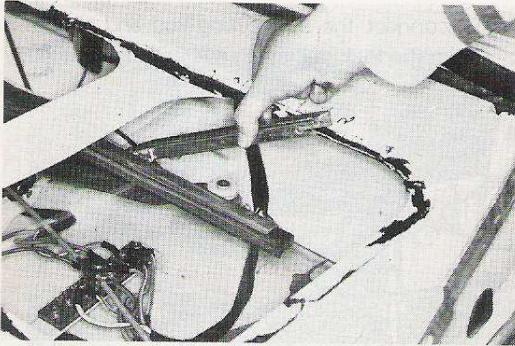Fig. 11-42




2. Remove the roller hinge from the glass holder.

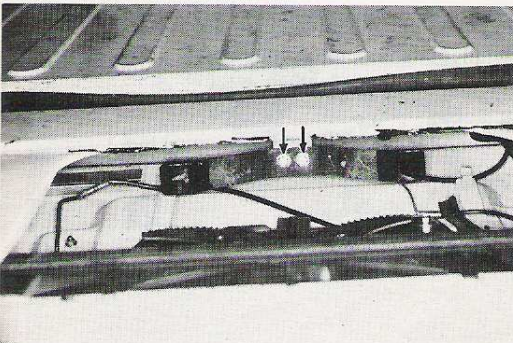Fig. 11-43




3. Remove the glass damper, and have the glass all the way down.

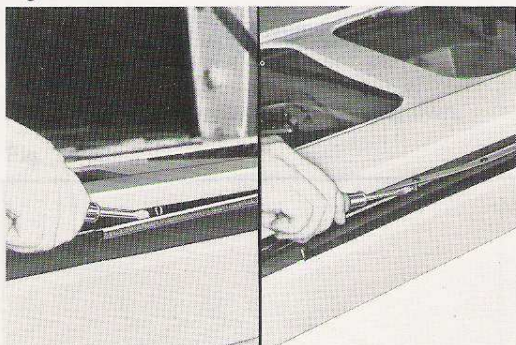Fig. 11-44



4. Remove the inner and outer weatherstrips, and take out the glass.

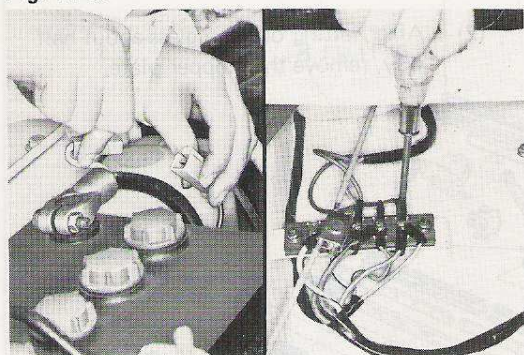Fig. 11-45




5. Disconnect the wire harness.

— Note —


Have the battery fusible link disconnected beforehand.

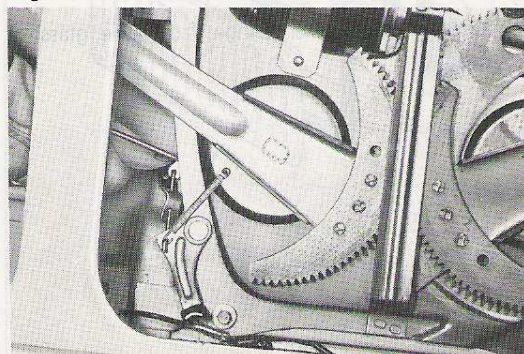Fig. 11-46




6. Disconnect the connecting rod and spring from the lock off lever.

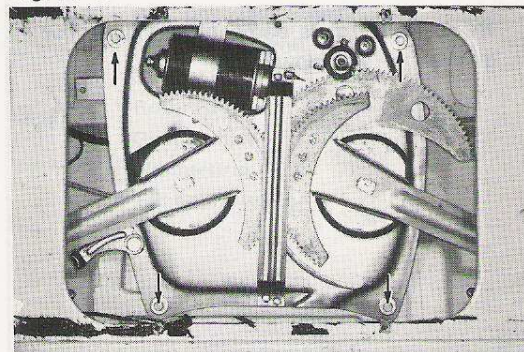Fig. 11-47




7. Regulator removal.
(1) Remove the four bolts.

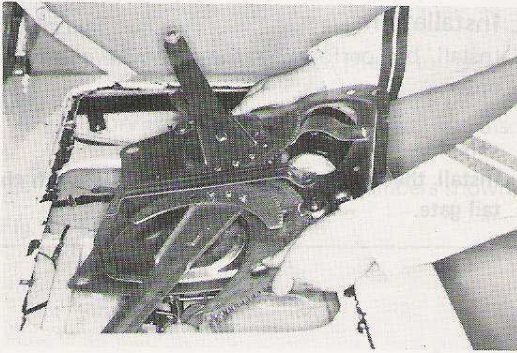Fig. 11-48




(2) Remove the regulator.

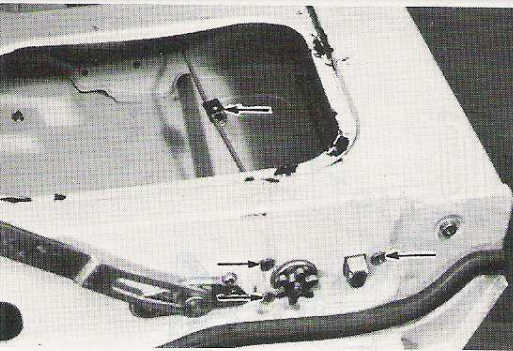Fig. 11-49




8. Remove the tail gate lock.

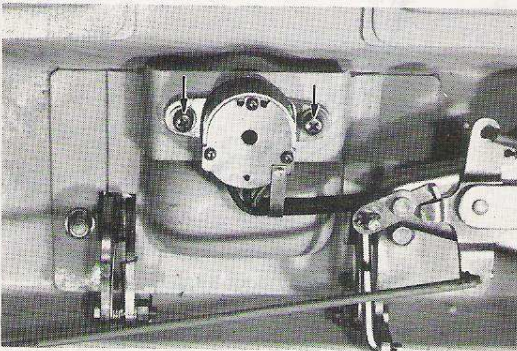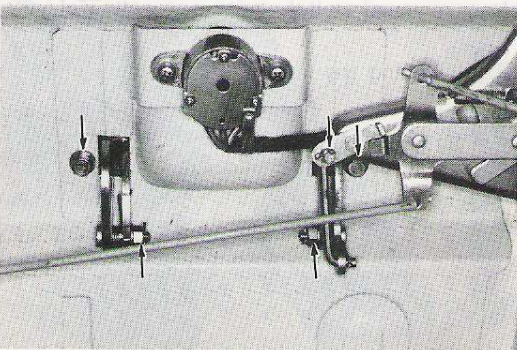Fig. 11-50



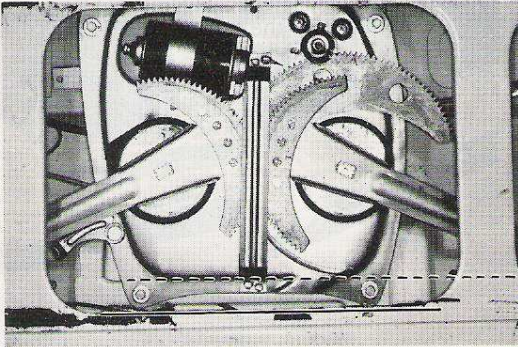
9. Remove the tail gate control switch.

Fig. 11-51



10. Remove the outside handle.

Fig. 11-52


**Installation**

Install by performing the removal in reverse order.

— Note —

Install the regulator positioned parallel with the tail gate.

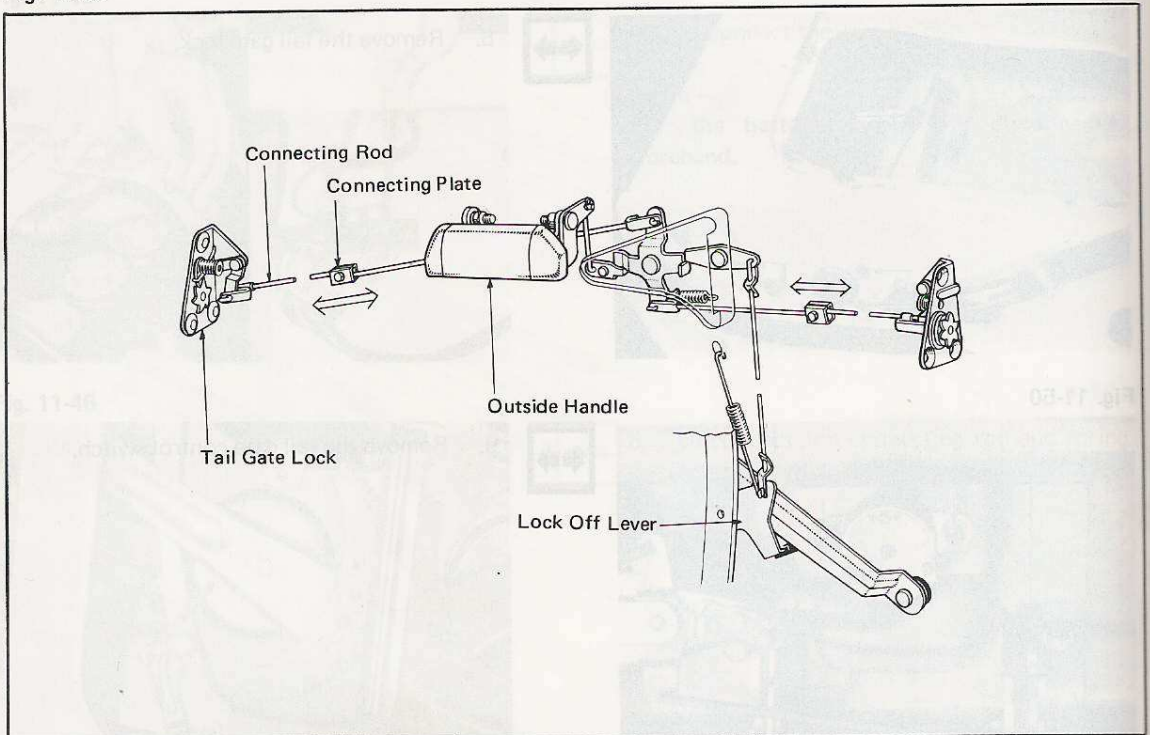Fig. 11-53

**Adjustment**

1. In case the parts pertaining to the tail gate lock had been removed, pull the tail gate handle and verify that the tail gate lock turns freely.
If the tail gate lock does not turn freely; correct by adjusting the length of the connecting rod.
2. In case the parts pertaining to the regulator had been removed, verify the lock off lever operation.
 - (1) With the glass lowered all the way down, pulling the tail gate should allow the tail gate lock to turn freely.
 - (2) At conditions other than above, the tail gate handle should be such that it cannot be pulled.

TAIL GATE ASSEMBLY, HINGE, AND TORSION BAR

Removal

1. Remove the tail gate glass. (Refer to Pg. 11-14).
2. Disconnect the battery fusible link, and disconnect the wire harness. (Refer to Fig. 11-45).
3. Remove in the order of the numbers shown.

Fig. 11-54



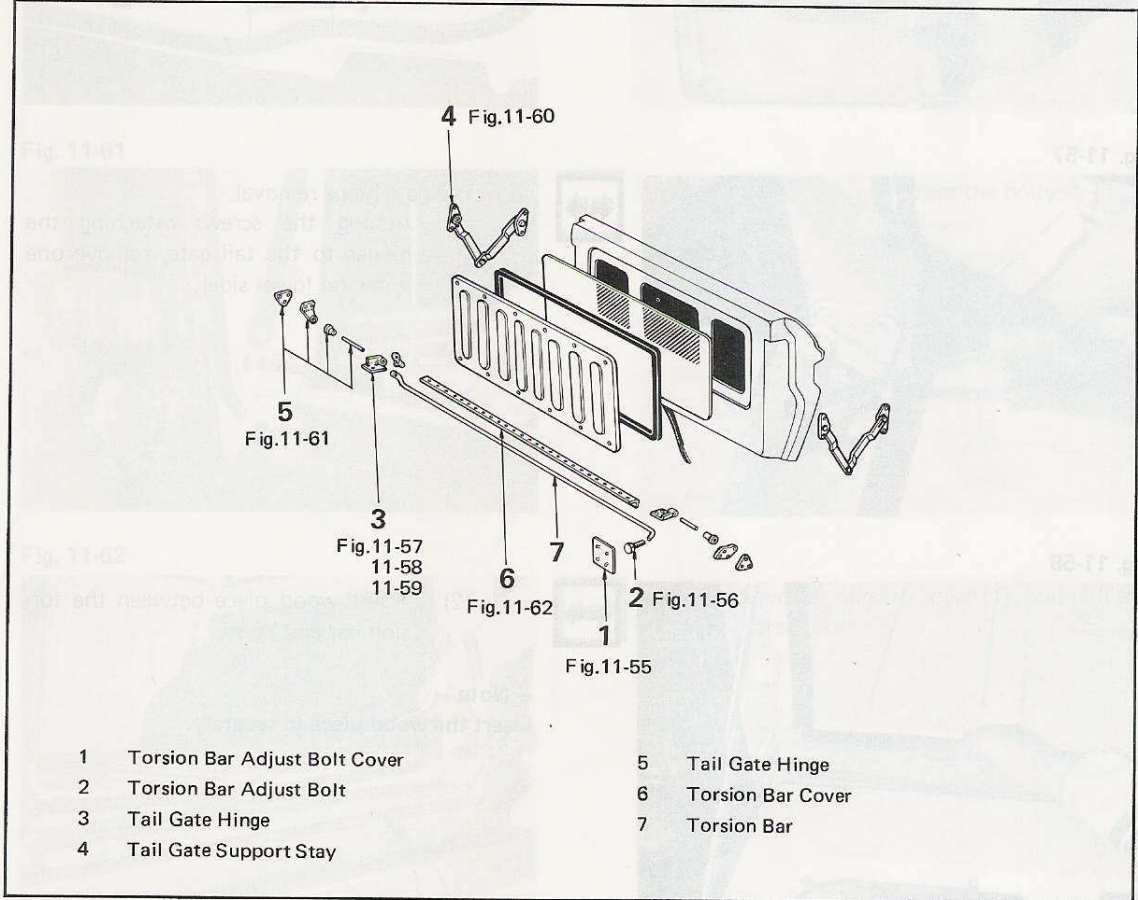


Fig. 11-55

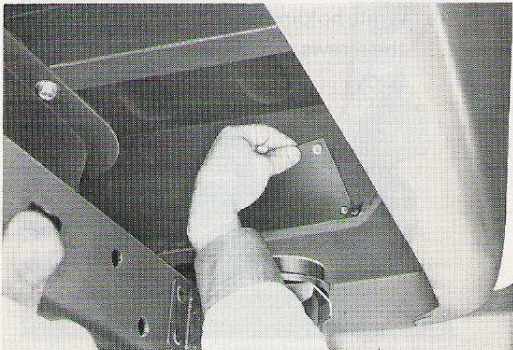


4. Remove the torsion bar adjust bolt cover.

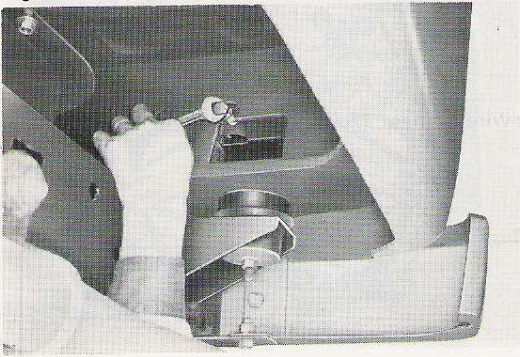Fig. 11-56




5. Completely loosen the torsion bar adjust bolt.

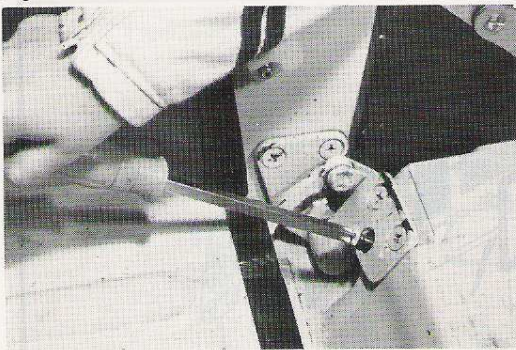Fig. 11-57



6. Tail gate hinge removal.
(1) Among the screws attaching the hinges to the tail gate, remove one screw (at lower side).

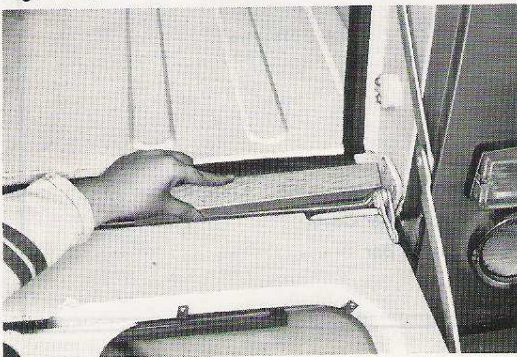Fig. 11-58



- (2) Insert wood piece between the torsion bar and body.

— Note —


Insert the wood piece in securely.

Fig. 11-59




- (3) While holding up the tail gate, remove the screws attaching the hinges to the body.

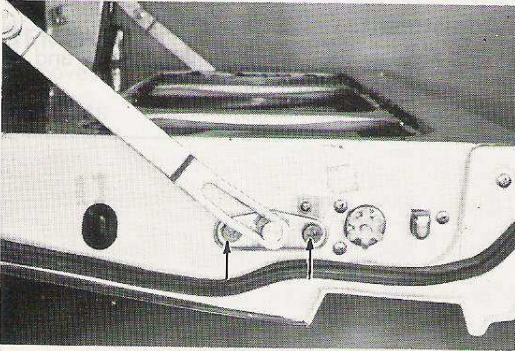Fig. 11-60



7. Remove the tail gate support stay from the tail gate, and take off the tail gate.

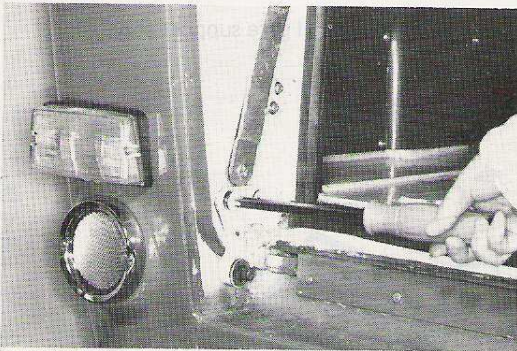Fig. 11-61




8. Remove the hinges from the body.

Fig. 11-62



9. Remove the torsion cover (1), and pull out the torsion bar (2).

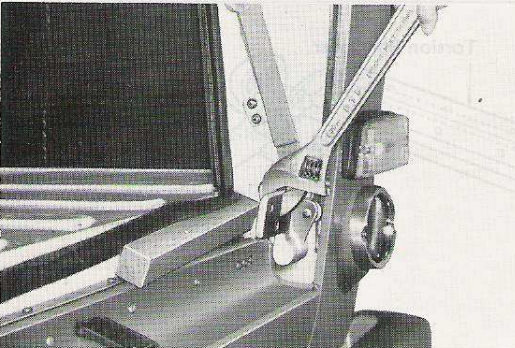Fig. 11-63



Installation

Install by performing the removal in reverse order.

— Note —

When attaching the tail gate to the hinges, insert a wood piece between the torsion bar and body.

Fig. 11-64

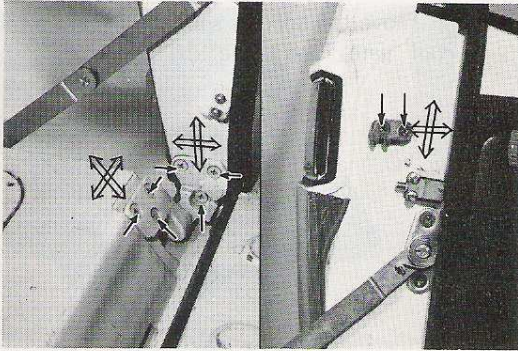


Fig. 11-65

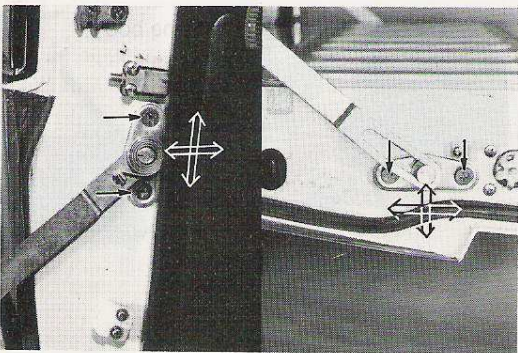


Fig. 11-66


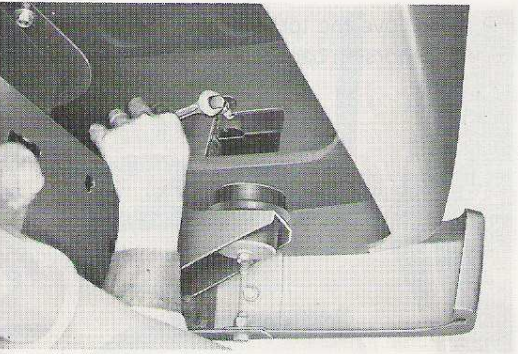


Fig. 11-67

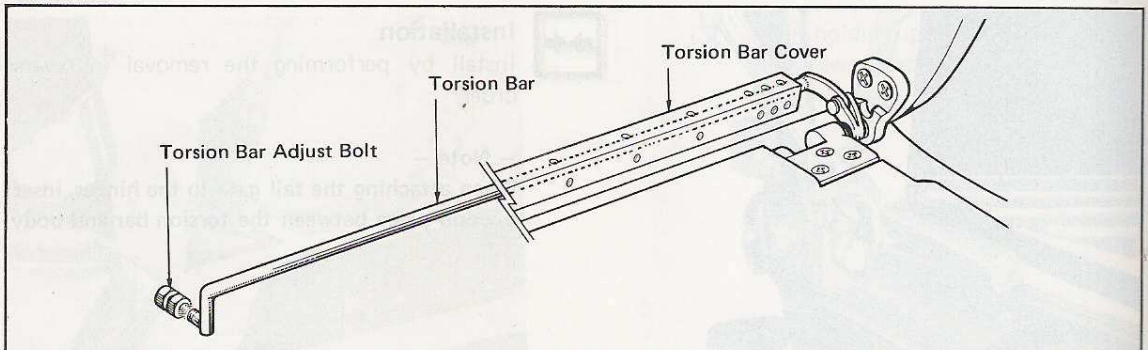

Adjustment

1. Adjust the tail gate alignment and its closing action.

2. Adjust the tail gate support stay.


3. Adjust the torsion bar.

ROOF HEADLINING

REMOVAL

Remove in the order of the numbers shown.

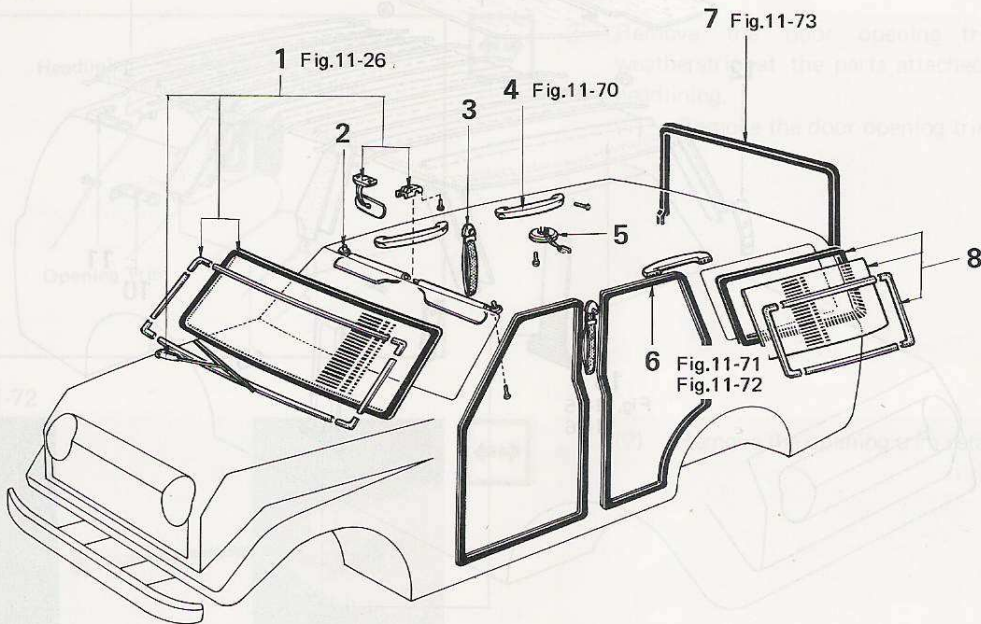
Fig. 11-68



- 1 Windshield Glass
- 2 Sun Visor
- 3 Seat Belt Anchor
- 4 Assist Grip

- 5 Interior Light
- 6 Door Opening Trim And Weatherstrip
- 7 Back Door Glass Weatherstrip
- 8 Side Window Glass

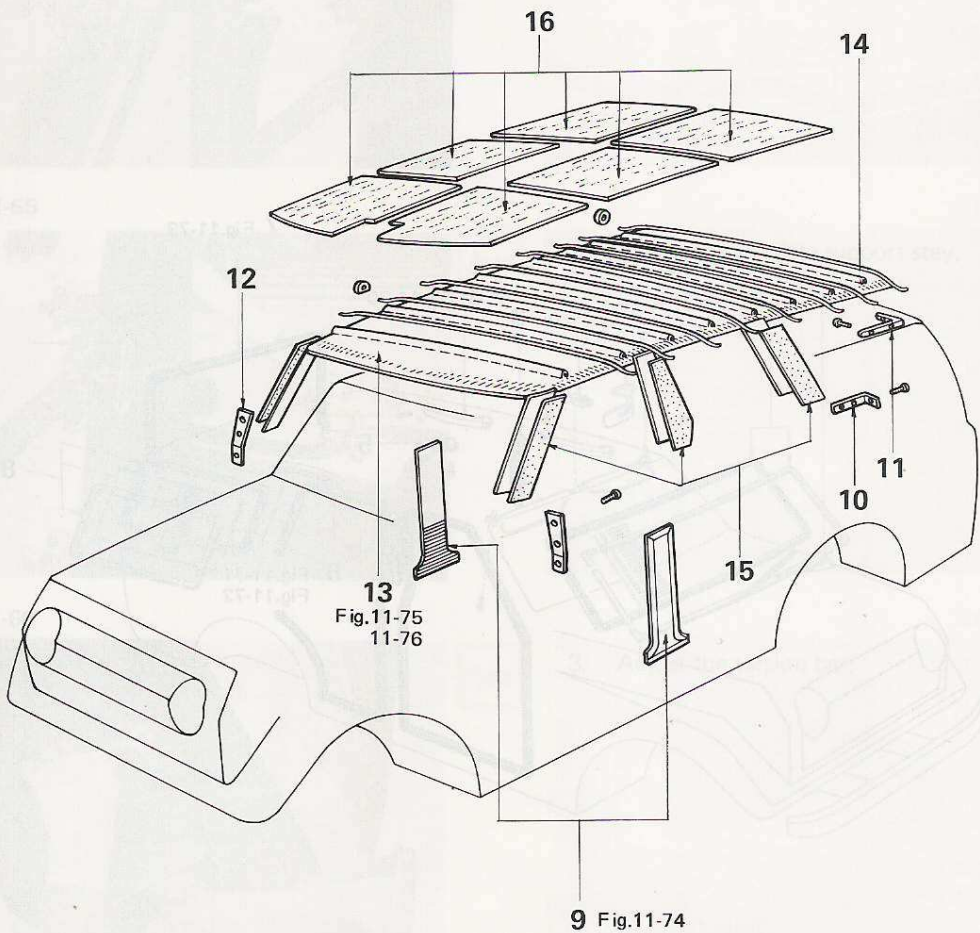
Fig. 11-69



- 9 Center Pillar Garnish Panel
- 10 Headlining Front Side Garnish
- 11 Headlining Rear Side Garnish
- 12 Instrument Panel Outside Garnish


- 13 Headlining
- 14 Headlining Support
- 15 Pillar Garnish Pad
- 16 Roof Silencer Pad

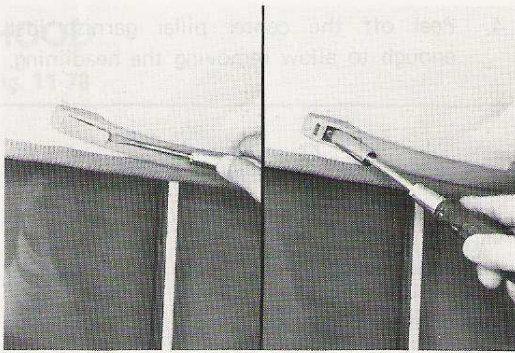Fig. 11-70




1. Remove the assist grip.

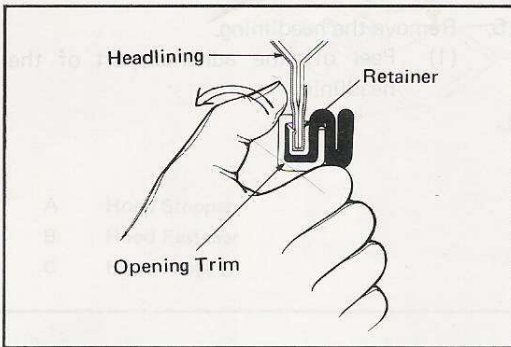Fig. 11-71




2. Remove the door opening trim and weatherstrip at the parts attached to the headlining.
 - (1) Remove the door opening trim.

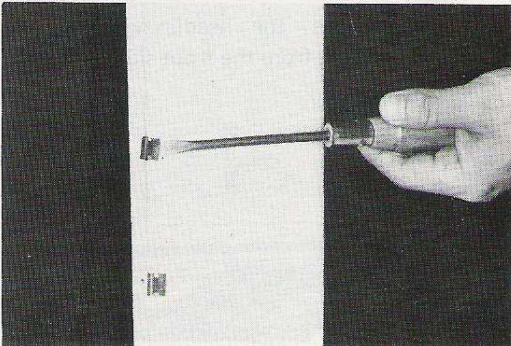Fig. 11-72




- (2) Remove the opening trim retainer.

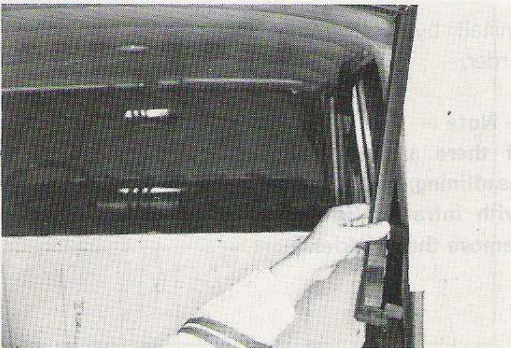Fig. 11-73



3. Remove the back door glass weatherstrip.

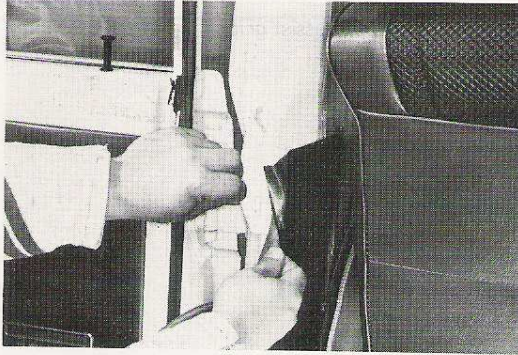Fig. 11-74




4. Peel off the center pillar garnish just enough to allow removing the headlining.

Fig. 11-75




5. Remove the headlining.
 - (1) Peel off the adhered part of the headlining.

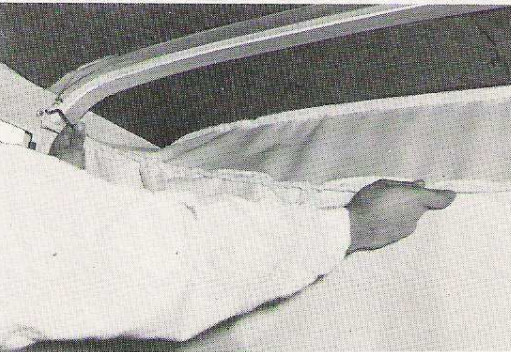Fig. 11-76



- (2) Remove the headlining supports, starting from the front side.

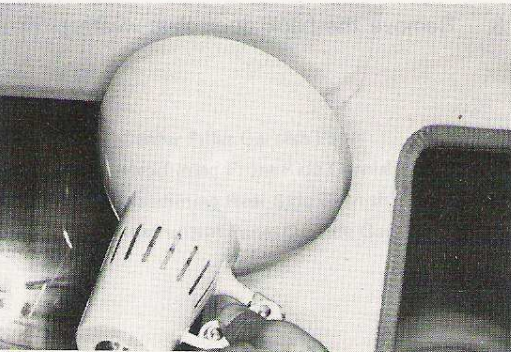Fig. 11-77



INSTALLATION

Install by performing the removal in reverse order.

— Note —

If there are any wrinkles after installing the headlining, heating about one-half to one minute with infra-red light or similar means will help remove the wrinkles.

FJ40 SERIES

HOOD

Fig. 11-78


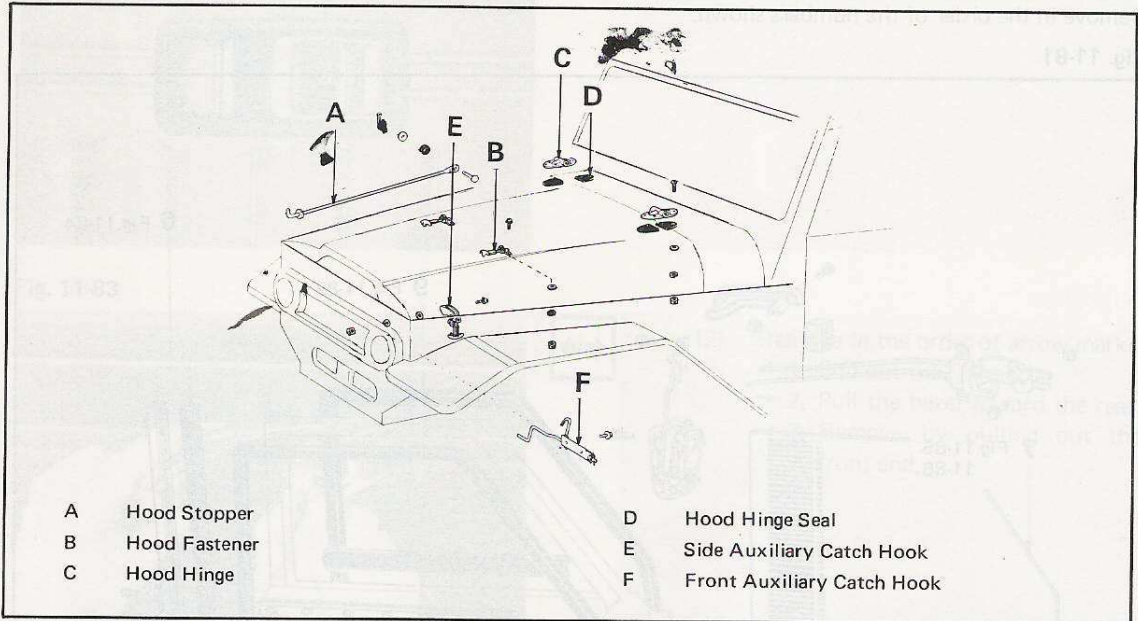


Fig. 11-79

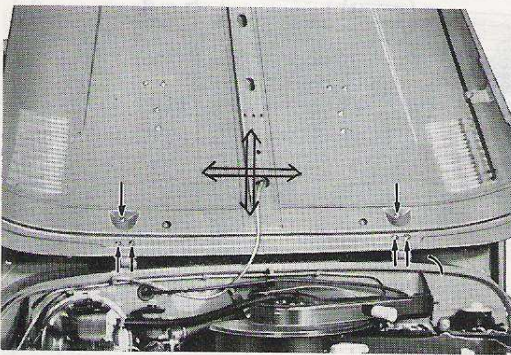


ADJUSTMENT

Hood

Adjust the hood in front-rear direction by loosening the nuts at the hood.

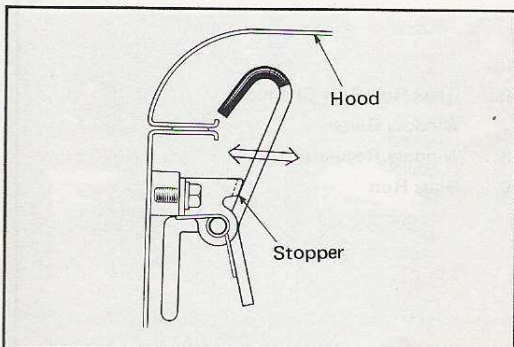Fig. 11-80



Hood Auxiliary Catch Hook

If the catch hook does not latch on properly, correct by bending the stopper.

DOOR

REMOVAL

Door Window Glass, Regulator, and Glass Run

Remove in the order of the numbers shown.

Fig. 11-81



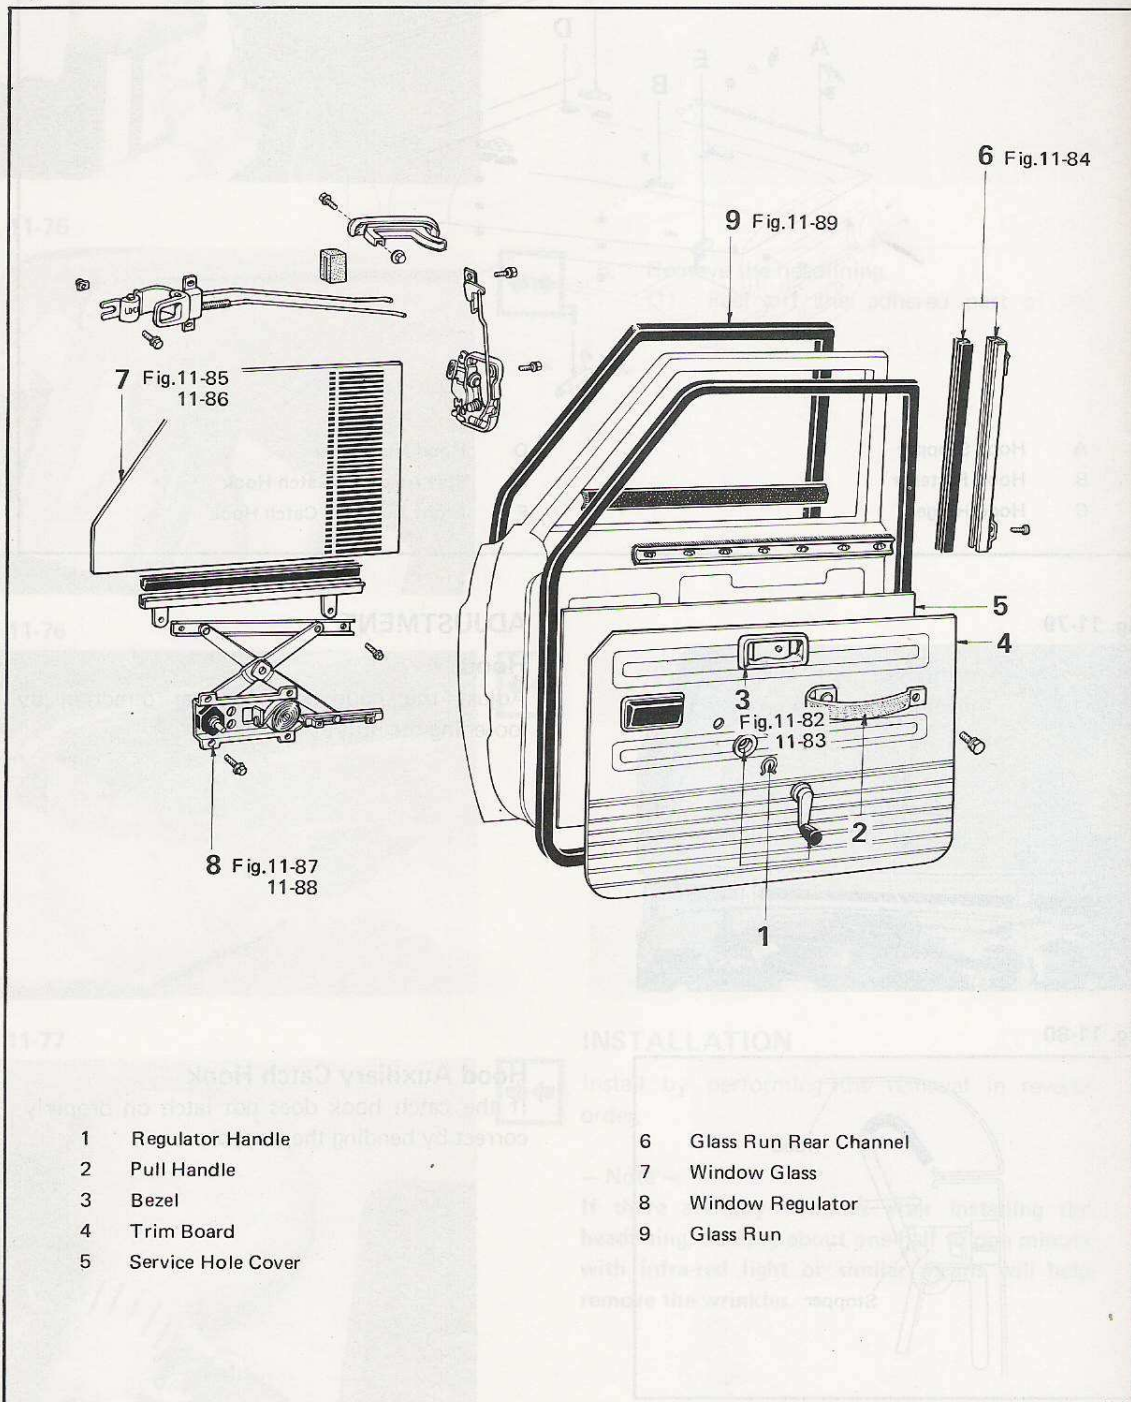


Fig. 11-82

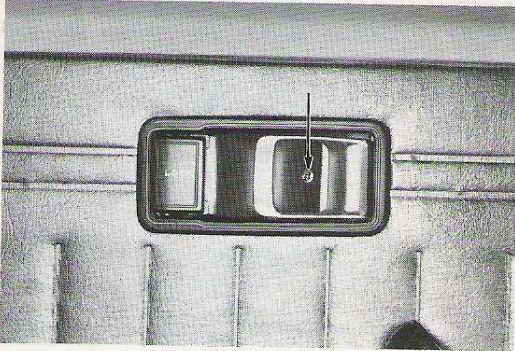


1. Remove the bezel.
(1) Remove the screws.

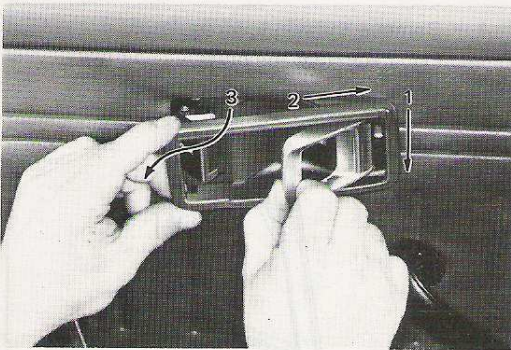Fig. 11-83




- (2) Remove in the order of arrow marks.
→ 1. Pull out the rear end.
→ 2. Pull the bezel toward the rear.
→ 3. Remove by pulling out the front end.

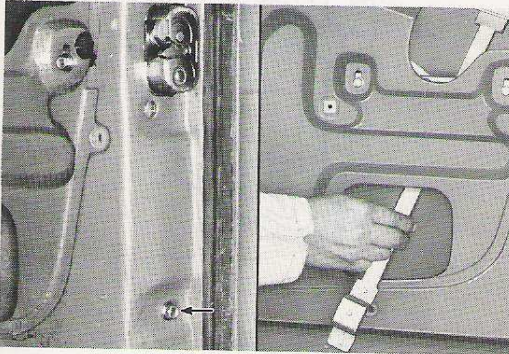Fig. 11-84




2. Remove the glass run rear channel.

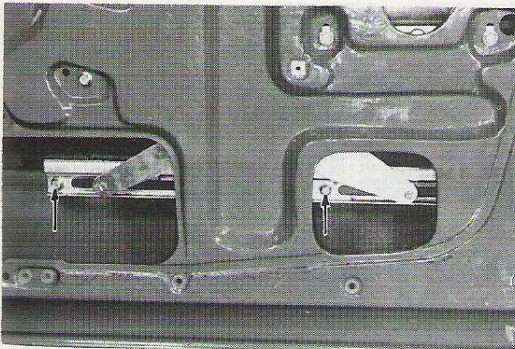Fig. 11-85




3. Remove the glass.
(1) Remove the bolts.

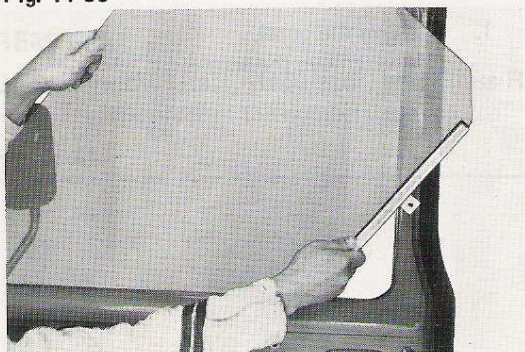Fig. 11-86




- (2) Remove the glass with the glass holder.

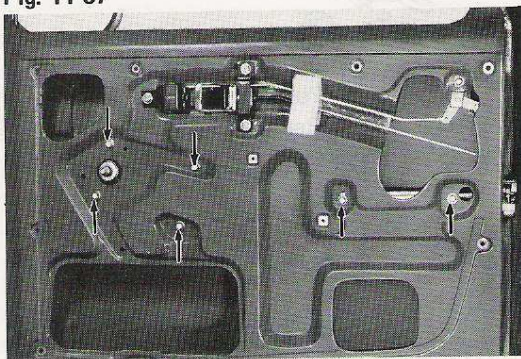Fig. 11-87




4. Remove the window regulator.
(1) Remove the bolts.

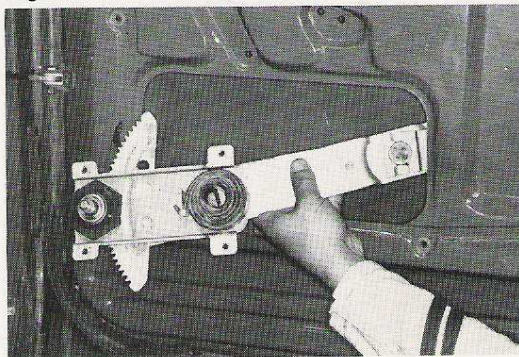Fig. 11-88



- (2) Take out the regulator.

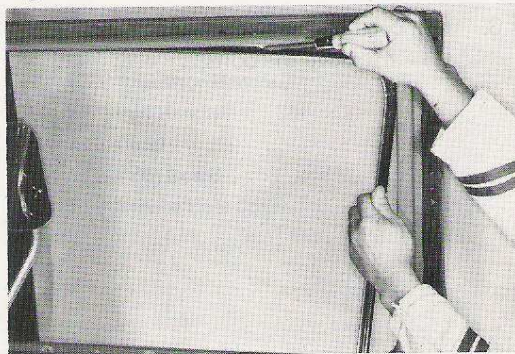Fig. 11-89



5. Remove the glass run.

Fig. 11-90

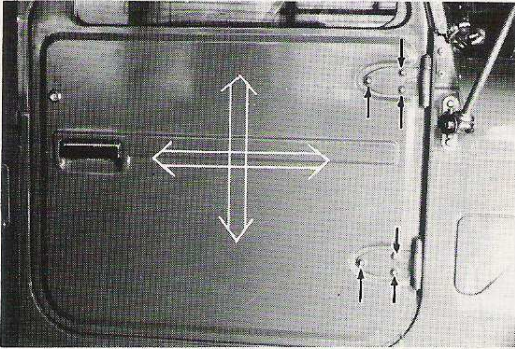


Fig. 11-91


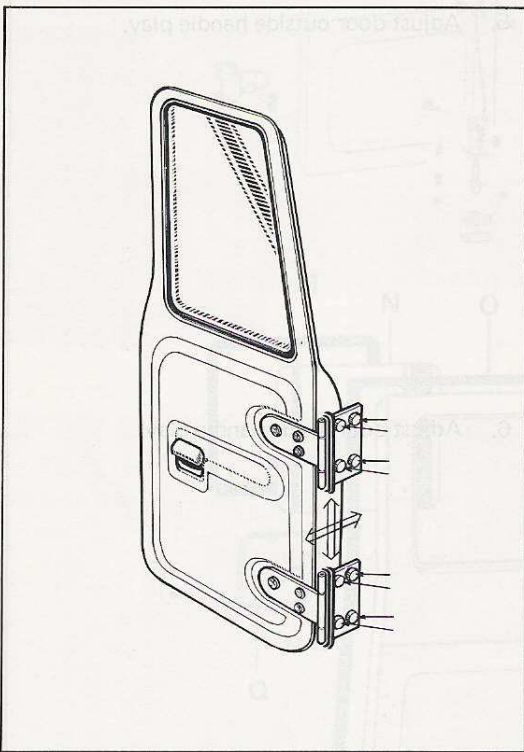


Fig. 11-92

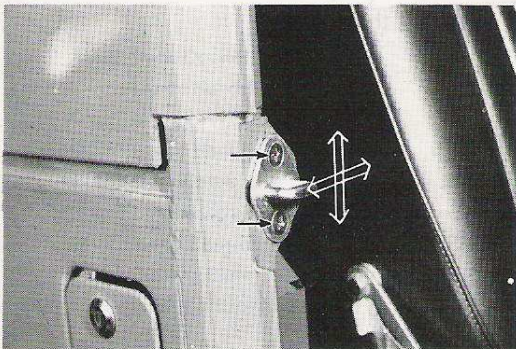

ADJUSTMENT

Door

1. Adjust the door in front-rear and vertical directions by loosening the door hinges at the door.
2. Adjust the surface difference with fender and in vertical direction by loosening the door hinges at the body.
3. Correct improper door closure by adjusting the door lock striker.

Fig. 11-93

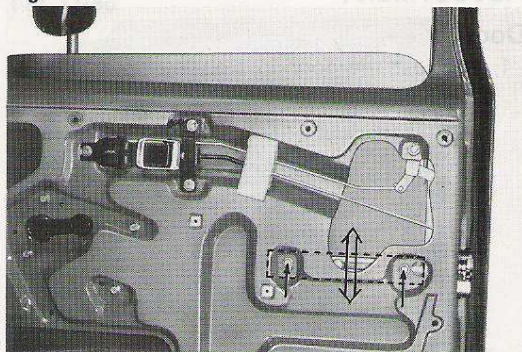


Fig. 11-94

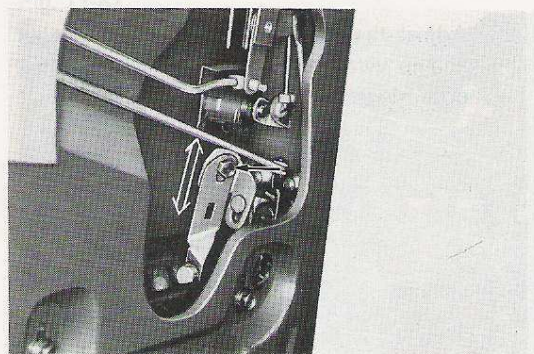


Fig. 11-95


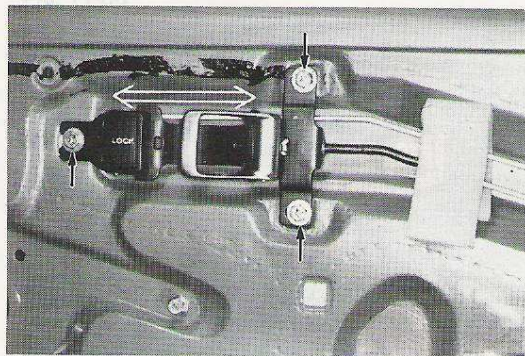


Fig. 11-96

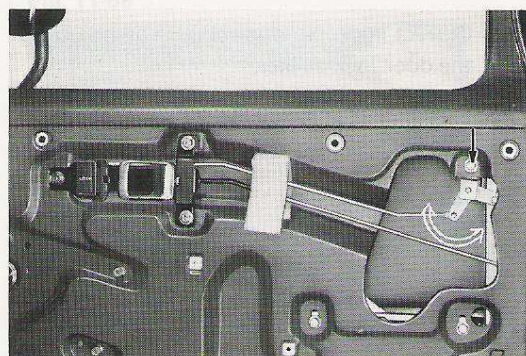

4. Adjust the window glass tilt.


5. Adjust door outside handle play.

6. Adjust door inside handle play.

7. Adjust the door lock.

BACK DOOR

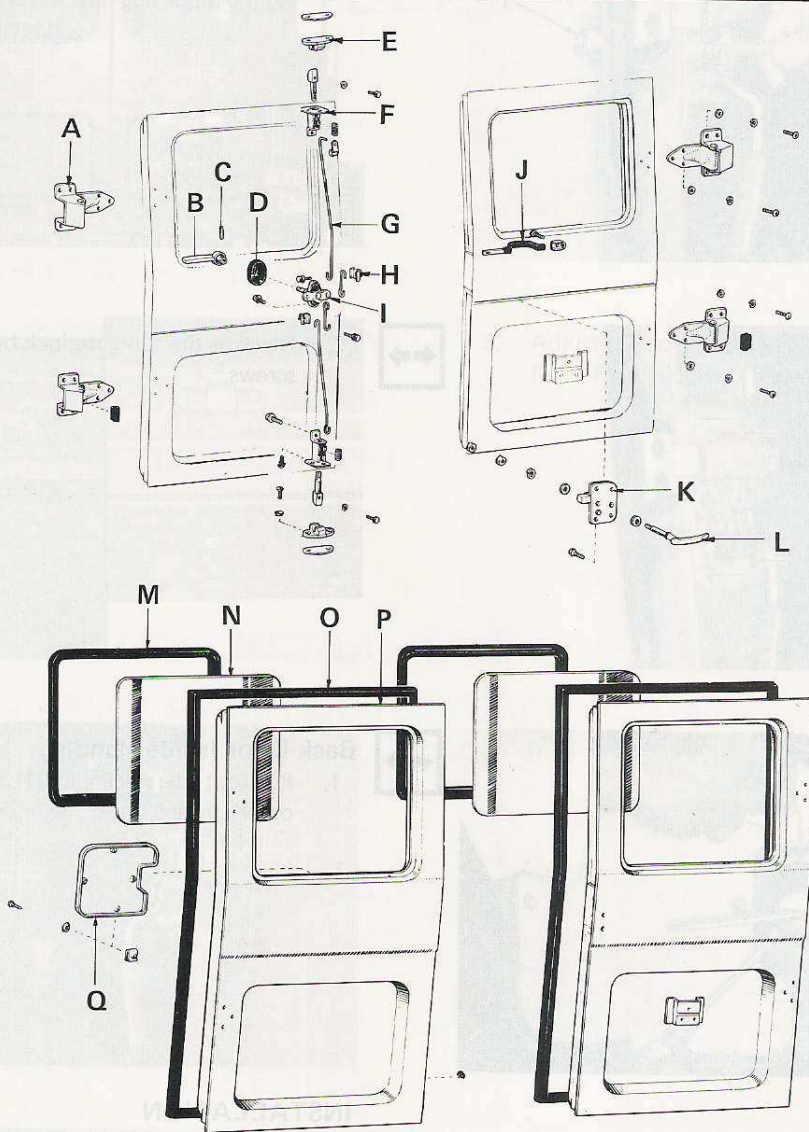Fig. 11-97



- A Back Door Hinge
- B Inside Handle
- C Lock Pin
- D Inside Handle Seat
- E Lock Catch
- F Lock Catch Base
- G Lock Control Rod
- H Control Plate
- I Lock Control Assy

- J Safety Grip
- K Tail Gate Lock Assy
- L Tail Gate Lock Handle
- M Weatherstrip
- N Glass
- O Weatherstrip
- P Panel
- Q Cover

Fig. 11-98

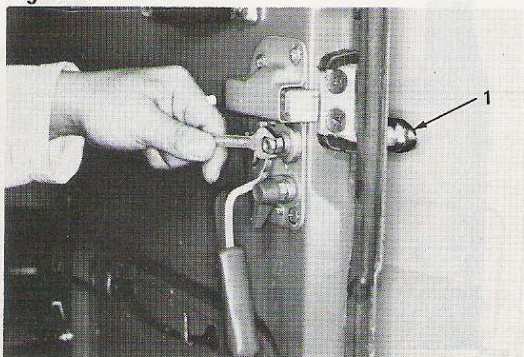


Fig. 11-99

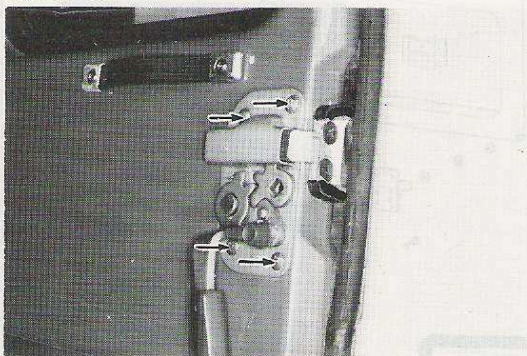


Fig. 11-100


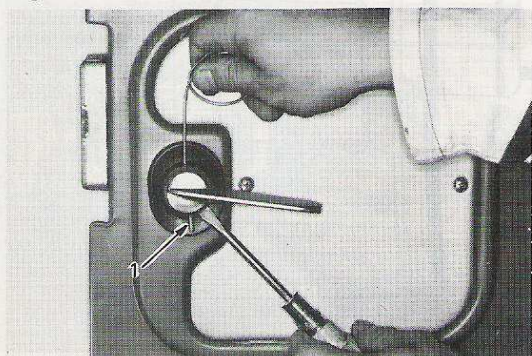


Fig. 11-101

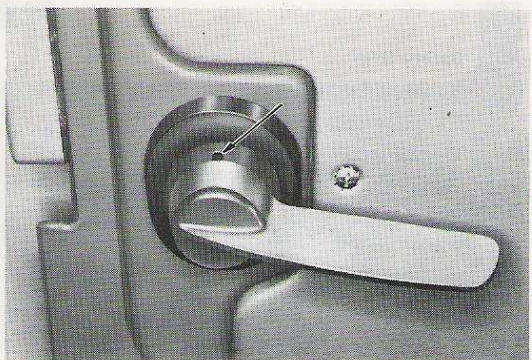

REMOVAL



Tail Gate Lock and Handle

1. Remove the tail gate handle (1) by unscrewing the mounting nuts.



2. Remove the tail gate lock by removing the screws.



Back Door Inside Handle

1. Pull out the lock pin (1) with a wire or other means, and take off the handle.

INSTALLATION




Perform the removal in reverse order.

— Note —

Install the back door inside handle with the slot in handle seat (shown by arrow) positioned upward.

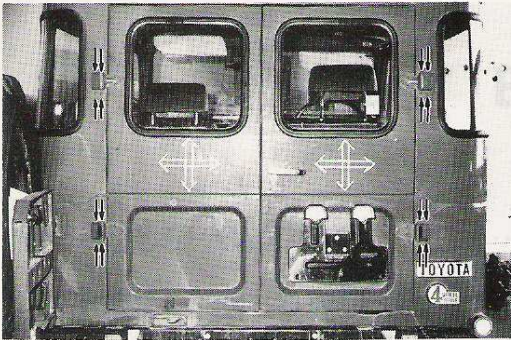
Fig. 11-102



ADJUSTMENT


1. Adjust the door alignment by shifting the positions of the door hinges at the body.

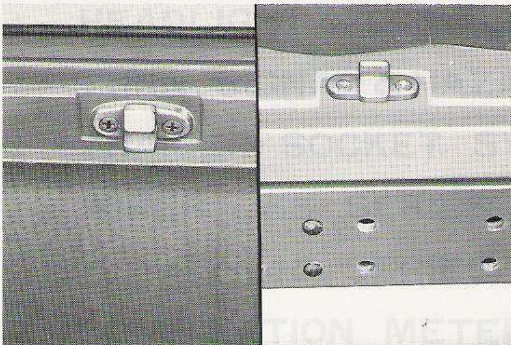Fig. 11-103




2. Adjust the door closing action.
 - (1) Right side door.

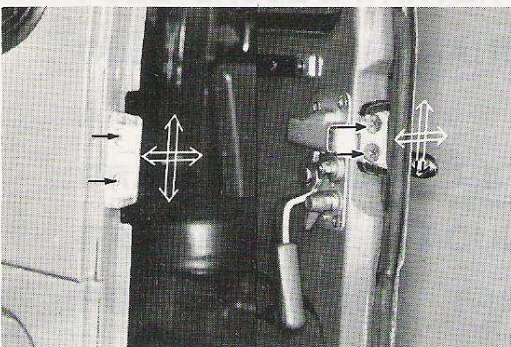Fig. 11-104



- (2) Left side door.

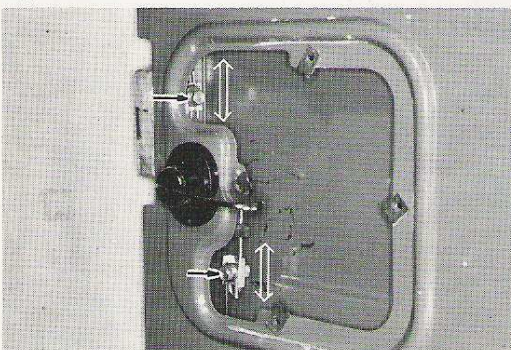Fig. 11-105




3. Adjust the inside handle play.

BODY ELECTRICAL

	page
FUSE BLOCK	12- 2
IGNITION SWITCH	12- 3
STARTER SWITCH	12- 5
HEADLIGHT & TAIL LIGHT	12- 6
TURN SIGNAL & HAZARD LIGHT	12- 8
TRAILER SOCKET SWITCH	12-13
WIPER 55 SERIES	12-14
40 SERIES	12-18
COMBINATION METER	12-21
FUEL GAUGE & WATER TEMPERATURE GAUGE	12-26
OIL PRESSURE GAUGE	12-29
AMMETER	12-30
BRAKE WARNING LIGHT	12-31
FRONT DRIVE VACUUM CONTROL	12-32
POWER WINDOW TAIL GATE	12-38
HEATER 55 SERIES	12-44
40 SERIES	12-51

FUSE BLOCK

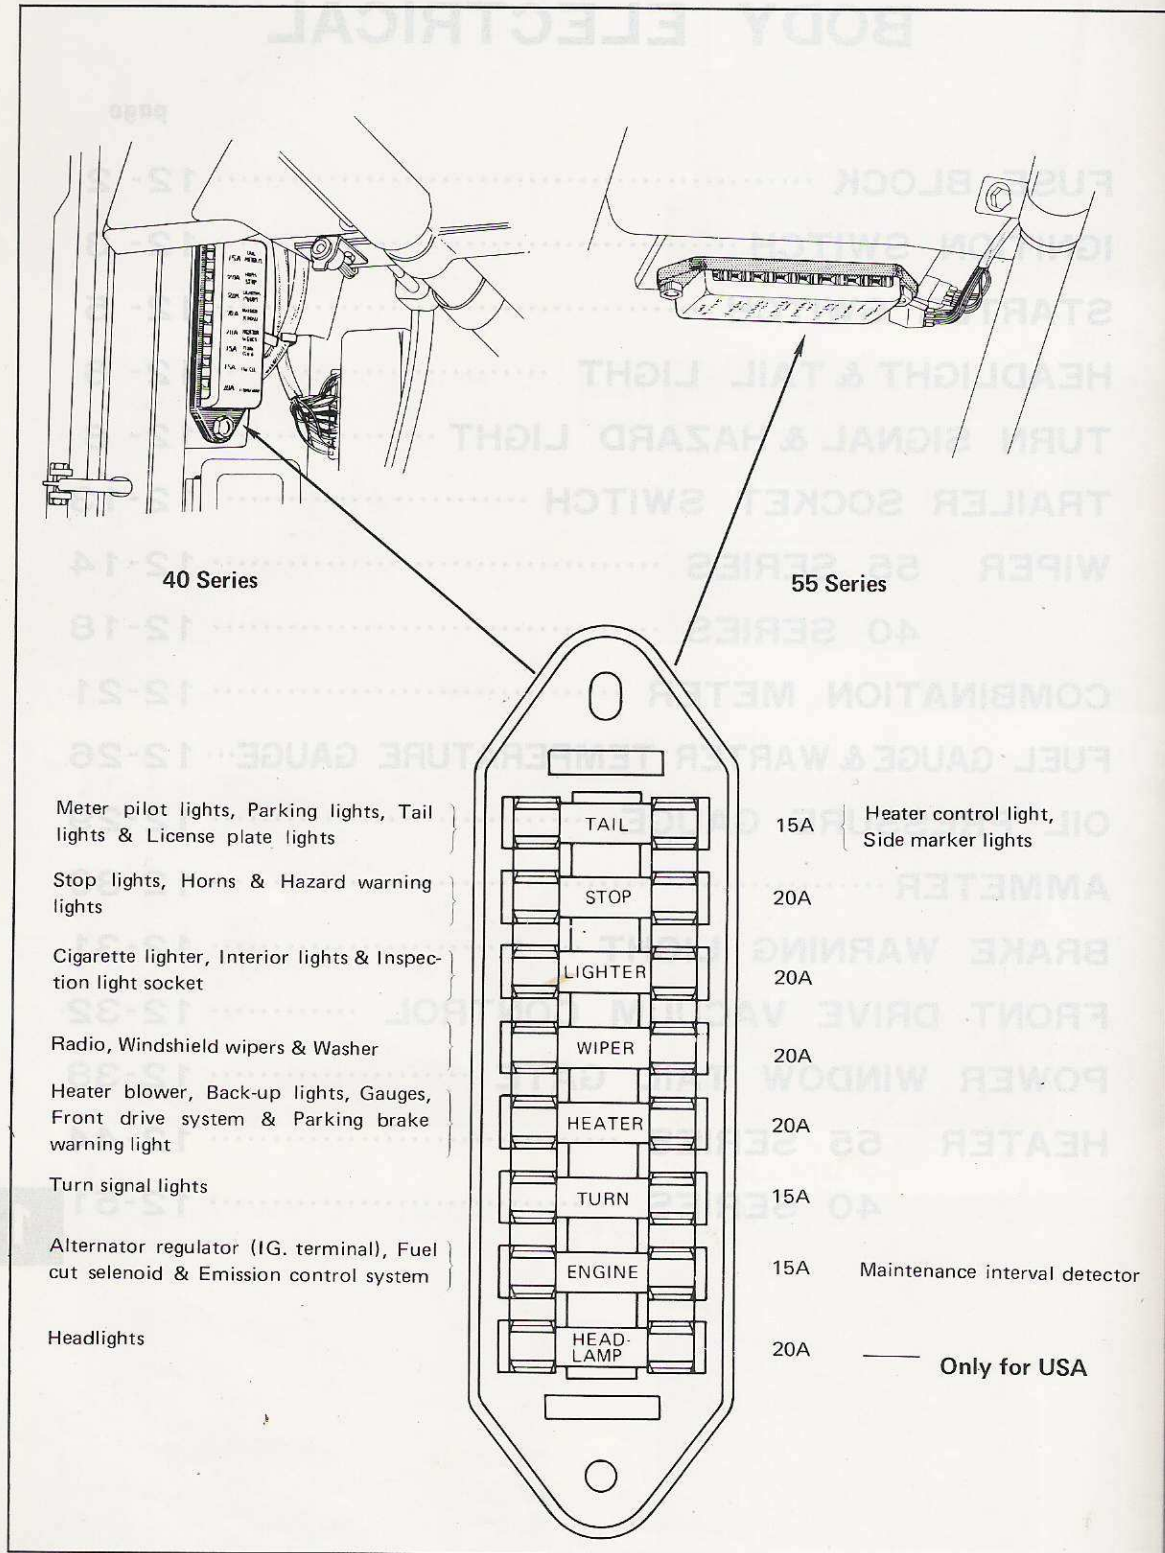Fig. 12-1



IGNITION SWITCH

REMOVAL

Remove the parts in the order numbered below.

Fig. 12-2



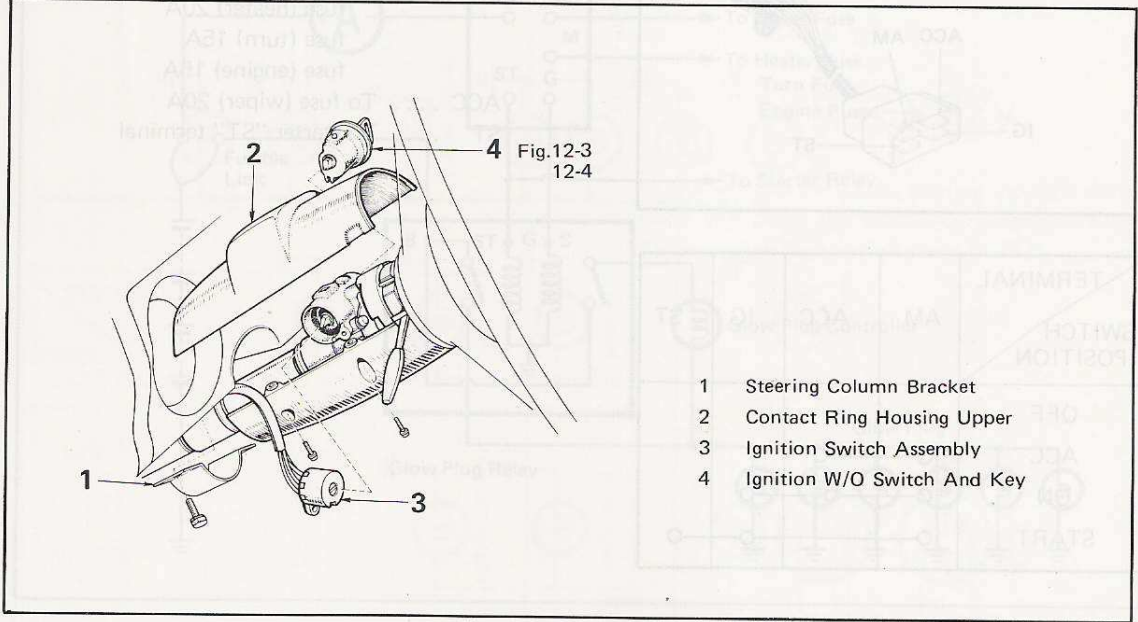


Fig. 12-3

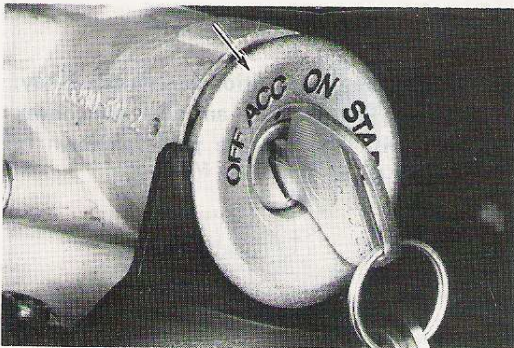


Removing ignition w/o switch and key.
(1) Turn the ignition key to "ACC".

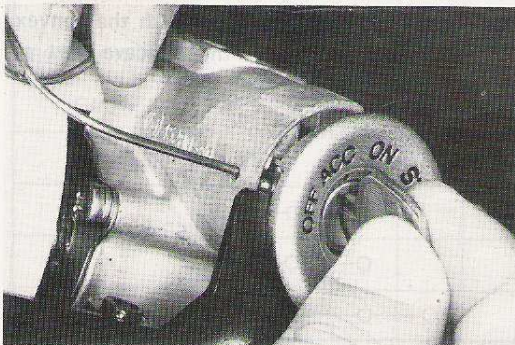Fig. 12-4



(2) Hold down the pin with a wire and pull out the switch.

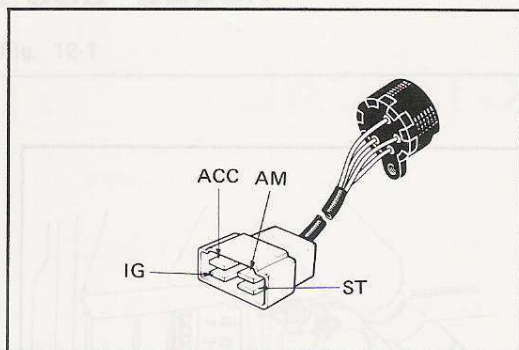Fig. 12-5



TERMINAL SWITCH POSITION	AM	ACC	IG	ST
OFF				
ACC	○	○		
ON	○	○	○	
START	○		○	○

Fig. 12-6


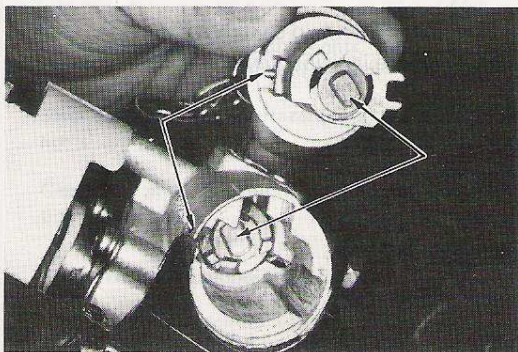


Fig. 12-7

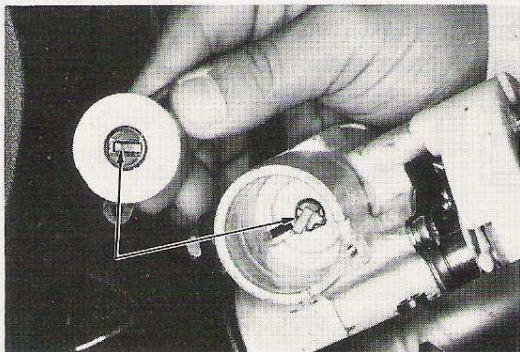

INSPECTION



Terminal connections

- AM To battery fusible link (power source)
- IG To ignition coil
 fuse (heater) 20A
 fuse (turn) 15A
 fuse (engine) 15A
- ACC To fuse (wiper) 20A
- ST To starter "ST" terminal

INSTALLATION



Perform the removal in reverse order.

— Note —

1. In installing the ignition w/o switch & key, turn the key to "ACC" and align the convex part with the concave part as shown in Fig. 12-6.



2. Install the ignition switch with the convex part aligned against the concave part as shown in Fig. 12-7.

STARTER SWITCH

Fig. 12-8


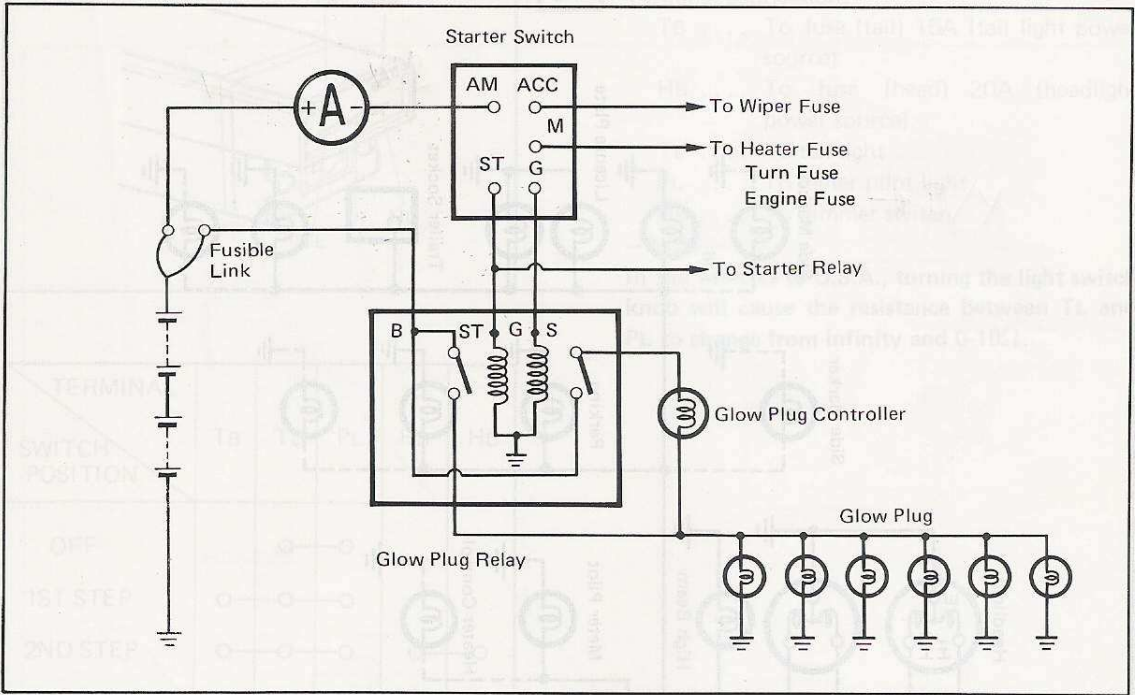


Fig. 12-9

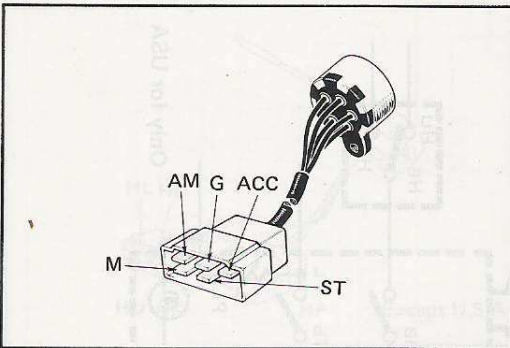

INSPECTION



Terminal connections

- AM To ammeter (—) terminal (Power source)
- M To fuse (heater) 20A
fuse (turn) 15A
fuse (engine) 15A
- ACC To fuse (wiper) 20A
- ST To starter relay ST terminal
glow plug relay "ST" terminal
- G To glow plug relay "G" terminal

TERMINAL SWITCH POSITION	AM	ACC	M	ST	G
GLOW	○	○	○	○	○
LOCK					
ACC	○	○			
ON	○	○	○		
ST	○	○	○	○	

HEADLIGHT & TAIL LIGHT

Fig. 12-10


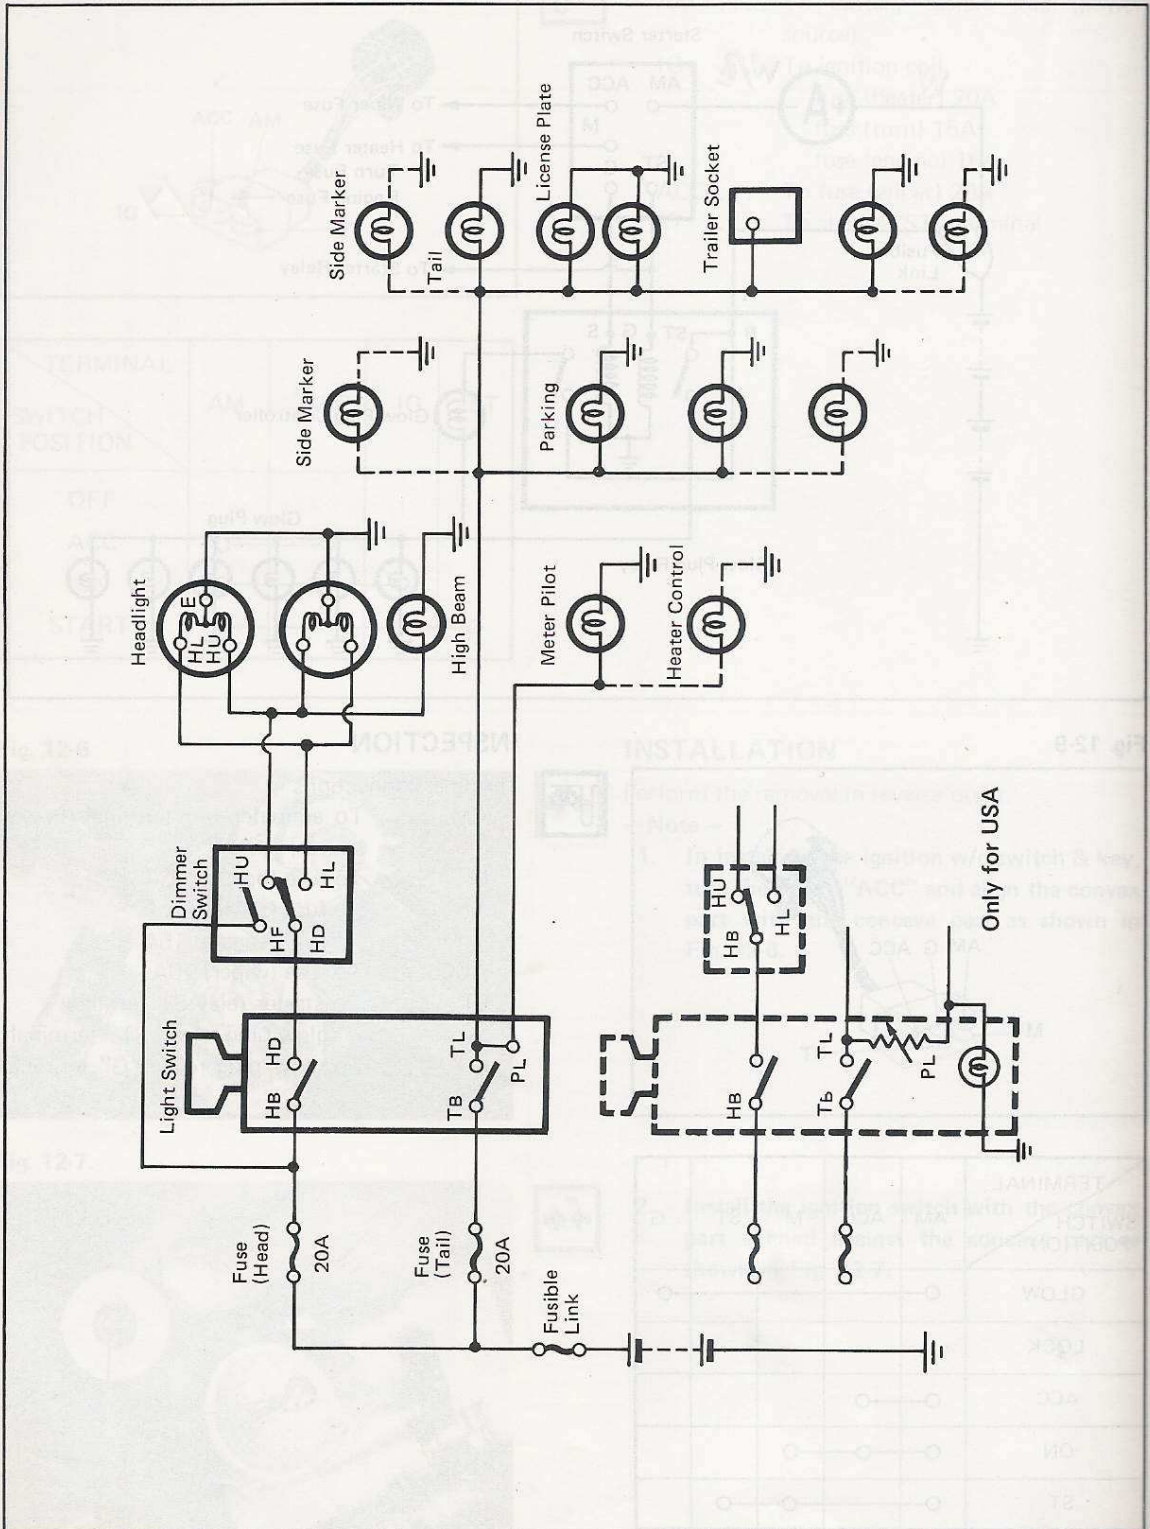


Fig. 12-11

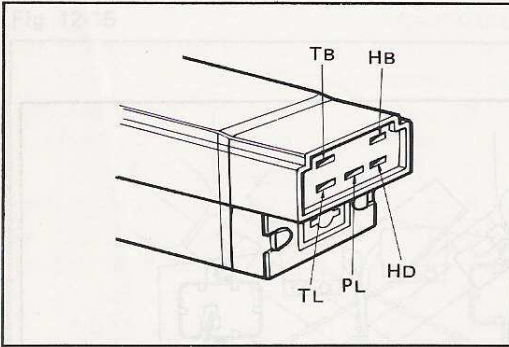

INSPECTION



Light Switch

Terminal connections


- TB To fuse (tail) 15A (tail light power source)
- HB To fuse (head) 20A (headlight power source)
- TL To tail light
- PL To meter pilot light
- HD To dimmer switch

– Note –

In the vehicles to U.S.A., turning the light switch knob will cause the resistance between TL and PL to change from infinity and 0-10Ω.

TERMINAL SWITCH POSITION	TB	TL	PL	HB	HD
OFF		○—○			
1ST STEP	○—○	○—○	○—○		
2ND STEP	○—○	○—○	○—○	○—○	

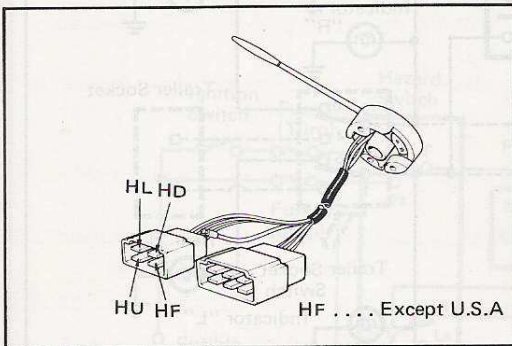Fig. 12-12



Dimmer Switch

Terminal connections


- HD To light switch (Power source)
- HL To headlight low beam
- HU To headlight high beam
- HF To fuse (head) 20A (headlight flasher)

– Note –

Fig. 12-12 shows terminals for vehicles other than BJ series.

Fig. 12-13 shows terminals for BJ series only.

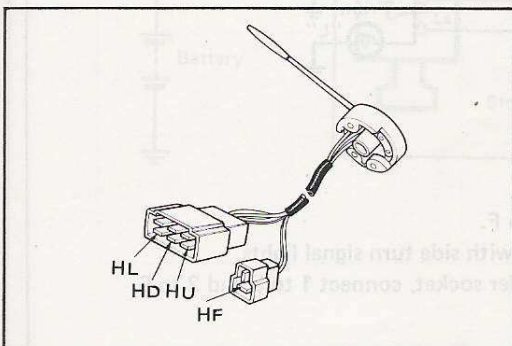Fig. 12-13




TERMINAL SWITCH POSITION	HD	HL	HU	HF
LOW BEAM	○—○	○—○		
HIGH BEAM	○—○		○—○	
HEADLIGHT FLASHER			○—○	○—○

TURN SIGNAL & HAZARD LIGHT

FJ55 vehicles except those with U.S.A. specs.

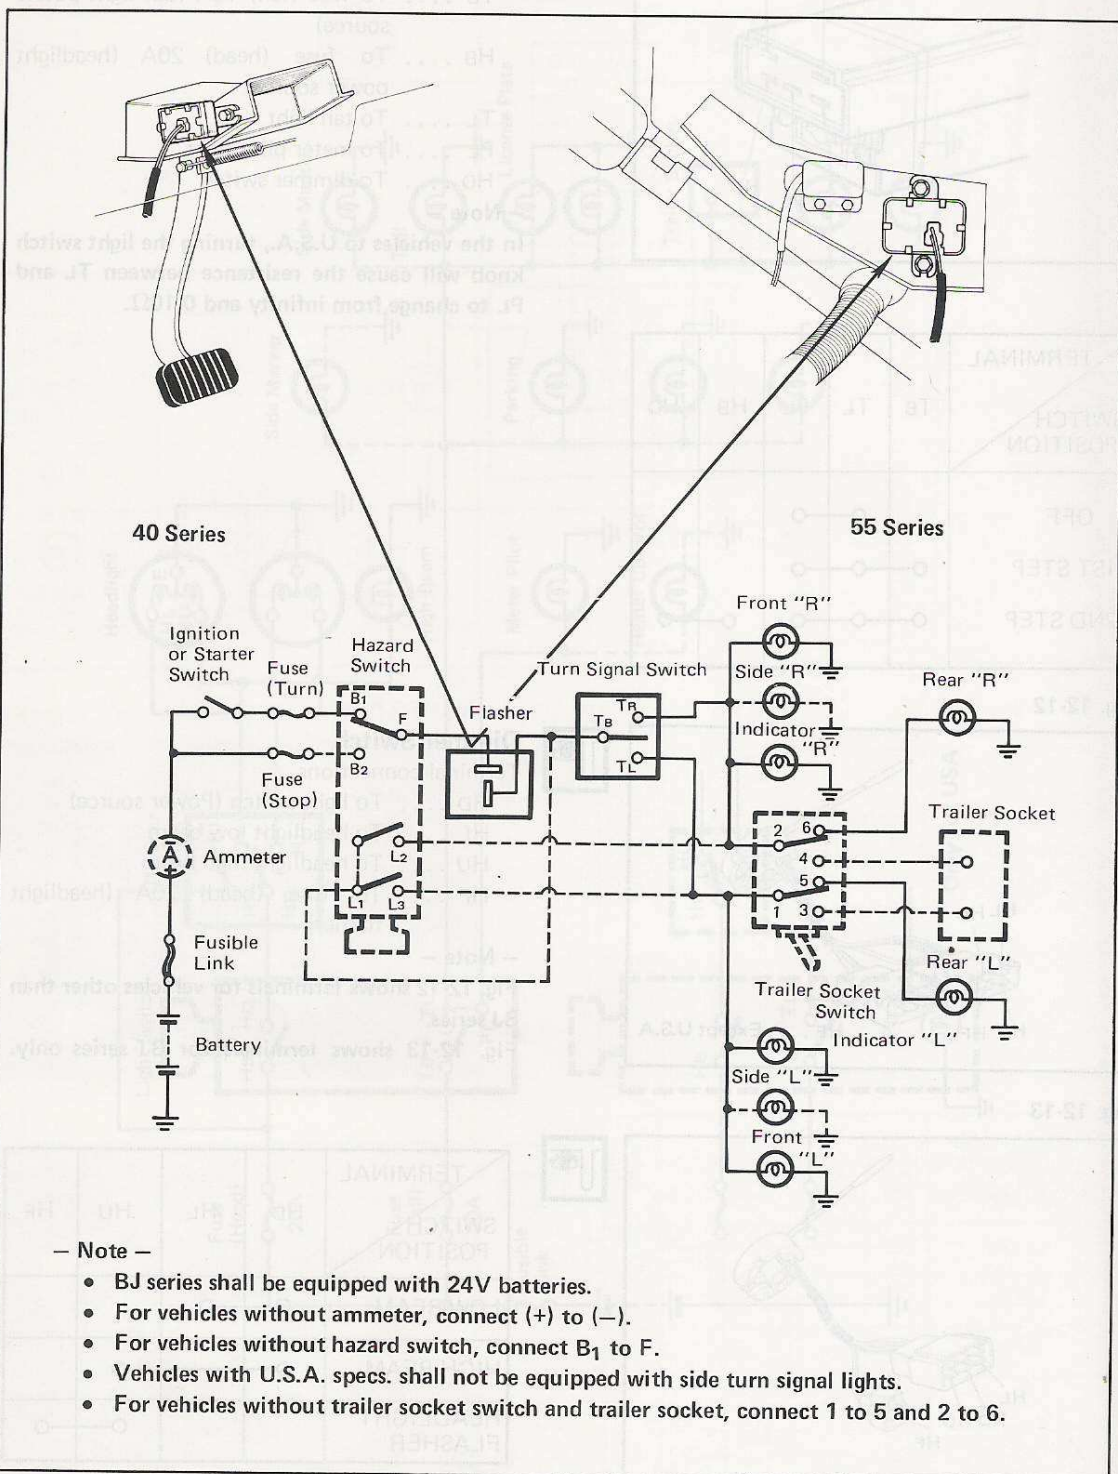Fig. 12-14



FJ55 vehicles with U.S.A. specs.

Fig. 12-15



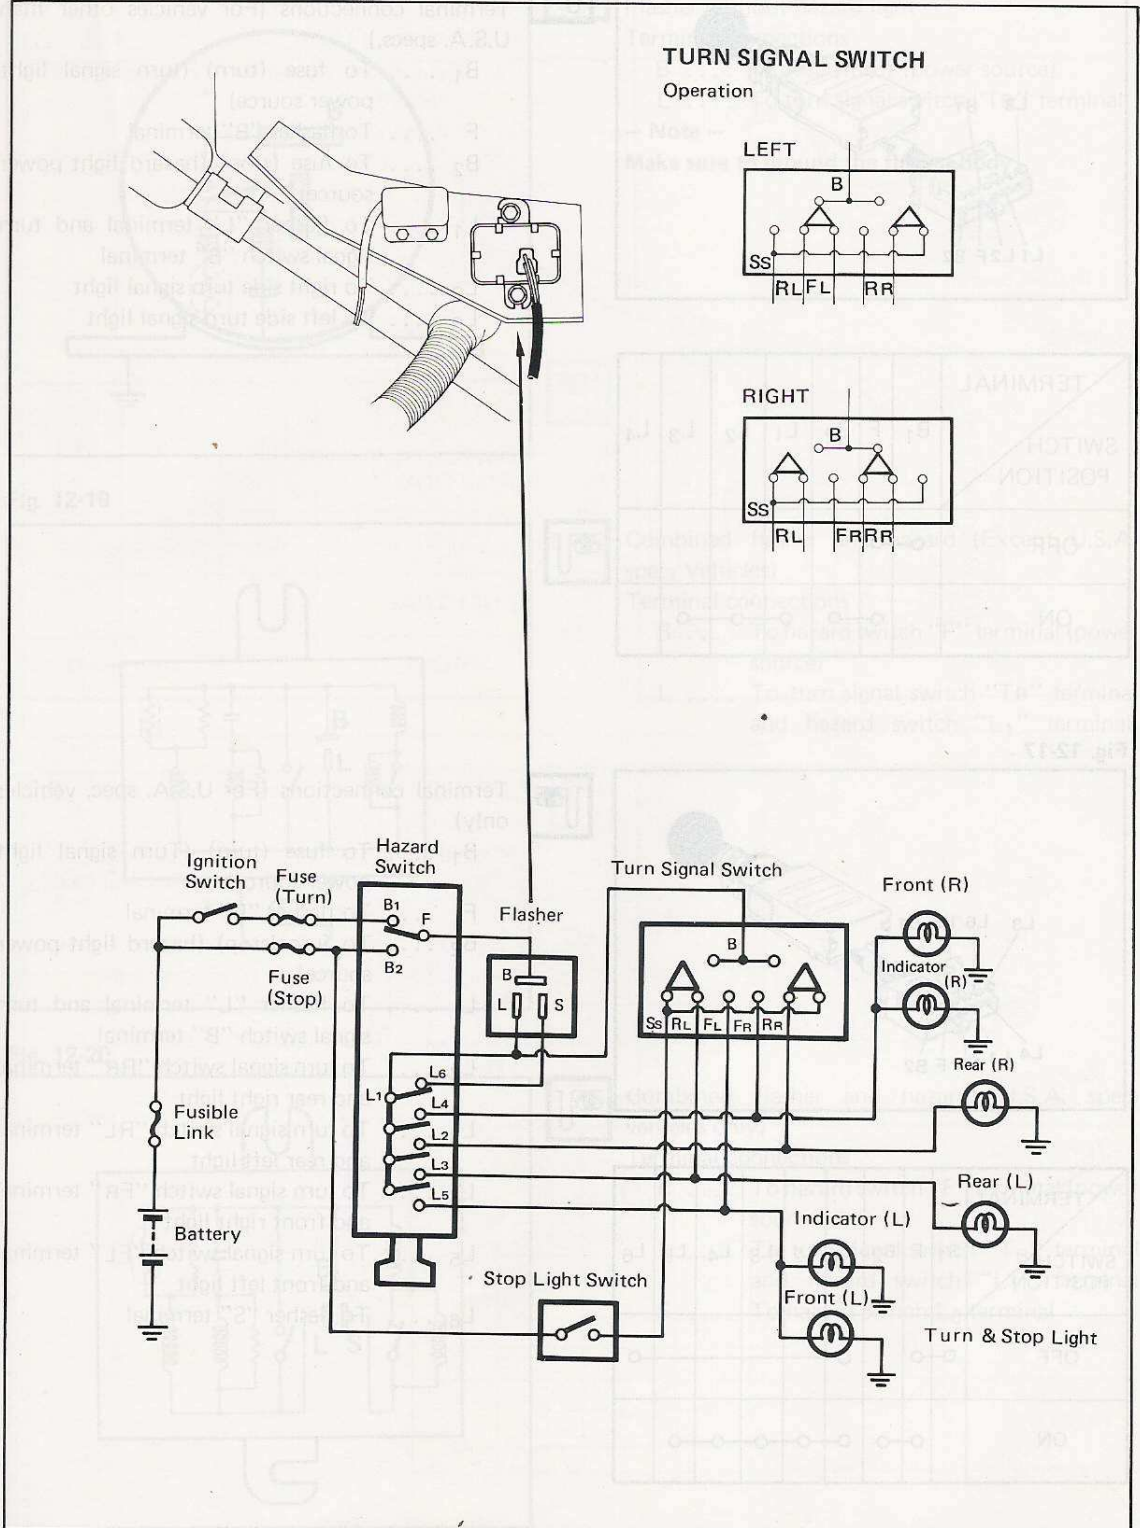


Fig. 12-16

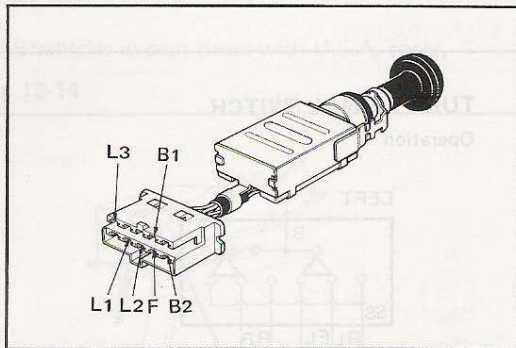

TERMINAL SWITCH POSITION	B ₁	F	B ₂	L ₁	L ₂	L ₃	L ₄
OFF	○—○						
ON		○—○		○—○—○			

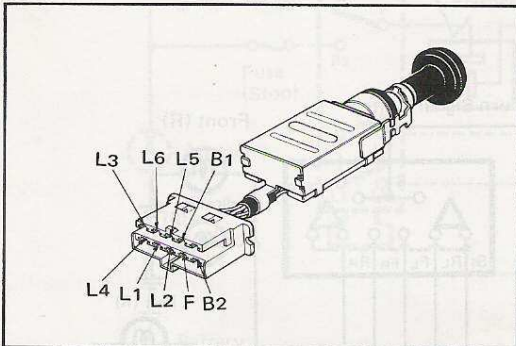Fig. 12-17



TERMINAL SWITCH POSITION	B ₁	F	B ₂	L ₁	L ₂	L ₃	L ₄	L ₅	L ₆
OFF	○—○			○—○—○—○—○					
ON		○—○		○—○—○—○—○					

HAZARD SWITCH



Inspection

Terminal connections (For vehicles other than U.S.A. specs.)


- B₁ To fuse (turn) (turn signal light power source)
- F To flasher "B" terminal
- B₂ To fuse (stop) (hazard light power source)
- L₁ To flasher "L" terminal and turn signal switch "B" terminal
- L₂ To right side turn signal light
- L₃ To left side turn signal light



Terminal connections (For U.S.A. spec. vehicles only)

- B₁ To fuse (turn) (Turn signal light power source)
- F To flasher "B" terminal
- B₂ To fuse (stop) (hazard light power source)
- L₁ To flasher "L" terminal and turn signal switch "B" terminal
- L₂ To turn signal switch "RR" terminal and rear right light
- L₃ To turn signal switch "RL" terminal and rear left light
- L₄ To turn signal switch "FR" terminal and front right light
- L₅ To turn signal switch "FL" terminal and front left light
- L₆ To flasher "S" terminal

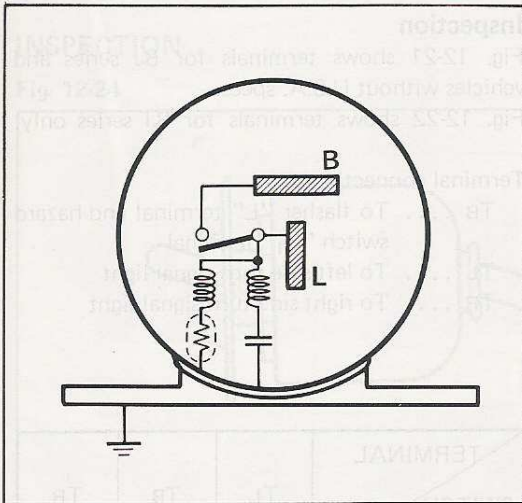Fig. 12-18



FLASHER



Inspection

Flasher without hazard light

Terminal connections


B To fuse (turn) (power source)

L To turn signal switch "TB" terminal

— Note —

Make sure to ground the flasher body.

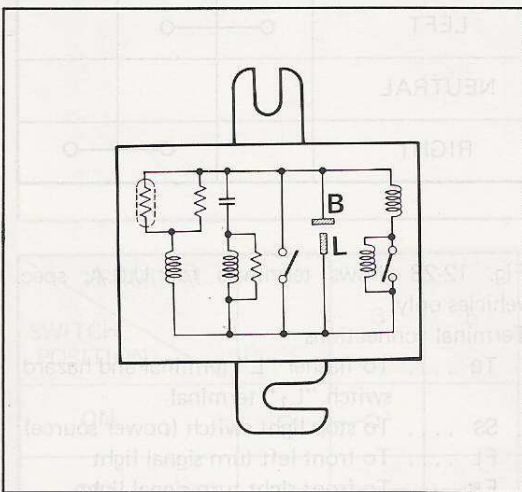Fig. 12-19




Combined flasher and hazard (Except U.S.A. spec. Vehicles)

Terminal connections

B To hazard switch "F" terminal (power source)

L To turn signal switch "TB" terminal and hazard switch "L₁" terminal.

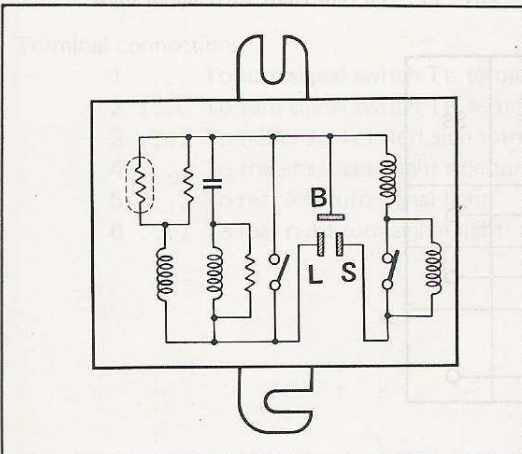Fig. 12-20



Combined flasher and hazard (U.S.A. spec. vehicles only)

Terminal connections

B To hazard switch "F" terminal (power source)

L To turn signal switch "TB" terminal and hazard switch "L₁" terminal

S To hazard switch L₆ terminal

Fig. 12-21

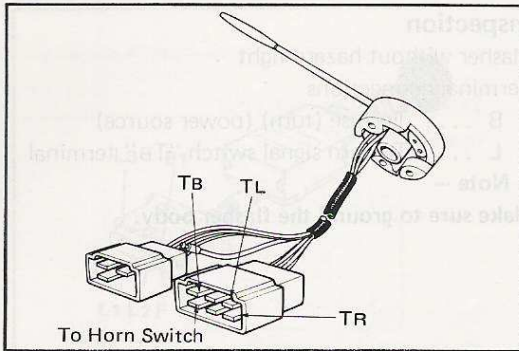


Fig. 12-22


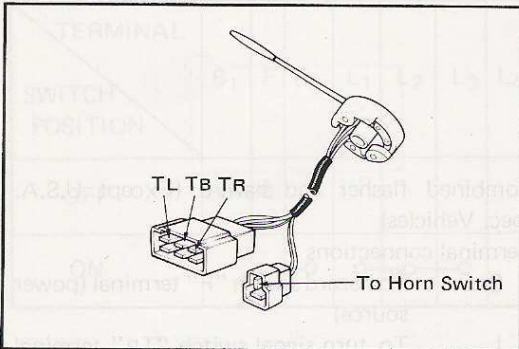


Fig. 12-23

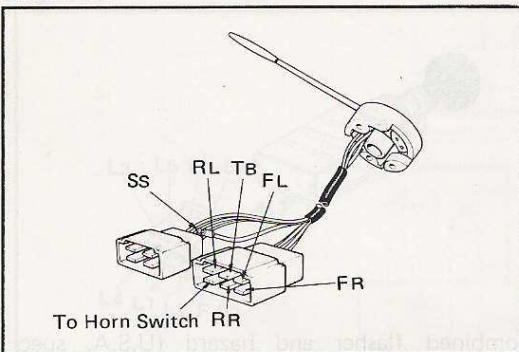

TURN SIGNAL SWITCH



Inspection

Fig. 12-21 shows terminals for BJ series and vehicles without U.S.A. specs.

Fig. 12-22 shows terminals for BJ series only.

Terminal connections

TB To flasher "L" terminal and hazard switch "L₁" terminal

TL To left side turn signal light

TR To right side turn signal light



TERMINAL SWITCH POSITION	TL	TB	TR
LEFT	○ — ○		
NEUTRAL			
RIGHT		○ — ○	



Fig. 12-23 shows terminals for U.S.A. spec. vehicles only.

Terminal connections

TB To flasher "L" terminal and hazard switch "L₁" terminal

SS To stop light switch (power source)

FL To front left turn signal light

FR To front right turn signal light

RL To rear left turn signal light


RR To rear right turn signal light

TERMINAL SWITCH POSITION	FL	RL	B	FR	RR	SS
LEFT	○ — ○ — ○				○ — ○	
NEUTRAL		○ — ○			○ — ○	
RIGHT		○ — ○	○ — ○ — ○			○ — ○

TRAILER SOCKET SWITCH

INSPECTION

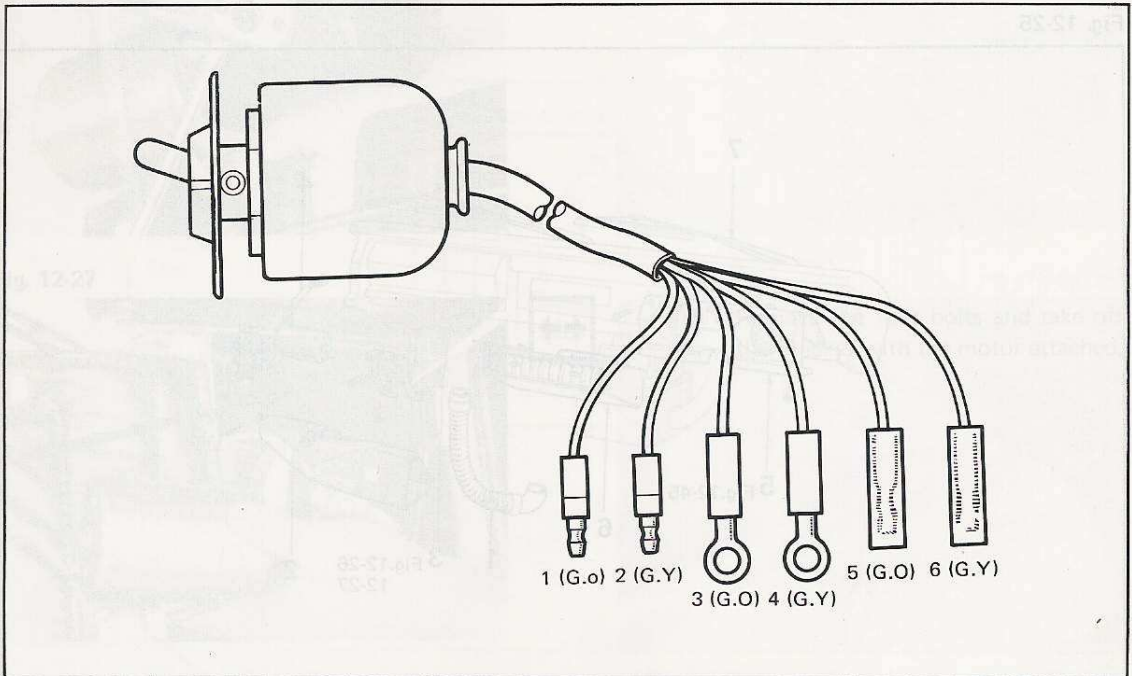Fig. 12-24



TERMINAL SWITCH POSITION	1	3	5	2	4	6
ON	○ — ○			○ — ○		
OFF	○		○	○		○

Terminal connections



- 1 To turn signal switch TL terminal
- 2 To turn signal switch TR terminal
- 3 To trailer socket (left side turn signal light)
- 4 To trailer socket (right side turn signal light)
- 5 To rear left turn signal light
- 6 To rear right turn signal light

WIPER (55 SERIES)

REMOVAL

Remove the parts in the order numbered below.

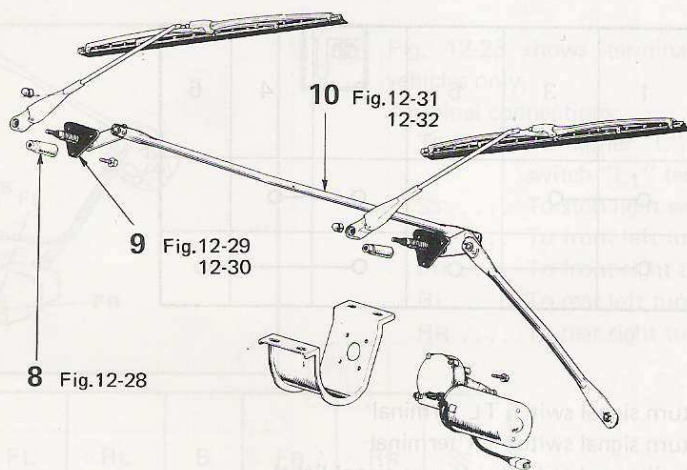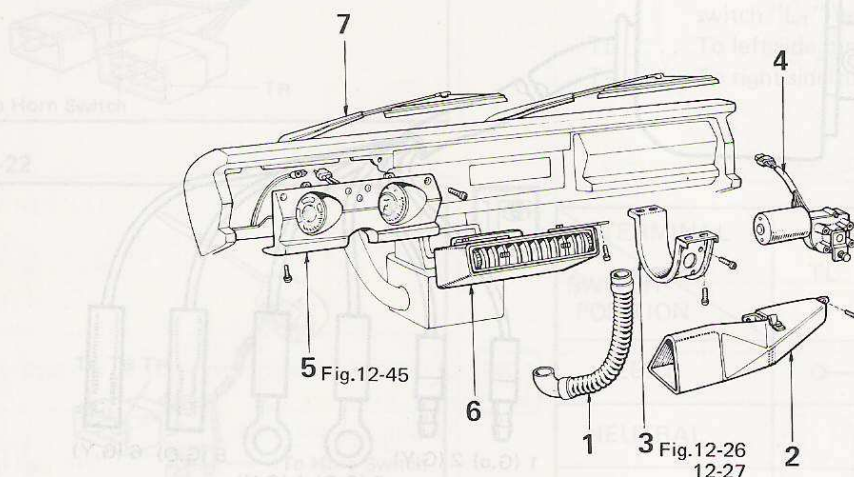
Fig. 12-25



- 1 Heater Defroster Hose
- 2 Heater Air Duct
- 3 Wiper Bracket
- 4 Wiper Motor
- 5 Combination Meter

- 6 Ventilation Louver
- 7 Wiper Blade
- 8 Wiper Pivot Cap
- 9 Wiper Pivot At Combination Meter Side
- 10 Windshield Wiper Link

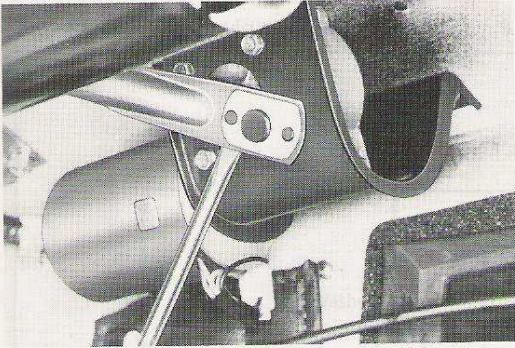Fig. 12-26



1. Wiper bracket removal


- (1) Disconnect the wiper link from the wiper motor.

Fig. 12-27




- (2) Remove the four bolts and take off the bracket with the motor attached.

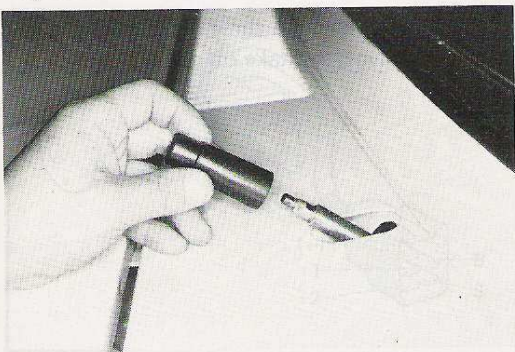Fig. 12-28



2. Remove the wiper pivot cap.

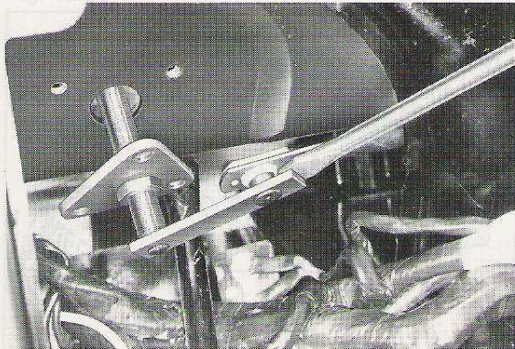
Fig. 12-29



3. Wiper pivot removal at combination meter side.


- (1) Remove the three bolts and disconnect the wiper link from the pivot.

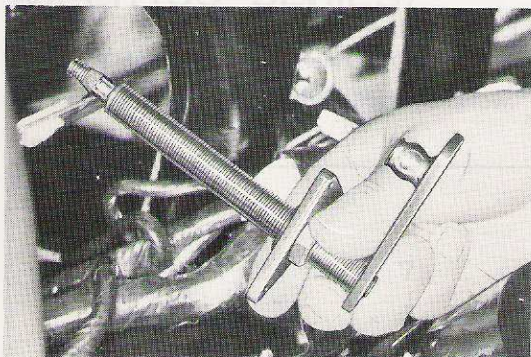Fig. 12-30



(2) Take out the pivot.

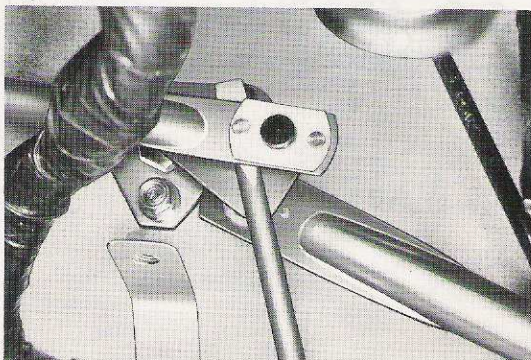
Fig. 12-31



4. Wiper link removal


(1) Disconnect the wiper link and pivot.

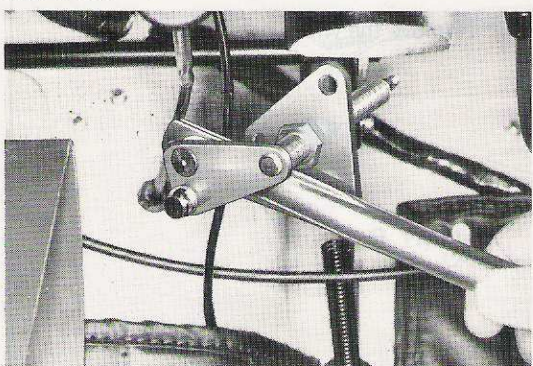Fig. 12-32



(2) Remove the three bolts attaching the pivot, and take off the wiper link.

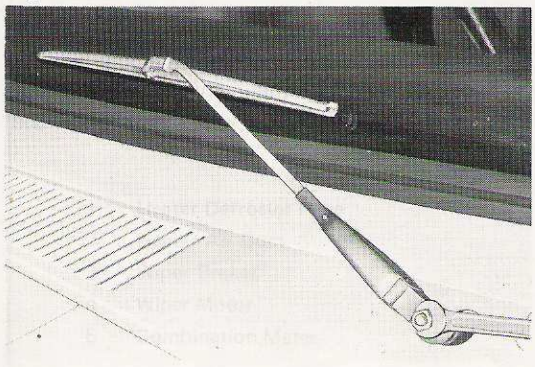Fig. 12-33



INSTALLATION



Perform the removal in reverse order.

— Note —

Install the wiper blades after installing the wiper motor and verifying the auto stop position.

INSPECTION

Fig. 12-34


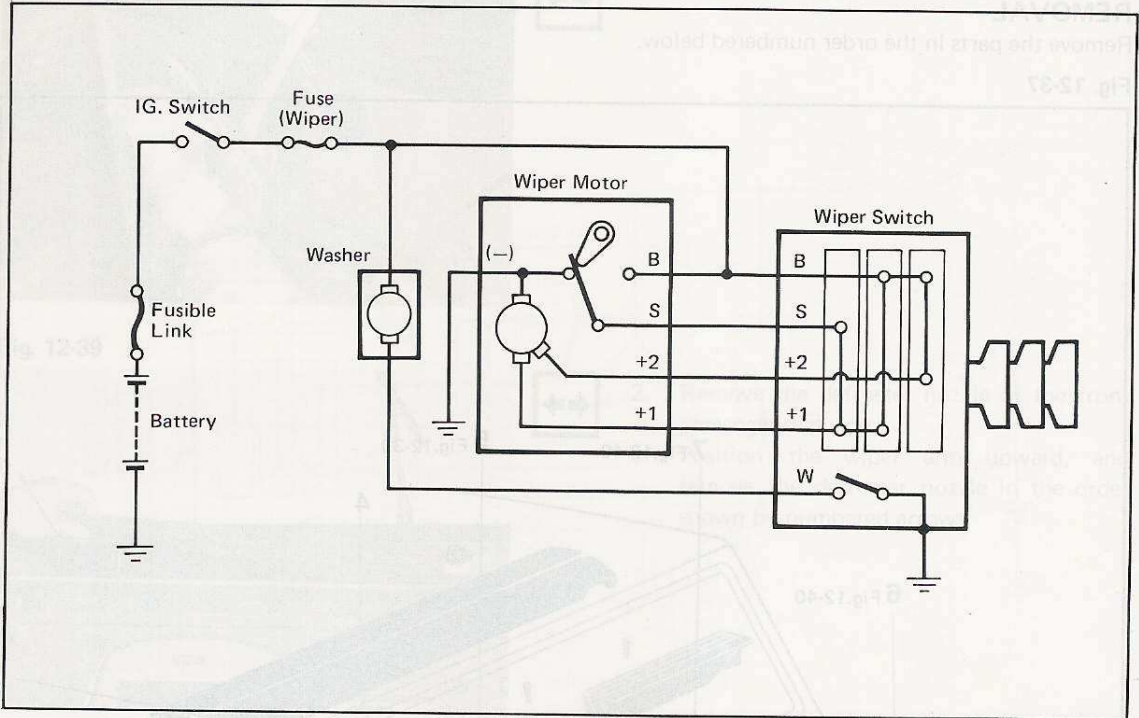


Fig. 12-35

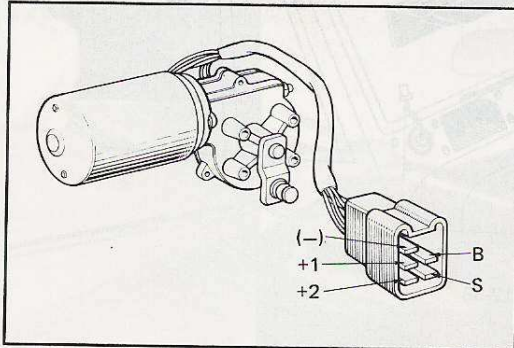


Wiper Motor

Terminal connections

- (-) Ground
- +1 To wiper switch "+1" terminal
- +2 To wiper switch "+2" terminal
- B To fuse (wiper) (auto stop power source)
- S To wiper switch "S" terminal

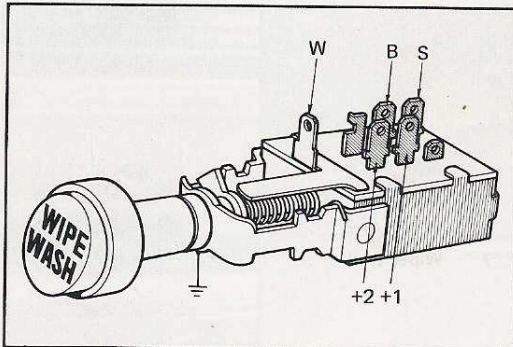Fig. 12-36



Wiper Switch

Terminal connections

- W To washer motor

TERMINAL	S	+1	+2	B	W	⏏
SWITCH POSITION	S	+1	+2	B	W	⏏
OFF)	○—○				○—○	
1ST STEP		○—○		○—○	○—○	
2ND STEP			○—○		○—○	

WIPER (40 SERIES)

REMOVAL

Remove the parts in the order numbered below.

Fig. 12-37



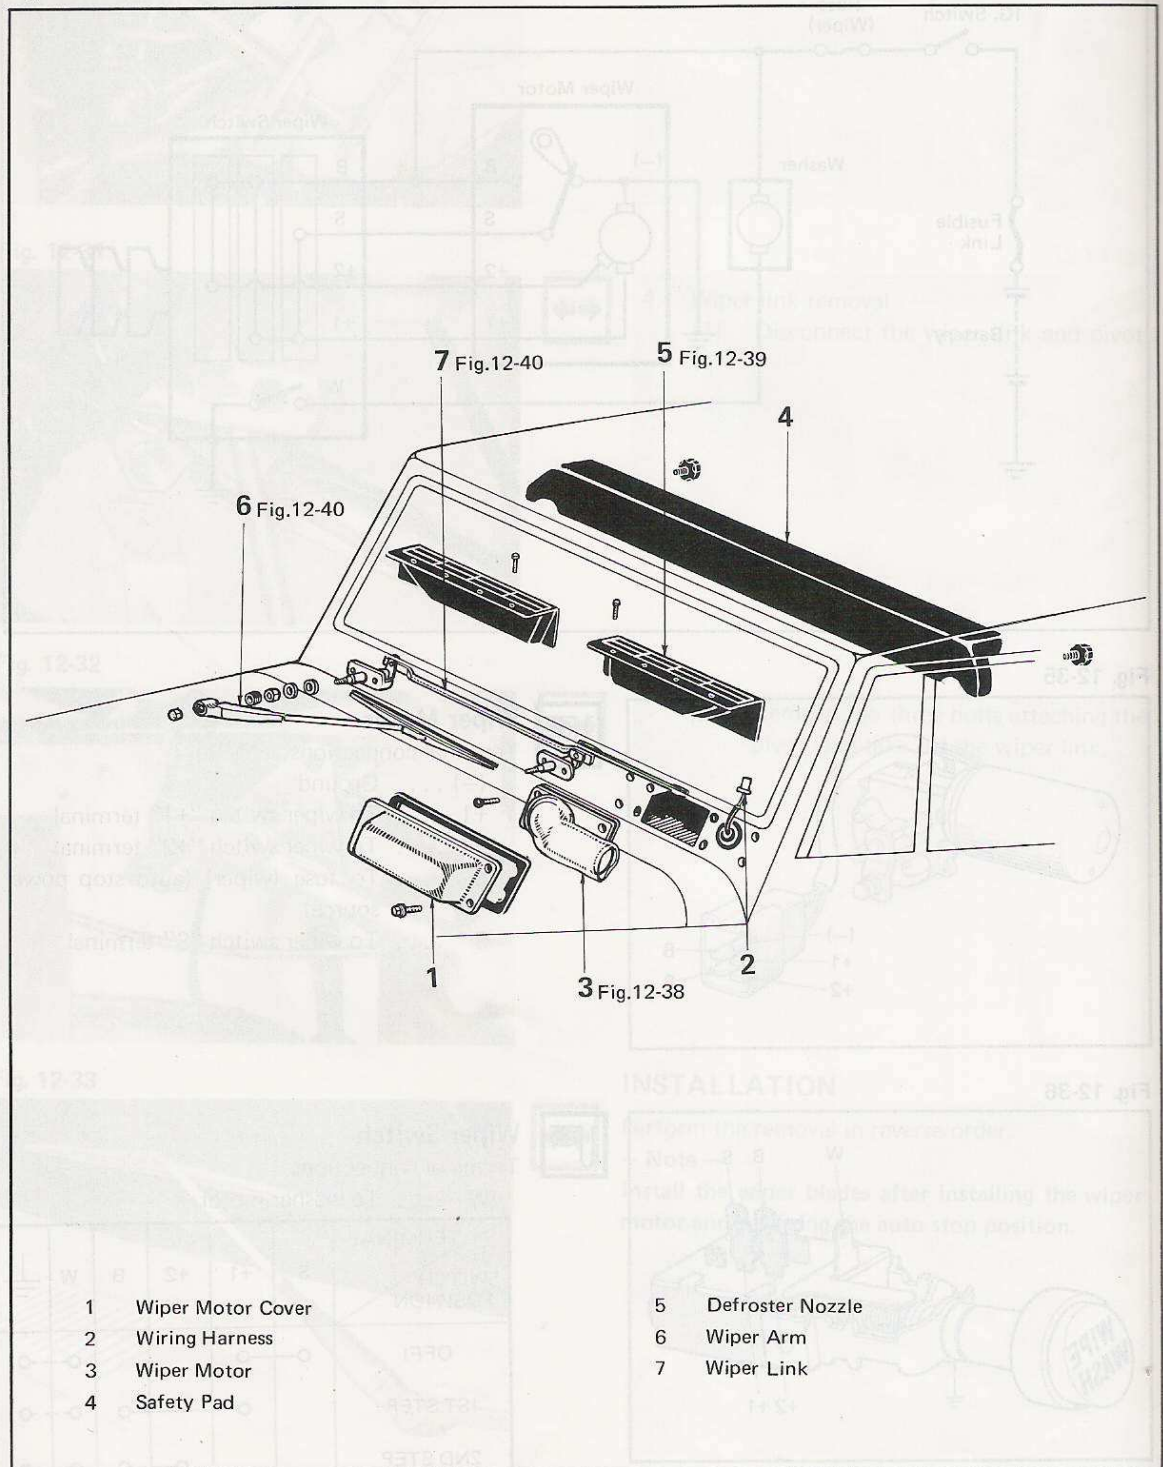


Fig. 12-38

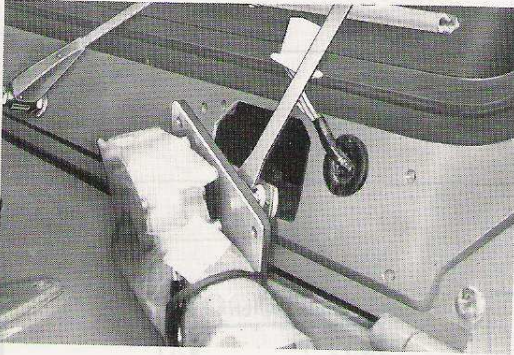


1. Disconnect the link from the wiper motor.

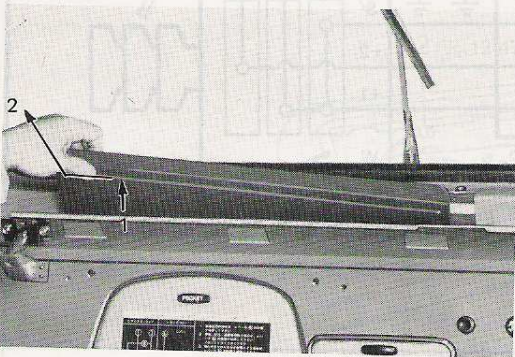Fig. 12-39




2. Remove the defroster nozzle at the front passenger seat side. Position the wiper arm upward, and remove the defroster nozzle in the order shown by numbered arrows.

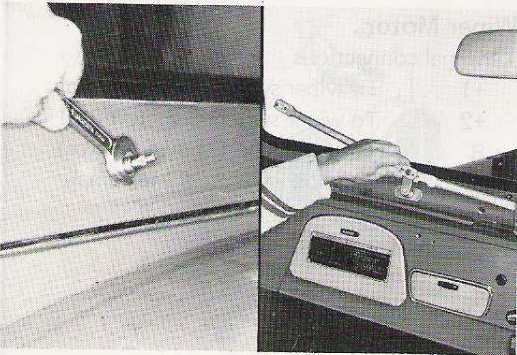Fig. 12-40



3. Remove the wiper blades and wiper pivots, and take out the wiper link.

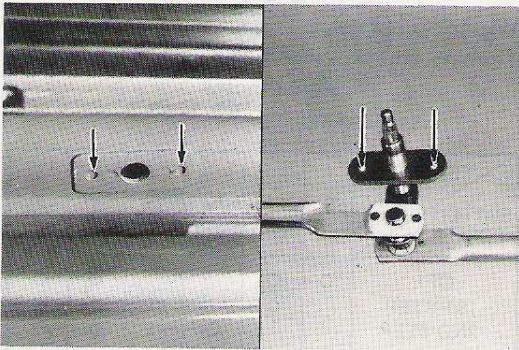Fig. 12-41



INSTALLATION

Perform the removal in reverse order.

— Note —

Install the wiper link with the link convex part fitted into the body concave part.

INSPECTION

Fig. 12-42


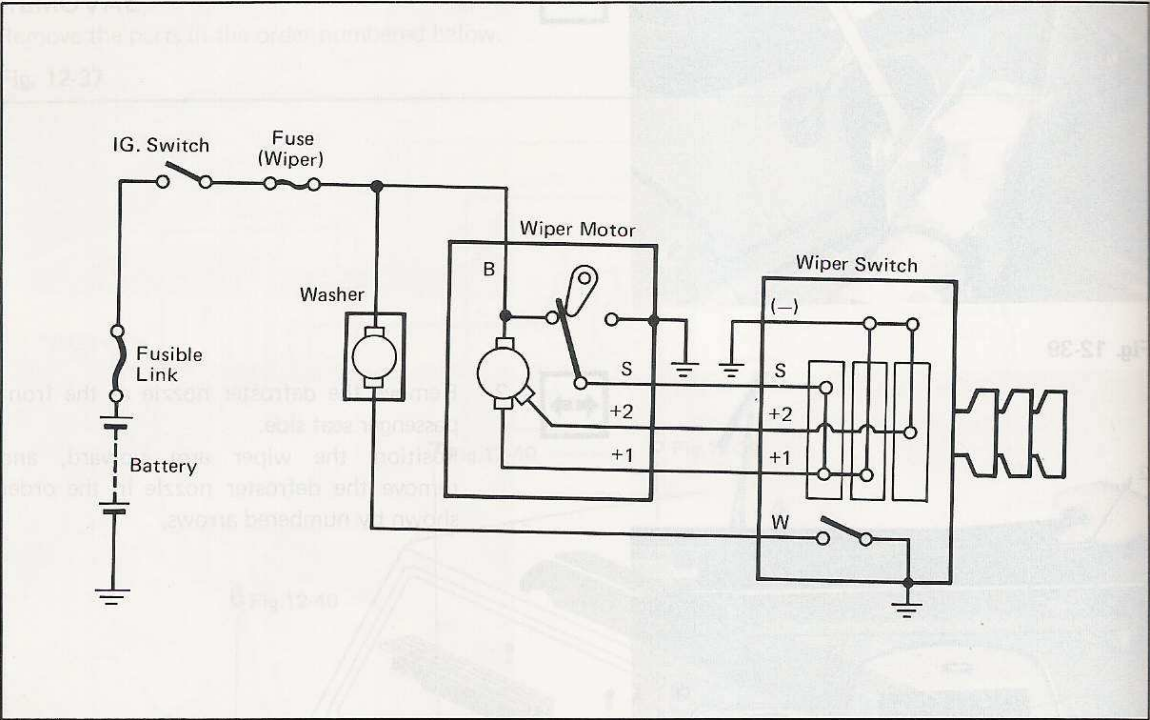


Fig. 12-43

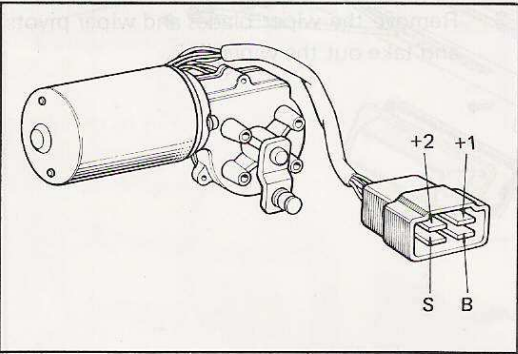


Wiper Motor

Terminal connections

- +1 To wiper switch "+1" terminal
- +2 To wiper switch "+2" terminal
- B To fuse (wiper) (power source)
- S To wiper switch "S" terminal

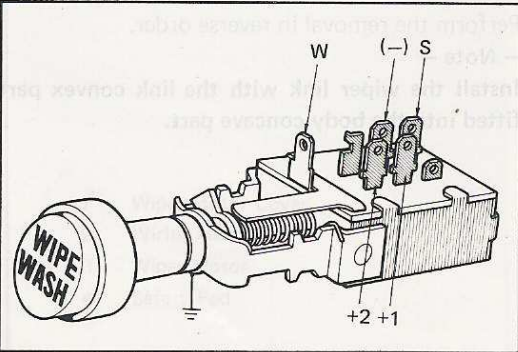Fig. 12-44



Wiper Switch

Terminal connections

- W To washer motor
- (-) Ground

TERMINAL	S	+1	+2	-	W	
SWITCH POSITION						
OFF						
1ST STEP						
2ND STEP						


COMBINATION METER

REMOVAL

55 Series


Remove the parts in the order numbered below.

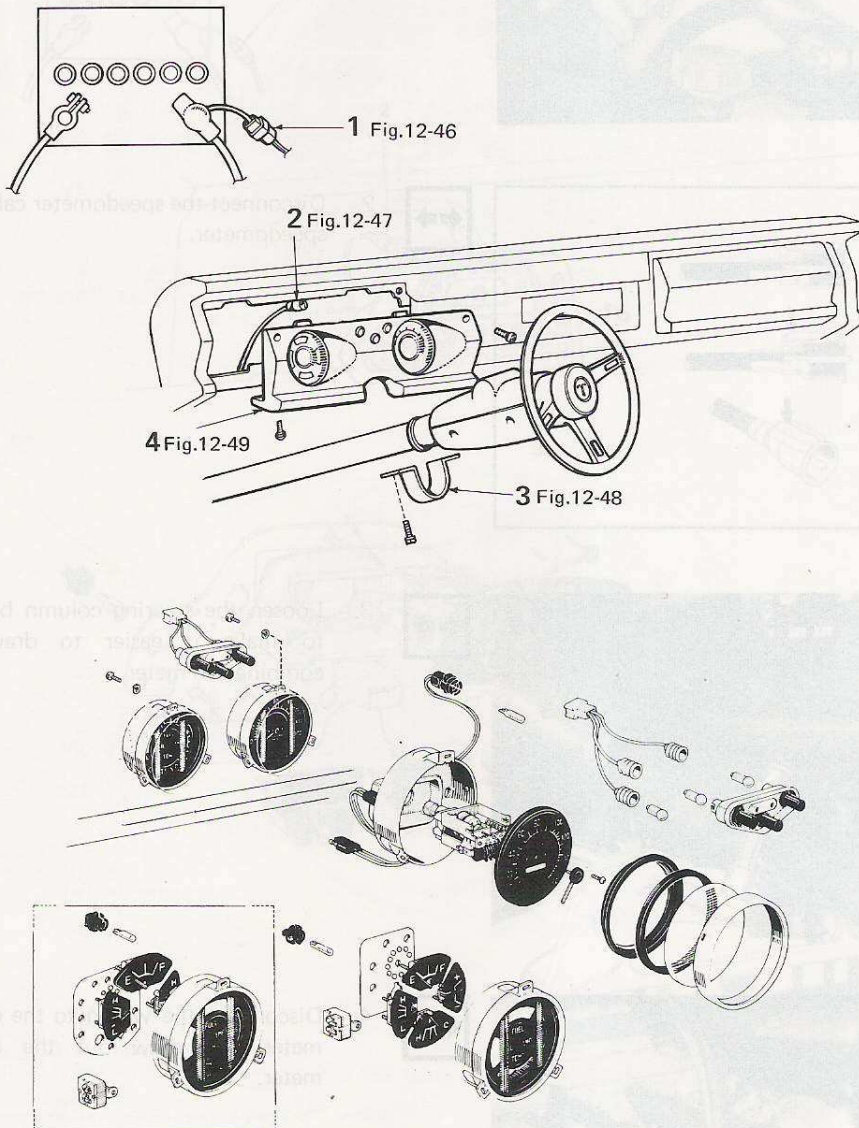Fig. 12-45




- 1 Fusible Link
- 2 Speedometer Cable
- 3 Steering Column Bracket
- 4 Combination Meter

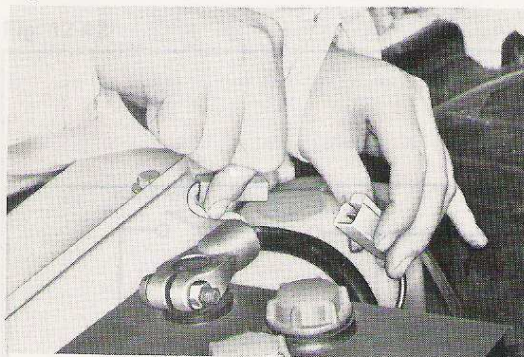Fig. 12-46



1. Disconnect the fusible link from the battery.

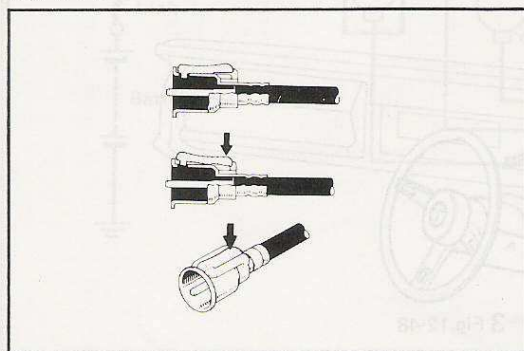Fig. 12-47



2. Disconnect the speedometer cable from the speedometer.

Fig. 12-48



3. Loosen the steering column bracket so as to make it easier to draw out the combination meter.

Fig. 12-49




4. Disconnect the wiring to the combination meter and draw out the combination meter.

40 Series

Remove the parts in the order numbered below.

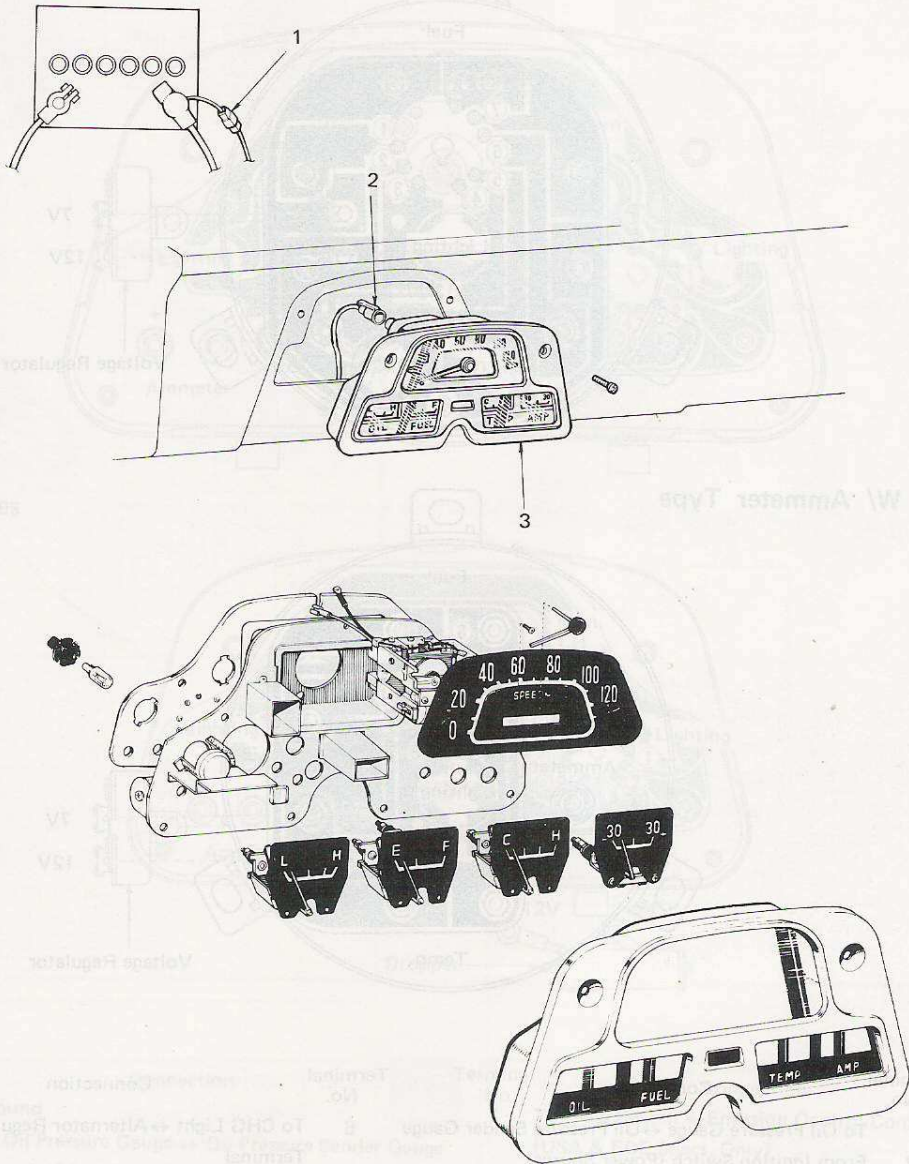Fig. 12-50




- 1 Fusible Link
- 2 Speedometer Cable
- 3 Combination Meter

INSPECTION


55 Series

Fig. 12-51

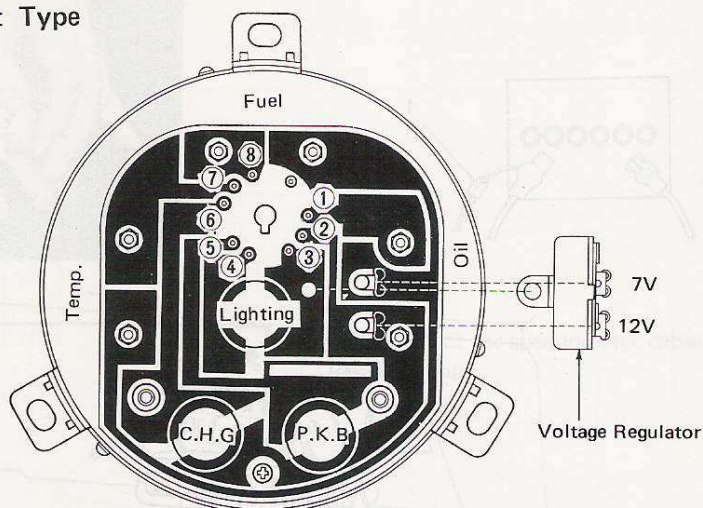W/ C.H.G. Light Type



W/ Ammeter Type

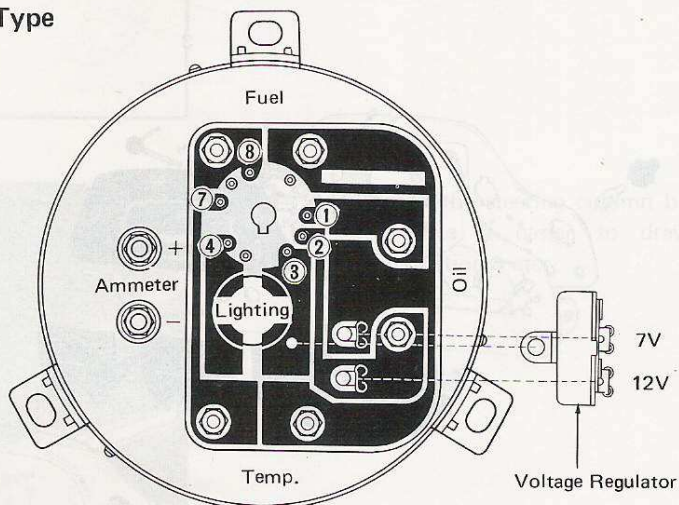


Terminal No.	Connection
1	To Oil Pressure Gauge ↔ Oil Pressure Sender Gauge
2	From Ignition Switch (Power Source)
3	Ground
4	To Meter Pilot Light ↔ Light Switch
5	To PKB Light ↔ Parking Brake Switch & Stop Light Switch

Terminal No.	Connection
6	To CHG Light ↔ Alternator Regulator "L" Terminal
7	To Temperature Gauge ↔ Temperature Sender Gauge
8	To Fuel Gauge ↔ Fuel Sender Gauge


40 Series

Fig. 12-52

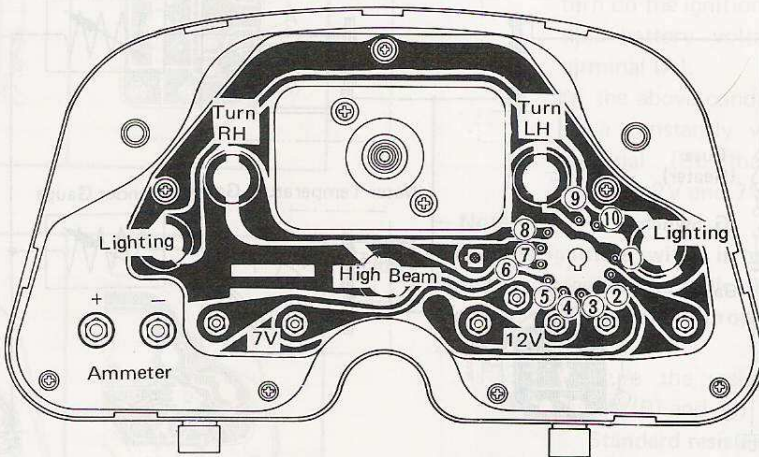12V Series



24V Series

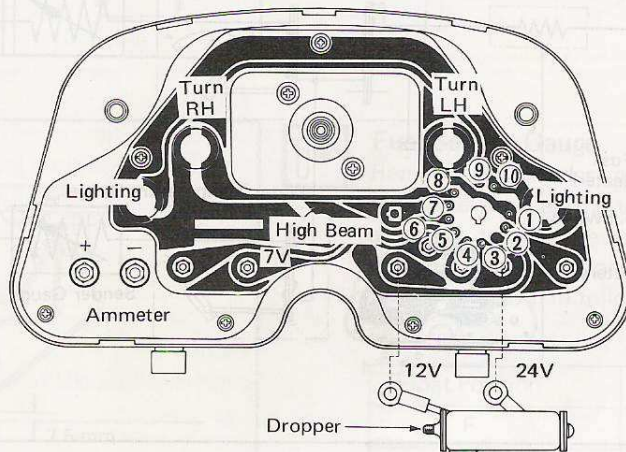

Terminal No.	Connection
1	Ground
2	To Oil Pressure Gauge ↔ Oil Pressure Sender Gauge
3	From Ignition Or Starter Switch (Power Source)
4	To Fuel Gauge ↔ Fuel Sender Gauge
5	To Water Temperature Gauge ↔ Water Temperature Sender Gauge
6	To High Beam Indicator Light ↔ Headlight Dimmer Switch

Terminal No.	Connection
7	To Reed Switch ↔ Emission Control Computer (USA & ECE Specs. Only)
8	To Turn Signal Indicator Light (RH) ↔ Turn Signal Switch
9	To Turn Signal Indicator Light (LH) ↔ Turn Signal Switch
10	To Meter Pilot Light ↔ Light Switch

FUEL GAUGE & WATER TEMPERATURE GAUGE

INSPECTION

Fig. 12-53


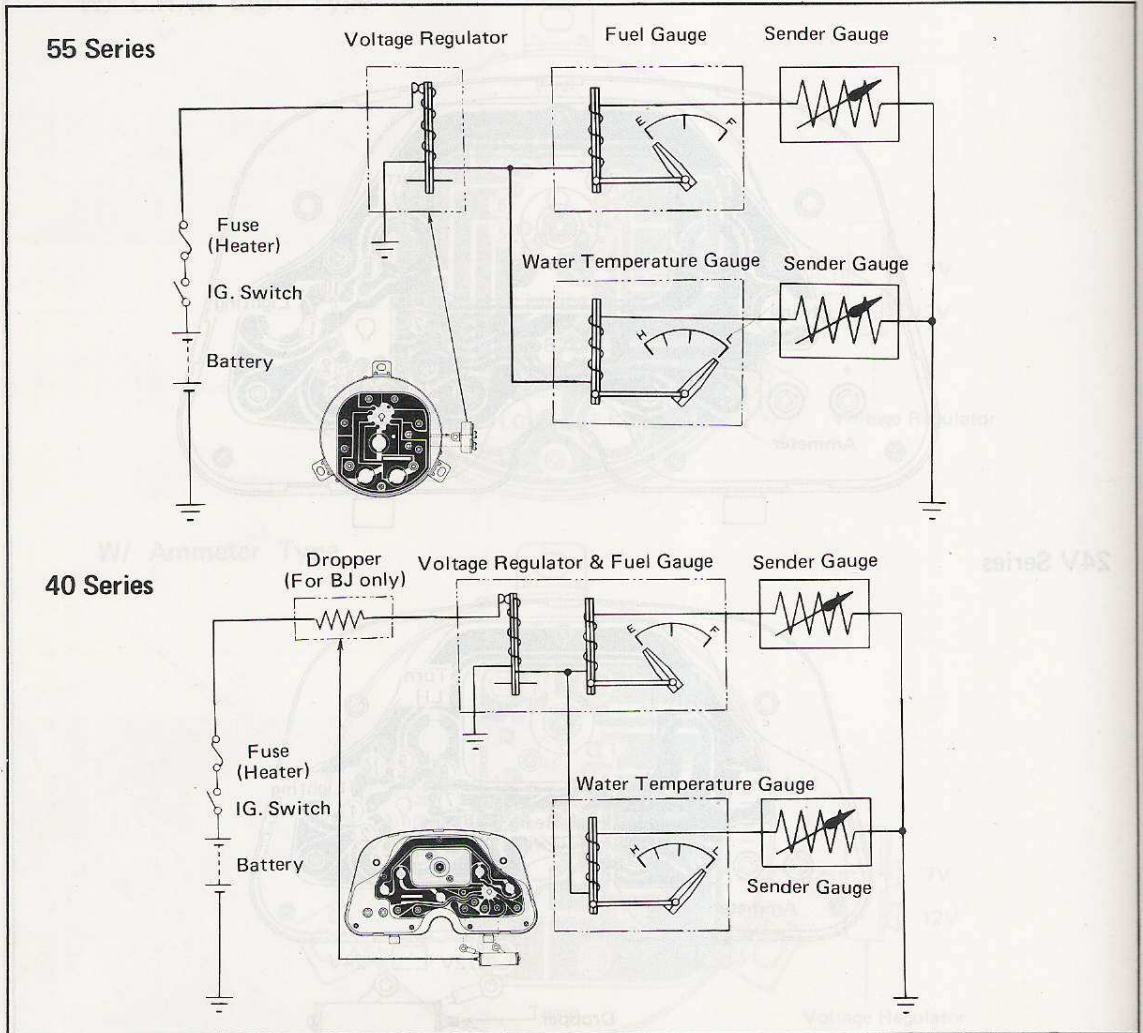



Fig. 12-54

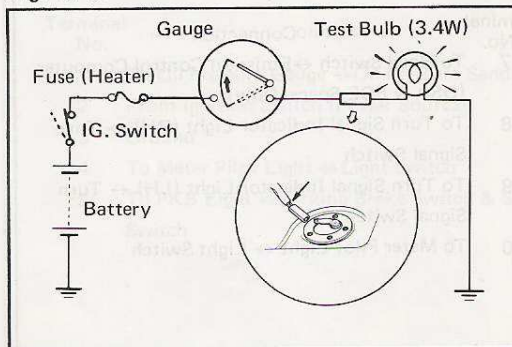

Fuel Receiver Gauge

1. Pull out the connector from the fuel sender gauge and ground the terminal through a 3.4W bulb. When the ignition switch is turned on, the bulb should light (but start to flash after few seconds) and the gauge pointer should deflect, if the gauge is in proper condition.

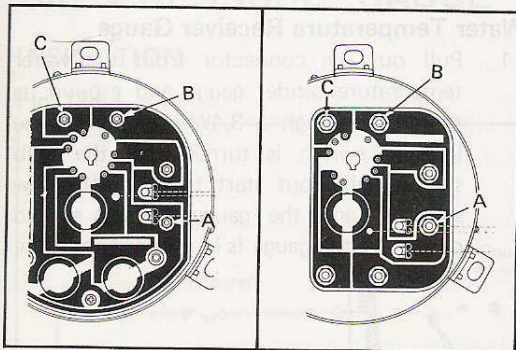Fig. 12-55



2. If the above test shows defective condition, remove the combination meter assembly and check on the following points.

- (1) With the multi-terminal connector plugged in to the combination meter, turn on the ignition switch and verify that battery voltage is present at terminal (A).
- (2) At the above condition, there should be a constantly varying voltage at terminal (B) that is fluctuating between 2V and 7V.

– Note –

When the ignition switch is turned on, the 12V battery voltage will be indicated but after a few seconds, the voltage will drop down to between 2V and 7V.

- (3) Measure the resistance between terminals (B) and (C).

Standard resistance 25 Ω

– Caution –

Do not check the 7V terminal at 12V or 24V.

Fig. 12-56


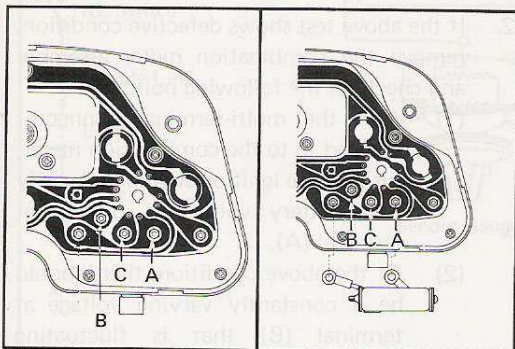


Fig. 12-57

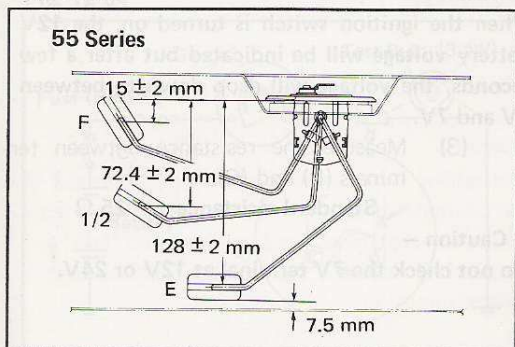


Fuel Sender Gauge

Remove the sender gauge and measure the resistance between the terminal and ground with a circuit tester. The resistance should change smoothly when the float arm is moved, and be of the values shown in following table.

55 Series

Float Position	Resistance (Ω)
F	17 ± 2.1
1/2	40 ± 4.5
E	120 ± 6.5

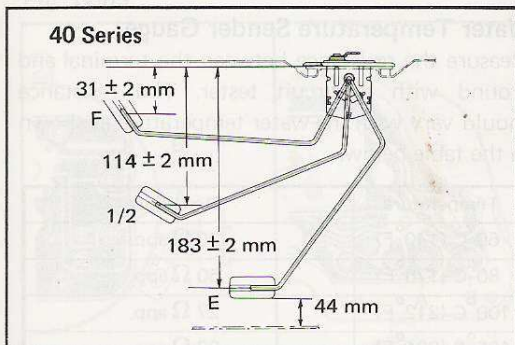
Fig. 12-58



40 Series


Float Position	Resistance (Ω)
F	17 ± 2.1
1/2	45 ± 4.5
E	120 ± 6.5

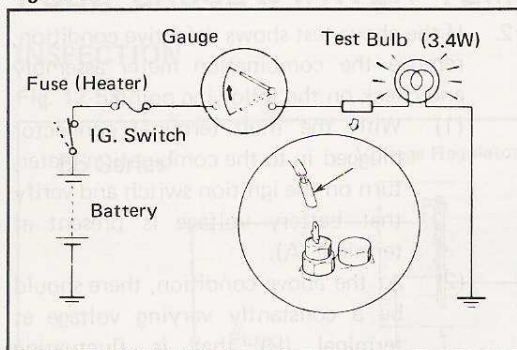Fig. 12-59

**Water Temperature Receiver Gauge**


1. Pull out the connector from the water temperature sender gauge and ground its terminal through a 3.4W bulb. When the ignition switch is turned ON, the bulb should light (but start to flash after few seconds) and the gauge pointer should deflect, if the gauge is in proper condition.

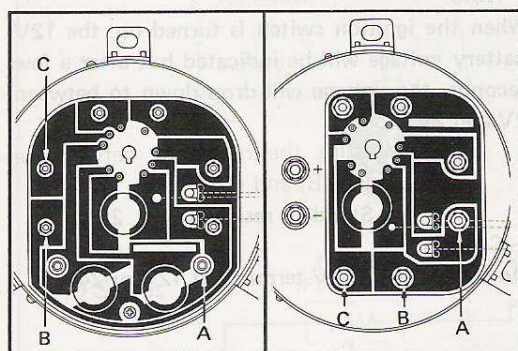Fig. 12-60



2. If the above test shows defective condition, remove the combination meter assembly and check on the following points.
 - (1) With the multi-terminal connector plugged in to the combination meter, turn on the ignition switch and verify that battery voltage is present at terminal (A).
 - (2) At the above condition, there should be a constantly varying voltage at terminal (B) that is fluctuating between 2V and 7V.

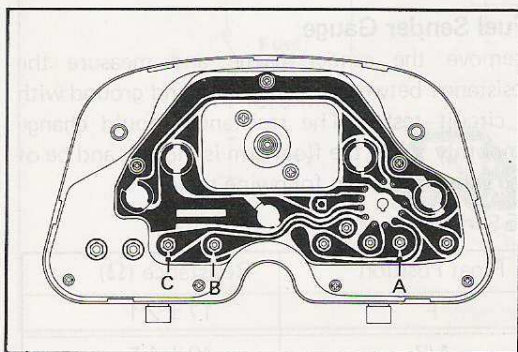Fig. 12-61



Note —
When the ignition switch is turned on, the 12V battery voltage will be indicated but after a few seconds, the voltage will drop down to between 2V and 7V.


- (3) Measure the resistance between terminals (B) and (C).

Standard resistance 25 Ω

Caution —

Do not check the 7V terminal at 12V or 24V.

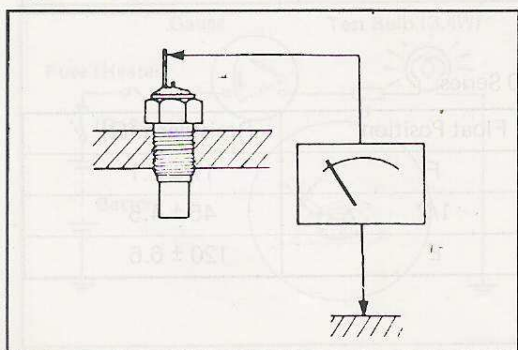Fig. 12-62

**Water Temperature Sender Gauge**

Measure the resistance between the terminal and ground with a circuit tester. The resistance should vary with the water temperature as shown in the table below.

Temperature	Resistance
60°C (140°F)	90 Ω app.
80°C (176°F)	50 Ω app.
100°C (212°F)	27 Ω app.
105°C (221°F)	23 Ω app.

OIL PRESSURE GAUGE

INSPECTION

Fig. 12-63

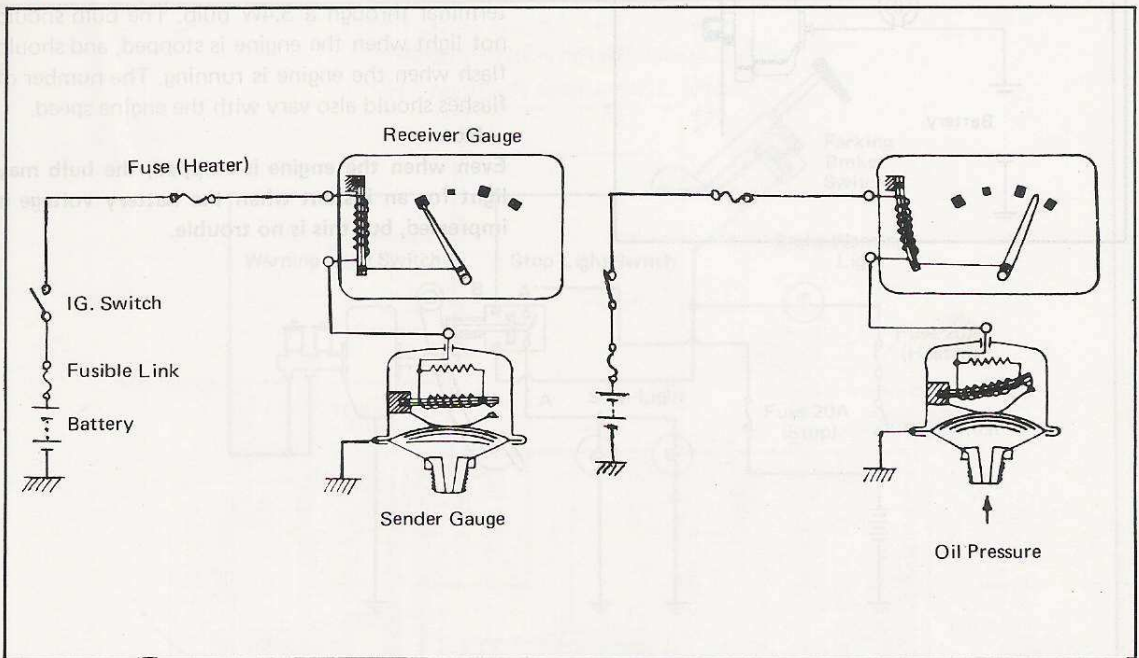


Fig. 12-64


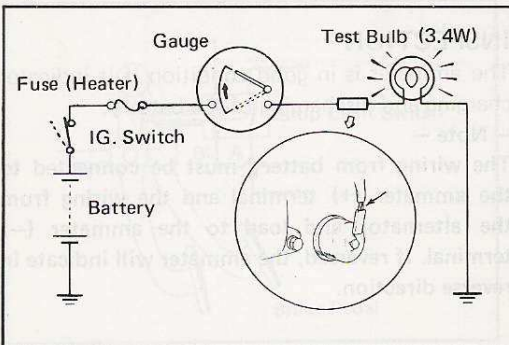


Fig. 12-65

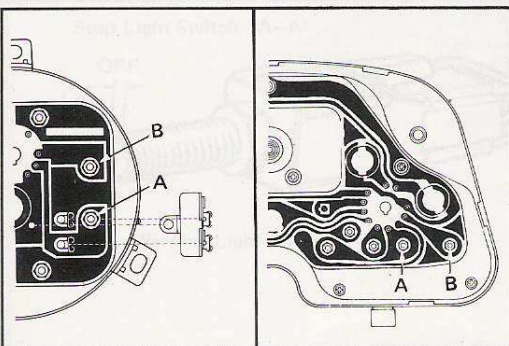

Oil Pressure Receiver Gauge

1. Pull out the connector from oil pressure sender gauge and ground the terminal through a 3.4W bulb. When the ignition switch is turned on, the bulb should light and gauge pointer should deflect.
2. If the above test shows defective condition, remove the combination meter assembly and check on the following points.
 - (1) With the multi-terminal connector plugged in to the combination meter, turn on the ignition switch and verify that battery voltage is present at terminal (A).
 - (2) Measure the resistance between terminals (A) and (B).




Standard resistance

44 Ω Except BJ

66 Ω BJ

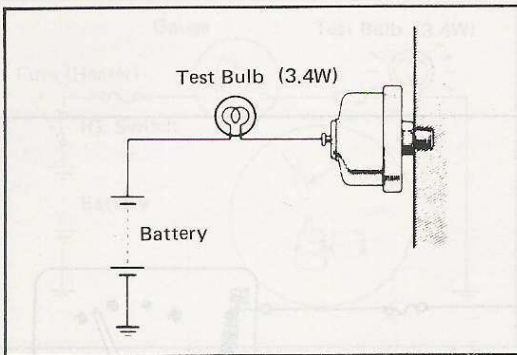Fig. 12-66



Oil Pressure Sender Gauge

Pull out the connector from the sender gauge, and impress battery voltage on the gauge terminal through a 3.4W bulb. The bulb should not light when the engine is stopped, and should flash when the engine is running. The number of flashes should also vary with the engine speed.

— Note —

Even when the engine is stopped, the bulb may light for an instant when the battery voltage is impressed, but this is no trouble.

Fig. 12-67


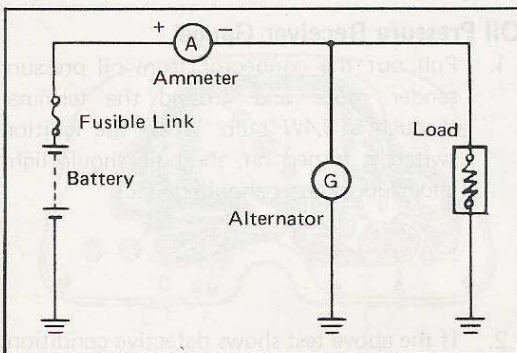


Fig. 12-68

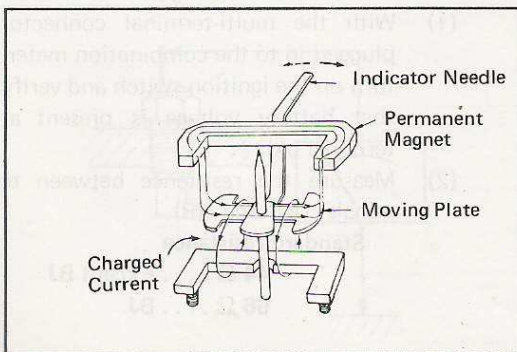

AMMETER

INSPECTION

The ammeter is in good condition if it indicates charging and discharging of the battery.

— Note —

The wiring from battery must be connected to the ammeter (+) terminal and the wiring from the alternator and load to the ammeter (-) terminal. If reversed, the ammeter will indicate in reverse direction.



BRAKE WARNING LIGHT

INSPECTION

Fig. 12-69


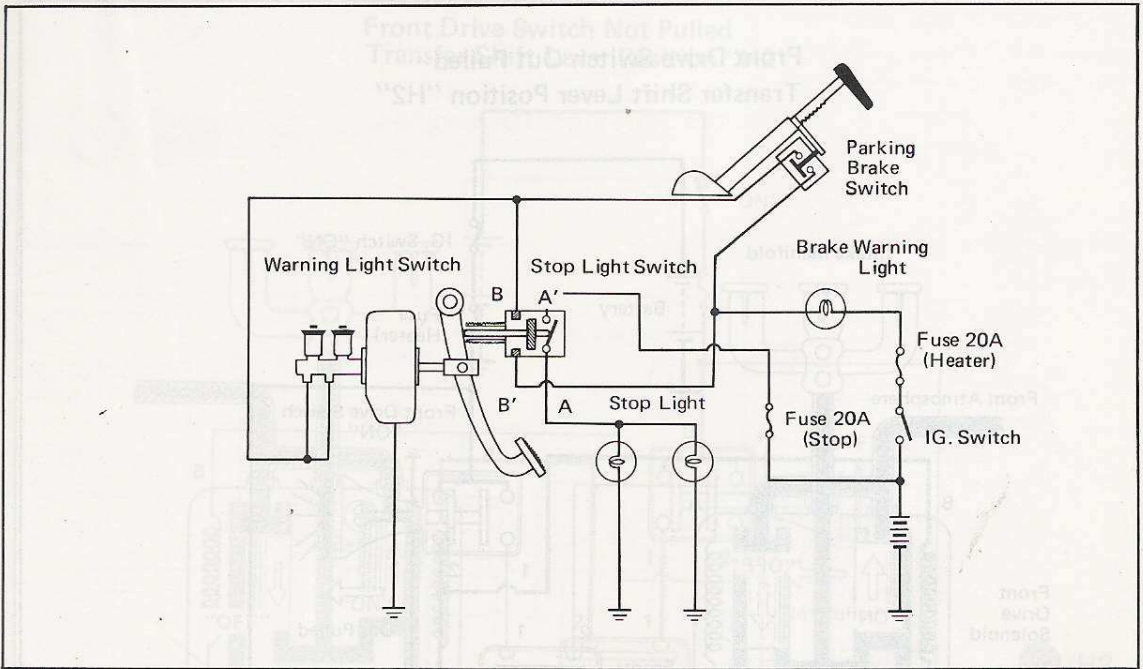


Fig. 12-70

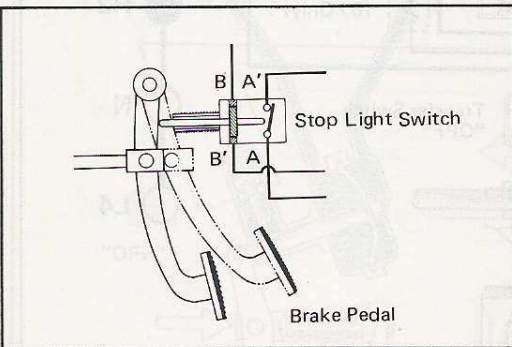


Stop Light Switch

Terminal Connections

- A To stop light
- A' To fuse (stop) (power source)
- B To brake warning light switch
- B' To brake warning light (power source)

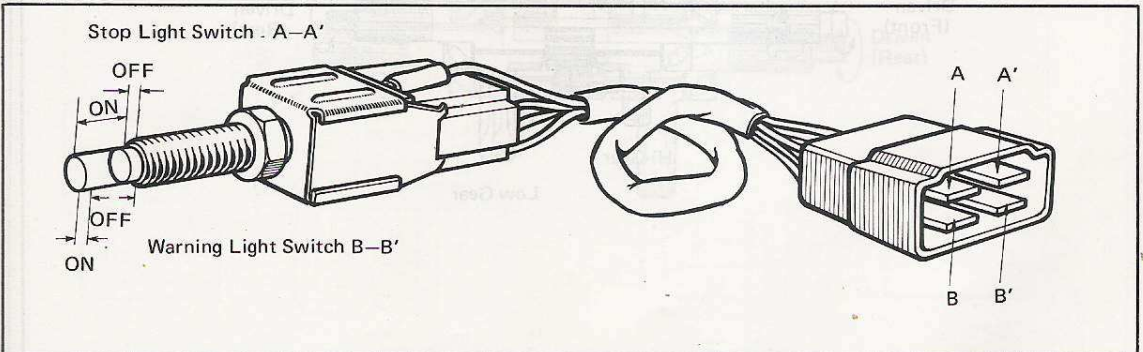Fig. 12-71



FRONT DRIVE VACUUM CONTROL

OPERATION

Fig. 12-72

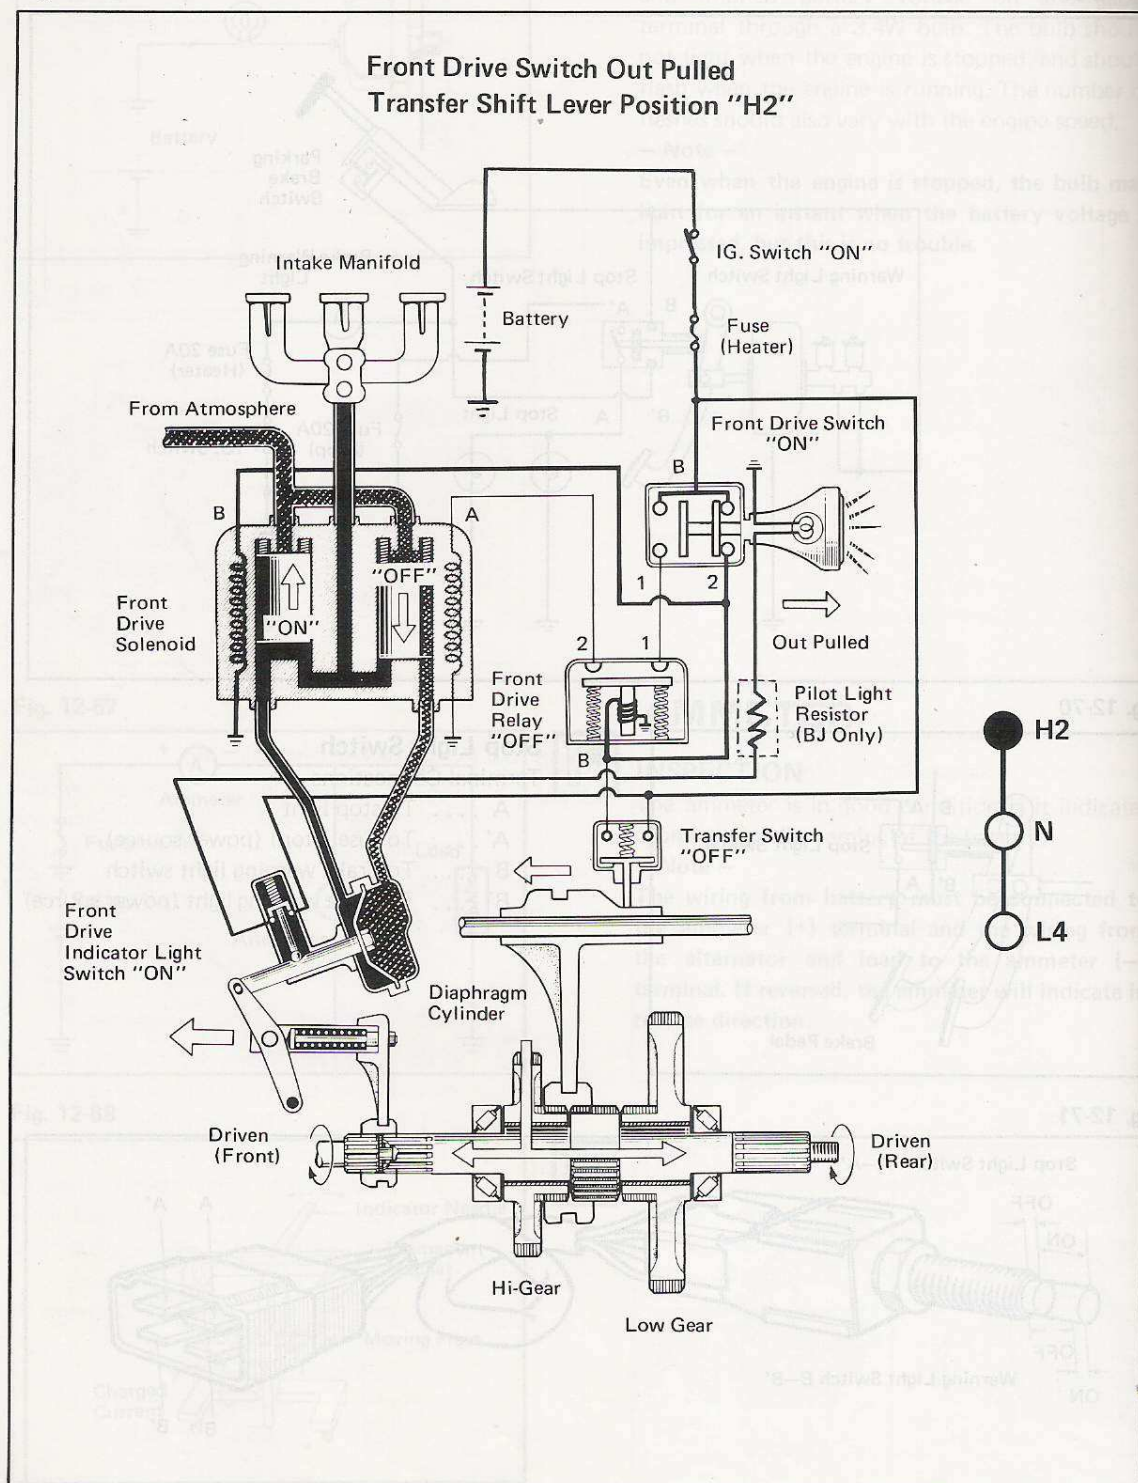


Fig. 12-73

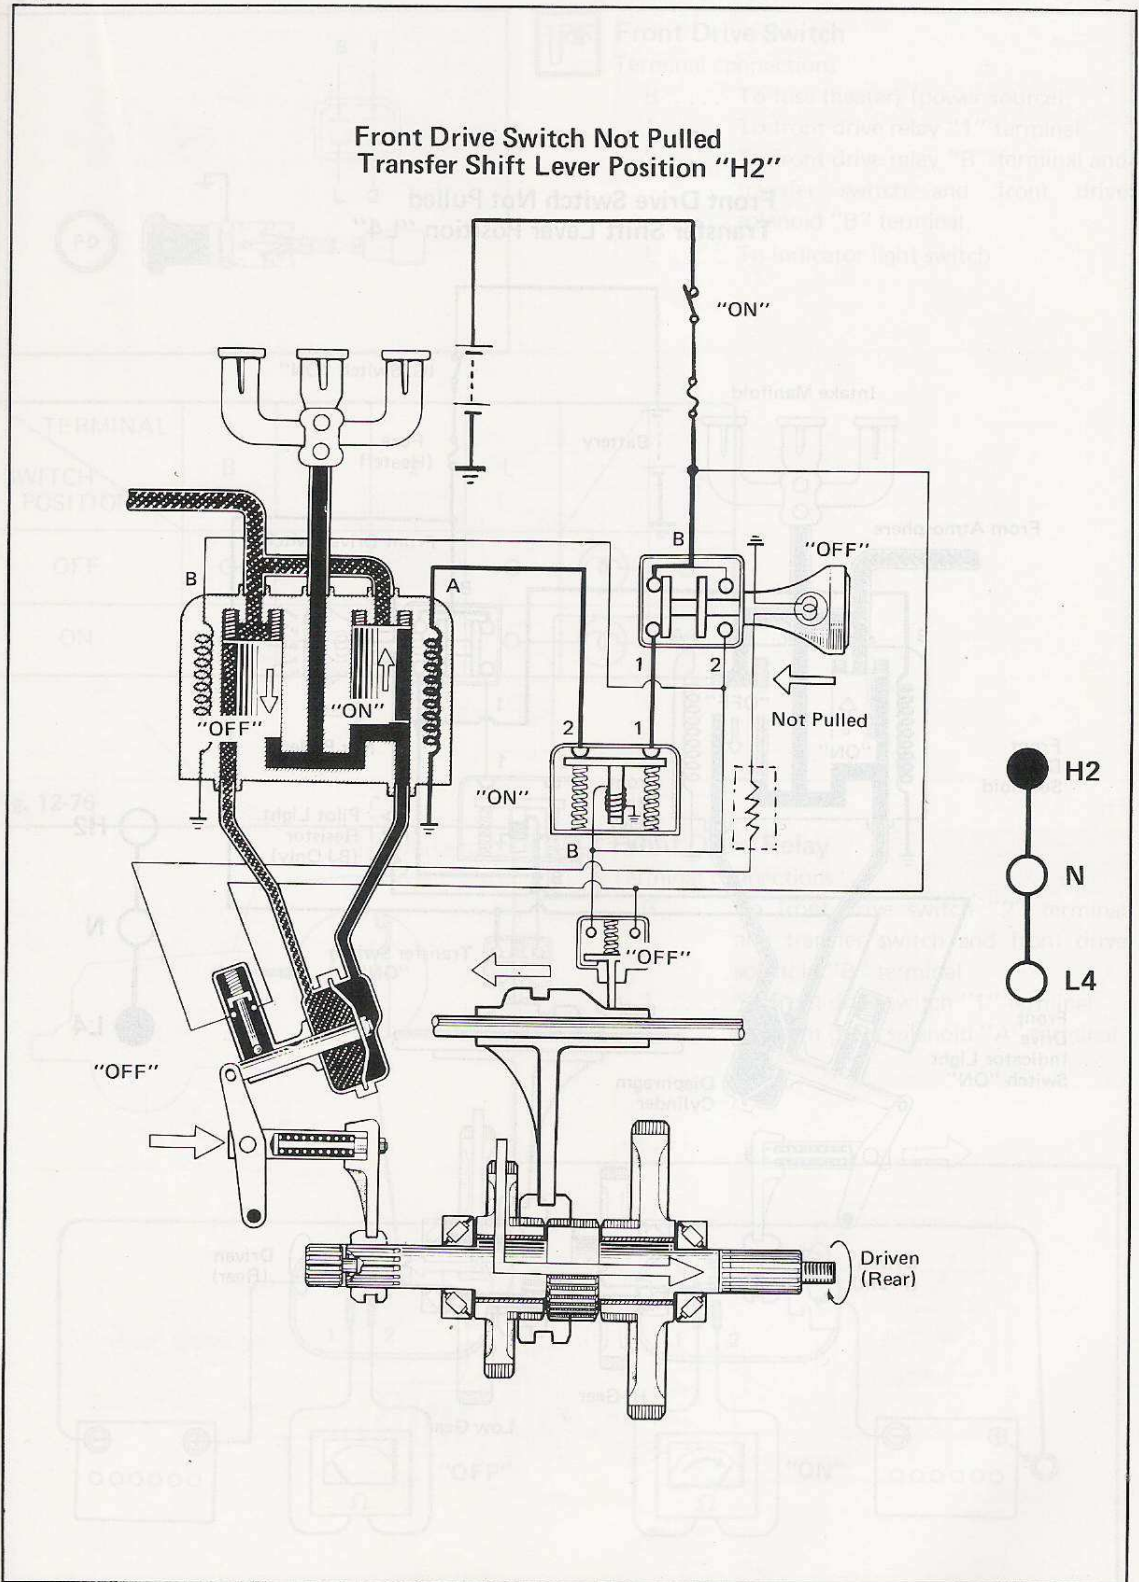


Fig. 12-74

Front Drive Switch Not Pulled Transfer Shift Lever Position "L4"


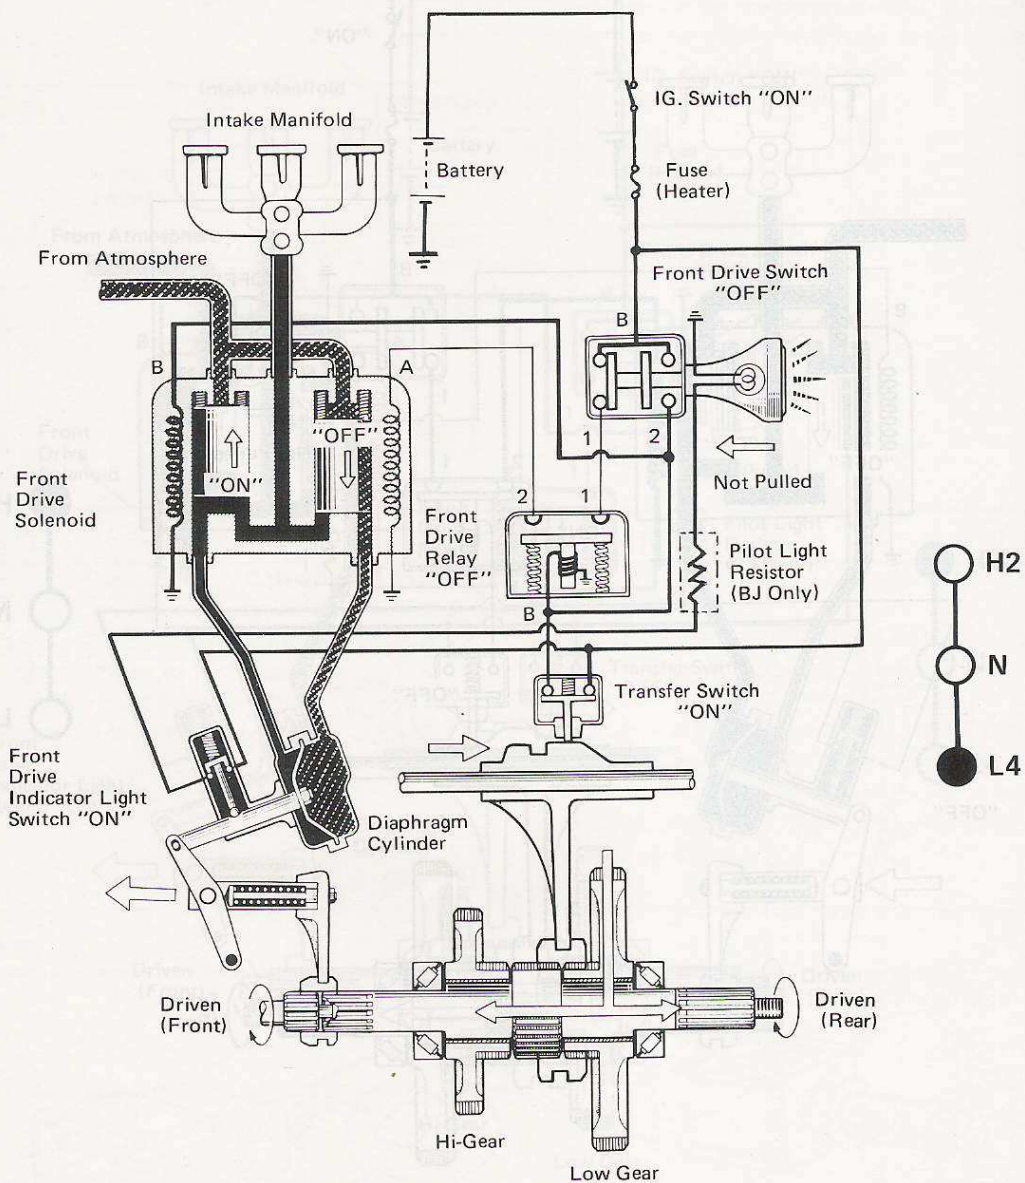


Fig. 12-75

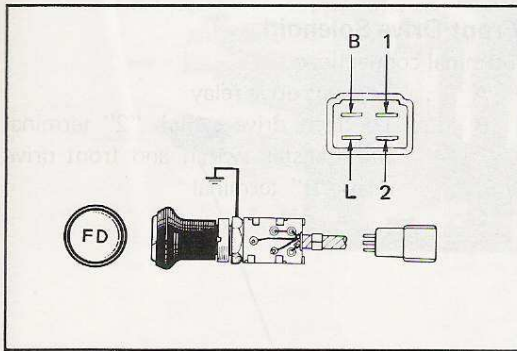

INSPECTION




Front Drive Switch

Terminal connections

- B To fuse (heater) (power source)
- 1 To front drive relay "1" terminal
- 2 To front drive relay "B" terminal and transfer switch and front drive solenoid "B" terminal.
- L To indicator light switch

TERMINAL SWITCH POSITION	B	1	2	L	
OFF	○	○		○	⊥
ON	○		○	○	⊥

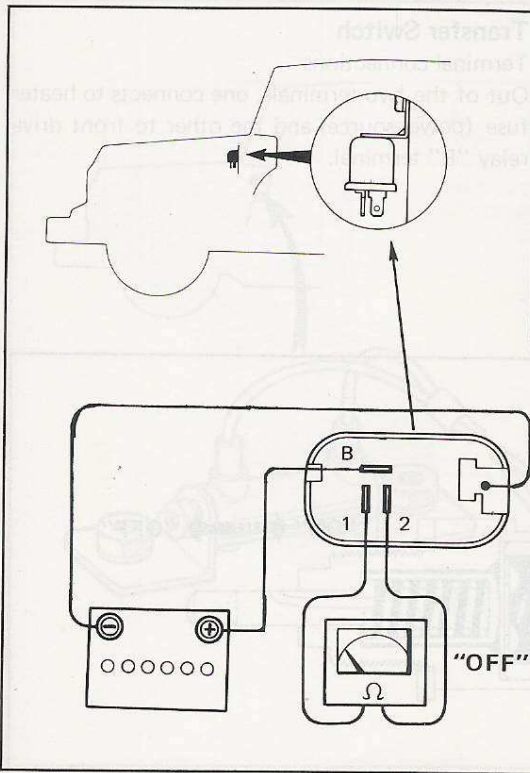Fig. 12-76



Front Drive Relay

Terminal connections

- B To front drive switch "2" terminal and transfer switch and front drive solenoid "B" terminal
- 1 To front drive switch "1" terminal
- 2 To front drive solenoid "A" terminal

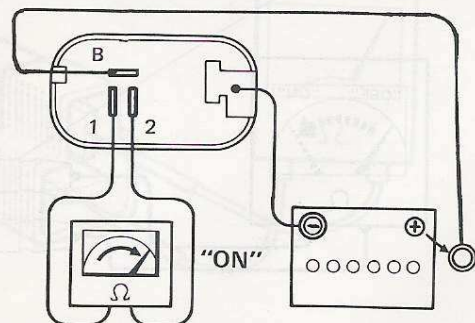


Fig. 12-77

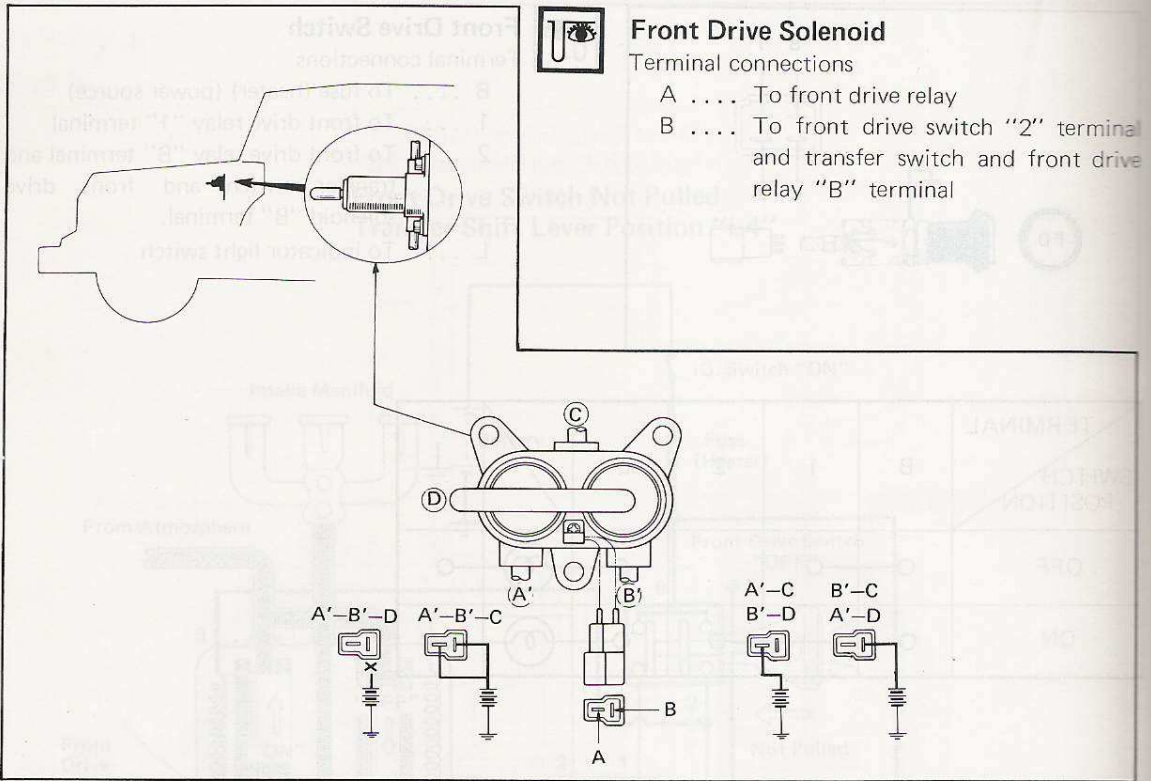


Fig. 12-78

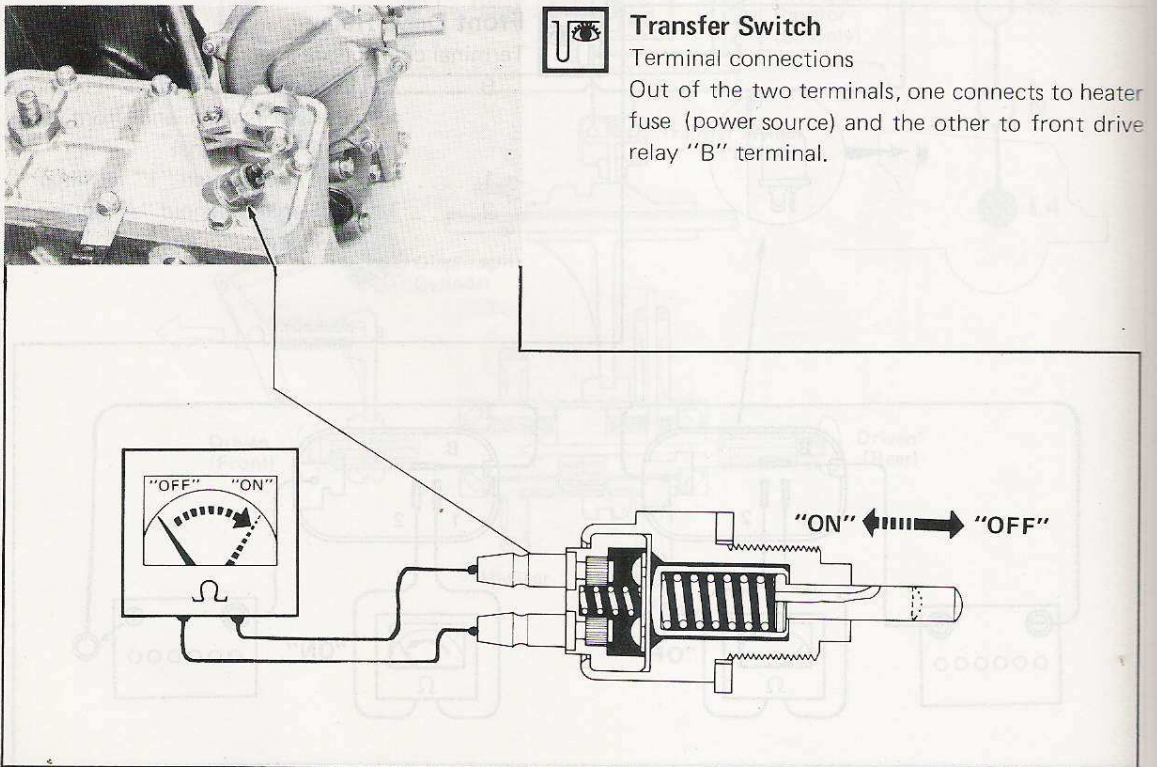


Fig. 12-79


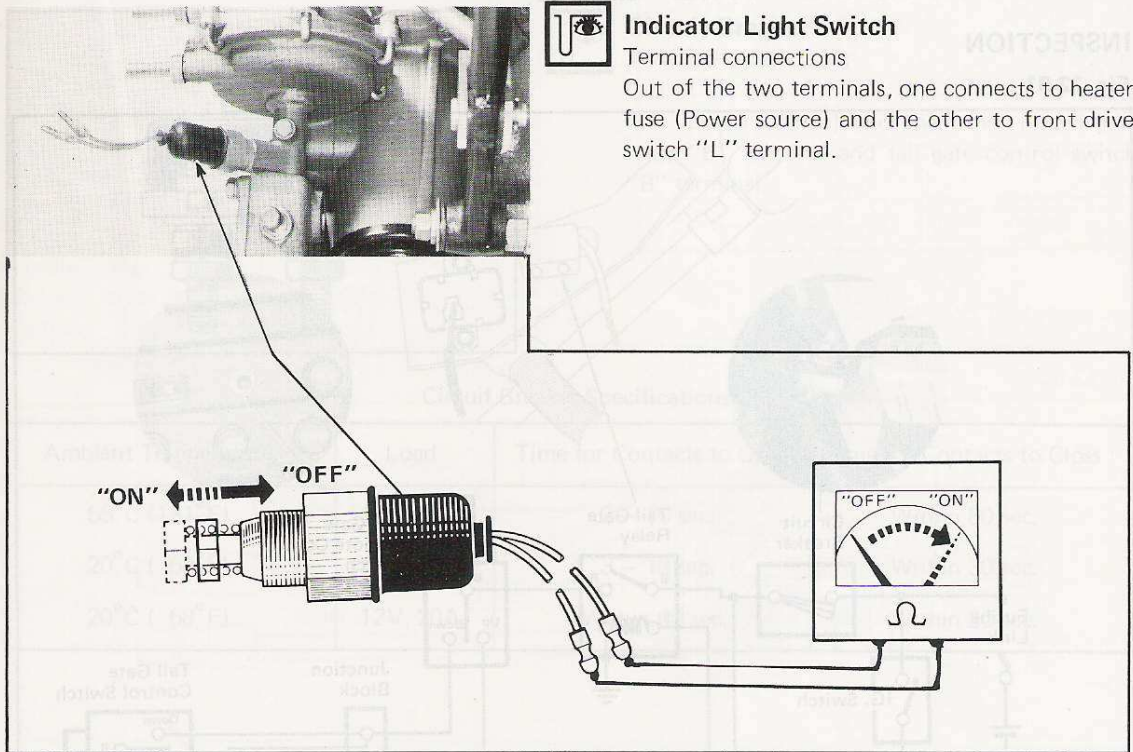


Fig. 12-80

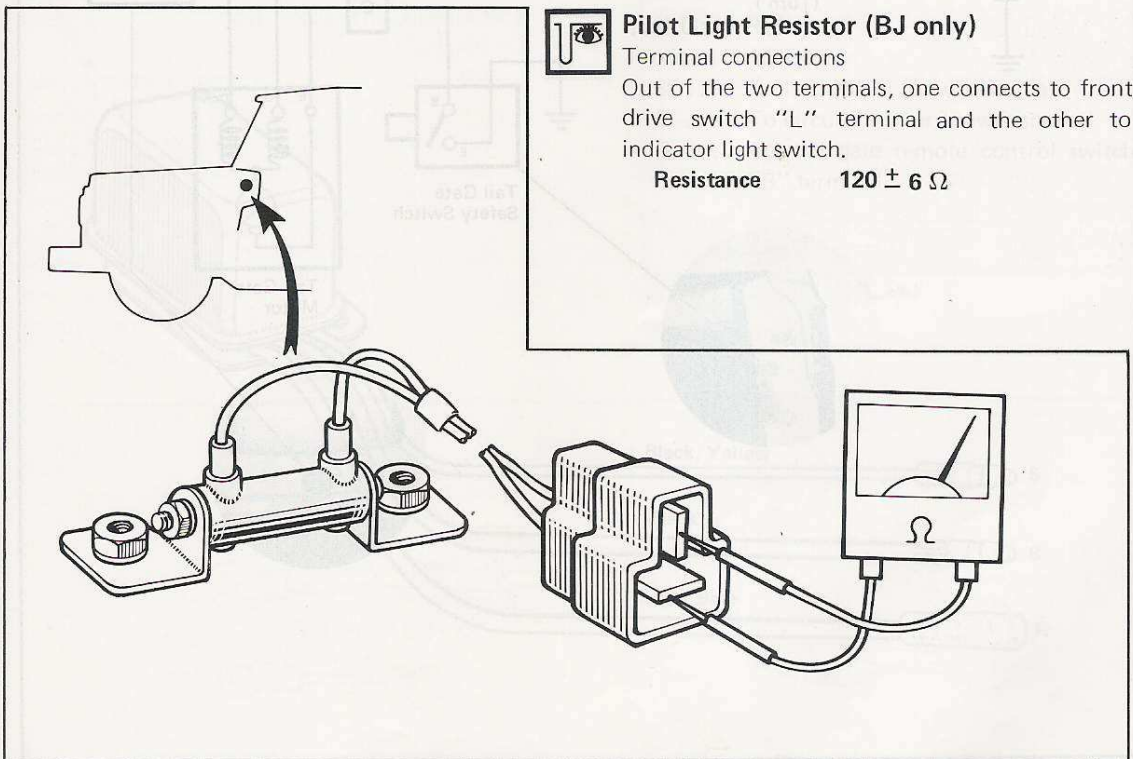

POWER WINDOW TAIL GATE

INSPECTION

Fig. 12-81


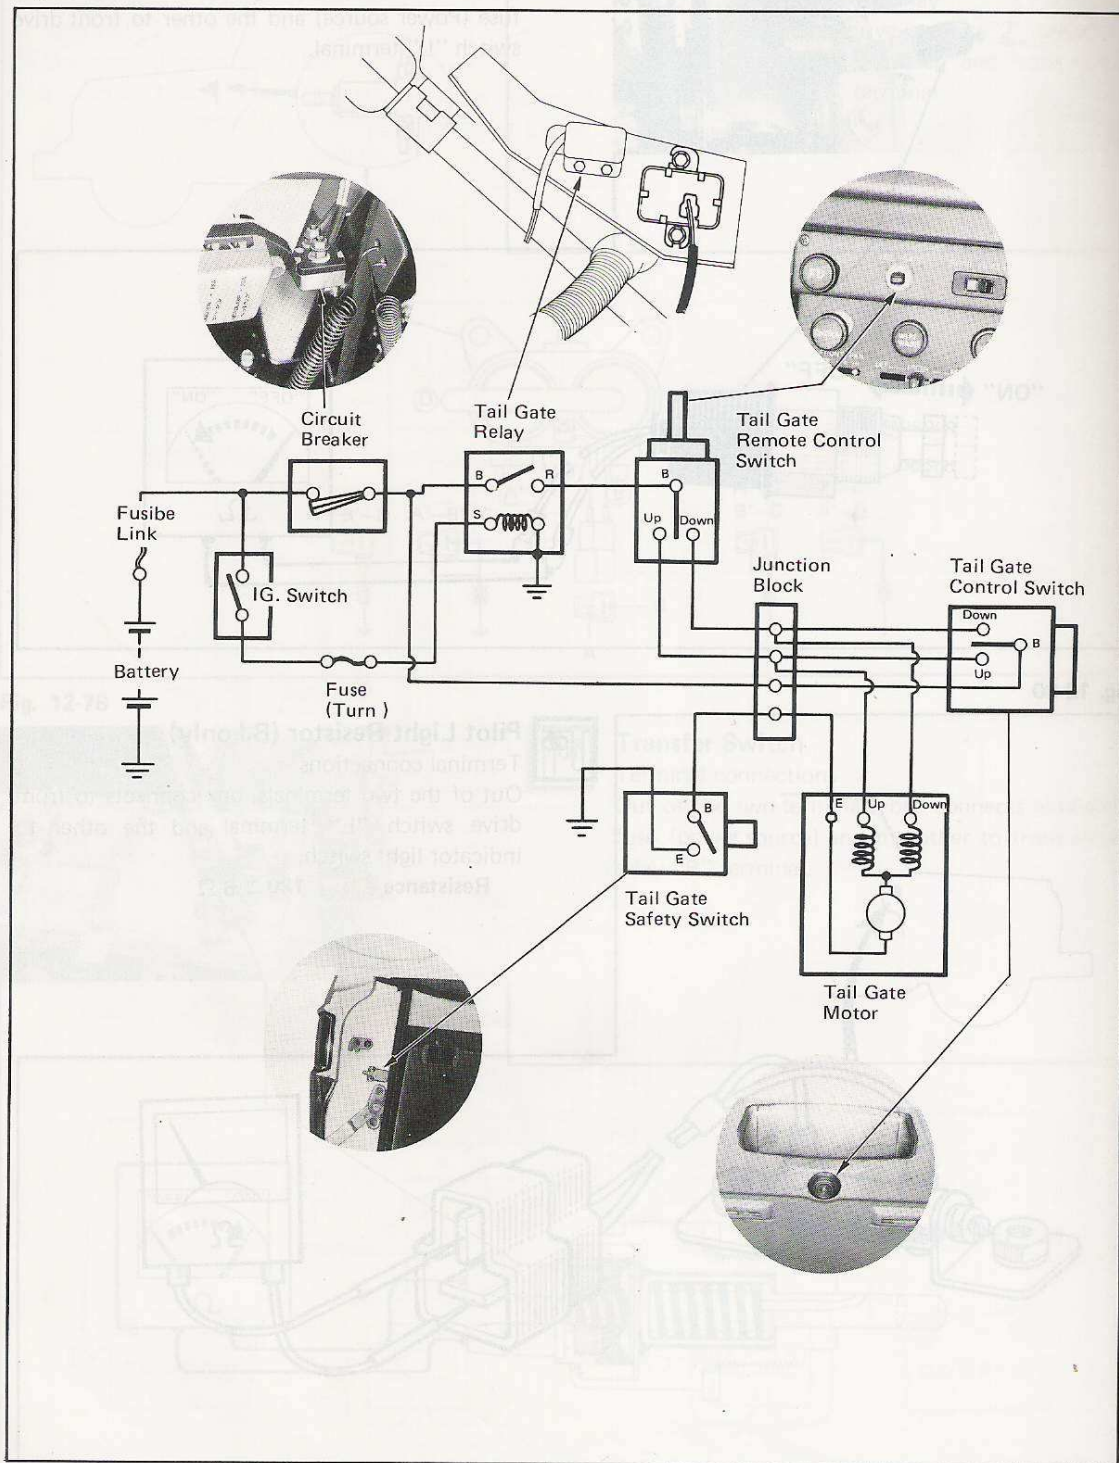


Fig. 12-82

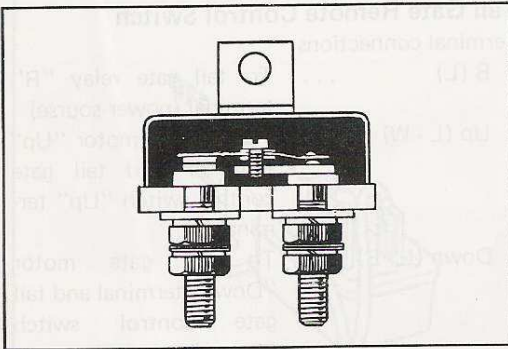

Circuit Breaker


Terminal connections

Out of the two terminals, one connects to fusible link (power source) and the other to tail gate relay "B" terminal and tail gate control switch "B" terminal.

Circuit Breaker Specifications

Ambient Temperature	Load	Time for Contacts to Open	Time for Contacts to Close
55°C (131°F)	12V, 24A	2 – 10 sec.	Within 80 sec.
20°C (68°F)	12V, 24A	3 – 13 sec.	Within 30 sec.
20°C (68°F)	12V, 20A	Within 60 sec.	Within 30 sec.

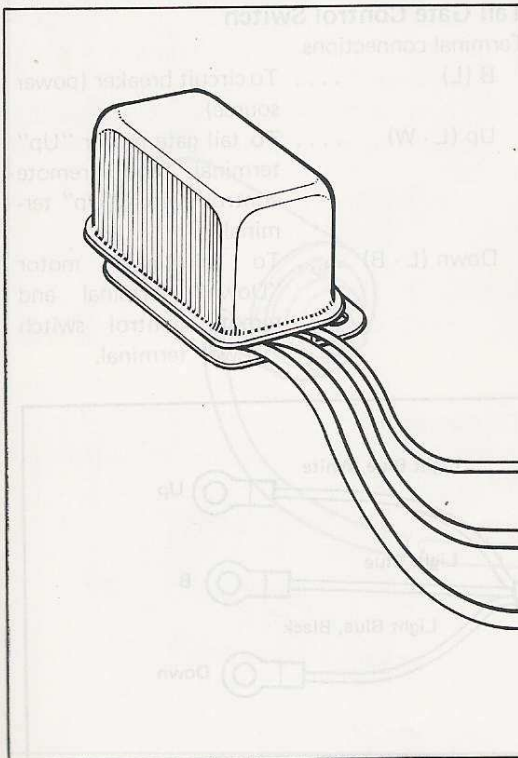Fig. 12-83



Tail Gate Relay

Terminal connections

- S To fuse (turn) (power source)
- B To circuit breaker (power source)
- R To tail gate remote control switch "B" terminal

Black, Yellow S

Black B


Light Blue R

WIRING COLOR CODE SWITCH POSITION	WIRING COLOR CODE		
	L	L · W	L · B
Up	○ — ○		
N			
Down	○ — ○		○ — ○

Tail Gate Remote Control Switch

- Terminal connections
- B (L) To tail gate relay "R" terminal (power source)
 - Up (L · W) To tail gate motor "Up" terminal and tail gate control switch "Up" terminal
 - Down (L · B) To tail gate motor "Down" terminal and tail gate control switch "Down" terminal.

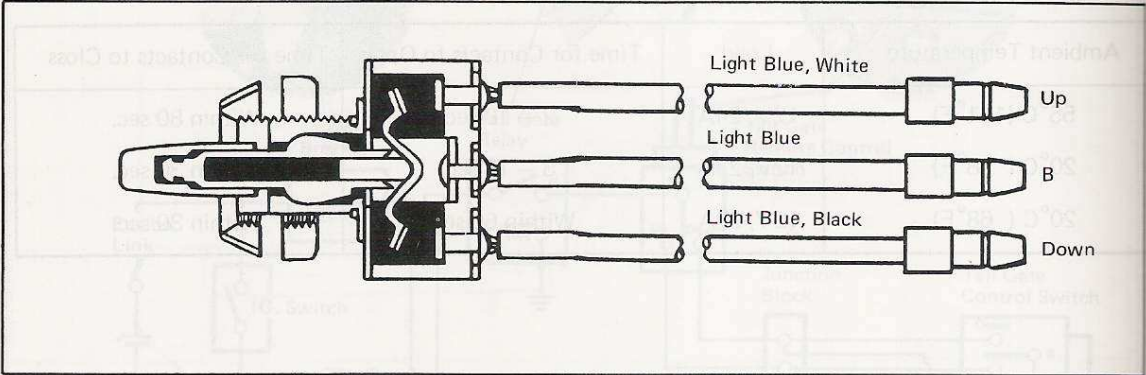Fig. 12-84



WIRING COLOR CODE SWITCH POSITION	WIRING COLOR CODE		
	L	L · W	L · B
Up	○ — ○		
N			
Down	○ — ○		○ — ○

Tail Gate Control Switch

- Terminal connections
- B (L) To circuit breaker (power source)
 - Up (L · W) To tail gate motor "Up" terminal and remote control switch "Up" terminal.
 - Down (L · B) To tail gate motor "Down" terminal and remote control switch "Down" terminal.

Fig. 12-85

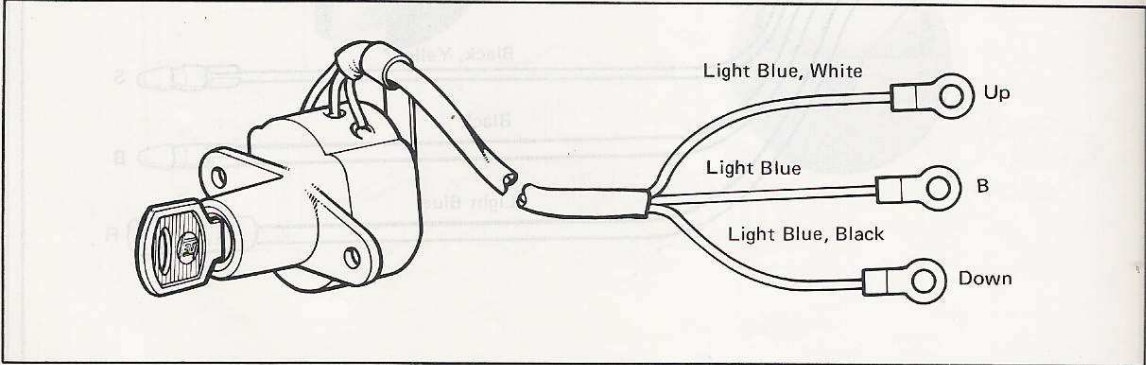


Fig. 12-86


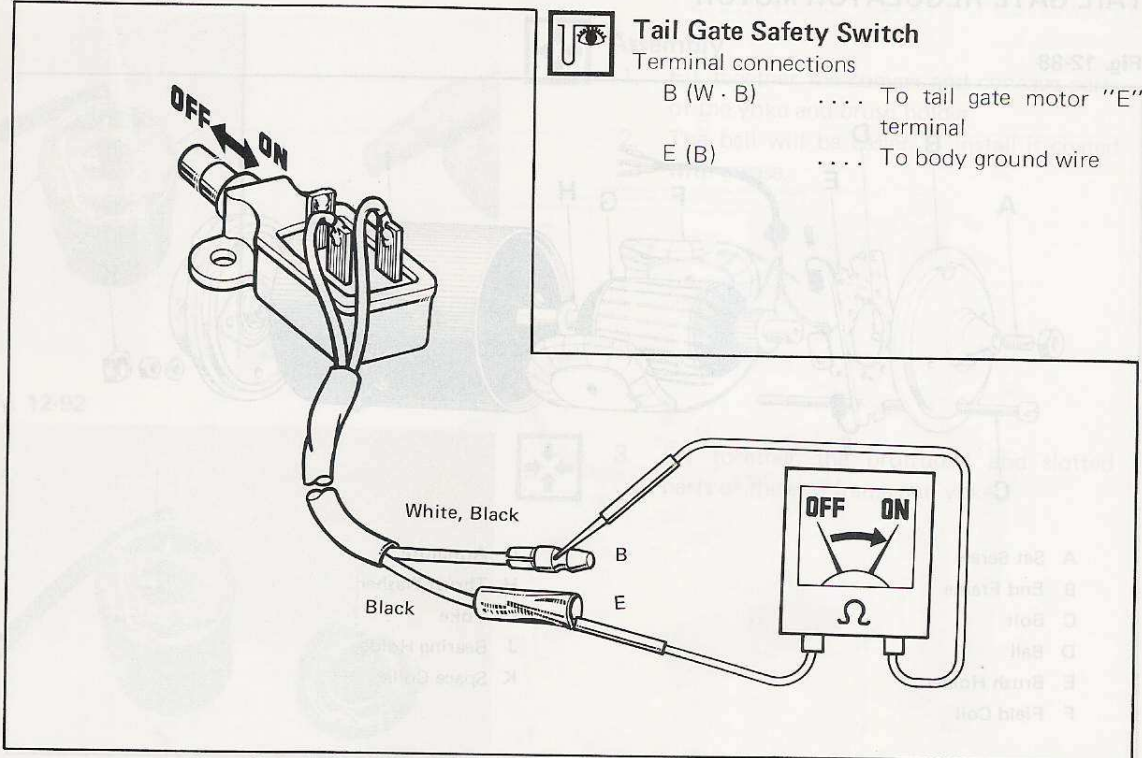


Fig. 12-87

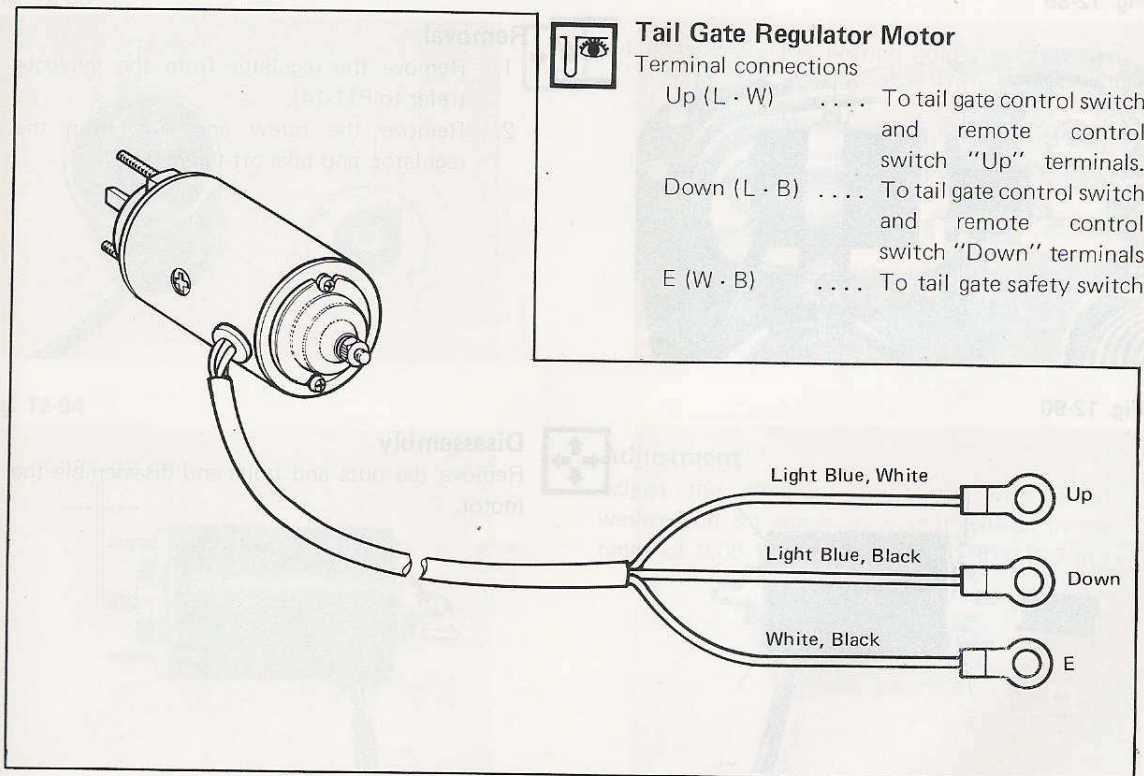

TAIL GATE REGULATOR MOTOR

Fig. 12-88

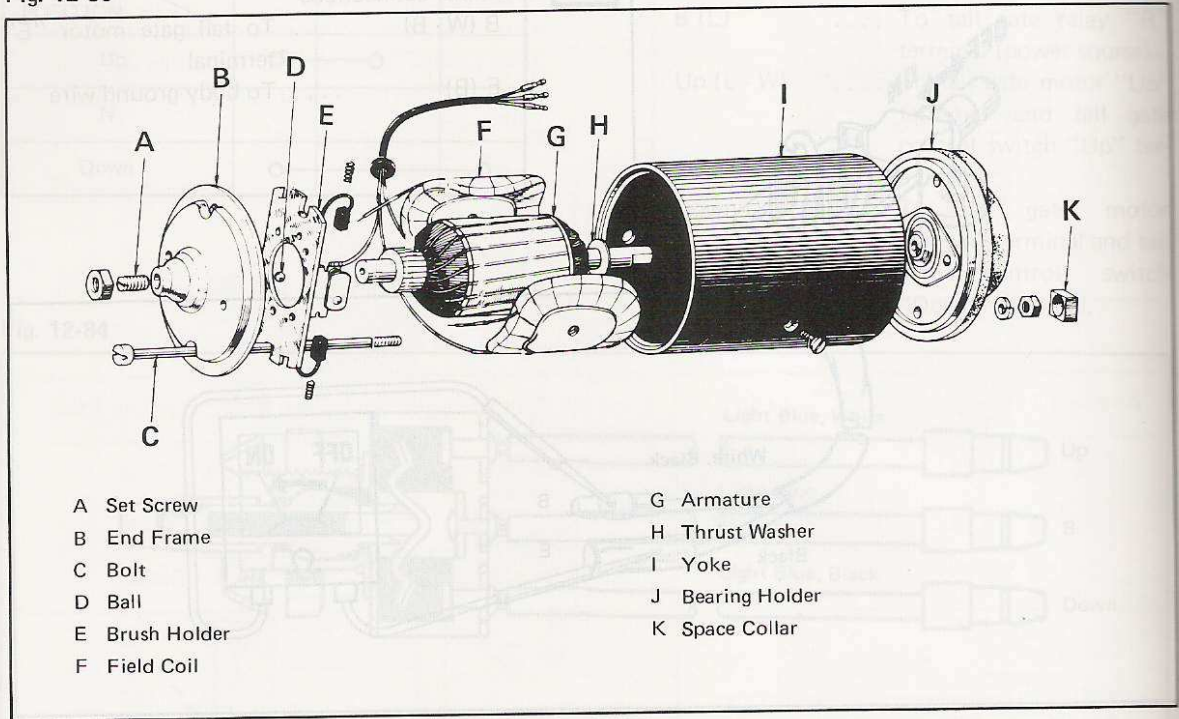
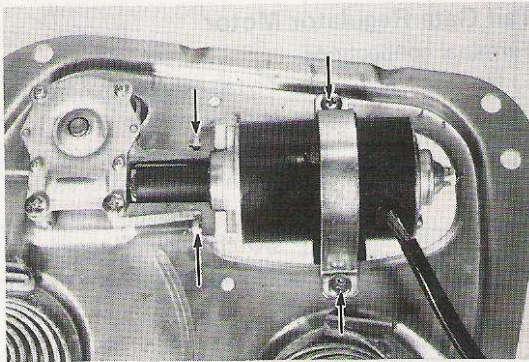
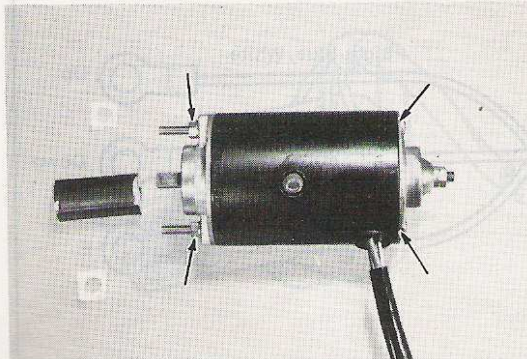


Fig. 12-89

**Removal**


1. Remove the regulator from the tail gate (refer to P11-14).
2. Remove the screw and nut from the regulator, and take off the motor.

Fig. 12-90

**Disassembly**

Remove the nuts and bolts and disassemble the motor.

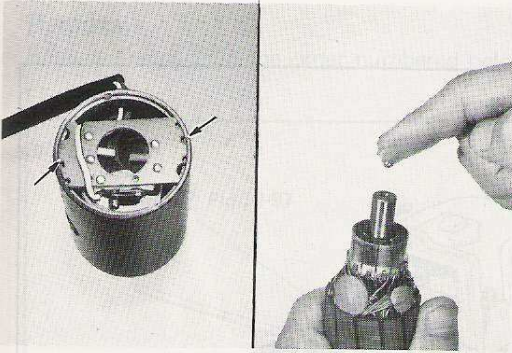
Fig. 12-91



Assembly


1. Fit together the convex and concave parts of the yoke and brush holder.
2. The ball will be easier to install if coated with grease.

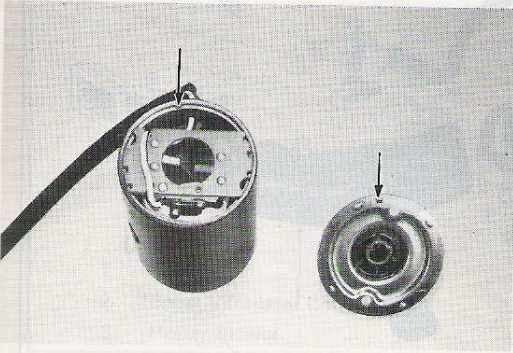Fig. 12-92




3. Fit together the protruded and slotted parts of the end frame and yoke.

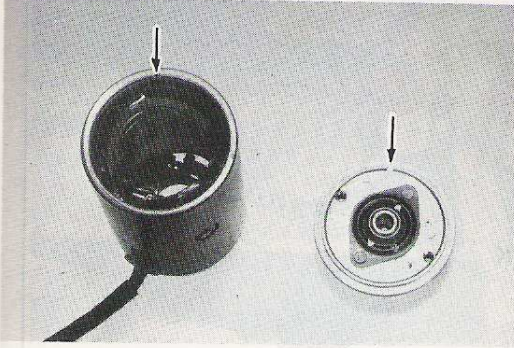Fig. 12-93



4. Assemble the bearing holder to the yoke with the convex part fitted into the concave part.

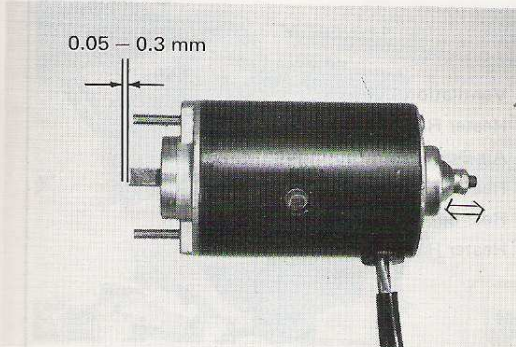Fig. 12-94




Adjustment

Adjust the armature thrust gap with thrust washer and set screw so that it will be in the range of 0.05 to 0.30 mm (0.002 to 0.012 in.)

HEATER (55 SERIES)

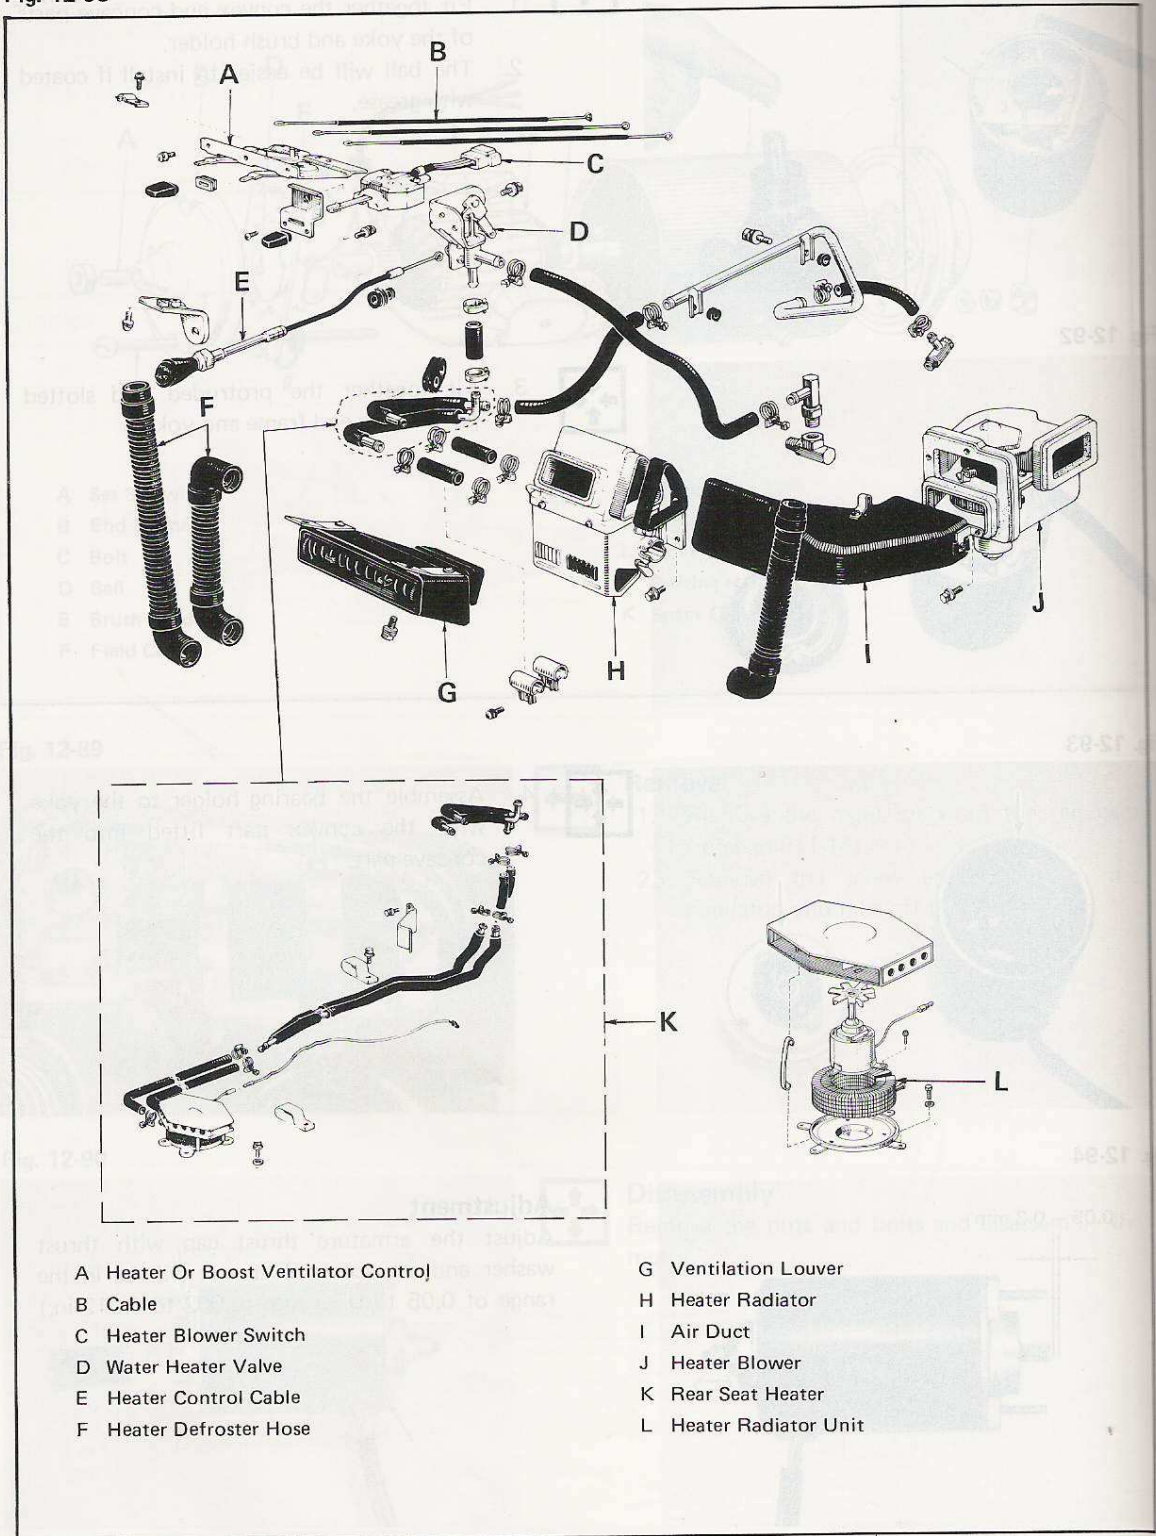Fig. 12-95



HEATER BLOWER

Removal

Remove the parts in the order numbered below.

Fig. 12-96



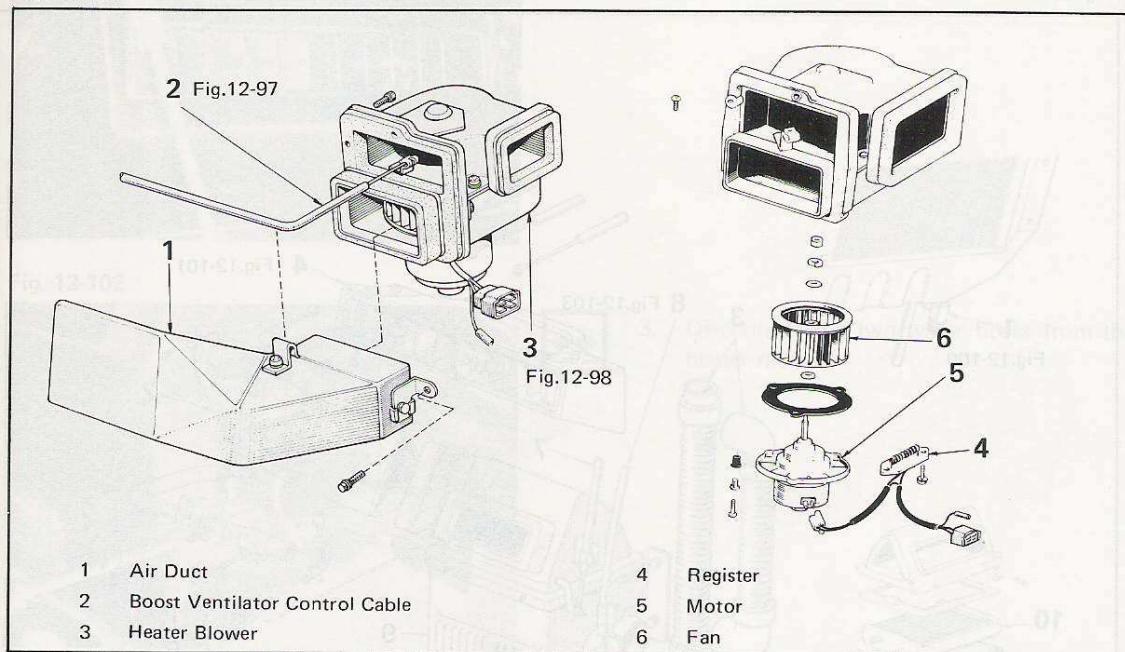


Fig. 12-97

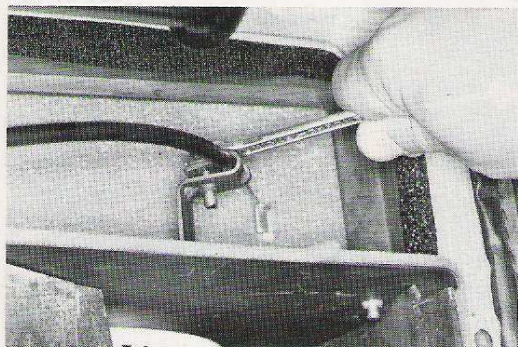

1. Disconnect the boost ventilator control cable at the heater blower end.

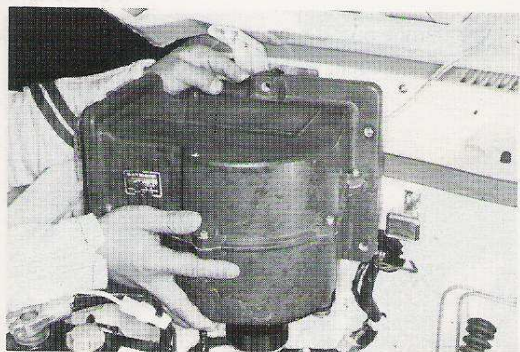Fig. 12-98



2. Unplug the motor wiring at the connector, remove the three mounting bolts, and take off the blower assembly.

HEATER RADIATOR

Removal

Remove the parts in the order numbered below.

Fig. 12-99



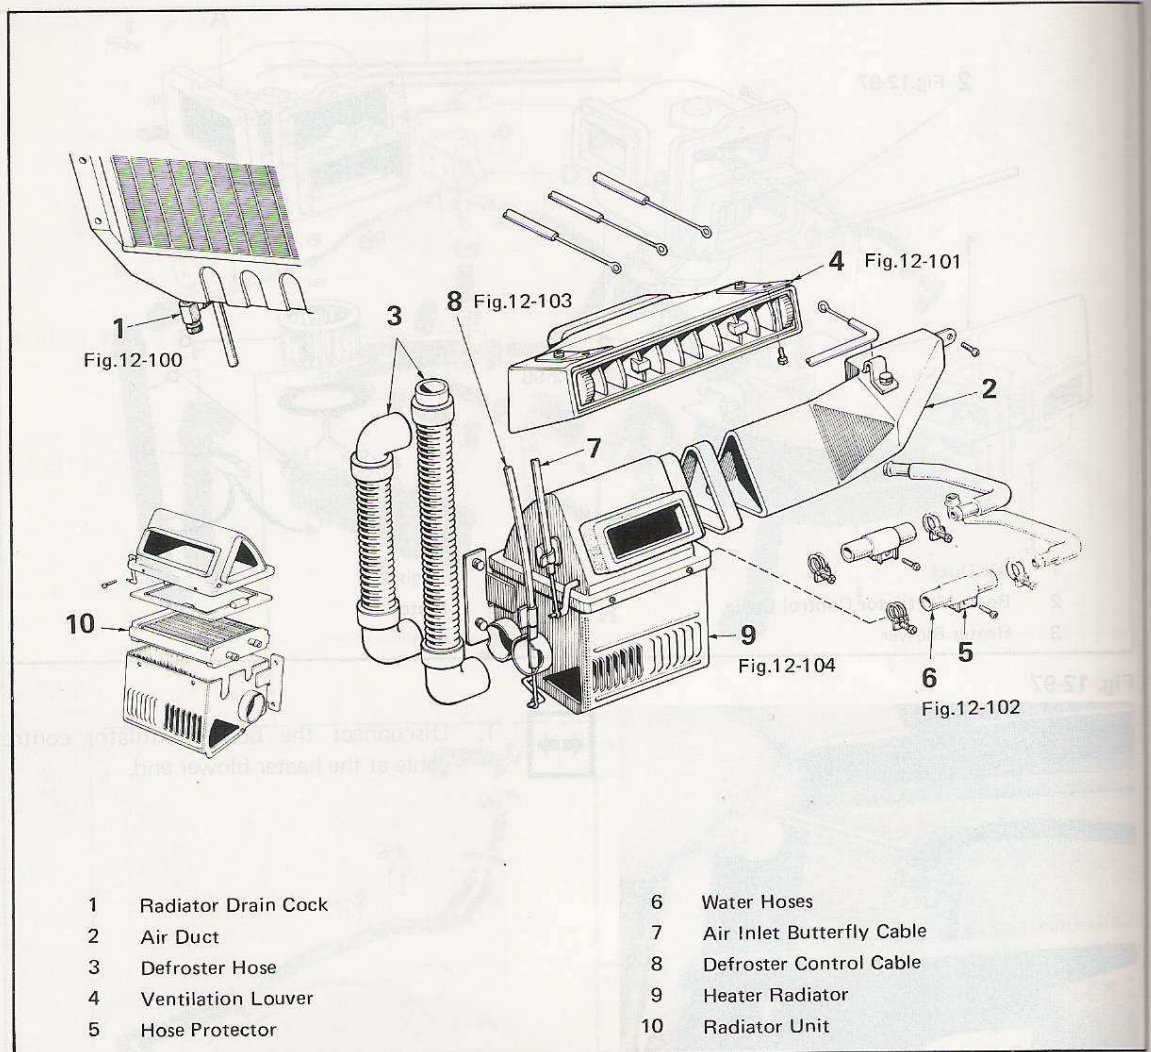


Fig. 12-100

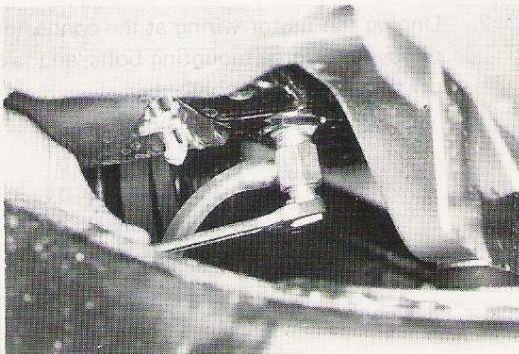


1. Drain out the coolant through the radiator drain cock.

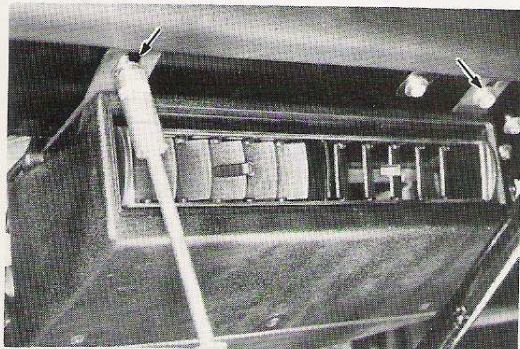Fig. 12-101




2. Remove the two bolts attaching the ventilation louver, and take off the louver.

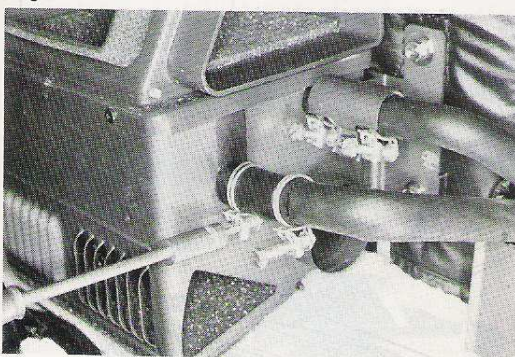Fig. 12-102




3. Disconnect the two water hoses from the heater radiator.

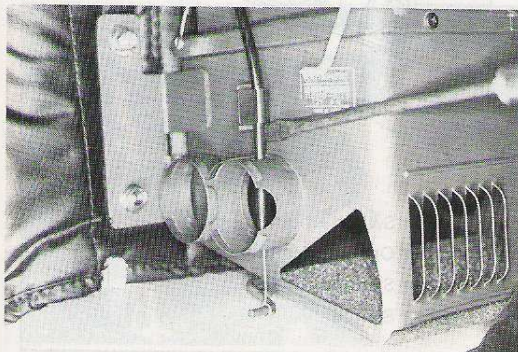Fig. 12-103



4. Disconnect the defroster control cable from the heater radiator.

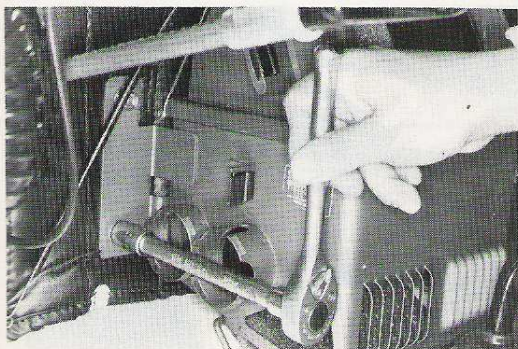Fig. 12-104



5. Remove the four bolts attaching the heater radiator assembly, and take off the assembly.

HEATER CONTROL & SWITCH

Removal

Remove the parts in the order numbered below.

Fig. 12-105



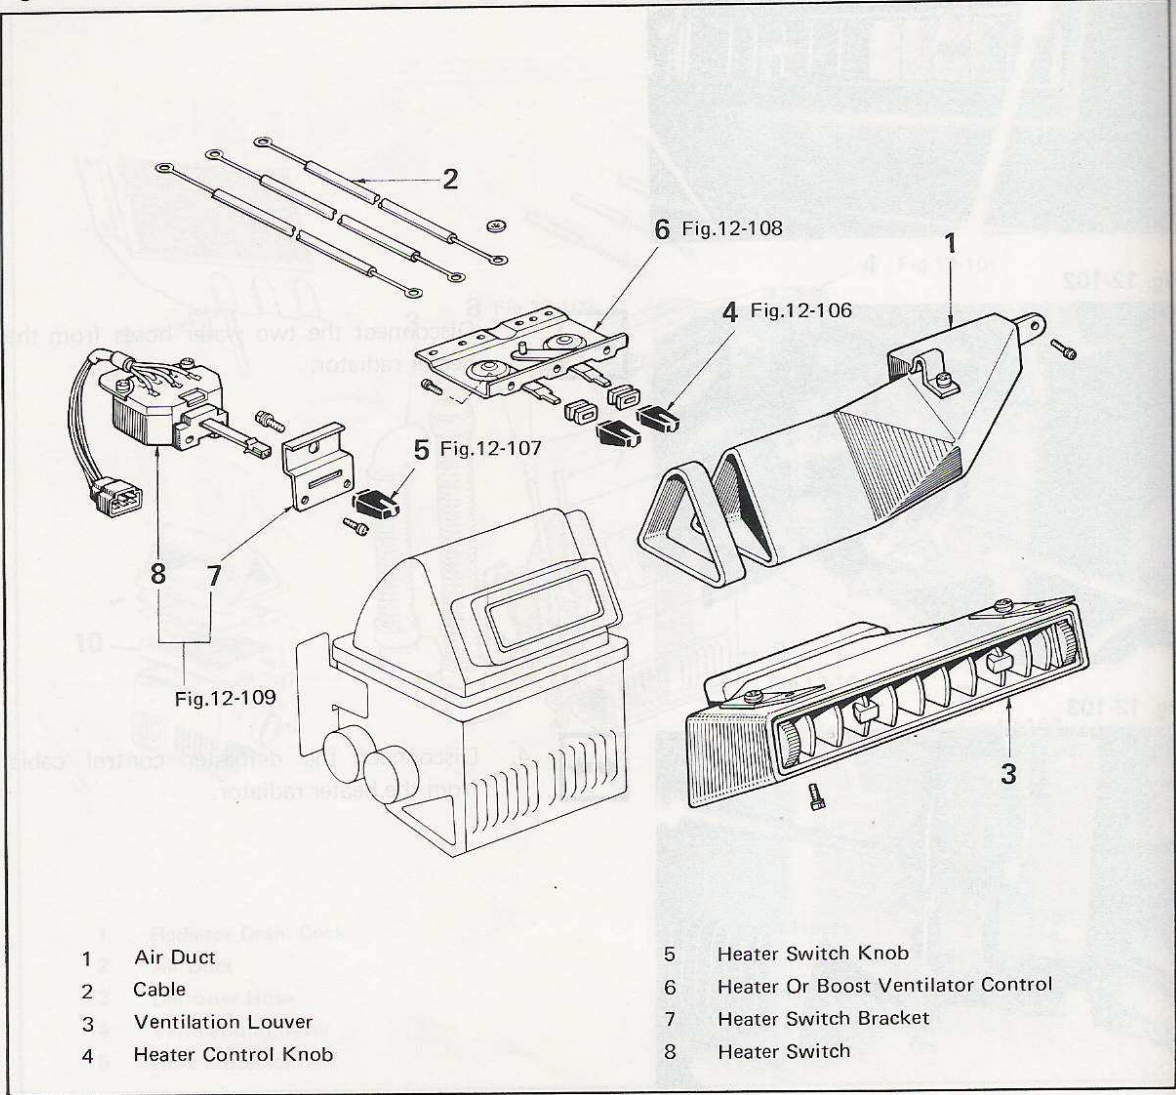


Fig. 12-106

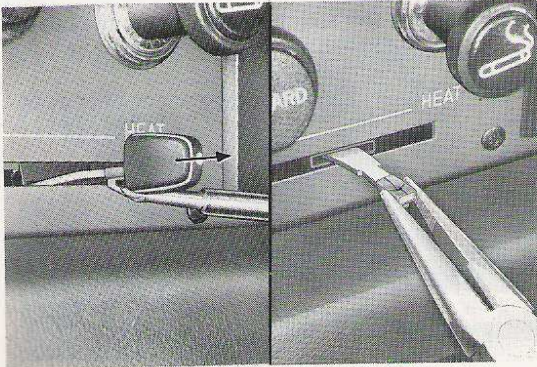


1. Remove the heater control knob.

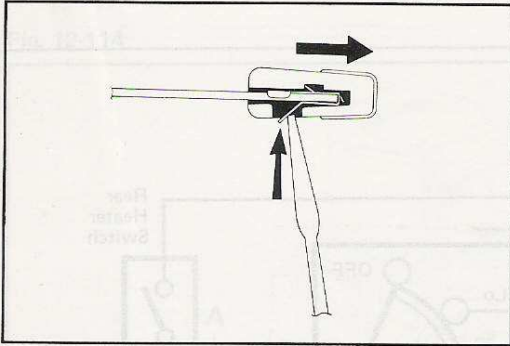Fig. 12-107




2. Remove the heater switch knob.

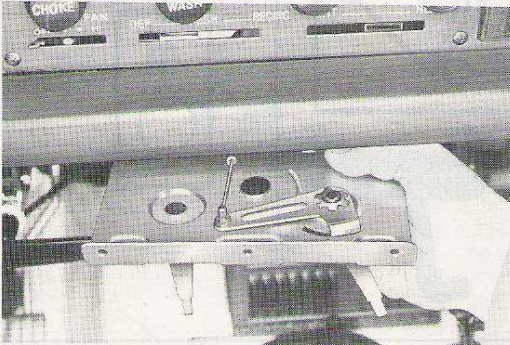Fig. 12-108




3. Remove the three screws attaching the heater control, and take off the heater control together with control cable.

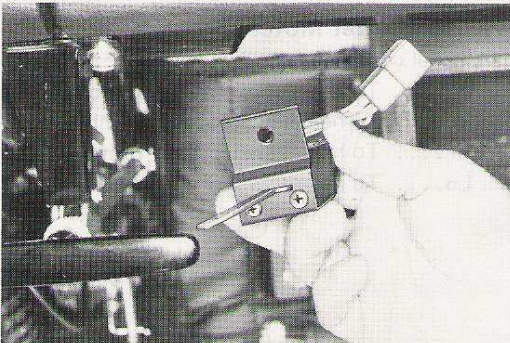Fig. 12-109



4. Remove the screw attaching the heater switch bracket, and take off the heater switch together with bracket.

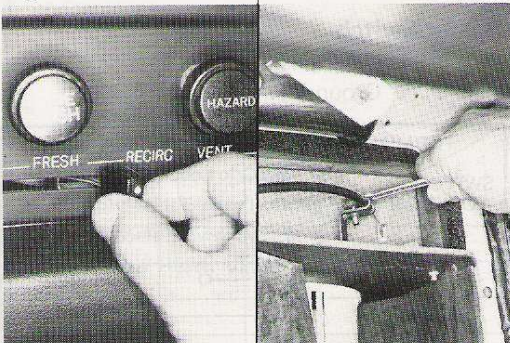Fig. 12-110



Adjustment

After installing the heater or boost ventilator control, make sure to check that it operates properly. If faulty, correct by adjusting the installed position of the cable.

INSPECTION

Fig. 12-111

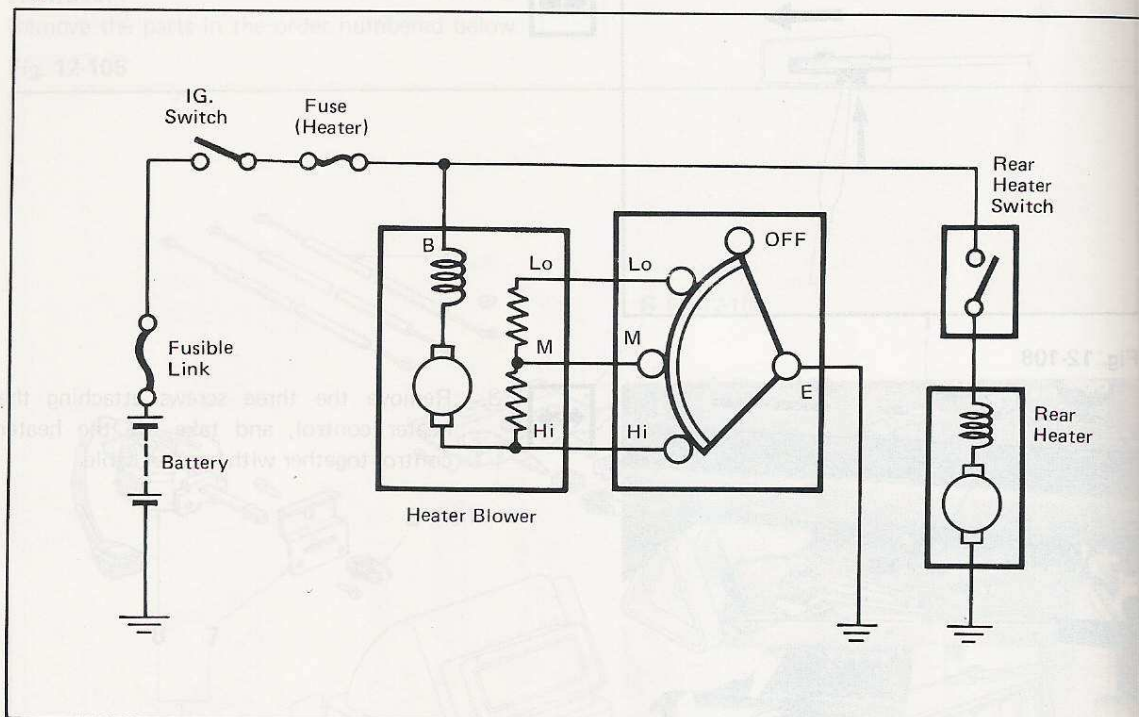
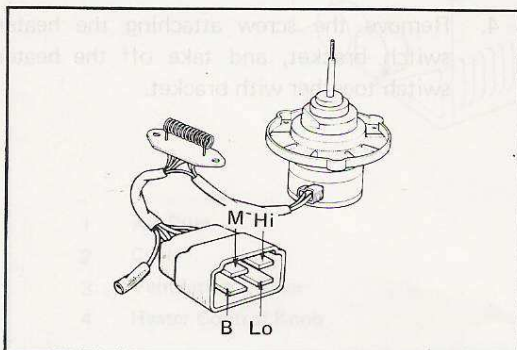



Fig. 12-112

**Heater Blower Motor**

Terminal connections

- B To heater fuse (power source)
- M To heater switch "M" terminal
- Hi To heater switch "Hi" terminal
- Lo To heater switch "Lo" terminal

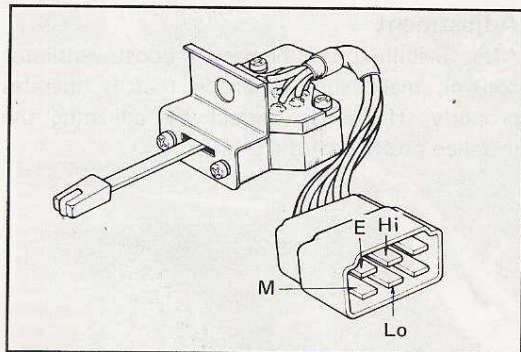Fig. 12-113

**Heater Switch**


Terminal connections




- E Ground

TERMINAL SWITCH POSITION	E	Lo	M	Hi
OFF				
1ST STEP	○	○		
2ND STEP	○		○	
3RD STEP	○			○

HEATER (40 SERIES)

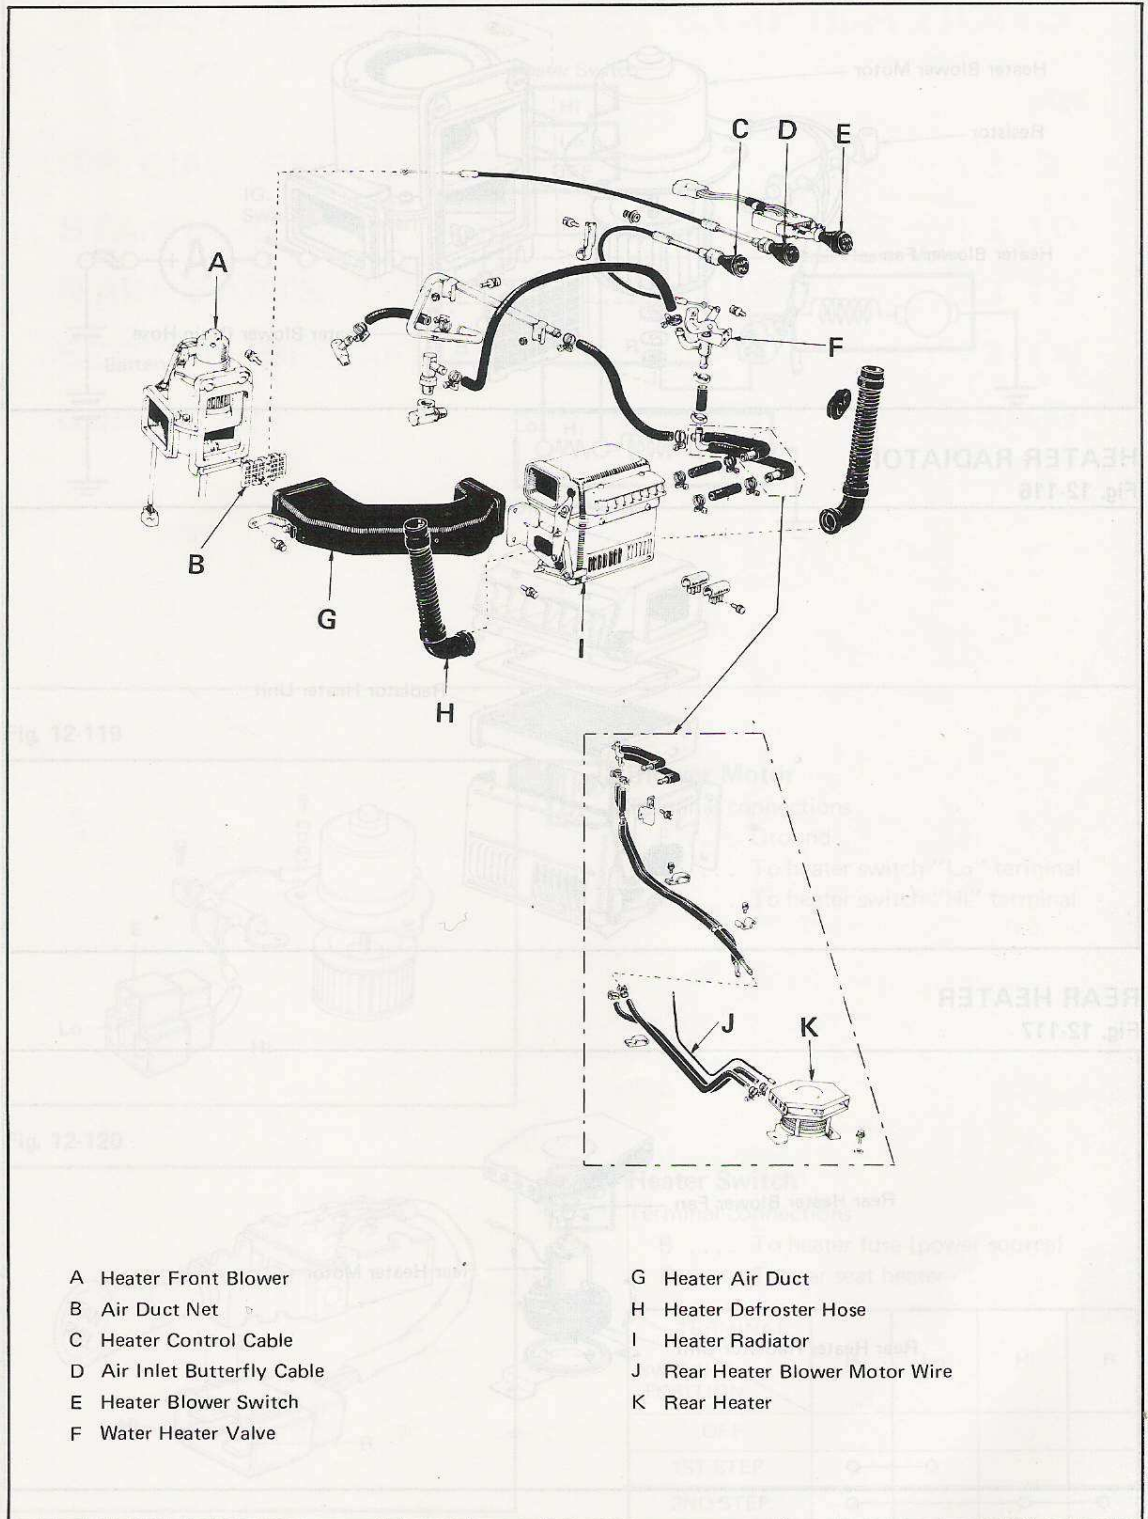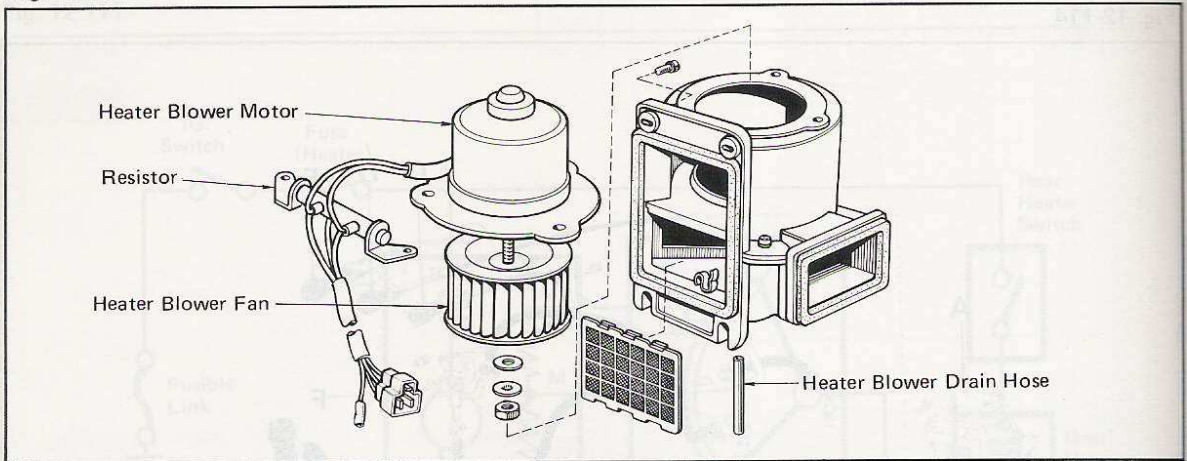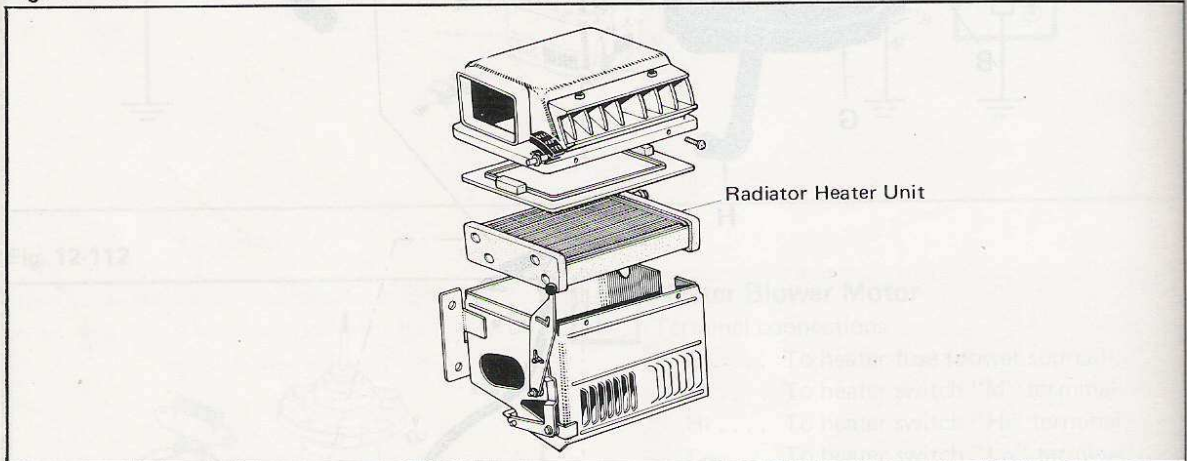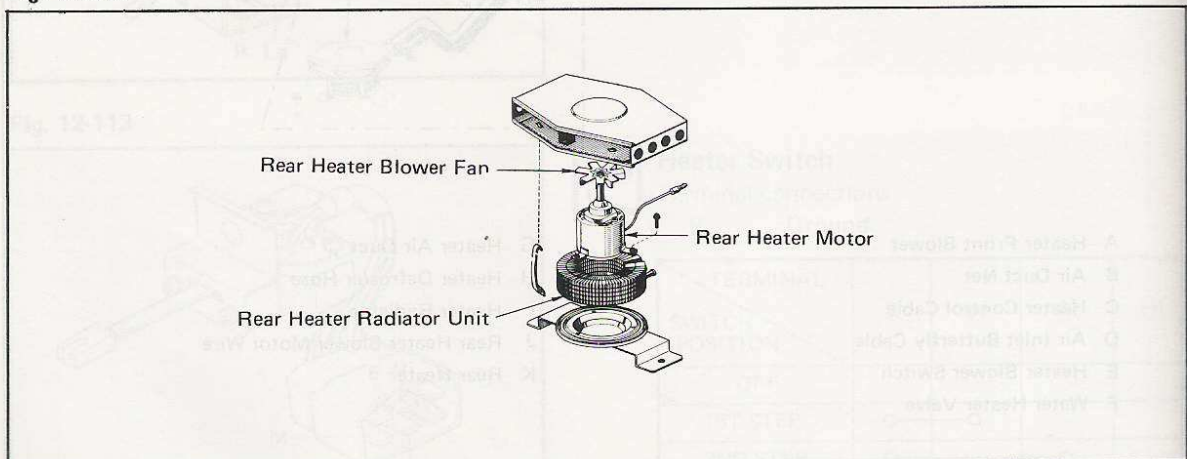Fig. 12-114



HEATER FRONT BLOWER**Fig. 12-115****HEATER RADIATOR****Fig. 12-116****REAR HEATER****Fig. 12-117**

INSPECTION

Fig. 12-118


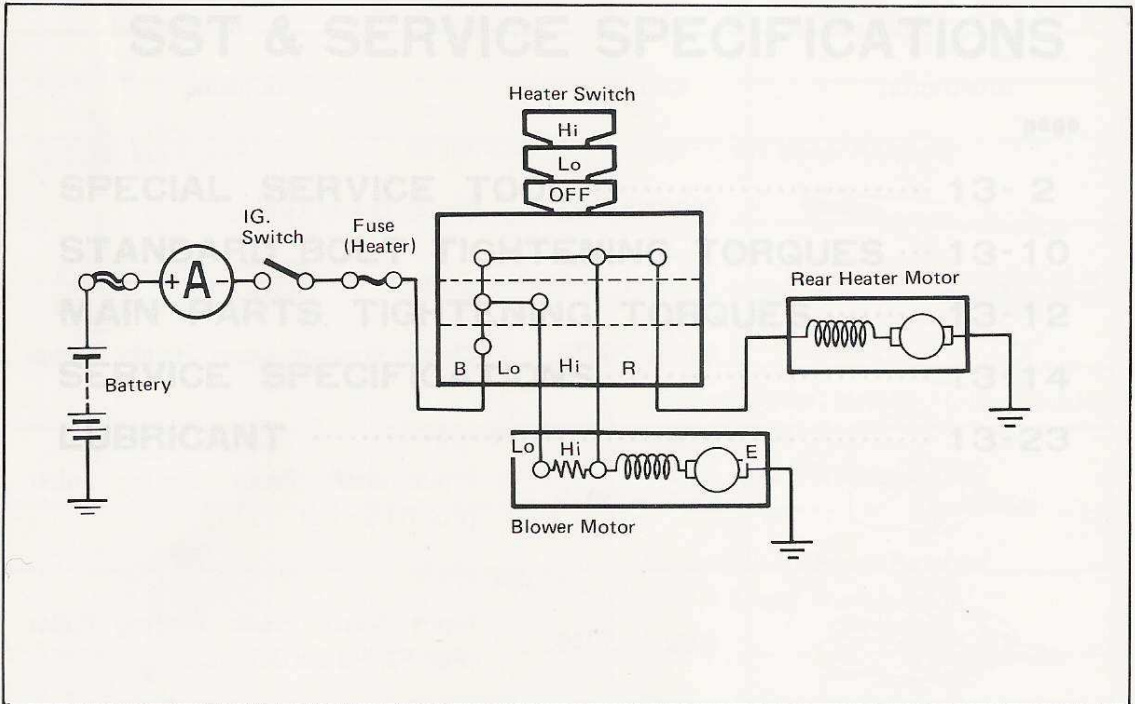


Fig. 12-119

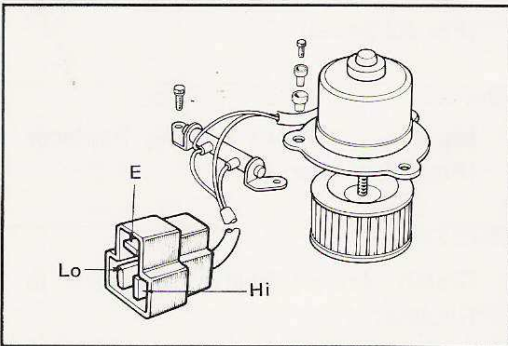


Blower Motor

Terminal connections

- E Ground
- Lo To heater switch "Lo" terminal
- Hi To heater switch "Hi" terminal

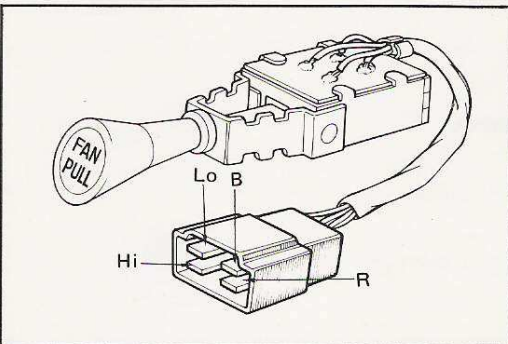Fig. 12-120



Heater Switch

Terminal connections

- B To heater fuse (power source)
- R To rear seat heater


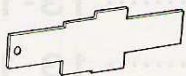
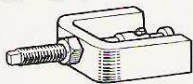
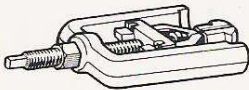
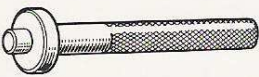
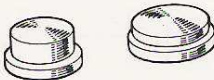
TERMINAL SWITCH POSITION	B	Lo	Hi	R
OFF				
1ST STEP	○	○		
2ND STEP	○		○	○

SST & SERVICE SPECIFICATIONS




	page
SPECIAL SERVICE TOOL	13- 2
STANDARD BOLT TIGHTENING TORQUES ...	13-10
MAIN PARTS TIGHTENING TORQUES	13-12
SERVICE SPECIFICATIONS	13-14
LUBRICANT	13-23

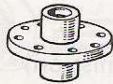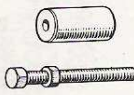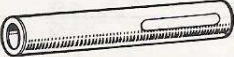SPECIAL SERVICE TOOL


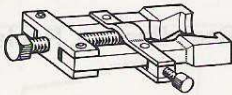
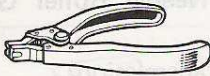
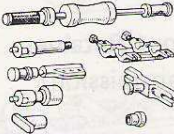

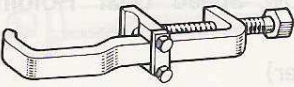
CLUTCH

Illustration	Tool No.	Tool Name
	09301-55022	Clutch Guide Tool
	09302-25010	Clutch Pressure Lever Height Gauge
	09303-35010	Input Shaft Front Bearing Puller (For BJ Series)
	09303-55010	Input Shaft Front Bearing Puller (For FJ, HJ Series)
	09304-30012	Input Shaft Front Bearing Replacer (For BJ Series)
	09304-47010	Input Shaft Front Bearing Replacer (For FJ, HJ Series)
	09315-00021	Clutch Release Bearing Remover & Replacer

TRANSMISSION & TRANSFER

Illustration	Tool No.	Tool Name
	09305-60010	Gear Shift Lever Remover
	09309-36020	Transmission Rear Bearing Replacer
	09311-60010	Counter Gear Needle Roller Guide Shaft (For 3-Speed Transmission)
	09314-36010	Output Shaft Front Retainer (For 4-Speed Transmission)
	09316-60010	Transmission & Transfer Bearing Replacer
	09318-60011	Transfer Low Speed Gear Holding Tool (For Transfer)
	09319-60010	Transfer Idler Gear Shaft Remover (For Transfer)
	09323-60010	Transfer Guide Shaft (For 3-Speed Transmission)
	09330-00020	Companion Flange Holding Tool
	09506-35010	Differential Drive Pinion Rear Bearing Replacer (For 4-Speed Transmission)

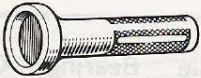
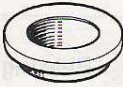

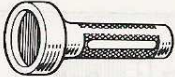
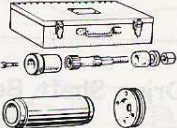

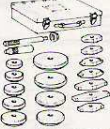

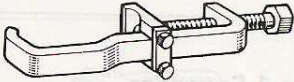
TRANSMISSION & TRANSFER (Cont'd)

Illustration	Tool No.	Tool Name
	09515-21010	Rear Axle Shaft Bearing Replacer (For 4-Speed Transmission)
	09602-10010	Front Axle Inner Bearing Puller (For 4-Speed Transmission)
	09905-00010	Snap Ring No.1 Expander
	09910-00013	Puller Set (For 3-Speed Transmission)
	09950-20010	Universal Puller
	09956-00010	Tightening Piece

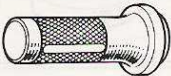



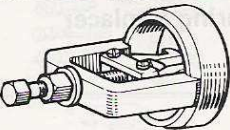
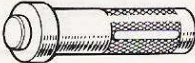
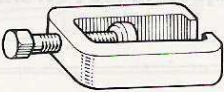
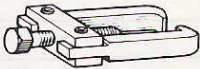
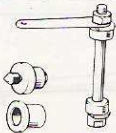
REAR AXLE & DIFFERENTIAL

Illustration	Tool No.	Tool Name
	09330-00020	Companion Flange Holding Tool
	09504-00010	Differential Side Bearing Adjusting Nut Wrench

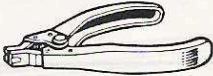

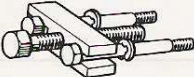

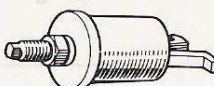

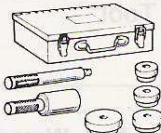
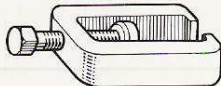

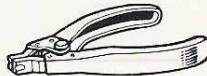
REAR AXLE & DIFFERENTIAL (Cont'd)

Illustration	Tool No.	Tool Name
	09505-20010	Differential Side Bearing Replacer
	09506-35010	Differential Drive Pinion Rear Bearing Replacer
	09514-35010	Rear Wheel Bearing Puller
	09515-35010	Rear Wheel Bearing Replacer
	09530-35010	Differential Drive Pinion Adjusting Gauge
	09607-60020	Front Wheel Adjusting Nut Wrench
	09608-35012	Axle Hub & Drive Pinion Bearing Tool Set
	09950-20010	Universal Puller
	09956-00010	Tightening Piece






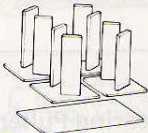


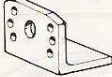

FRONT AXLE

Illustration	Tool No.	Tool Name
	09605-60010	Steering Knuckle Bearing Cup Replacer
	09606-60010	Steering Knuckle Bearing Cup Remover
	09607-60020	Front Wheel Adjusting Nut Wrench
	09612-65012	Steering Worm Bearing Puller
	09618-60010	Front Axle & Drive Shaft Bearing Replacer
	09611-20014	Tie Rod End Puller
	09628-62010	Ball Joint Puller
	09634-60012	Steering Knuckle Centering Gauge
	09905-00010	Snap Ring No.1 Expander


STEERING

Illustration	Tool No.	Tool Name
	09307-12010	Extension Housing Bushing Replacer (For Gear Housing Bushing Replacement)
	09608-35012	Axle Hub & Drive Pinion Bearing Tool Set
	09609-20010	Steering Wheel Puller
	09610-55011	Pitman Arm Puller
	09612-30011	Steering Worm Bearing Puller
	09612-65012	Steering Worm Bearing Puller
	09620-30010	Steering Gear Box Replacer Set
	09611-20014	Tie Rod End Puller
	09628-62010	Ball Joint Puller
	09905-00010	Snap Ring No.1 Expander

BRAKE


Illustration	Tool No.	Tool Name
	09607-60020	Front Wheel Adjusting Nut Wrench
	09703-30010	Brake Shoe Return Spring Tool
	09704-10010	Brake Adjusting Tool
	09736-30020	Booster Diaphragm Retainer Remover & Replacer
	09737-22012	Brake Booster Push Rod Gauge
	09738-20010	Booster Overhaul Tool Set
	09738-22012	Booster Overhaul Tool
	09751-36010	Brake Tube Union Nut Wrench 10 x 12
	09753-22010	Booster Overhaul Stand
	09905-00010	Snap Ring No. 1 Expander

FRONT WINCH

Illustration	Tool No.	Tool Name
	09325-12010	Transmission Oil Plug
	09330-00020	Companion Flange Holding Tool

STANDARD BOLT TIGHTENING TORQUES

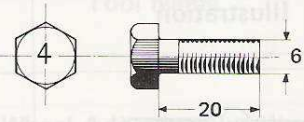9 1 1 1 1 - 4 0 6 2 0 ————— Part Number
 Length of Bolt: 20 mm
 Basic Major Dia. of Thread:
 6 mm
 Bolt Head Mark*



* Bolt Head Mark has the following indications.

SPECIFIED TORQUE FOR STANDARD BOLT

Class	Basic Dia. mm	Pitch mm	Standard Torque kg-m (ft-lb)	Torque Limit kg-m (ft-lb)
4T	6	1	0.47 (3.4)	0.4 – 0.6 (2.9 – 5.0)
	8	1.25	1.11 (8.0)	1.0 – 1.6 (7.3 – 11.6)
	10	1.25	2.25 (16.3)	1.9 – 3.1 (13.7 – 22.4)
	10	1.5	2.14 (15.5)	1.8 – 3.0 (13.0 – 21.7)
	12	1.25 (ISO)	4.40 (31.8)	3.5 – 5.5 (25.3 – 39.8)
	12	1.5	3.89 (28.1)	3.5 – 5.0 (25.3 – 36.2)
	12	1.75	3.74 (27.0)	3.0 – 5.0 (21.7 – 36.2)
	13	1.5	5.08 (36.8)	4.5 – 7.0 (32.5 – 50.6)
	14	1.5	6.33 (45.8)	5.0 – 8.0 (36.2 – 57.8)
	14	2	5.93 (42.8)	4.7 – 7.7 (34.0 – 55.7)
	16	1.5	9.57 (69.2)	7.5 – 11.0 (54.2 – 79.6)
	16	2	9.10 (65.8)	7.1 – 10.6 (51.3 – 76.7)
5T	6	1	0.71 (5.1)	0.6 – 0.9 (4.4 – 6.5)
	8	1.25	1.66 (12.0)	1.5 – 2.2 (10.9 – 15.9)
	10	1.25	3.34 (24.1)	3.0 – 4.5 (21.7 – 32.5)
	10	1.5	3.22 (23.3)	2.7 – 4.2 (19.5 – 30.4)
	12	1.25 (ISO)	6.60 (47.7)	5.0 – 8.0 (36.2 – 57.8)
	12	1.5	5.84 (42.2)	5.0 – 7.0 (36.2 – 50.6)
	12	1.75	5.61 (40.6)	4.8 – 6.8 (34.7 – 49.2)
	13	1.5	7.63 (55.2)	6.5 – 9.0 (47.0 – 65.1)
	14	1.5	9.50 (68.7)	7.5 – 11.0 (54.2 – 79.6)
	14	2	8.90 (65.3)	7.0 – 10.5 (50.6 – 75.9)
	16	1.5	14.36 (103.8)	12.0 – 17.0 (86.8 – 123.0)
	16	2	13.58 (98.1)	11.5 – 16.5 (83.2 – 119.2)
6T	6	1	0.71 (5.1)	0.6 – 0.9 (4.4 – 6.5)
	8	1.25	1.66 (12.0)	1.5 – 2.2 (10.9 – 15.9)
	10	1.25	3.37 (24.0)	3.0 – 4.5 (21.7 – 32.5)
	10	1.5	3.20 (23.1)	2.7 – 4.2 (19.5 – 30.4)
	12	1.25 (ISO)	6.60 (47.7)	5.0 – 8.0 (36.2 – 57.8)
	12	1.5	5.84 (42.2)	5.0 – 7.0 (36.2 – 50.6)
	12	1.75	5.61 (40.6)	4.8 – 6.8 (34.7 – 49.2)

SPECIFIED TORQUE FOR STANDARD BOLT

Class	Basic Dia mm	Pitch mm	Standard Torque kg-m (ft-lb)	Torque Limit kg-m (ft-lb)
7T	6	1	0.94 (6.9)	0.8 – 1.2 (5.8 – 8.6)
	8	1.25	2.21 (16.1)	2.0 – 3.0 (14.5 – 21.7)
	10	1.25	4.49 (32.5)	4.0 – 5.5 (28.9 – 39.8)
	10	1.5	4.29 (31.0)	3.7 – 5.2 (26.8 – 37.6)
	12	1.25 (ISO)	8.80 (63.6)	7.5 – 10.5 (54.2 – 75.9)
	12	1.5	7.78 (56.2)	7.0 – 9.0 (50.6 – 65.1)
	12	1.75	7.48 (54.1)	6.0 – 8.5 (43.3 – 61.4)
	13	1.5	10.17 (73.5)	8.0 – 12.0 (57.8 – 86.8)
	14	1.5	12.67 (91.6)	10.0 – 15.0 (72.3 – 108.5)
	14	2	11.86 (85.8)	9.5 – 14.0 (68.7 – 101.2)
	16	1.5	19.15 (138.5)	15.0 – 23.0 (108.5 – 166.2)
	16	2	18.11 (131.0)	14.0 – 22.0 (101.2 – 159.0)

– Note –

The above specified tightening torque is applicable only for female threads in steel material. If the female threads are for materials other than steel, and tightening surface are subjected to heat or vibrations, these specified tightening torque must be reconsidered.

TRANSMISSION & TRANSFER

Location	kg-m (ft-lb)
Transmission Case X Transmission Case Cover (For 4-Speed)	3.0 — 4.5 (21.7 — 32.6)
Transmission Case X Transfer Case	5 — 8 (36 — 58)
Transmission Case X Clutch Housing	5 — 8 (36 — 58)
Transmission Output Shaft X Nut (For 4-Speed)	11 — 14 (80 — 101)
(For 3-Speed)	14 — 15 (101 — 109)
Transfer Output Front Shaft X Nut	11 — 14 (80 — 101)
Transfer Case X Parking Brake Backing Plate	2 — 3 (14 — 22)
Transfer Output Shaft X Parking Brake Drum X Nut	11 — 14 (80 — 101)

DIFFERENTIAL

Location	kg-m (ft-lb)
Differential Case X Ring Gear	10.5 — 12.0 (75.9 — 86.8)
Differential Carrier X Bearing Cap	9 — 11 (65.1 — 79.6)
Drive Pinion X Flange X Nut	20 — 24 (144 — 173)

REAR AXLE

Location	kg-m (ft-lb)
Rear Axle Shaft X Rear Axle Hub	2.8 — 4.0 (20.3 — 28.9)
Rear Axle Housing X Lock Nut	8 — 10 (58 — 72)

FRONT AXLE

Location	kg-m (ft-lb)
Steering Knuckle Arm X Steering Knuckle	6 — 7.5 (43 — 54.3)
Steering Knuckle X Knuckle Spindle X Backing Plate	1.5 — 2.2 (10.9 — 16.0)
Front Axle Hub X Free Wheel Hub Body	2.5 — 3.5 (18.1 — 25.3)
Front Axle Hub X Axle Outer Shaft Flange	2.8 — 3.5 (20.3 — 25.3)
Free Wheel Hub Body X Free Wheel Hub Cover	0.4 — 0.7 (2.9 — 5.1)
Steering Knuckle Sprindile X Lock Nut	8 — 10 (58 — 72)

STEERING

Location	kg-m (ft-lb)
Steering Gear Housing X Gear Housing End Cover	3.0 — 4.5 (21.7 — 32.5)
Steering Gear Housing X Sector Shaft End Cover	3.0 — 4.5 (21.7 — 32.5)
Steering Gear Housing X Gear Housing Bracket	4.0 — 5.5 (28.9 — 39.8)
Sector Shaft X Pitman Arm	16.5 — 19.5 (119 — 141)

BRAKE

Location	kg-m (ft-lb)
Transfer Output Shaft X Parking Brake Drum X Nut	11 — 14 (80 — 101)
Disc Brake Disc X Front Axle Hub	4.0 — 5.5 (28.9 — 39.8)
Disc Brake Caliper X Steering Knuckle	7.5 — 10.5 (54.2 — 76.0)

FRONT WINCH

Location	kg-m (ft-lb)
Power Take—Off Output Shaft X Universal Joint Flange X Nut	1.5 — 2.2 (10.9 — 15.9)
Front Winch Worm Bearing Retainer X Winch Gear Case	1.9 — 3.1 (14 — 22)

SERVICE SPECIFICATIONS

CLUTCH

Pedal Height (From Asphalt Sheet Top Surface)		w/Brake Booster mm (in.)	w/o Brake Booster mm (in.)	
FJ, HJ, BJ40 Series		215 (8.46)	198 (7.80)	
FJ55 Series		185 (7.28)	172 (6.77)	
Pedal Play (At Pedal Top)		mm (in.)	0.5-3.0 (0.02-0.12)	
Release Fork Tip Play	FJ, HJ Series	mm (in.)	3 – 4 (0.12 – 0.16)	
	BJ Series	mm (in.)	2 – 3.5 (0.08 – 0.14)	
Clutch Disc	Rivet Head Depth Limit	mm (in.)	0.3 (0.012)	
	Run-Out Limit	mm (in.)	1.0 (0.04)	
Compression Spring		Installed Length mm (in.)	Installed Load kg (lb)	Installed Load Limit kg (lb)
HJ Series	Small Spring	42.9 (1.689)	42.5 (93.5)	40 (88)
	Large Spring	43.5 (1.713)	62.2 (137)	53 (117)
BJ Series		37.1 (1.461)	44.6 (98.3)	39 (86)
Clutch Dia Phragm Spring (For FJ Series)			1.0 (0.04)	
Unequal Height Limit		mm (in.)		
Clutch Lever Height (Except FJ Series)			Standard mm (in.)	
HJ Series			14.2 (0.559)	
BJ Series			12.0 (0.472)	

FRONT AXLE

Location	mm (in.)
Steering Knuckle Arm X Steering Knuckle	5 – 7.5 (43 – 54.3)
Steering Knuckle X Knuckle Spindles X Backing Plate	1.5 – 2.2 (10.9 – 16.0)
Front Axle Hub X Free Wheel Hub Body	2.5 – 3.5 (18.1 – 25.3)
Front Axle Hub X Axle Outer Shaft Flange	2.8 – 3.5 (20.3 – 25.3)
Free Wheel Hub Body X Free Wheel Hub Cover	0.4 – 0.7 (2.8 – 5.0)
Steering Knuckle Spindles X Lock Nut	8 – 10 (58 – 72)

4-SPEED TRANSMISSION (H41, H42)

Gear Ratio	Transmission Type	H41 (Except USA & Canada)	H42 (For USA & Canada)
	1st	4.925	3.555
	2nd	2.643	2.292
	3rd	1.519	1.410
	4th	1.000	1.000
	Reverse	4.925	4.271
Clearance	Standard mm (in.)		Limit mm (in.)
Thrust Clearance, 3rd Gear	0.13-0.28 (0.0051-0.0110)		0.35 (0.0138)
Oil Clearance, 3rd Gear	0.07-0.12 (0.0028-0.0047)		0.12 (0.0047)
Reverse Idler Gear	—		0.16 (0.0063)
Synchronizer Ring, 3rd & 4th Gears	—		0.8 (0.032)
Hub Sleeve And Shift Forks	—		0.8 (0.032)
Reverse Idler Gear Slot And Shift Arm Shoe	—		0.7 (0.028)
Synchronizer Ring No.1 Dimension			Limit mm (in.)
	1st		2.8 (0.110)
	2nd		1.8 (0.071)
Reverse Shift Arm Shoe Thickness	Limit mm (in.)		8.0 (0.319)
Snap Ring Thickness	Part No. or Size Mark		Thickness mm (in.)
Input Shaft Bearing	90520-36015		3.31-3.42 (0.1303-0.1346)
	90520-36016		3.20-3.31 (0.1260-0.1303)
Output Shaft Front	0		2.40-2.45 (0.0945-0.0965)
	1		2.45-2.50 (0.0965-0.0984)
	2		2.50-2.55 (0.0984-0.1004)
	3		2.55-2.60 (0.1004-0.1024)
	4		2.60-2.65 (0.1024-0.1043)
	5		2.65-2.70 (0.1043-0.1063)
Counter Shaft Front	0		2.05-2.10 (0.0807-0.0827)
	2		2.15-2.20 (0.0846-0.0866)
	4		2.25-2.30 (0.0886-0.0906)

3-SPEED TRANSMISSION (J30)

Gear Ratio	1st	2.757
	2nd	1.691
	3rd	1.000
	Reverse	3.676
Clearance	Standard mm (in.)	Limit mm (in.)
Thrust Clearance, 2nd Gear	0.08-0.23 (0.0032-0.0091)	0.4 (0.016)
Counter Gear	0.05-0.02 (0.0020-0.0079)	0.4 (0.016)
Oil Clearance, 2nd Gear	—	0.09 (0.0035)
Synchronizer Ring, 2nd & 3rd Gears	—	0.8 (0.032)
Hub Sleeve And Shift Forks	—	0.8 (0.032)
Snap Ring And Washer Thickness	Part No.	Thickness mm (in.)
Input Shaft Bearing	90520-33010	2.43-2.57 (0.0957-0.1012)
	90520-33011	2.30-2.42 (0.0906-0.0953)
Output Shaft Front	90520-33132	2.35-2.40 (0.0925-0.0945)
	90520-33172	2.25-2.30 (0.0886-0.0906)
Counter Gear Thrust Washer	33441-61010	1.45-1.50 (0.0571-0.0591)
	33442-61010	1.50-1.55 (0.0591-0.0610)
	33443-61010	1.55-1.60 (0.0610-0.0630)

TRANSFER

Gear Ratio	Transfer Type	For 3-Speed	For 4-Speed
	High	1.000	1.000
	Low	2.313	1.992
Clearance	Standard mm (in.)		Limit mm (in.)
Transfer Idler Gear Thrust	0.1-0.3 (0.004-0.012)		0.4 (0.016)
Output Gears Oil Clearance	0.035-0.081 (0.00138-0.00319)		0.09 (0.0040)
Hub Sleeve And Shift Fork	—		1.0 (0.04)
Transfer Output Shaft Bearing	Preload (While Rotating) kg (lb)		
New Bearing	1.2-4.1 (2.6-9.0)		
Original Bearing	More Than 0.47 (1.04)		
Thrust Spacer And Adjust Shim Thickness	Part No.	Thickness mm (in.)	
Idler Gear Thrust Spacer	36261-60010	1.2-1.3 (0.047-0.051)	
	36262-60010	1.3-1.4 (0.051-0.055)	
	36263-60010	1.4-1.5 (0.055-0.059)	
Output Shaft Bearing Adjust Shim	90564-64017	0.10 (0.0039)	
	90564-64023	0.15 (0.0059)	
	90564-64024	0.20 (0.0079)	
	90564-64025	0.25 (0.0098)	

PROPELLER SHAFT

Spider Thrust Play	mm (in.)	Less Than 0.05 (0.002)	
Spider Snap Ring Thickness		Part No.	Thickness mm (in.)
		90520-29286	1.48-1.53 (0.0583-0.0602)
		90520-29287	1.53-1.58 (0.0602-0.0622)
		90520-29288	1.58-1.63 (0.0622-0.0642)

DIFFERENTIAL

Gear Ratio	Except USA And Canada For USA And Canada (Except USA And Canada OPT)		3.700 4.111
Backlash	Standard mm (in.)		
Pinion Gear or Side Gear	0.02-0.20 (0.0008-0.0079)		
Ring Gear	0.15-0.20 (0.0059-0.0079)		
Rear Axle Shaft End Clearance	Standard mm (in.)	0.016-0.46 (0.0024-0.0181)	
Ring Gear Run-Out	Limit mm (in.)	0.1 (0.004)	
Preload (Starting)	New Bearing	Original Bearing	
Drive Pinion Bearing	kg-cm (in-lb)	19-26 (16.5-22.6)	9-13 (7.8-11.3)
Total Preload	kg-cm (in-lb)	4-6 (3.5-5.2) + Drive Pinion Preload	
Washer, Spacer And Shim Thickness	Part No.	Thickness mm (in.)	
Side Gear Thrust Washer	41361-35010	1.60 (0.063)	
	41362-35010	1.75 (0.069)	
	41363-35010	1.90 (0.075)	
	41364-35010	2.05 (0.081)	
Pinion Shaft Spacer	41344-35010	29.8 (1.173)	
	41345-35010	30.2 (1.189)	
	41346-35010	30.6 (1.204)	
	41347-35010	29.0 (1.142)	
	41348-35010	29.4 (1.157)	
Drive Pinion Adjusting Shim (For Protrusion)	90564-70101	0.25 (0.0098)	
	90564-70102	0.30 (0.0118)	
	90564-70103	0.35 (0.0138)	
	90564-70104	0.45 (0.0177)	
	90564-70121	0.40 (0.0158)	
Drive Pinion Adjusting Shim (For Prelord)	90564-30035	0.25 (0.0098)	
Drive Pinion Adjusting Washer (For Prelord)	90560-30184	2.75 (0.1083)	
	90560-30185	2.78 (0.1094)	
	90560-30186	2.81 (0.1106)	
	90560-30187	2.84 (0.1118)	
	90560-30188	2.87 (0.1130)	
	90560-30190	2.90 (0.1142)	
	90560-30191	2.93 (0.1154)	
	90560-30192	2.96 (0.1165)	
	90560-30199	2.99 (0.1177)	

FRONT AXLE

Steering Knuckle Bearing Preload (While Rotating)		Standard kg (lb)
		1.8-2.3 (3.9-5.0)
Steering Knuckle Adjusting Shim Thickness	Part No.	Thickness mm (in.)
	43233-60010	0.2 (0.008)
	43234-60010	0.5 (0.020)
	43233-60020	1.0 (0.040)
Free Wheel		Limit mm (in.)
Free Wheel Hub Inner To Hub Ring Oil Clearance		0.3 (0.012)
Front Wheel Alignment		
Toe-In		3-5 mm (0.12-0.2 in.)
Camber		1°
Caster		1°
King Pin Inclination		9°30'
Steering Angle	Inside	32° (26° For 9.00-15 Tire)
	Outside	30° (24° For 9.00-15 Tire)

STEERING

Gear Ratio		20.5 – 23.5	
Steering Wheel Free Play		0 – 25 mm (0 – 0.98 in.)	
Clearance		Standard mm (in.)	Limit mm (in.)
Sector Shaft Oil		0.009-0.060 (0.0004-0.0024)	0.1 (0.004)
Sector Shaft Thrust		—	0.1 (0.004)
Preload (Starting)			Standard kg (lb)
Worm Bearing w/o Sector Shaft			4.0- 6.0 (8.8-13.2)
w/ Sector Shaft Preload			8.0-11.0 (17.6 24.2)
Length			Standard mm (in.)
Steering Relay Rod			827 (32.56)
Tie-Rod			1205 (47.44)
Steering Drag Link (Except FJ55)			855 (33.66)
Intermediate Shaft Snap Ring Thickness (For FJ55 Series)	Part No.		Thickness mm (in.)
	90521-22011		1.20 (0.0424)
	90521-22012		1.25 (0.0492)
	90521-22013		1.30 (0.0512)
Washer And Shim Thickness	Part No.	Mark	Thickness mm (in.)
Sector Shaft Thrust Washer	45352-36010	1	2.00 (0.0787)
	45353-36010	2	2.05 (0.0807)
	45354-36010	3	2.10 (0.0827)
	45355-36010	4	2.15 (0.0846)
	45356-36010	5	2.20 (0.0866)
End Cover Shim (For Worm Bearing Preload)	45323-36010	1	0.05 (0.0020)
	45323-36020	2	0.07 (0.0028)
	45323-36030	3	0.08 (0.0031)
	45323-36040	4	0.10 (0.0039)
	45323-36050	5	0.20 (0.0079)
	45323-36060	6	0.50 (0.020)
	45323-36070	7	0.06 (0.0024)
	45323-36080	8	0.09 (0.0035)

BRAKE

Master & Wheel Cylinder Inner Diameter Standard mm (in.)		40 Series	45 Series	43, 55 Series
Single Master Cylinder Tandem Master Cylinder Tandem Master Cylinder (For U.S.A. And Canada) Front Wheel Cylinder Front Disc Brake Caliper Rear Wheel Cylinder		25.4 (1.0000)	←	←
		25.4 (1.0000)	28.57 (1.1248)	25.4 (1.0000)
		22.22 (0.8748)	28.57 (1.1248)	22.22 (0.8748)
		31.75 (1.2500)	←	←
		42.85 (1.6870) & 33.96 (1.3370)	—	42.85 (1.6870) & 33.96 (1.3370)
		22.22 (0.8748)	28.5 (1.1220)	23.81 (0.9374)
Pedal Height (From Asphalt Sheet Top Surface)		w/Brake Booster mm (in.)		w/Brake Booster mm (in.)
FJ, HJ, BJ40 Series FJ55 Series		215 (8.46) 185 (7.28)		198 (7.80) 172 (6.77)
Pedal Play (At Pedal Top) mm (in.)			3 – 6 (0.12 – 0.23)	
Pedal Reserve Distance		FJ, HJ, BJ40 Series mm (in.) FJ55 Series mm (in.)	More Than 80 (3.15) More Than 70 (2.76)	
Parking Brake Lever Travel		Standard		7 – 12 Notches
Adjustment		Number Of Notches To Be Returned		
Foot Brake Parking Brake		4 – 5 Notches 1 – 2 Notches		
Lining Thickness Foot & Parking Brake Lining Limit mm (in.)		1.5 (0.06)		
Front Drum Inner Diameter Limit mm (in.)		297 (11.70)		
Rear Drum Inner Diameter Limit mm (in.) FJ45, HJ45 & FJ55 Fire Truck		297 (11.70)		
		Except FJ45, HJ45 & FJ55 (Fire Truck) 292 (11.50)		
Disc Brake Pad Thickness		Standard mm (in.)		Limit mm (in.)
		10 (0.39)		1 (0.04)
Disc Brake Disc Thickness		Standard mm (in.)		Limit mm (in.)
		20 (0.79)		19 (0.74)
Disc Brake Disc Runout Limit mm (in.)			0.12 (0.005)	
Booster Push Rod To Master Cylinder Piston Clearance Standard mm (in.)				0.1 – 0.5 (0.004 – 0.020)

BRAKE (Cont'd)

Vacuum Pump		Limit mm (in.)
Rotor To Spline Shaft Play (On Rotor)		2.4 (0.095)
Pump Casing Inner Diameter		58.19 (2.291)
Pump Drive End Frame Bushing Inner Diameter		16.14 (0.6354)
Pump Blad Heigh		12 (0.47)
Width		6.92 (0.272)
Length		34.98 (1.377)

FRONT WINCH

	Part No.	Thickness mm (in.)
Winch Worm Bearing Prelord Adjusting Shim Thickness	38123-60010	0.228 (0.009)
	38124-60010	0.5 (0.020)

LUBRICANT

Place Used	Oil Capacity			Classification
	Liter	US qt	Imp.qt	
Transmission 4-Speed	3.1	3.3	2.7	SAE90, API GL-4
3-Speed	1.7	1.8	1.5	
Transfer	1.7	1.8	1.5	
Front Differential FJ, BJ, HJ Series	2.5	2.6	2.2	SAE90, API GL-5
Rear Differential FJ40 & BJ40	2.4	2.6	2.1	
FJ43 & BJ43	2.7	2.9	2.4	
FJ45, HJ45 & FJ55	2.9	3.1	2.6	
Steering	0.6	0.6	0.5	SAE90, API GL-4
Front Winch	0.6	0.6	0.5	
Ball Joint & Propeller Shaft Spider Grease				NLGI No.1 or No.2
Wheel Bearing Grease				NLGI No.2
Steering Knuckle & Axle Shaft Grease				Molybdenum Disulphide Lithium Base Grease
Brake Fluid				For USA : DOT 3 Other : DOT 3 or SAEJ 1703 (SAE 70R-3)



LAND CRUISER (FJ40, 43, 45) ELECTRICAL WIRING DIAGRAM (Except U.S.A & CANADA)
No. 98878

GRIDE LOCATION	COMPONENTS	GRIDE LOCATION	COMPONENTS
E-2 C-4 C-20	ALTERNATOR AMMETER ANTENNA (OPT)	E-6 E-6 C-2 C-21 G-21	MOTORS: HEATER BLOWER, FRONT (OPT) HEATER BLOWER, REAR (OPT) STARTER WINDSHIELD WASHER (OPT) WINDSHIELD WIPER
D-4	BATTERY	E-4 E-5	OIL PRESSURE GAUGE OIL PRESSURE SENDER
C-19 C-4	CIGARETTE LIGHTER (OPT) COMBINATION METER	C-21 F-2	RADIO (OPT) REGULATOR
G-23	DISTRIBUTOR	F-8 C-12	RELAYS: FRONT DRIVE (OPT) HORN
E-22 G-22 D-22	EMISSION CONTROL SYSTEM (For ECE No. 15): EMISSION CONTROL COMPUTER SPEED SENSOR VACUUM SWITCHING VALVE	E-21	SPEAKER (OPT)
D-14 C-23 F-4 G-5 B-4 C-4	FLASHER, TURN SIGNAL & HAZARD FUEL CUT SOLENOID FUEL GAUGE FUEL SENDER FUSE BOX FUSIBLE LINK	C-8 F-9 D-18 F-8 E-8 C-13 C-6 E-11 B-2 E-20 C-17 E-9 E-10 F-16 C-7 E-14 E-21	SWITCHES: BACK-UP LIGHT BRAKE WARNING LIGHT (OPT) DIMMER FRONT DRIVE (OPT) FRONT DRIVE INDICATOR LIGHT HAZARD HEATER BLOWER MOTOR (OPT) HORN IGNITION INTERIOR LIGHT LIGHT CONTROL PARKING BRAKE (OPT) STOP LIGHT TRAILER SOCKET CHANGE OVER (OPT) TRANSFER INDICATOR (OPT) TURN SIGNAL WINDSHIELD WIPER AND WASHER
G-12	HORNS, LO – HI	F-17	TRAILER SOCKET
E-23 F-20	IGNITION COIL INSPECTION LIGHT SOCKET	G-7	VACUUM SWITCHING SOLENOID (OPT)
G-9 E-17 G-19 E-19 E-20 D-16 C-9 D-15 G-13 G-10 G-17 F-13 G-15 H-14	LIGHTS: BACK-UP, LH · RH COMBINATION METER HEADLIGHT, LH · RH HIGH BEAM INDICATOR INTERIOR DOOM LICENSE PLATE PARKING BRAKE (OPT) PARKING, FRONT SIDE TURN SIGNAL STOP, LH · RH TAIL, LH · RH TURN SIGNAL, FRONT, LH · RH TURN SIGNAL, REAR, LH · RH TURN SIGNAL INDICATOR, LH · RH	E-4 F-5	WATER TEMPERATURE GAUGE WATER TEMPERATUR SENDER

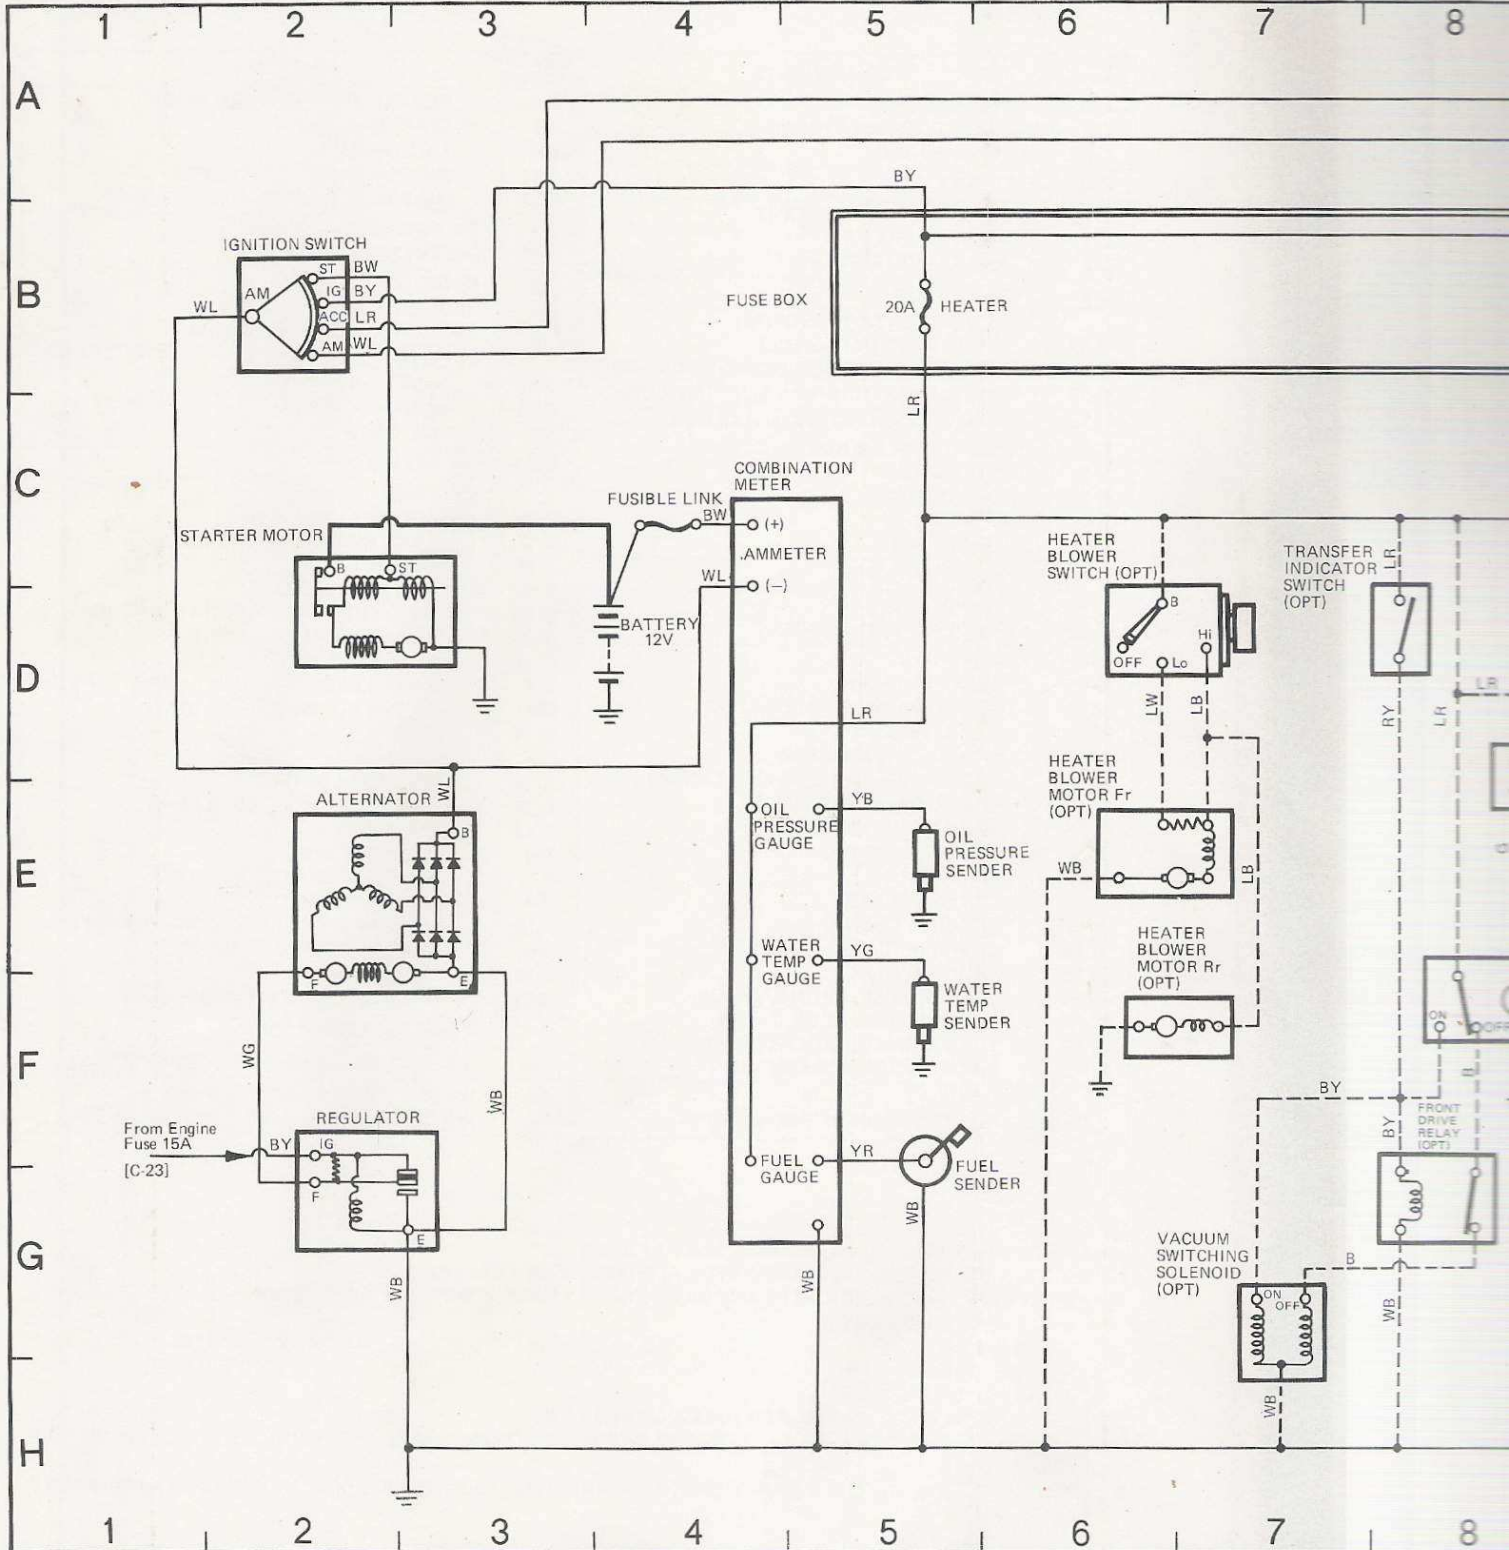
— Note —

When reading the wiring diagram, following should be noted.


1. WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B = BLACK
G = GREEN
L = LIGHT BLUE
O = ORANGE
R = RED
W = WHITE
Y = YELLOW
EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
2. LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
3. BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.



LAND CRUISER (FJ40,43,45) ELECTRICAL WIRING DIAGRAM (Except U.S.)



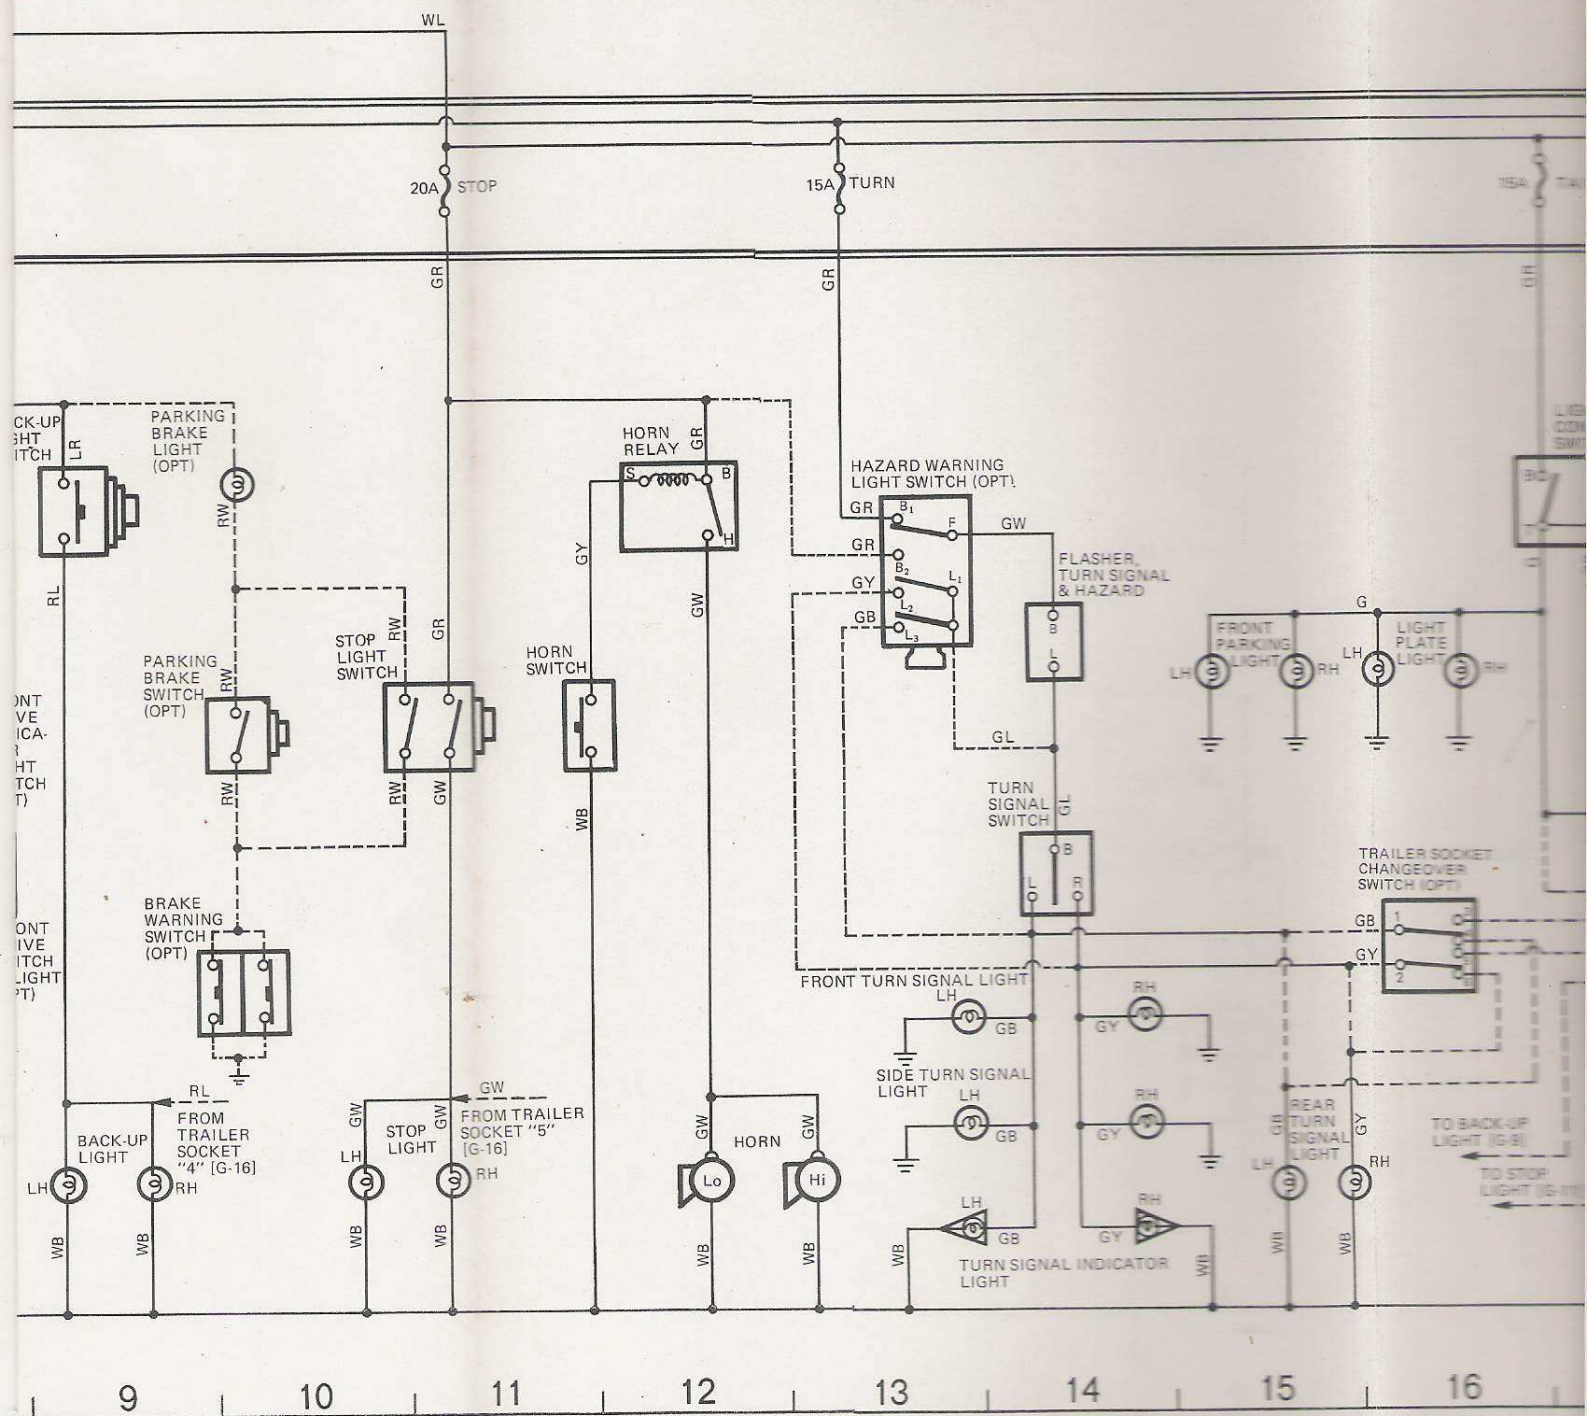A. & CANADA)





LAND CRUISER (FJ55 Series) ELECTRICAL WIRING DIAGRAM (Except U.S.A & CANADA) No.98878

GRIDE LOCATION	COMPONENTS	GRIDE LOCATION	COMPONENTS
G-2	ALTERNATOR	E-8	HEATER BLOWER REAR (OPT)
C-5	AMMETER (Except Tandem)	C-2	STARTER
C-20	ANTENNA (OPT)	G-4	TAIL GATE
D-3	BATTERY	C-21	WINDSHIELD WASHER (OPT)
D-22	CIGARETTE LIGHTER (OPT)	F-21	WINDSHIELD WIPER
E-4	CIRCUIT BREAKER	E-5	OIL PRESSURE GAUGE
C-5	COMBINATION METER	E-6	OIL PRESSURE SENDER
D-4	DISTRIBUTOR	D-20	RADIO (OPT)
G-23	EMISSION CONTROL SYSTEM :	E-2	REGULATOR (For Tandem)
E-23	SPEED SENSOR (For ECE)	F-2	REGULATOR (Except Tandem)
G-23	THROTTLE POSITION COMPUTER (For ECE)	F-9	RELAYS:
D-14	VACUUM SWITCHING VALVE (For ECE)	C-13	FRONT DRIVE (OPT)
D-14	FLASHER, TURN SIGNAL & HAZARD	F-4	HORN
C-24	FUEL CUT SOLENOID (For ECE)	F-4	TAIL GATE
G-5	FUEL GAUGE	E-20	SPEAKER (OPT)
G-6	FUEL SENDER	C-11	SWITCHES:
B-5	FUSE BOX	E-12	BACK-UP LIGHT
C-3	FUSIBLE LINK	E-19	BRAKE WARNING (For Tandem)
E-13	HORNS, LO-HI	E-10	DIMMER
D-4	IGNITION COIL	E-10	FRONT DRIVE (OPT)
G-22	INSPECTION LIGHT SOCKET	D-10	FRONT DRIVE INDICATOR LIGHT (OPT)
G-11	LIGHTS:	D-15	HAZARD WARNING LIGHT
C-12	BACK-UP, LH.RH	C-18	LIGHT CONTROL
G-19	BRAKE WARNING INDICATOR	E-7	HEATER BLOWER, FRONT (OPT)
D-5	(For Tandem)	D-8	HEATER BLOWER, REAR (OPT)
E-10	COMBINATION METER	E-14	HORN
G-20	DISCHARGE WARNING (For Tandem)	B-2	IGNITION
E-20	FRONT DRIVE INDICATOR	G-22	INTERIOR LIGHT
G-22	HEADLIGHT, LH.RH	D-12	PARKING BRAKE (For Tandem)
E-18	HIGH BEAM INDICATOR	C-13	STOP LIGHT
F-18	INTERIOR	G-4	TAIL GATE CONTROL
G-13	LICENSE PLATE	F-5	TAIL GATE REMOTE CONTROL
G-18	PARKING FRONT	H-4	TAIL GATE SAFETY
F-15	STOP, LH. RH	F-16	TRAILER SOCKET CHANGEOVER (OPT)
F-17	TAIL, LH.RH	C-9	TRANSFER INDICATOR (OPT)
G-15	TURN SIGNAL, FRONT, LH.RH	E-15	TURN SIGNAL
G-15	TURN SIGNAL, REAR, LH.RH	D-21	WINDSHIELD WIPER AND WASHER
G-15	TURN SIGNAL, INDICATOR, LH.RH	D-17	TRAILER SOCKET (OPT)
G-15	TURN SIGNAL, SIDE, LH.RH	G-9	VACUUM SWITCHING SOLENOID (OPT)
C-7	MOTORS:	F-5	WATER TEMPERATURE GAUGE
	HEATER BLOWER, FRONT (OPT)	F-6	WATER TEMPERATURE SENDER

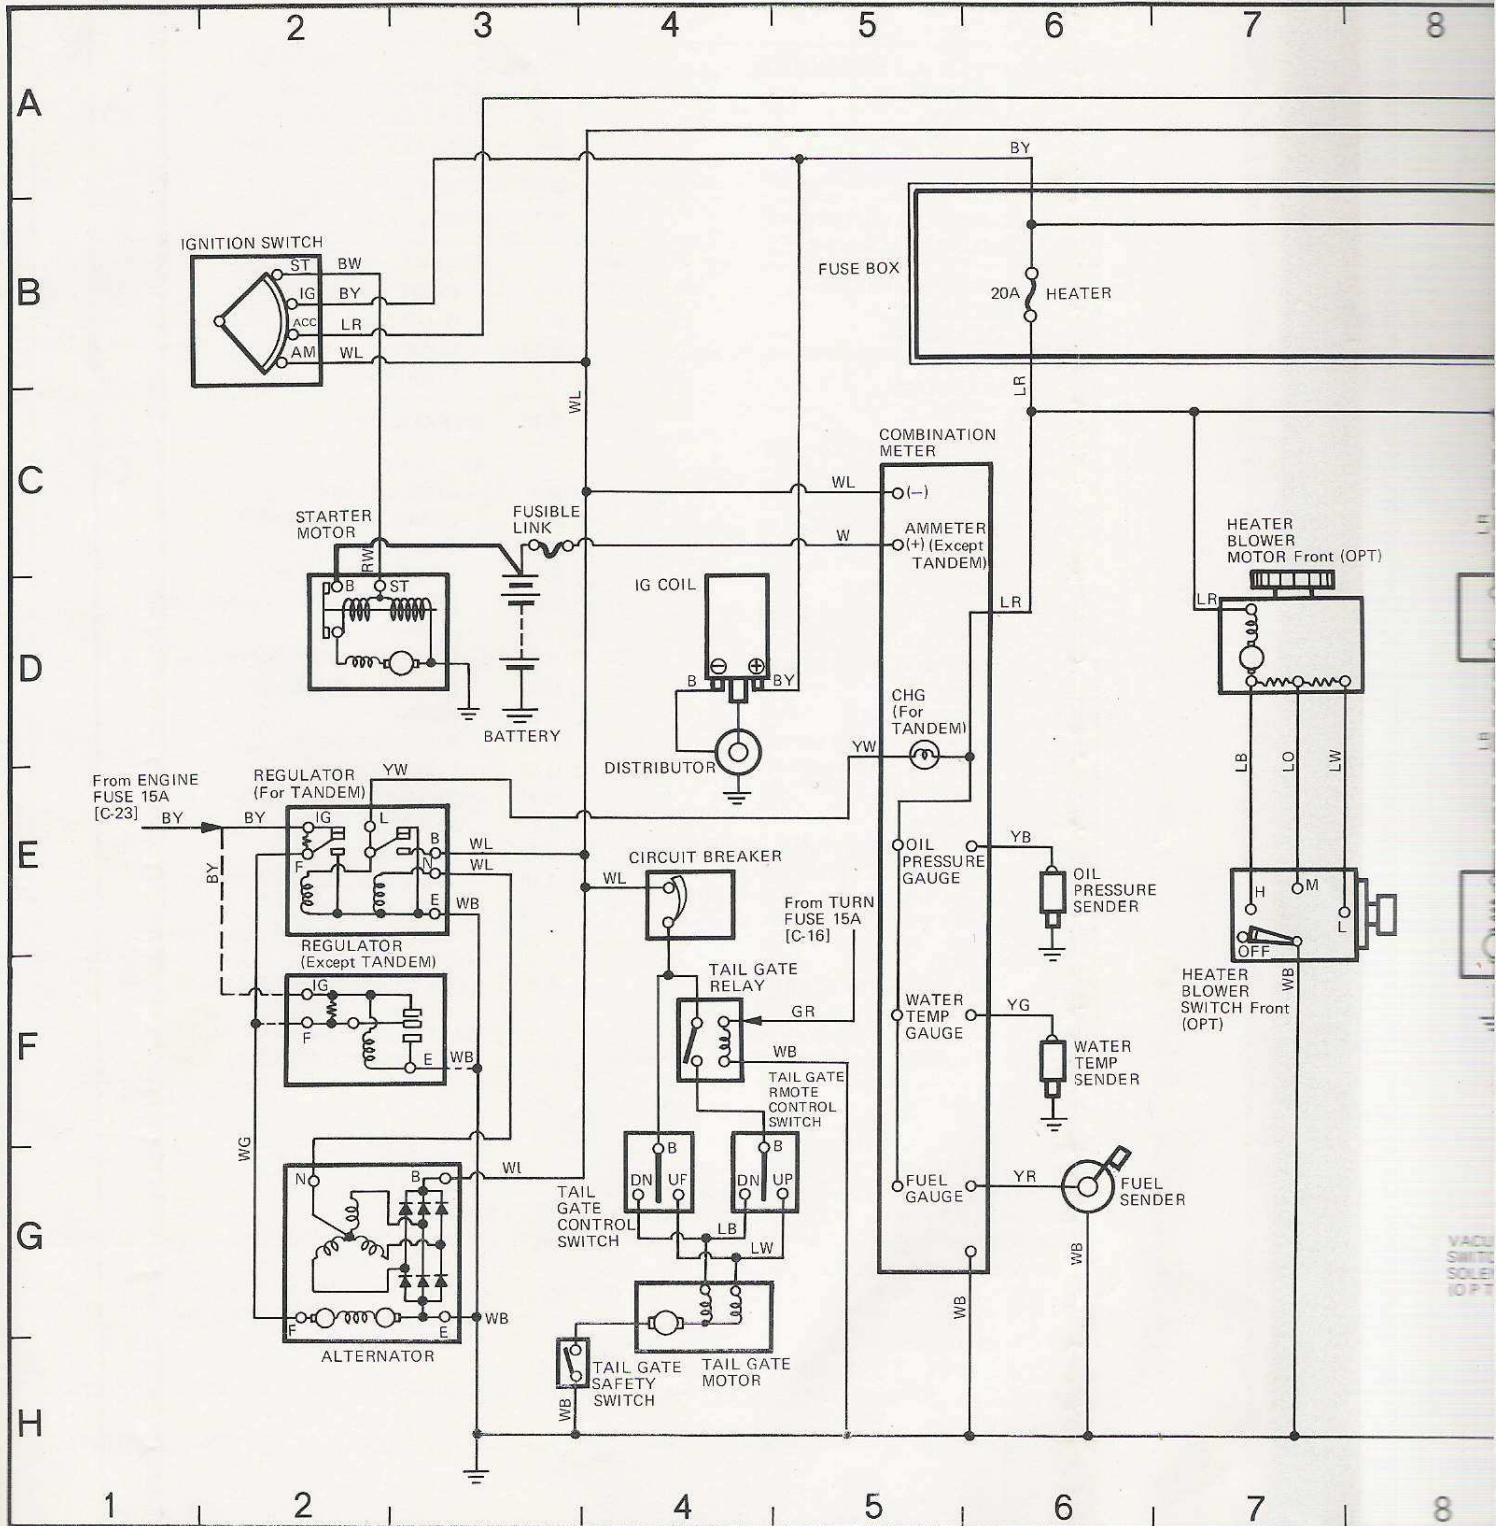
Note:

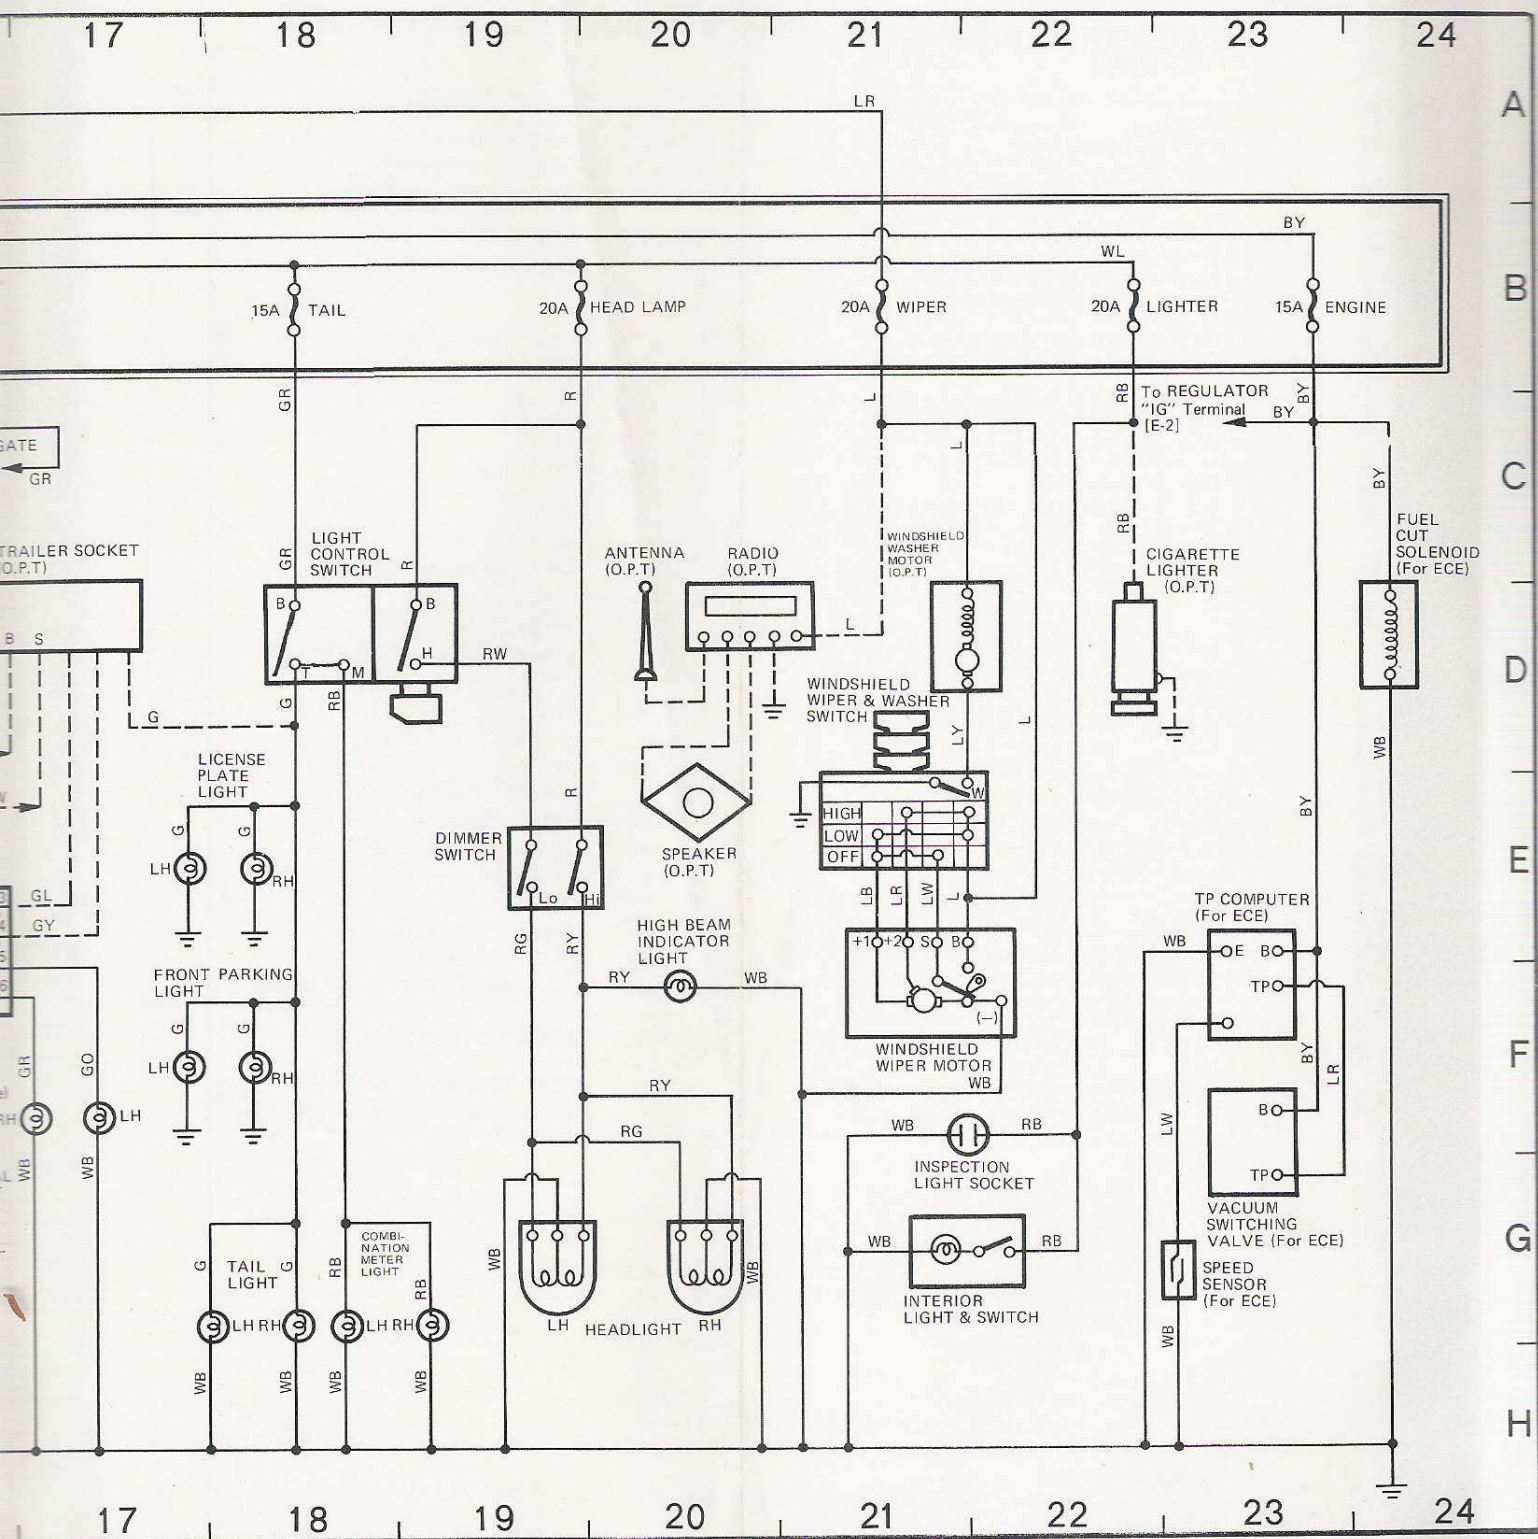
When reading the wiring diagram, following should be noted.


1. WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B = BLACK
G = GREEN
L = LIGHT BLUE
O = ORANGE
R = RED
W = WHITE
Y = YELLOW
EXAMPLE: RG, IS FOR RED AND A GREEN LINE
2. LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
3. BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.



LAND CRUISER (FJ55 Series) ELECTRICAL WIRING DIAGRAM (Except U.S.)







Note :

When reading the wiring diagram, following should be noted.


1. WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.

B = BLACK	O = ORANGE	W = WHITE
G = GREEN	R = RED	Y = YELLOW
L = LIGHT BLUE		


EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
2. LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
3. BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.




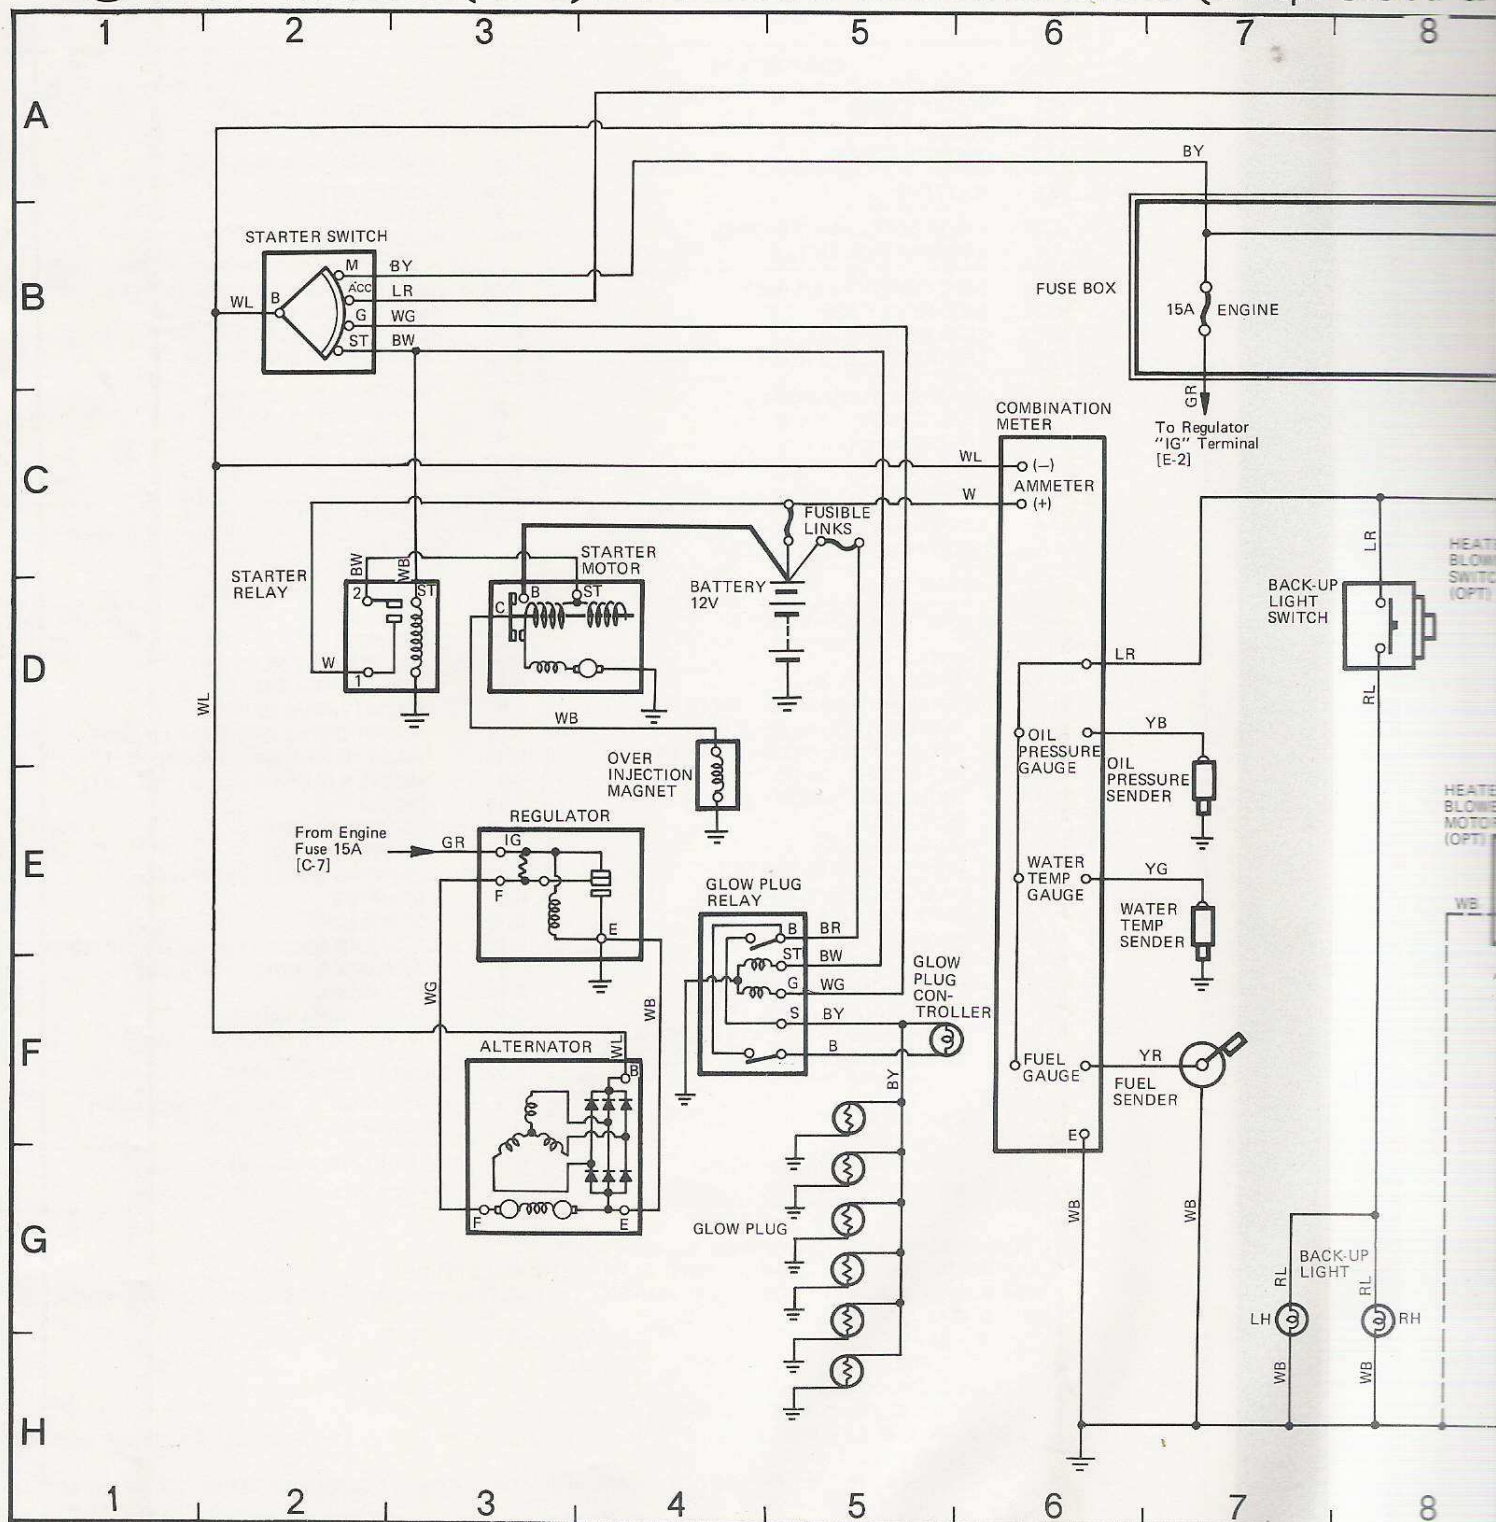LAND CRUISER (HJ45) ELECTRICAL WIRING DIAGRAM (Except U.S.A. &



CANADA)

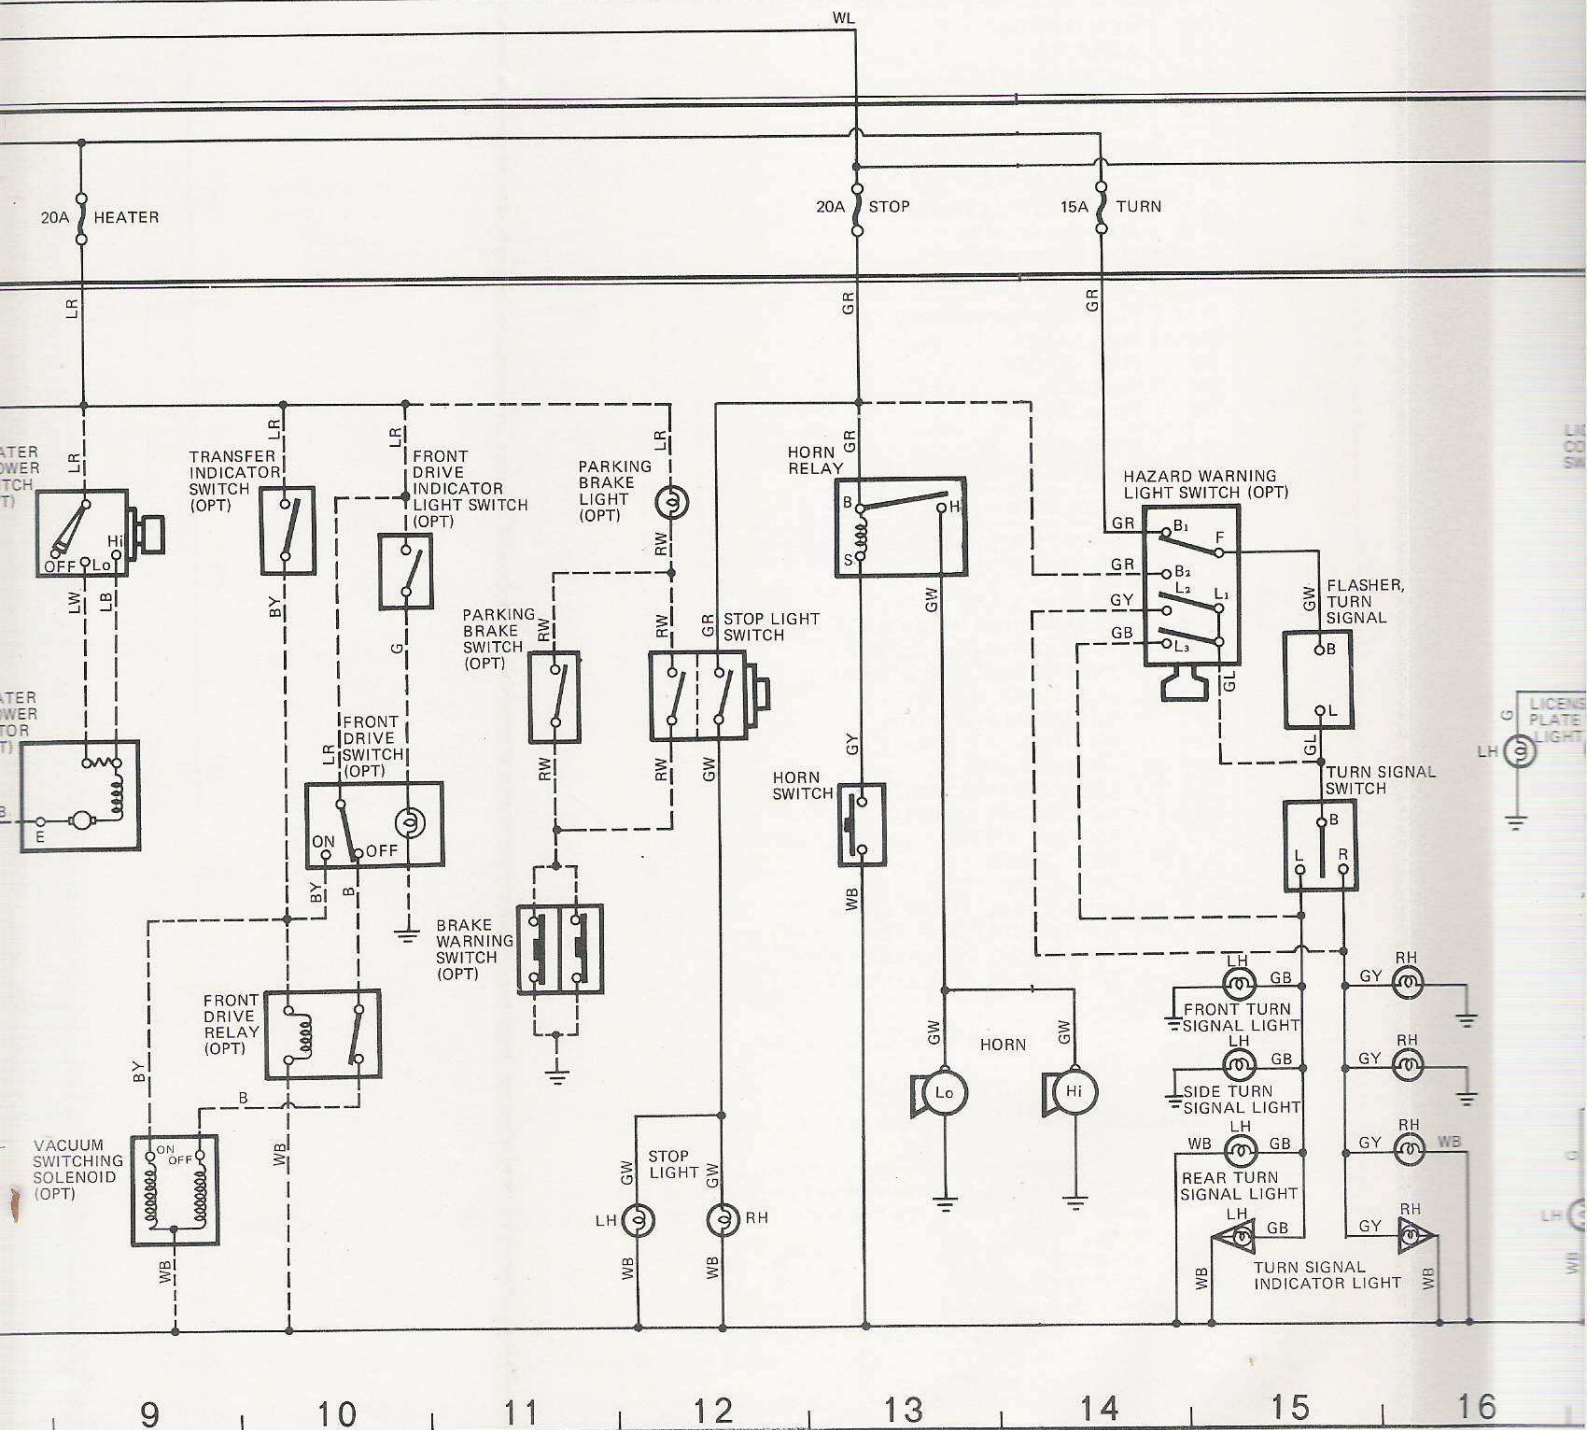

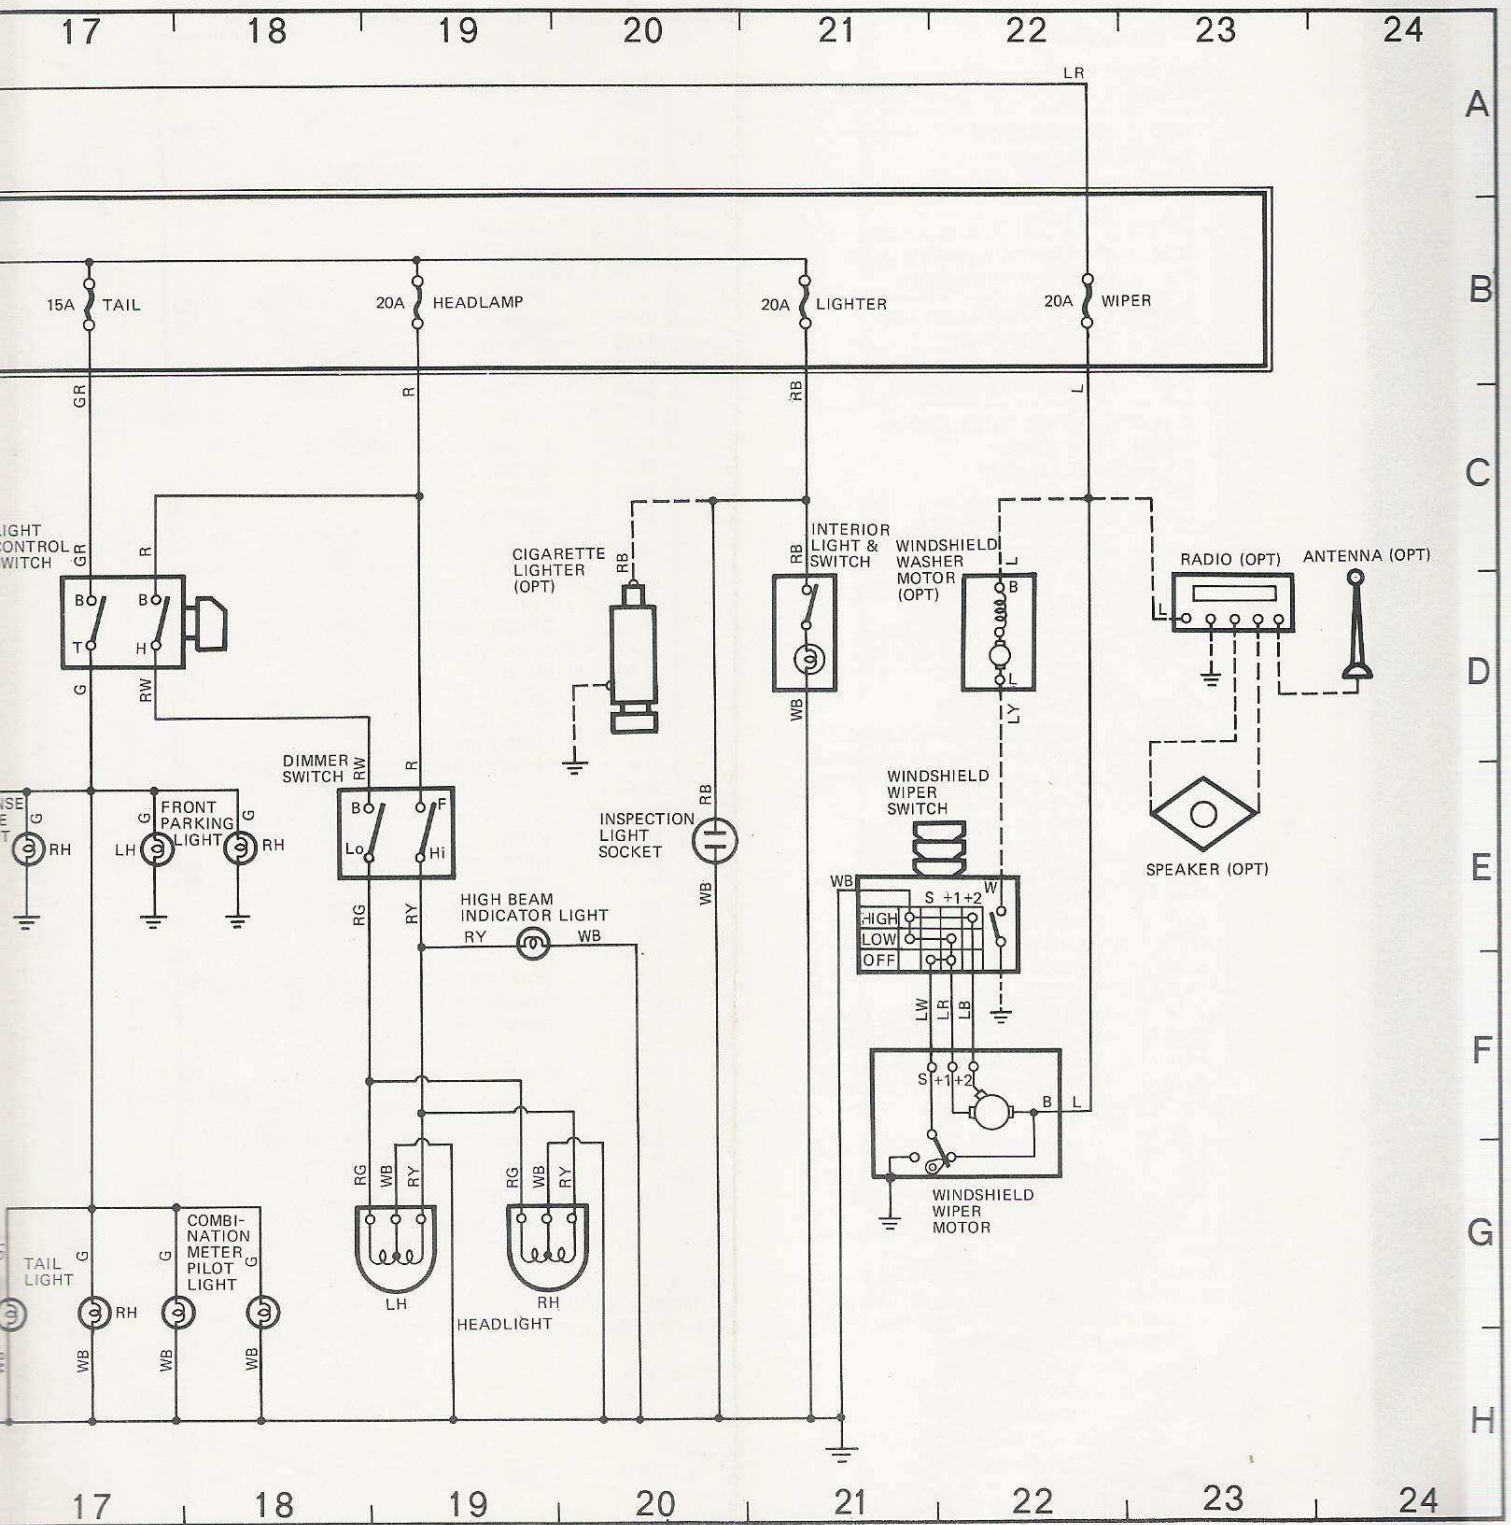



LAND CRUISER (BJ40, 43) ELECTRICAL WIRING DIAGRAM (Except U.S.A & CANADA)
No. 98881

GRID LOCATION	COMPONENTS	GRID LOCATION	COMPONENTS
F-3 C-6 C-20	ALTERNATOR AMMETER ANTENNA (OPT)	D-6 D-7 D-4	OIL PRESSURE GAUGE OIL PRESSURE SENDER OVER INJECTION MAGNET
D-4	BATTERY	C-20 E-3 E-9	RADIO (OPT) REGULATOR RESISTOR (For Front Drive Indicator Switch)
E-22 C-6	CIGARETTE LIGHTER (OPT) COMBINATION METER	D-16 D-22 D-23 E-23	RESISTOR (For Light Control Switch) RESISTOR (For Cigarette Lighter) RESISTOR (For EDIC Controller) RESISTOR (For EDIC Controller)
D-22 F-23 G-23 D-23	EDIC CONTROLLER ASSY. EDIC RELAY ASSY. EDIC MOTOR ASSY. ENGINE SPEED SENSOR	F-8 E-4 C-12 C-2	RELAYS: FRONT DRIVE (OPT) GLOW PLUG HORN STARTER
D-14 F-6 E-7 B-6 C-4	FLASHER, TURN SIGNAL FUEL GAUGE FUEL SENDER FUSE BOX FUSIBLE LINK	D-20	SPEAKER (OPT)
G-4 F-5	GLOW PLUG GLOW PLUG CONTROLLER		SWITCHES:
F-13	HORNS, LO-HI	C-10 F-11 F-22 E-19 G-22 C-15 E-9 D-9 D-14 C-8 E-12 G-21 C-17 E-11 B-2 D-12 E-16 C-9 E-14 E-10 D-21	BACK-UP LIGHT BRAKE WARNING (OPT) COLD START DIMMER ENGINE OIL PRESSURE FOG LIGHT (OPT) FRONT DRIVE (OPT) FRONT DRIVE INDICATOR LIGHT HAZARD WARNING SIGNAL (OPT) HEATER BLOWER (Except ECE OPT) HORN INTERIOR LIGHT LIGHT CONTROL PARKING BRAKE LIGHT (OPT) STARTER STOP LIGHT TRAILER SOCKET CHANGEOVER (OPT) TRANSFER INDICATOR (OPT) TURN SIGNAL VACUUM WARNING WINDSHIELD WIPER & WASHER
C-23	INSPECTION LIGHT SOCKET	E-17	TRAILER SOCKET (OPT)
	LIGHTS:	G-8 C-10	VACUUM SWITCHING SOLENOID (OPT) VACUUM WARNING BUZZER
G-10 D-18 D-15 G-9 G-19 E-20 G-21 D-17 C-17 C-11 D-16 G-12 G-17 F-14 G-15 H-14 G-14	BACK-UP, LH.RH COMBINATION METER PILOT FOG LIGHT (Except ECE OPT) FRONT DRIVE INDICATOR (OPT) HEADLIGHT, LH.RH HIGH BEAM INDICATOR INTERIOR LICENSE PLATE LIGHT CONTROL SWITCH PARKING BREAK (OPT) PARKING, FRONT STOP, LH.RH TAIL, LH.RH TURN SIGNAL, FRONT, LH.RH TURN SIGNAL, REAR, LH.RH TURN SIGNAL INDICATOR, LH.RH TURN SIGNAL, SIDE, LH.RH	E-6 E-7	WATER TEMPERATURE GAUGE WATER TEMPERATURE SENDER
E-8 C-3 C-21 F-21	MOTORS: HEATER BLOWER (Except ECE OPT) STARTER WINDSHIELD WASHER (OPT) WINDSHIELD WIPER		

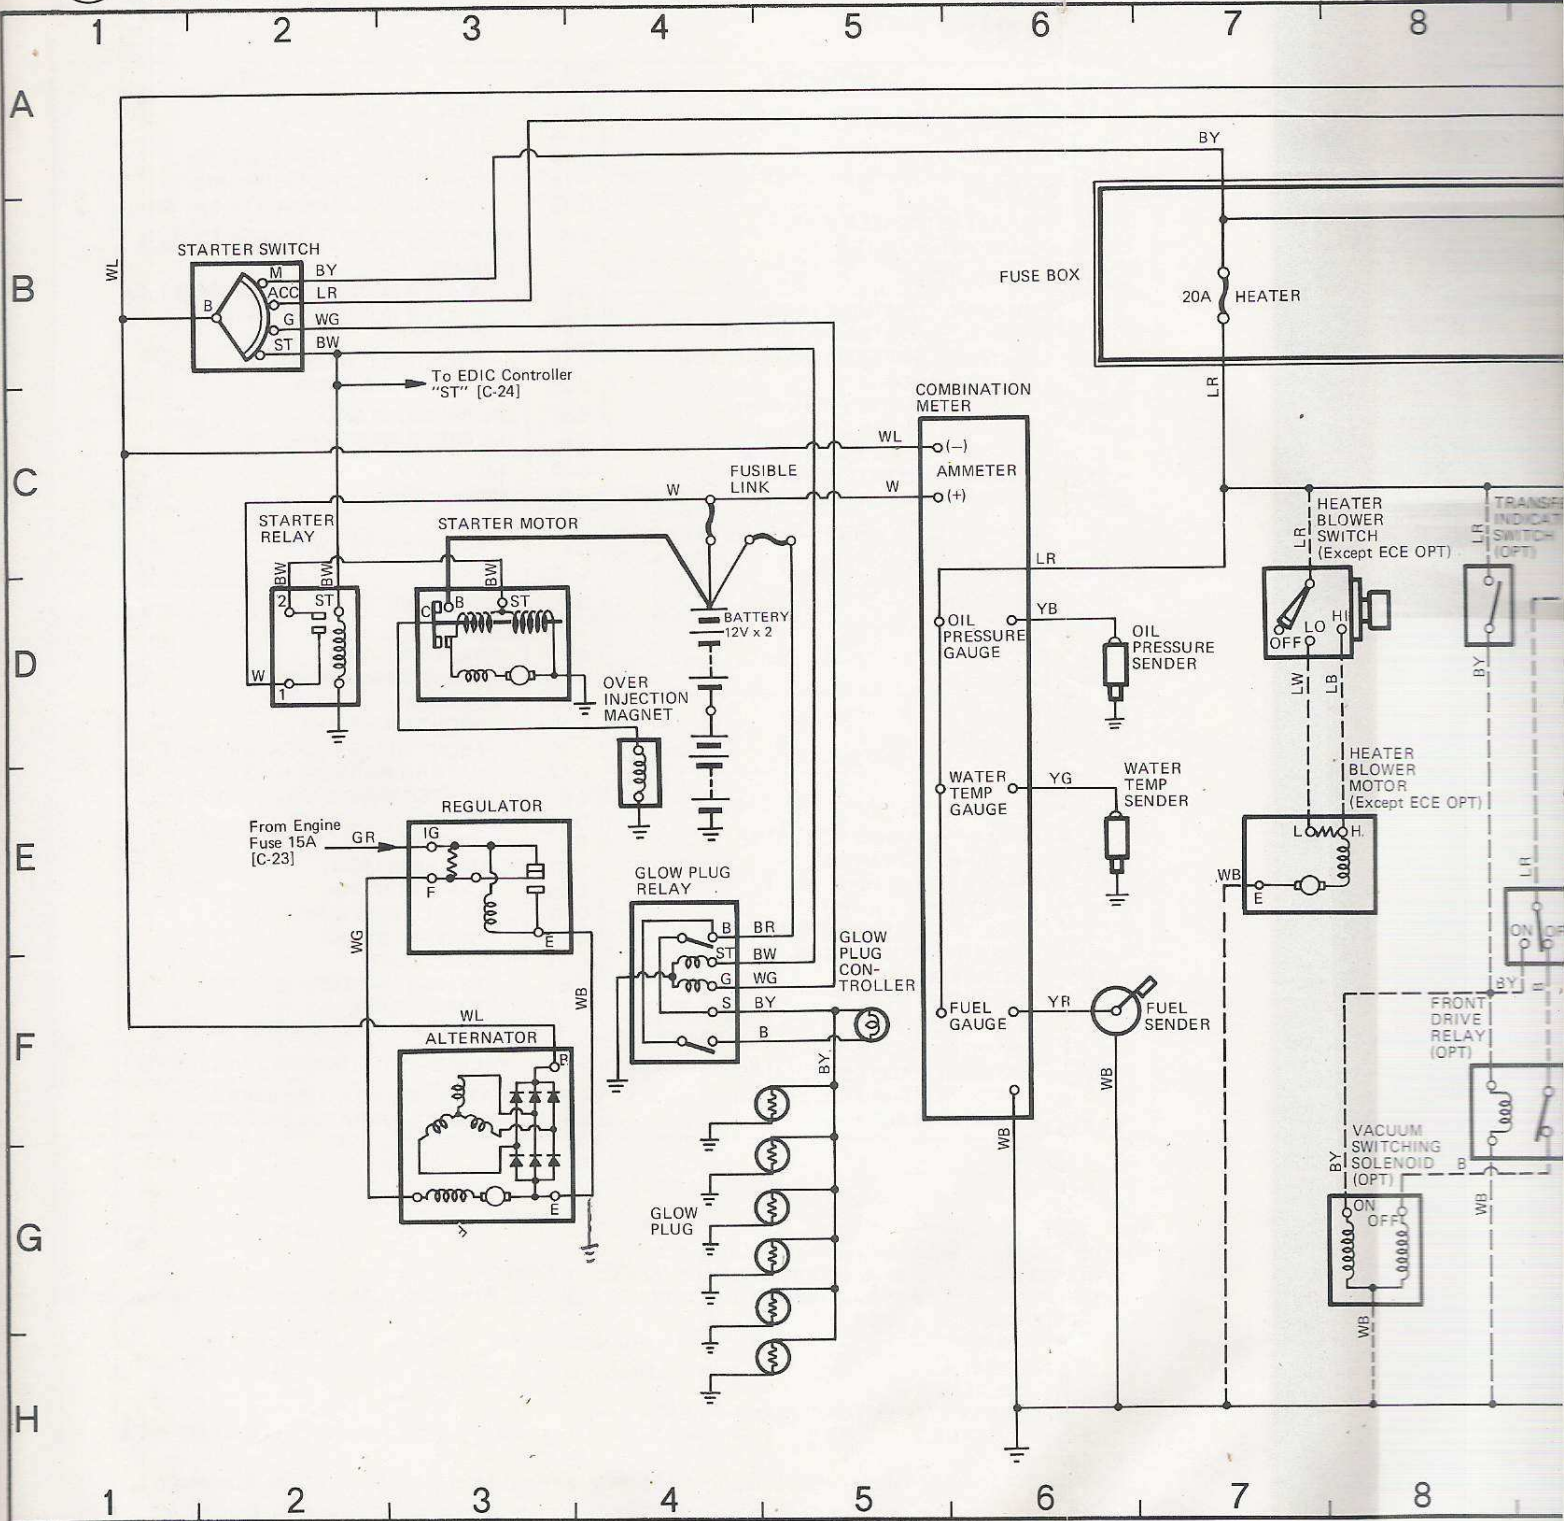
Note:

When reading the wiring diagram, following should be noted.


- WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
 THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
 B = BLACK O = ORANGE W = WHITE
 G = GREEN R = RED Y = YELLOW
 L = LIGHT BLUE
 EXAMPLE: RG, IS FOR RED AND A GREEN LINE
- LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
- BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.




LAND CRUISER(BJ40,43)ELECTRICAL WIRING DIAGRAM (Except USA & CAN)



NADA)

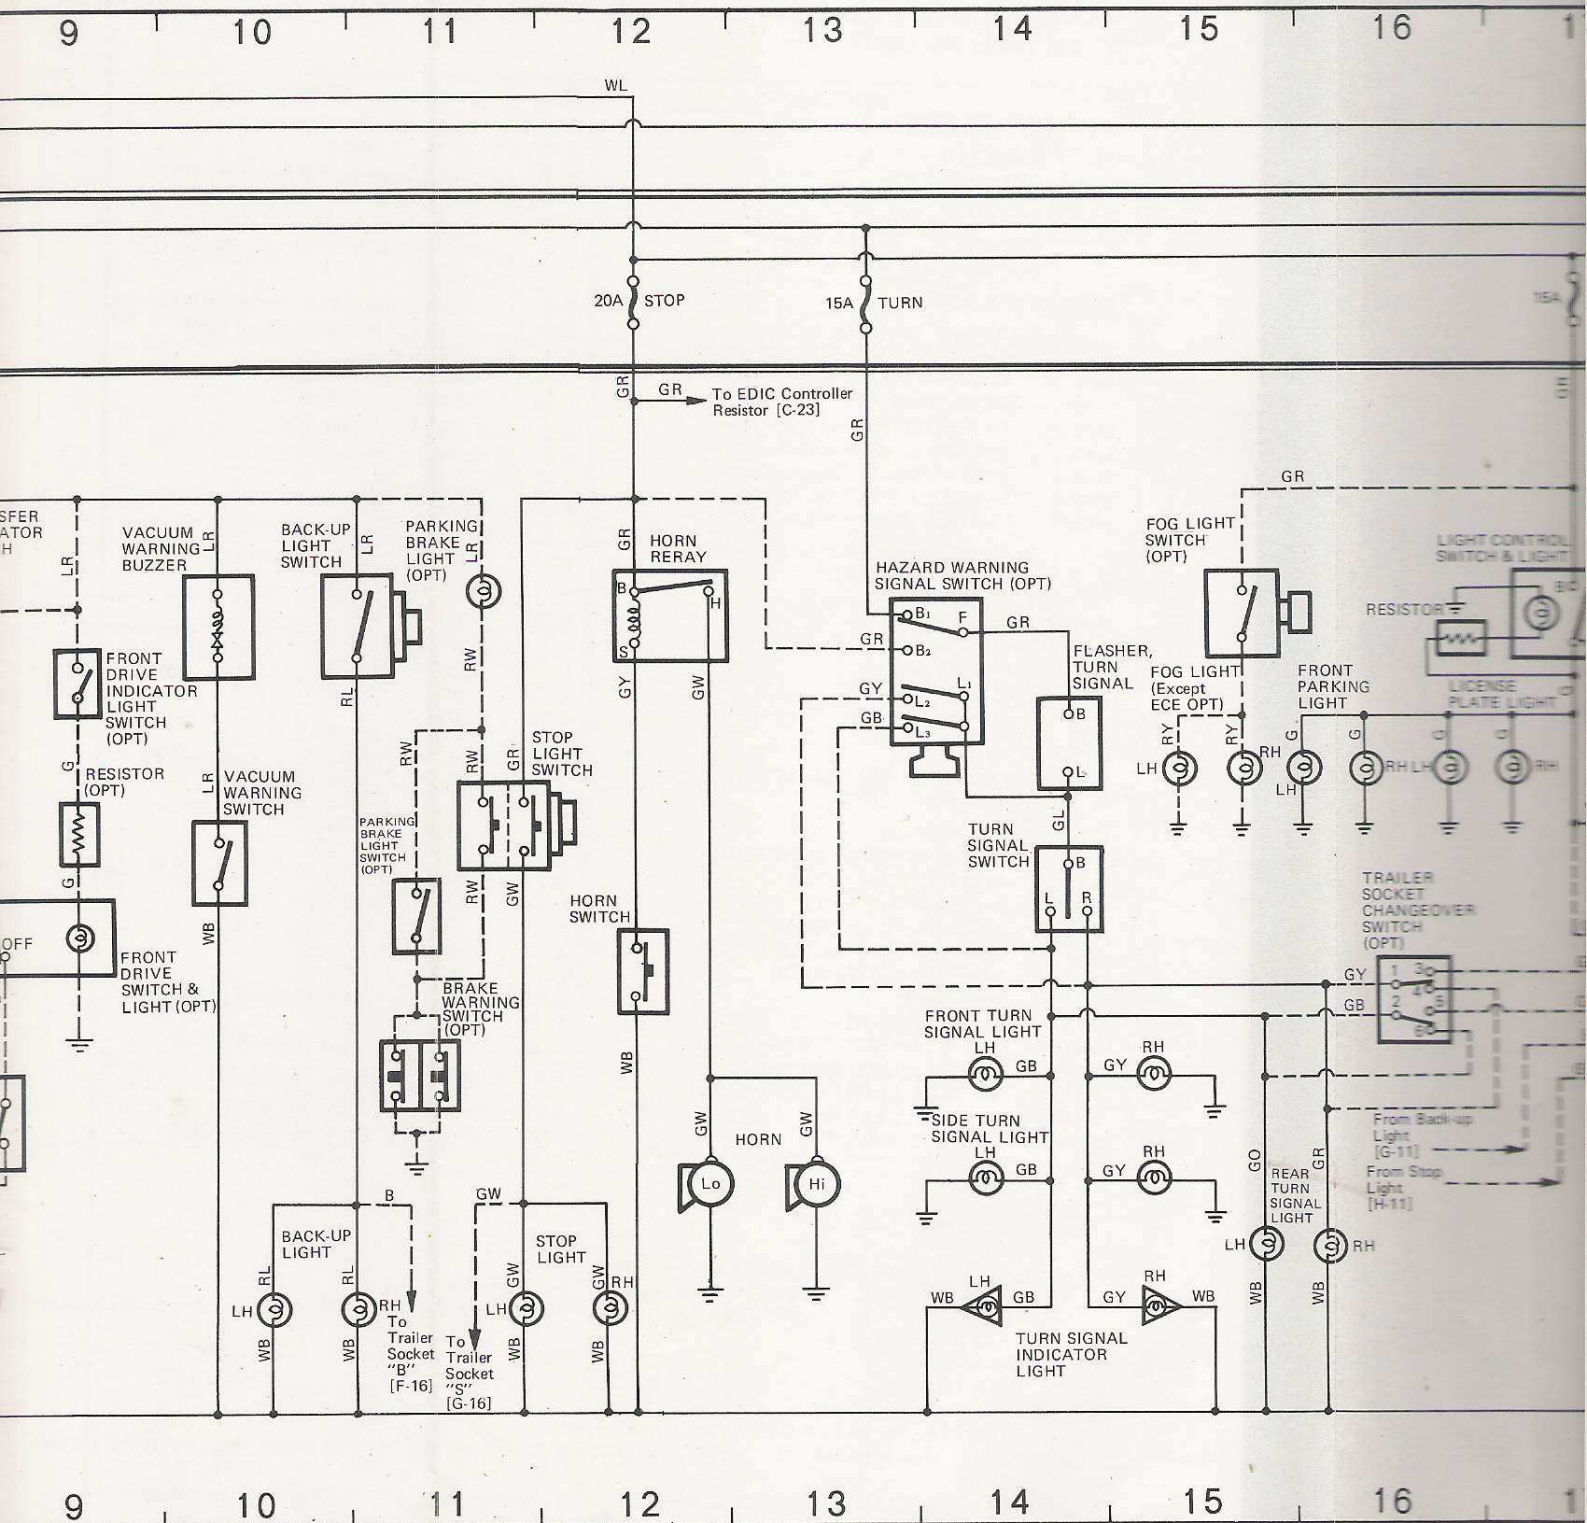

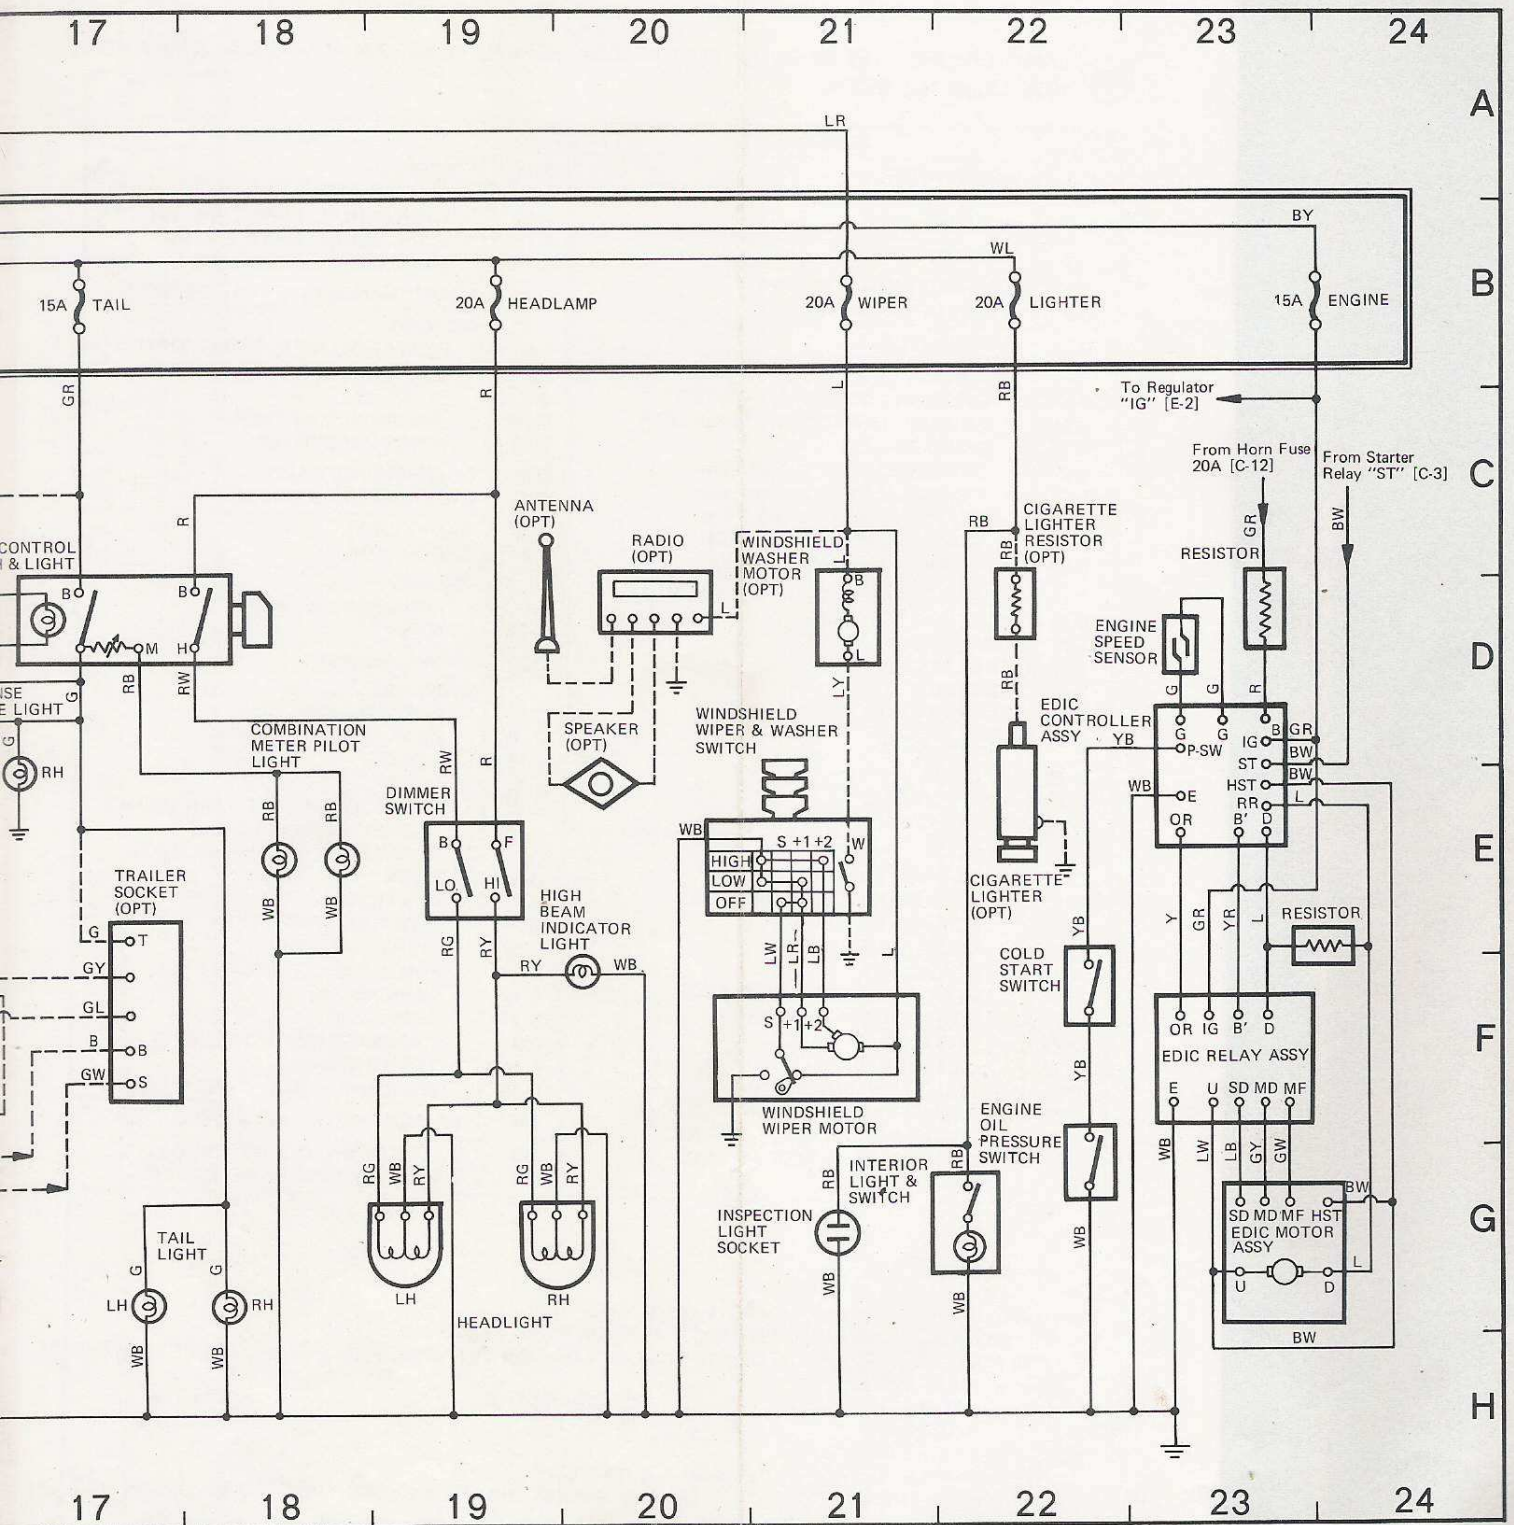



LAND CRUISER (FJ 40 Series) ELECTRICAL WIRING DIAGRAM (For U.S.A. & CANADA) –
1975 Model No. 98876

GRID LOCATION	COMPONENTS	GRID LOCATION	COMPONENTS
E-3 C-5 D-21	ALTERNATOR AMMETER ANTENNA (OPT)	G-11 G-18 F-15 F-15 G-15	STOP, LH · RH TAIL, LH · RH TURN SIGNAL, FRONT, LH · RH TURN SIGNAL, REAR, LH · RH TURN SIGNAL INDICATOR, LH · RH
C-4	BATTERY	G-4	MAINTENANCE INTERVAL DETECTOR
E-21 C-5	CIGARETTE LIGHTER (OPT) COMBINATION METER		
D-23	DISTRIBUTOR		
F-23 E-24 H-22 H-22 H-23 H-23 H-22 E-22	EMISSION CONTROL SYSTEM: EMISSION CONTROL COMPUTER EMISSION INSPECTION CONNECTOR SPEED SENSOR THERMO SENSOR at EGR Valve THERMO SENSOR at Carburetor THERMO S/W for Coolant Temp. THROTTLE POSITION SWITCH VACUUM SWITCHING VALVE	D-6 E-7 C-2 C-19 F-20 D-5 D-6	MOTORS: HEATER BLOWER, FRONT (OPT) HEATER BLOWER, REAR (OPT) STARTER WINDSHIELD WASHER WINDSHIELD WIPER OIL PRESSURE GAUGE OIL PRESSURE SENDER
C-15 C-23 F-5 F-6 B-4 C-4	ELASHER, TURN SIGNAL & HAZARD FUEL CUT SOLENOID FUEL GAUGE FUEL SENDER FUSE BOX FUSIBLE LINK	C-20 F-3	RADIO (OPT) REGULATOR
G-13	HORNS, LO-HI	E-9 C-12	RELAYS: FRONT DRIVE (OPT) HORN
D-22 C-23 G-20	IGNITER IGNITION COIL INSPECTION LIGHT SOCKET	D-20	SPEAKER (OPT)
G-7 C-10 D-18 D-9 G-16 E-18 F-15 G-21 E-17 C-16 G-5 F-18 G-18 E-17	LIGHTS: BACK-UP, LH · RH BRAKE WARNING INDICATOR COMBINATION METER FRONT DRIVE (OPT) HEADLIGHT, LH · RH HEATER CONTROL INDICATOR HIGH BEAM INDICATOR INTERIOR LICENSE PLATE LIGHT CONTROL SWITCH MAINTENANCE WARNING MARKER, FRONT SIDE, LH · RH MARKER, REAR SIDE, LH · RH PARKING, FRONT	C-7 F-10 E-16 E-10 C-10 C-14 C-6 D-12 B-2 G-21 C-16 D-17 E-10 D-11 C-8 E-14 D-19 F-8 E-5 E-6	SWITCHES: BACK-UP LIGHT BRAKE WARNING LIGHT DIMMER FRONT DRIVE (OPT) FRONT DRIVE INDICATOR LIGHT HAZARD WARNING LIGHT HEATER BLOWER MOTOR (OPT) HORN IGNITION INTERIOR LIGHT LIGHT CONTROL PANEL LIGHT CONTROL PARKING BRAKE STOP LIGHT TRANSFER INDICATOR (OPT) TURN SIGNAL WINDSHIELD WIPER AND WASHER VACUUM SWITCHING SOLENOID (OPT) WATER TEMPERATURE GAUGE WATER TEMPERATURE SENDER

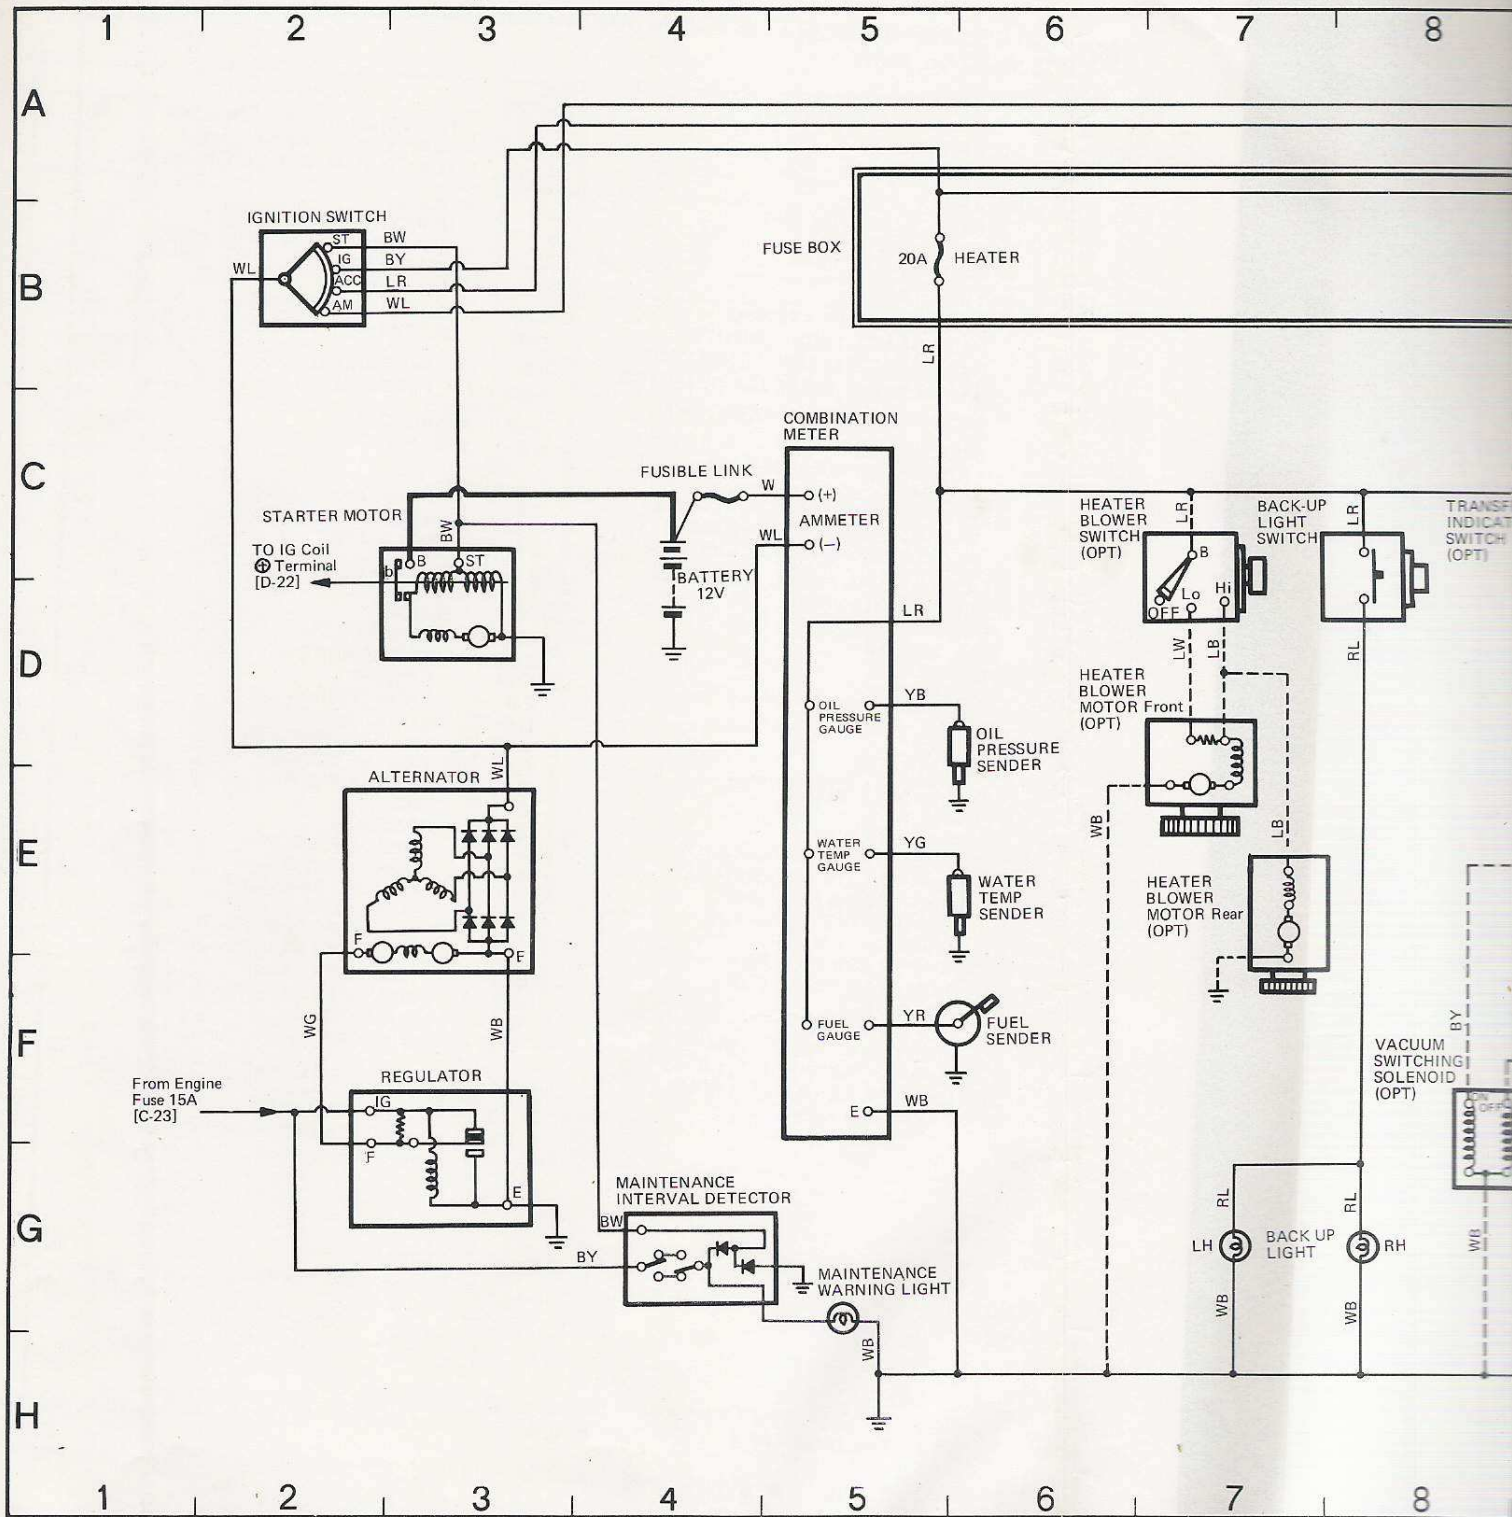
Note:

When reading the wiring diagram, following should be noted.


- WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B = BLACK
G = GREEN
L = LIGHT BLUE
O = ORANGE
R = RED
W = WHITE
Y = YELLOW
EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
- LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
- BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.




LAND CRUISER (FJ40 Series) ELECTRICAL WIRING DIAGRAM (For U.S.A.)



& CANADA) — 1975 Model

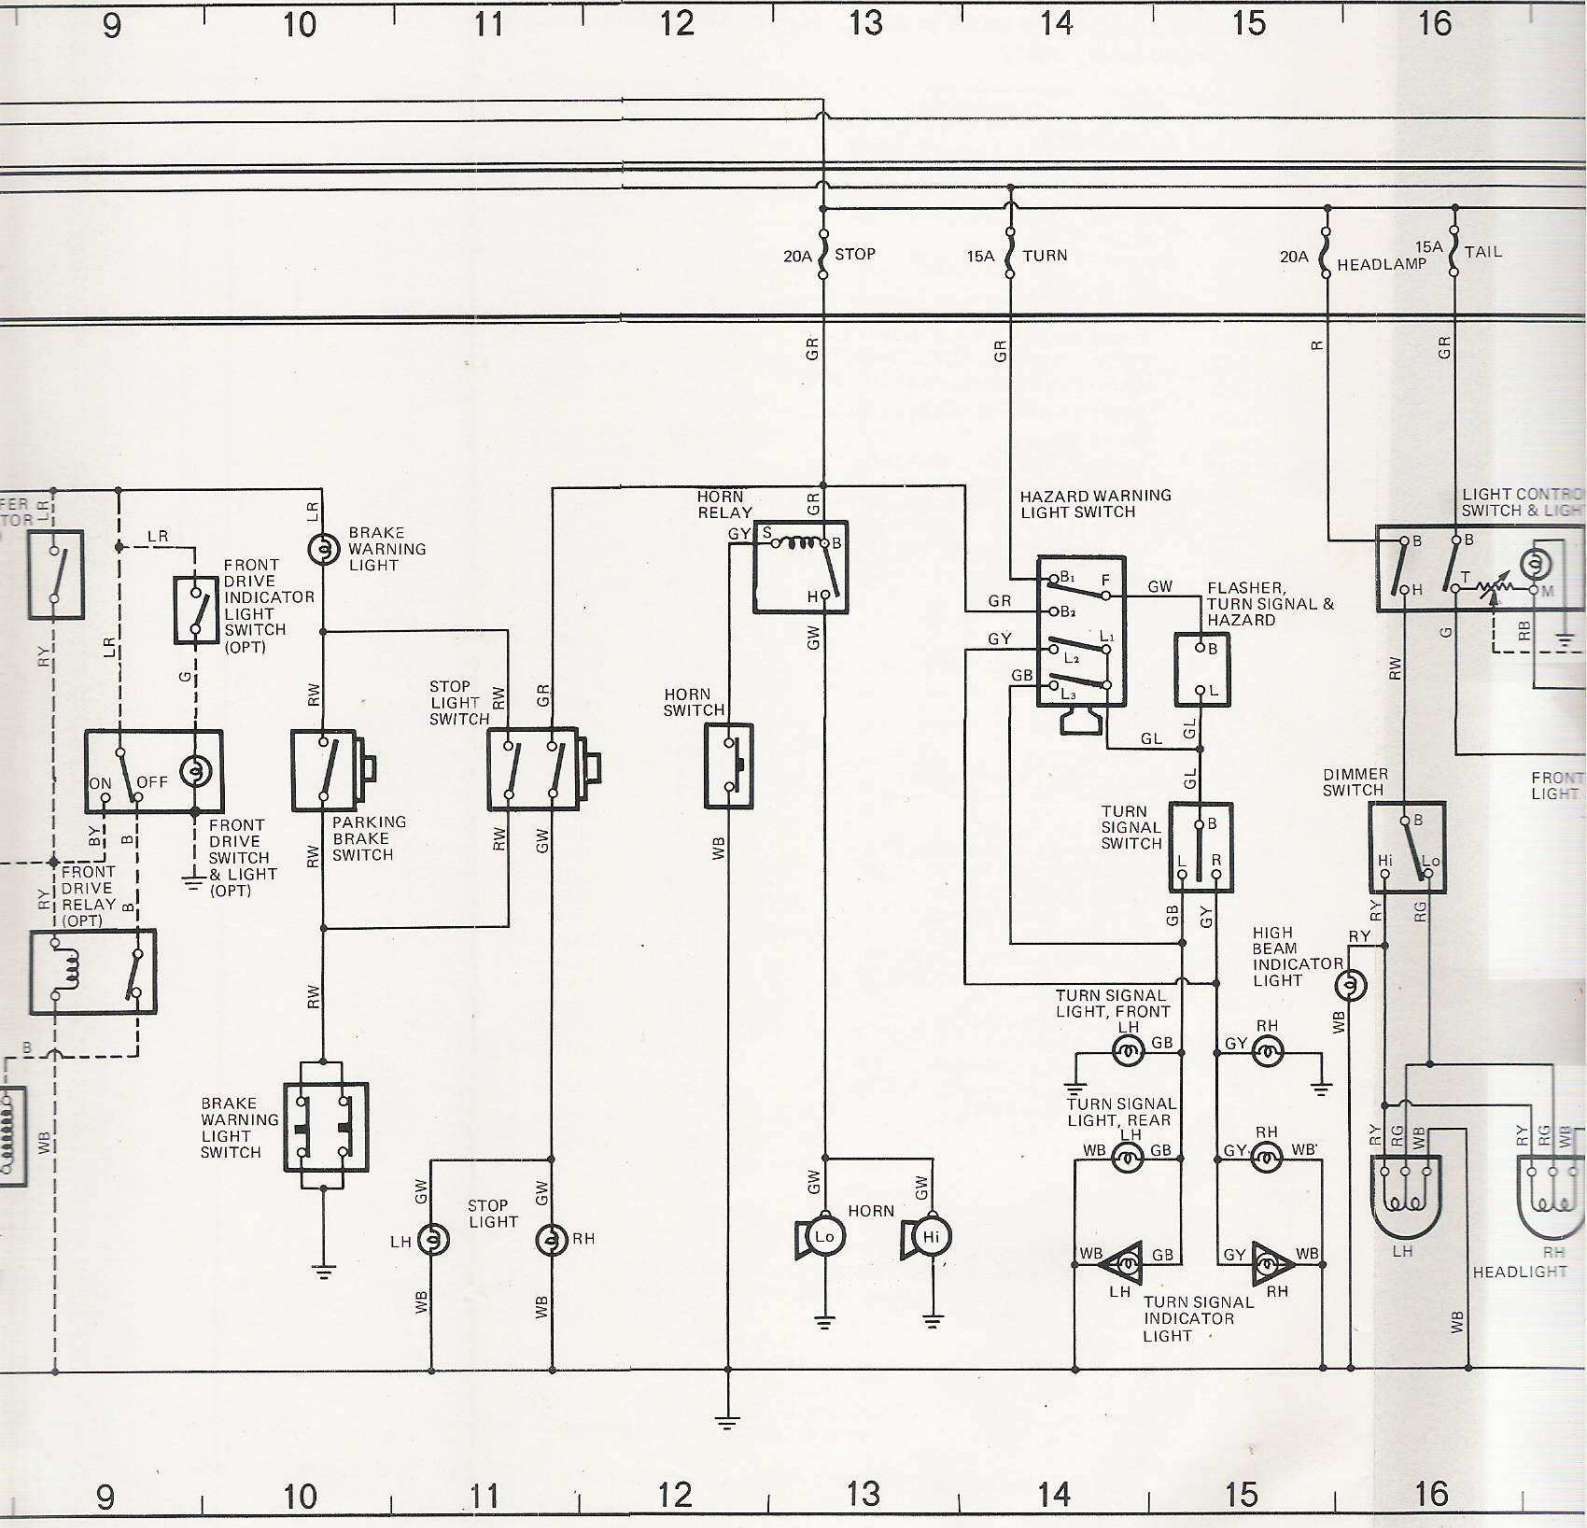

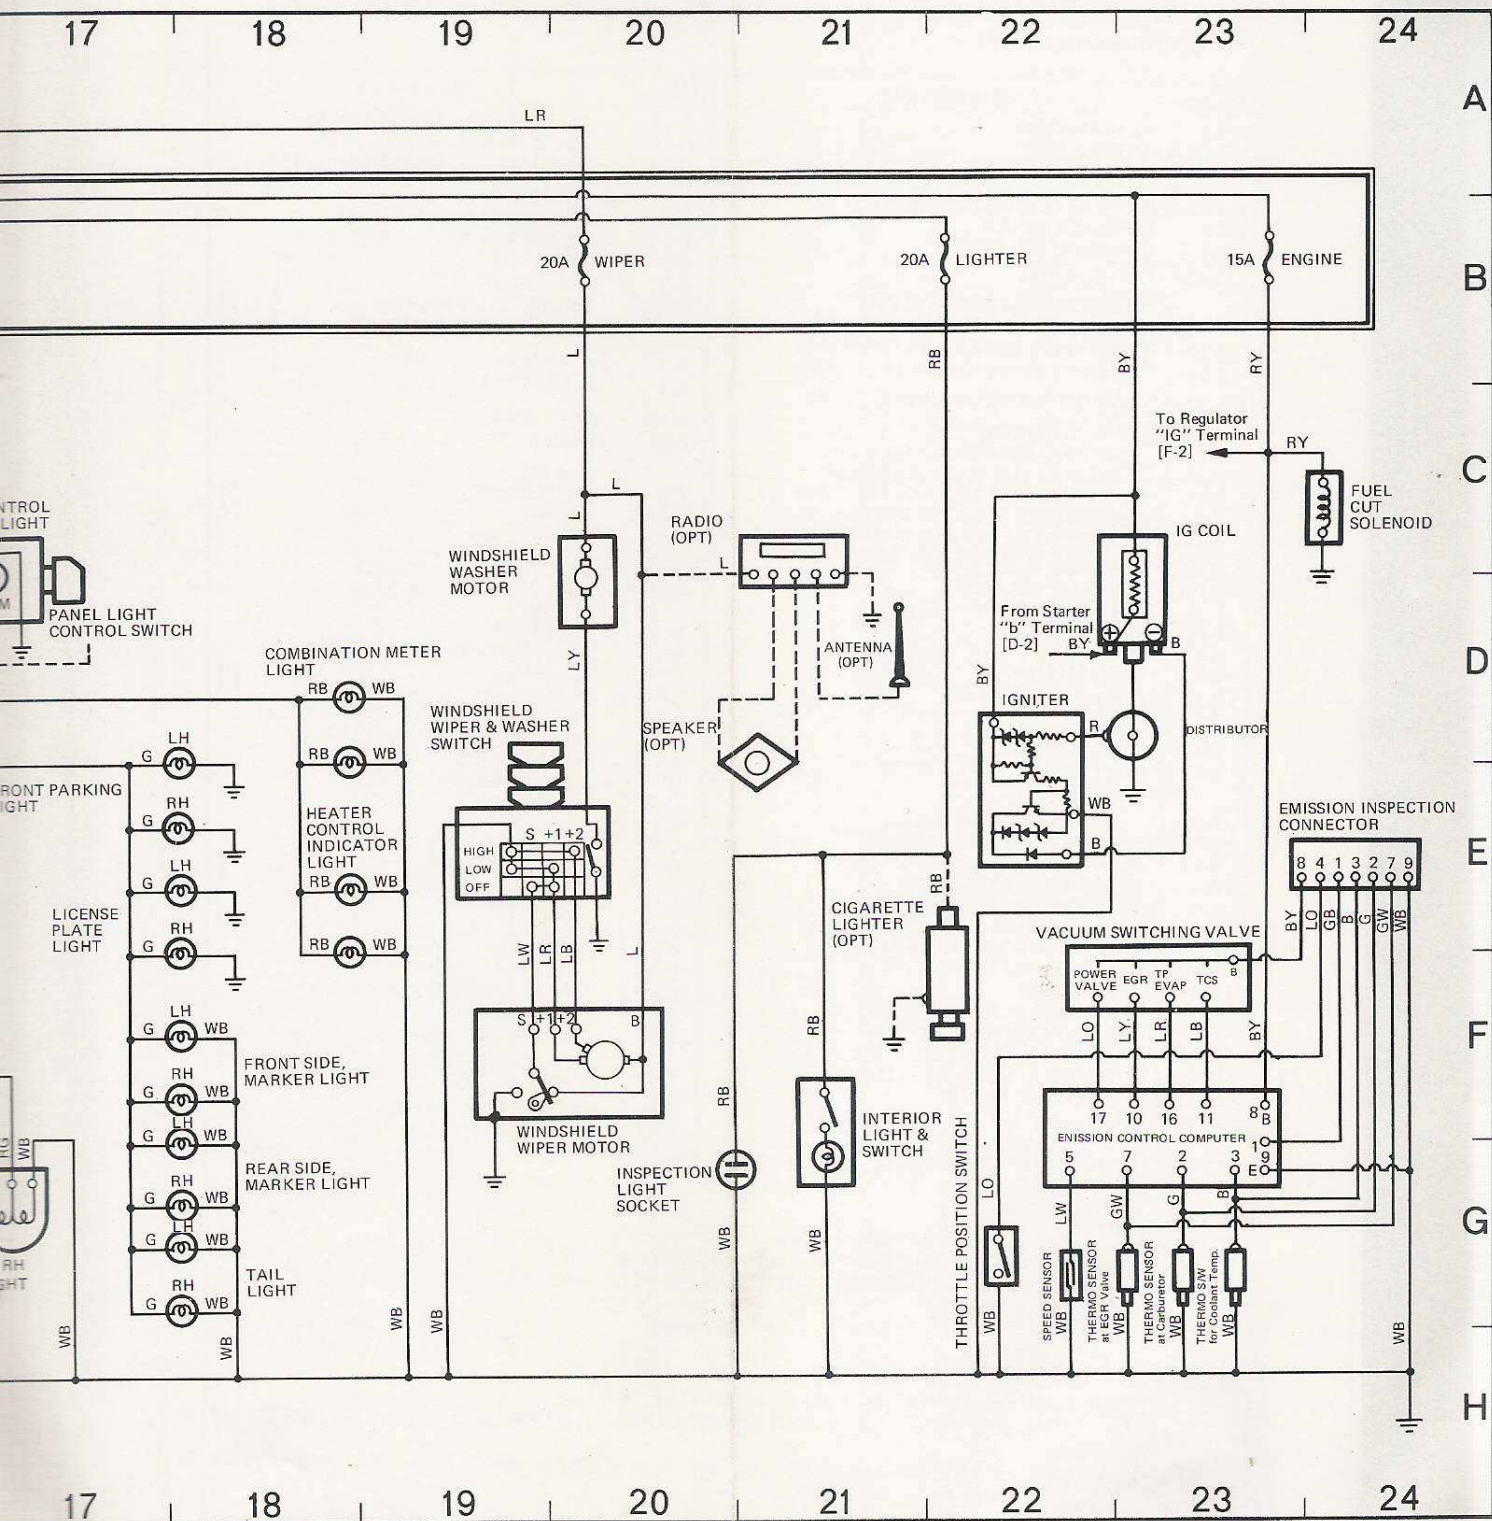



LAND CRUISER (FJ55LG) ELECTRICAL WIRING DIAGRAM (For U.S.A & CANADA) –
1975 Model No. 98877

GRIDE LOCATION	COMPONENTS	GRIDE LOCATION	COMPONENTS
F-2 D-18	ALTERNATOR ANTENA (OPT)	F-13 G-15 G-13	TURN SIGNAL, FRONT, LH.RH TURN SIGNAL, REAR, LH.RH TURN SIGNAL INDICATOR, LH.RH
D-3	BATTERY		
C-20 E-3 C-4	CIGARETTE LIGHTER (OPT) CIRCUIT BRAKER COMBINATION METER		MOTORS: HEATER BLOWER, FRONT HEATER BLOWER, REAR (OPT) STARTER TAIL GATE WINDSHIELD WASHER WINDSHIELD WIPER
D-4	DISTRIBUTOR	C-6 E-7 D-2 G-3 C-20 F-20	
G-22 E-21 C-22 F-23	EMISSION CONTROL SYSTEM: EMISSION CONTROL COMPUTER EMISSION INSPECTION CONNECTOR MAINTENANCE INTERVAL DETECTOR MAINTENANCE WARNING LIGHT	E-4 E-5	OIL PRESSURE GAUGE OIL PRESSURE SENDER
G-21 G-21 G-21 F-21 G-22 F-23	SPEED SENSOR THERMO SENSOR at EGR Valve THERMO SENSOR at Carburetor THERMO SWITCH for Coolant Temp THROTTLE POSITION SWITCH VACUUM SWITCHING VALVE	C-19 E-2	RADIO (OPT) REGULATOR
D-13 C-23 G-4 G-5 B-4 C-3	FLASHER, TURN SIGNAL & HAZARD FUEL CUT SOLENOID FUEL GAUGE FUEL SENDER FUSE BOX FUSIBLE LINK	F-8 C-12 E-4	RELAYS: FRONT DRIVE (OPT) HORN TAIL GATE
D-12	HORNS, LO-HI	E-19	SPEAKER (OPT)
C-4 C-3 E-21	IGNITER IGNITION COIL INSPECTION LIGHT SOCKET		SWITCHES: BACK-UP LIGHT BRAKE WARNING DIMMER FRONT DRIVE (OPT) FRONT DRIVE INDICATOR LIGHT HAZARD WARNING LIGHT HEATER BLOWER, FRONT HEATER BLOWER, REAR (OPT) HORN IGNITION INTERIOR LIGHT LIGHT CONTROL PARKING BRAKE STOP LIGHT TAIL GATE CONTROL TAIL GATE REMOTE CONTROL TAIL GATE SAFETY TRANSFER INDICATOR (OPT) TURN SIGNAL WINDSHIELD WIPER AND WASHER
G-9 D-10 E-17 D-4 E-9 G-18 E-17 F-18 D-21 D-15 D-16 E-16 F-16 E-15 G-15 G-16	LIGHTS: BACK-UP, LH,RH BRAKE WARNING INDICATOR COMBINATION METER PILOT DISCHARGE WARNING FRONT DRIVE INDICATOR HEADLIGHT, LH,RH HEATER CONTROL INDICATOR HIGH BEAM INDICATOR INTERIOR LICENSE PLATE LIGHT CONTROL SWITCH MARKER, FRONT SIDE, LH,RH MARKER, REAR SIDE, LH,RH PARKING, FRONT STOP, LH,RH TAIL, LH,RH	D-10 E-11 F-17 E-9 D-9 D-14 E-6 C-7 D-12 B-1 D-21 D-16 D-11 C-11 F-3 F-4 G-3 C-8 E-13 E-19	
		G-7	VACUUM SWITCHING SOLENOID (OPT)
		F-4 F-5	WATER TEMPERATURE GAUGE WATER TEMPERATURE SENDER

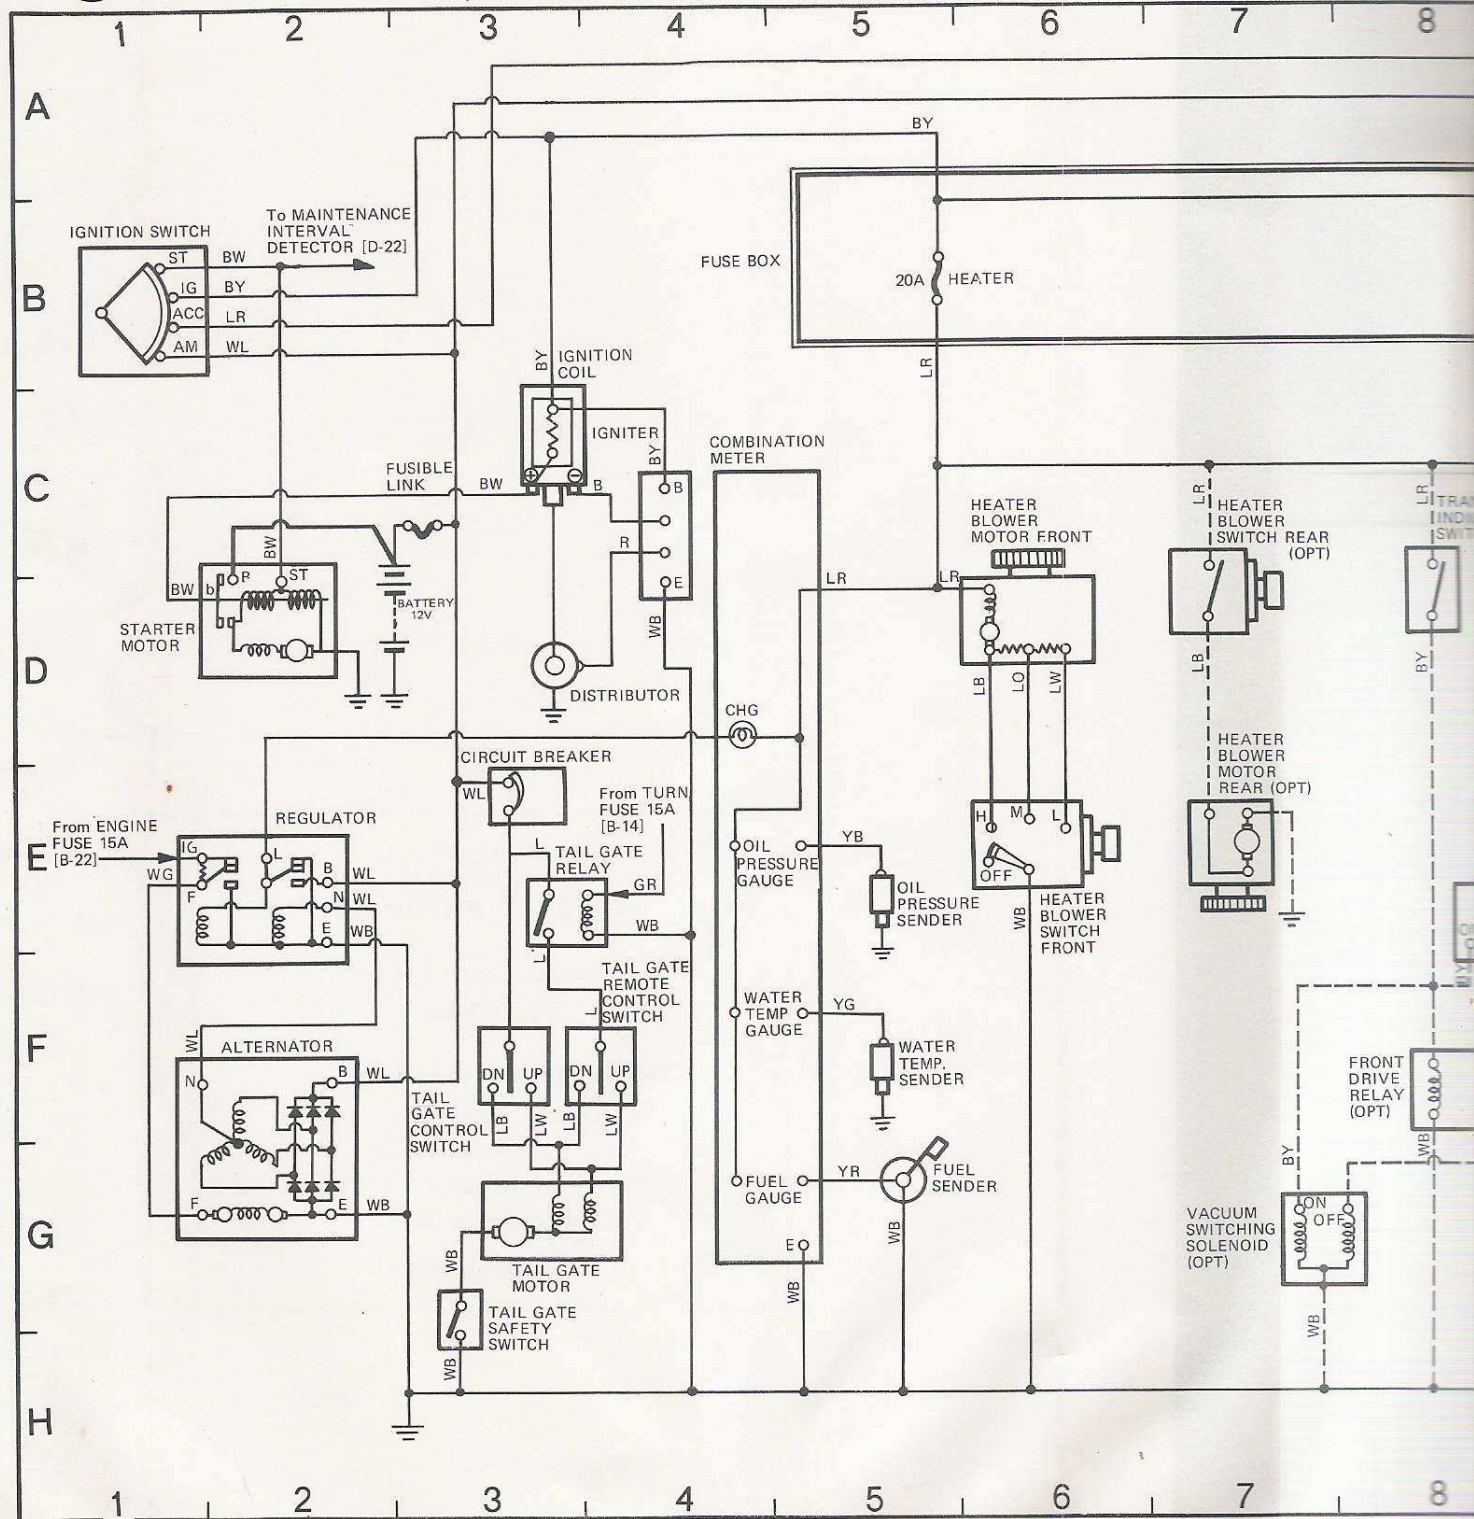
Note:

When reading the wiring diagram, following should be noted.


- WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B = BLACK O = ORANGE W = WHITE
G = GREEN R = RED Y = YELLOW
L = LIGHT BLUE
EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
- LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
- BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.




LAND CRUISER (FJ55LG) ELECTRICAL WIRING DIAGRAM (For U.S.A. &



& CANADA) — 1975 Model

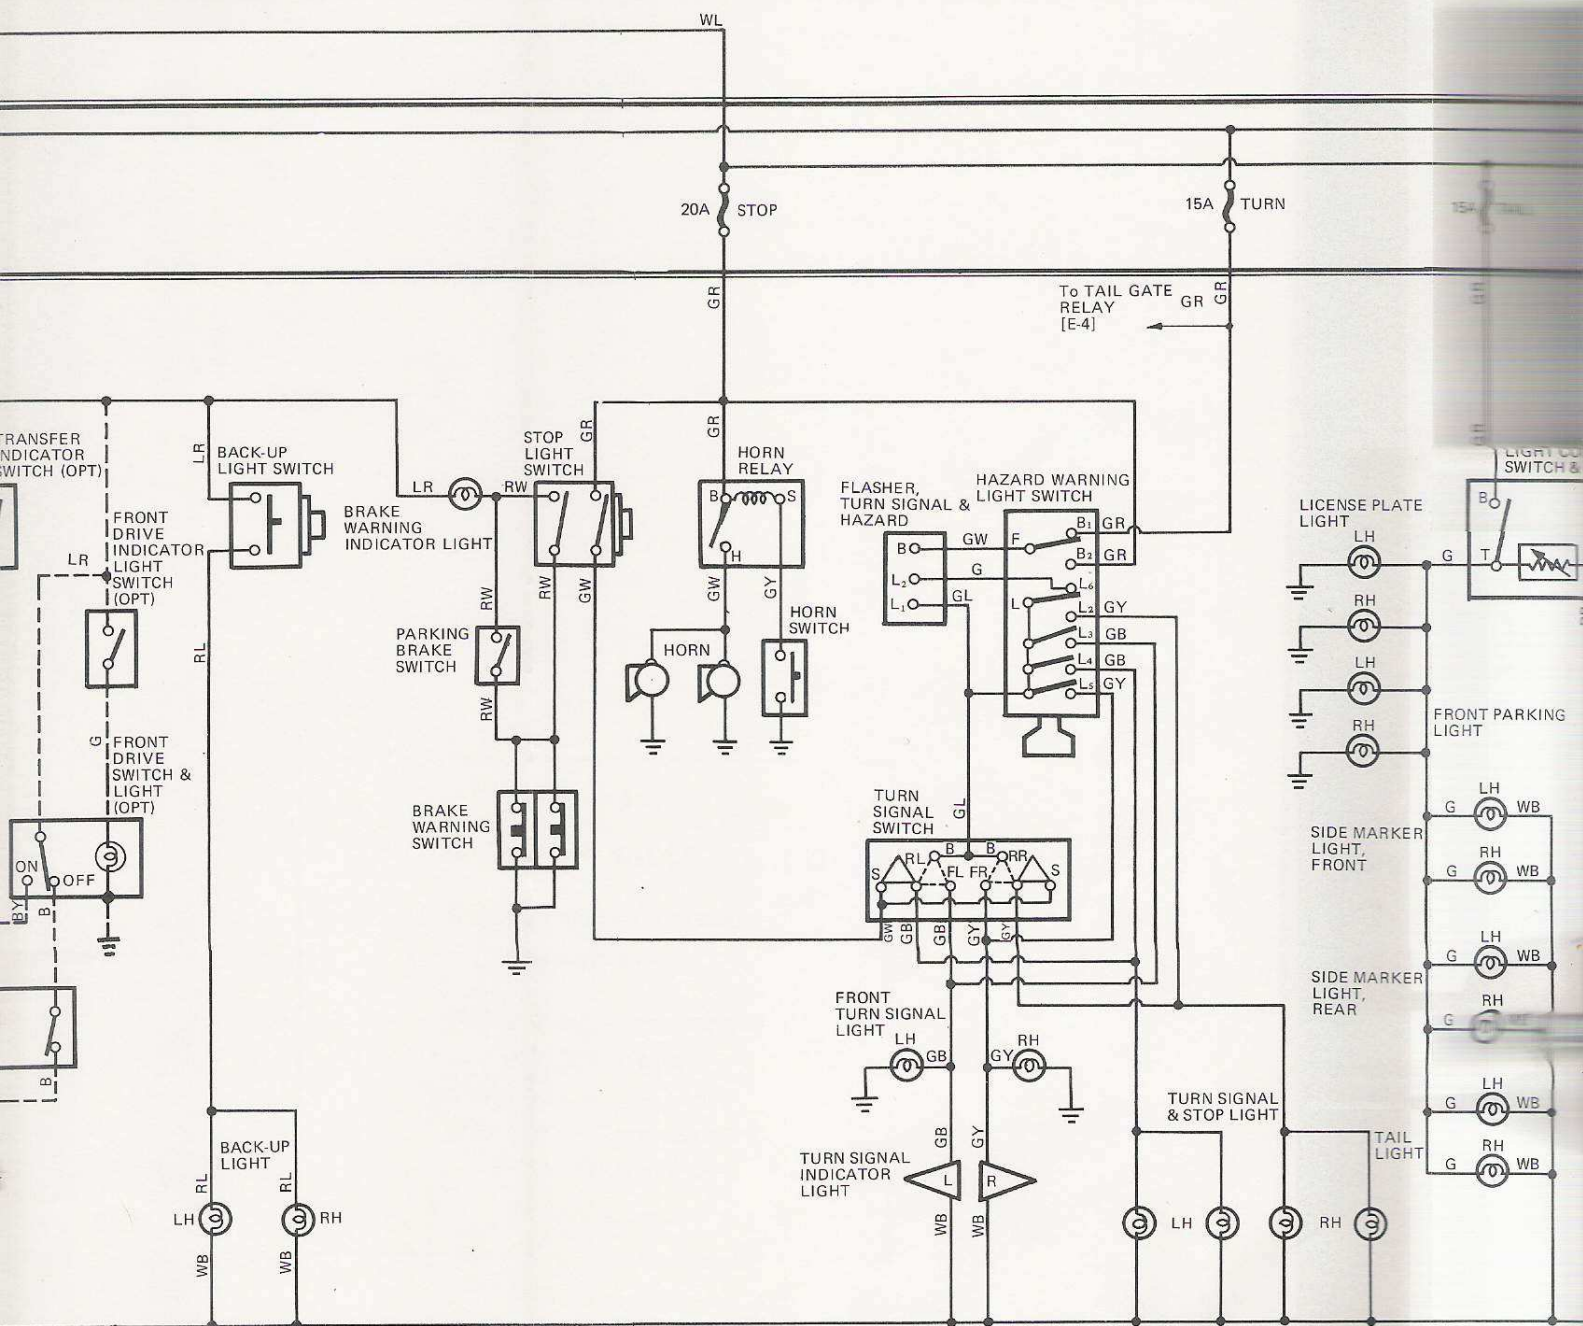



Prepared by

TOYOTA MOTOR SALES CO., LTD.

Export-Technical Department

Haruhi Center

Haruhi-mura, Nishikasugai-gun

Aichi Pref., Japan

First Printing April 1976

Third Printing December 1976

Publication No.98154

Printed in Japan

TOYOTA
SERVICE